

# Yealink | 亿联网络

## SIP-T2 /T3 /T4 /T5 /CP920 IP Phones Administrator Guide



## Before You Begin

Yealink administrator guide provides general guidance on setting up phone network, provisioning and managing devices.

This guide is not intended for end-users, but for a technical audience. You can do the following with this guide:

- Set up a VoIP network and provisioning server.
- Provision the device with features and settings.
- Troubleshoot, update and maintain devices.

The information in this guide is applicable to the following Yealink devices except where noted:

- T5 series phones, including T57W, T54W, T53W, T53C and T53.
- T4 series phones, including T4U (T48U, T46U, T43U, T42U), T4S (T48S, T46S, T42S, T41S), T48G, T46G, T42G, T41P and T40P/G.
- T3 series phones, including T33P/T33G, T31P/T31G/T31 and T30P/T30.
- T2 series phones, including T29G, T27G, T23P/G, T21(P) E2 and T19(P) E2.
- CP92X phones, including CP920, CP925.
- Expansion modules, including EXP20, EXP40, EXP43 and EXP50.
- CP935W phones.

Read the [Yealink Products Regulatory Notices guide](#) for all regulatory and safety guidance.

## Related Documentations

The following related documents are available:

- Quick Start Guides, describe how to assemble phones.
- User Guides, describe how to configure and use the basic and advanced features available on the phones via the phone user interface.
- Auto Provisioning Guide, describes how to provision the devices using the boot file and configuration files.  
The Auto Provisioning Guide is to serve as basic guidance for provisioning Yealink devices with a provisioning server. If you are a novice, this guide is helpful for you.
- Using features integrated with Broadsoft UC-One, refer to the following two guides to have a better knowledge of BroadSoft features.  
IP Phones Deployment Guide for BroadSoft UC-One Environments, describes how to configure BroadSoft features on the BroadWorks web portal and phones.  
IP Phone Features Integrated with BroadSoft UC-One User Guide, describes how to configure and use IP phone features integrated with BroadSoft UC-One on Yealink phones.

For support or service, please contact your Yealink reseller or go to Yealink Technical Support online: <http://support.yealink.com/>.

## Recommended References

For more information on configuring and administering other Yealink products not included in this guide, refer to the product support page at [Yealink Technical Support](#).

To access the latest Release Notes or other guides for Yealink devices, refer to the Document Download page for your phone at [Yealink Technical Support](#).

If you want to find Request for Comments (RFC) documents, type <http://www.ietf.org/rfc/rfcNNNN.txt> (NNNN is the RFC number) into the location field of your browser.

For other references, look for the hyperlink or web info throughout this administrator guide.

## Summary of Changes

This section describes the changes to this guide for each release and guide version.

### Changes for Release V86, Guide Version V86.60

The following sections are new for this version:

- [Provisioning Parameters](#)
- [URL Icon Hide](#)
- [BLF Send DTMF Configuration](#)
- [Enterprise Directory](#)
- [Local Contacts Number Configuration](#)
- [Web Access Time Limit Configuration](#)
- [Upgrading Yealink Headset Firmware](#)
- [Ultrasonic Configuration](#)
- [Zoom Parameters](#)
- [Zoom Settings](#)
- [Zoom Barge in Parameters](#)
- [Zoom Call Settings](#)
- [Zoom SCA](#)
- [Zoom Emergency Call](#)
- [Handset LDAP Configuration](#)
- [Handset Network Directory](#)
- [Exporting Headset Audio Diagnostic File](#)
- [Exporting Headset Log](#)

Major updates have occurred to the following section:

- [CFG File Version Information Configuration](#)  
Added the parameter "phone\_setting.config\_version.com" and "phone\_setting.config\_version.mac".
- [SIP Accounts Registration Configuration](#)  
Added a third SIP server.
- [Supported Dsskey Types](#)  
Added a Missed Call type.
- [Keep Mute Configuration](#)  
Added the parameter "features.keep\_mute.mode".
- [Network Conference Configuration](#)  
Added the parameter "account.X.conf\_member.mode".
- [Input Method Configuration](#)  
Added the parameter "gui\_input\_method\_hide.list".
- [Variable Values List](#)  
Added the variable value "xxx&Duration=yyy&Hide=n".
- [Incoming Intercom Configuration](#)  
Added the parameter "features.intercom.allow\_string".
- [Action URL Configuration](#)  
Added the parameter "custom.action\_url.view\_misscall", "custom.action\_url.view\_forward", "action\_url.sip\_info\_display\_update".
- [ACD Configuration](#)  
Added the parameter "phone\_setting.idle\_text.color".
- [MWI for Voice Mail Configuration](#)  
Added the parameter "mobile\_voice\_mail.enable", "features.mobile\_vm\_number".

- [Audio Codecs Configuration](#)  
Added the parameter "phone\_setting.talking\_codec\_display".
- [Call Transfer Configuration](#)  
Added the parameter "features.transfer.allow".
- ["Call Display Configuration" on page 261](#)  
Added the parameter "phone\_setting.call\_number\_display.replace.pattern", "phone\_setting.call\_number\_display.replace.with".
- [Hot Desking Configuration](#)  
Added the parameter "hotdesking.log\_out\_prompt.duration", "hotdesking.log\_out\_prompt.time", "hotdesking.clear\_specified\_account".
- [Dsskey Page Reset Configuration](#)  
Added the parameter "features.dsskey\_page\_reset.switch\_time".
- [Hide Feature Access Codes Configuration](#)  
Added the parameter "features.hide\_feature\_access\_codes.dsskey\_type".
- [LDAP Configuration](#)  
Added the parameter "ldap.search\_scope", "ldap.search\_t9.enable".
- [Local Conference Configuration](#)  
Added the parameter "account.X.local\_conf.transfer\_mode".
- [User and Administrator Identification Configuration](#)  
Added the parameter "static.security.custom\_password\_rule.X".
- [Emergency Dialplan and Enhanced](#)  
Added the parameter "dialplan.emergency.held.username", "dialplan.emergency.held.password", "dialplan.emergency.held.secondary.username", "dialplan.emergency.held.secondary.password", "dialplan.emergency.held.nai.enable", "dialplan.emergency.held.location\_retry\_timer", "dialplan.emergency.held.prompt\_enable", "dialplan.emergency.sip\_header.geolocation\_routing.enable", "sip.emgr.header", "dialplan.emergency.held.non\_ldap.chassisid\_portid\_enable" and "dialplan.emergency.held.resync\_period".
- ["Using DECT Handsets with T57W/T54W/T53W/T53/T53C Phones" on page 136](#)  
Added W78H, W73H handsets.
- [Broadsoft XSI](#)  
Added the parameter "bw.xsi.xsi\_event\_mode" and "account.X.xsi.xsi\_event\_port".

## Changes for Release V86, Guide Version V86.15

Make minor corrections.

## Changes for Release V86, Guide Version V86.5

Documentations of the newly released T53C phones have also been added.

The following sections are new for this version:

- [Local Contacts Order Configuration](#)
- [Emergency Alarm](#)
- [Line Keys](#)
- [Visual and Audio Alert for Monitor Lines](#)
- [Analog Headset Mode](#)

Major updates have occurred to the following section:

- [Call Information Display Configuration](#)  
Added the feature that the phone can display the call information by long pressing the Call Park key.
- [Static DNS Cache Configuration](#)  
Deleted the parameters "dns\_cache\_naptr.X.ttl", "dns\_cache\_srv.X.ttl", and "dns\_cache\_a.X.ttl".  
Add the parameters "static.network.dns\_list.mode" and "static.network.wifi.dns\_list.mode".
- [Emergency Dialplan and Enhanced 911 Configuration](#)  
Added the parameter "sip.emergency\_call.mode".

- [Call Transfer Configuration](#)  
Added the parameter "features.transfer.mode".
- [Voice Quality Reports Configuration](#)  
Added the parameter "phone\_setting.vq\_rtcpxr.min\_callduration".
- [Call Display Configuration](#)  
Added the parameter "features.caller\_name\_type\_on\_call".
- [Call Settings Parameters](#)  
Added the parameter "features.missed\_call\_icon\_event".
- [DND Settings Configuration](#)
- [Call Forward Settings Configuration](#)  
Added the parameter "phone\_setting.fwd\_and\_dnd.suspension\_prompt".
- [Incoming Intercom Configuration](#)  
Added the parameter "voice.intercom.tone\_vol".
- [MWI for Voice Mail Configuration](#)  
Added the parameter "phone\_setting.old\_mail\_display.enable".
- [USB Recording Configuration](#)  
Added the parameter "phone\_setting.recorder\_tone.enable".
- [Phone Lock Configuration](#)  
Added the parameter "phone\_setting.phone\_lock.emergency.number\_rule".
- [SMS Configuration](#)  
Added the parameter "phone\_setting.message\_call.rule".
- [Using DECT Handsets with T57W/T54W/T53W/T53/T53C Phones](#)  
Newly supported handset models: W59R, DDPHONE (Color Screen).
- [Wi-Fi Configuration](#)  
Added the parameter "phone\_setting.wifi\_security\_check.enable".
- [User and Administrator Identification Configuration](#)  
Added the parameter "static.security.password\_use\_default.mode".
- [Audio Codecs](#)  
Unified the format of codec naming: CodecName (xx kbps).  
Supported the codec G729AB.
- [User Access Level Configuration](#)  
Added the parameter "static.security.web\_limited\_access\_level".

The following sections are new for this version:

- [Phone Mode](#)

Major updates have occurred to the following section:

- [Backlight and Time Configuration](#)

## Changes for Release V85, Guide Version V85.2

Documentations of the newly released T3 phones have also been added.

The following sections are new for this version:

- [Device Management](#)

Major updates have occurred to the following section:

- [Custom Logo Configuration](#)

## Changes for Release V85, Guide Version V85.1

The following sections are new for this version:

- [Out of Service](#)
- [PIN Code Provisioning Settings Configuration](#)
- [Smart Noise Filtering](#)
- [Unify Parameters](#)
- [Example: Using VPN based on L2TP Protocol](#)
- [Exporting the OpenVPN Configuration File from the Phone](#)
- [Importing the OpenVPN Configuration File to Phone](#)
- [Dsskey Page Reset Configuration](#)

Major updates have occurred to the following sections:

- [Bluetooth](#)
- [Language](#)
- [MWI for Voice Mail Configuration](#)
- [Call Park and Retrieve Configuration](#)
- [Call Transfer Configuration](#)
- [LDAP Configuration](#)
- [SCA Configuration](#)
- [BLA Configuration](#)
- [VPN Configuration](#)
- [Internet Port and PC Port Configuration](#)
- [Warnings Display](#)
- [BroadSoft Settings](#)
- [Wi-Fi Configuration](#)
- [Ethernet Interface MTU Parameters](#)
- [Call Display Configuration](#)
- [Network Conference Configuration](#)
- [Handset/Headset/Speakerphone Mode Configuration](#)
- [Power LED Indicator Configuration](#)
- [Macro Action Strings](#)
- [Web Server Type Configuration](#)
- [Return Code for Refused Call and not answer Configuration](#)
- [Return Code for Unanswered Call Configuration](#)
- [DND Settings Configuration](#)
- [Line Keys Configuration](#)
- [Multicast Paging Settings Configuration](#)
- [Ringer Volume Configuration](#)
- [Encryption and Decryption Configuration](#)
- [Custom Logo Configuration](#)
- [Supported Trusted Certificates](#)

# Table of Contents

<b>Before You Begin</b> .....	<b>i</b>
Related Documentations .....	i
Recommended References .....	i
Summary of Changes .....	ii
Changes for Release V86, Guide Version V86.60 .....	ii
Changes for Release V86, Guide Version V86.15 .....	iii
Changes for Release V86, Guide Version V86.5 .....	iii
Changes for Release V85, Guide Version V85.2 .....	iv
Changes for Release V85, Guide Version V85.1 .....	iv
<b>Table of Contents</b> .....	<b>1</b>
<b>Getting Started</b> .....	<b>21</b>
Requirements .....	21
Yealink IP Phones in a Network .....	21
Initialization Process Overview .....	22
Loading the ROM File .....	22
Configuring the VLAN .....	23
Querying the DHCP (Dynamic Host Configuration Protocol) Server .....	23
Contacting the Provisioning Server .....	23
Updating Firmware .....	23
Downloading the Resource Files .....	23
Verifying Startup .....	23
<b>Network Configurations</b> .....	<b>24</b>
IPv4 and IPv6 Wired Network Settings .....	24
Wired Network IP Addressing Mode Configuration .....	24
IPv4 Wired Network Configuration .....	25
IPv6 Wired Network Configuration .....	29
DHCP Option for IPv4 .....	33
Supported DHCP Option for IPv4 .....	33
DHCP Option 66, Option 43 and Custom Option .....	34
DHCP Option 42, Option 2 and Option 100 .....	34
DHCP Option 12 .....	34
DHCP Option 12 Hostname Configuration .....	34
DHCP Option 120 .....	35
DHCP Option 120 Configuration .....	35
DHCP Option 60 .....	36
DHCP Option 60 Configuration .....	36
DHCP Option for IPv6 .....	37
Supported DHCP Option for IPv6 .....	37
DHCP Option 59 and Custom Option .....	37
VLAN .....	37
LLDP Configuration .....	37

CDP Configuration .....	38
Manual VLAN Configuration .....	39
DHCP VLAN Configuration .....	41
VLAN Change Configuration .....	42
Wi-Fi .....	43
Wi-Fi Configuration .....	43
Wireless Network IP Addressing Mode Configuration .....	48
IPv4 Wireless Network Configuration .....	49
IPv6 Wireless Network Configuration .....	53
Real-Time Transport Protocol (RTP) Ports .....	57
RTP Ports Configuration .....	57
Network Address Translation (NAT) .....	58
NAT Traversal Configuration .....	58
Keep Alive Configuration .....	61
Rport Configuration .....	62
SIP Port and TLS Port Configuration .....	62
Internet Port and PC Port .....	63
Supported Transmission Methods .....	63
Internet Port and PC Port Configuration .....	63
VPN .....	65
OpenVPN Related Files .....	65
VPN Configuration .....	65
Example: Using VPN based on L2TP Protocol .....	67
Exporting the OpenVPN Configuration File from the Phone .....	67
Importing the OpenVPN Configuration File to Phone .....	67
Quality of Service (QoS) .....	68
Voice and SIP QoS Configuration .....	68
802.1x Authentication .....	69
802.1x Authentication Configuration .....	69
TR-069 Device Management .....	71
Supported RPC Methods .....	71
TR-069 Configuration .....	72
<b>Phone Provisioning .....</b>	<b>75</b>
Boot Files, Configuration Files, and Resource Files .....	75
Boot Files .....	75
Common Boot File .....	75
MAC-Oriented Boot File .....	76
Boot File Attributes .....	76
Customizing a Boot File .....	77
Configuration Files .....	77
Common CFG File .....	78
MAC-Oriented CFG File .....	79
MAC-local CFG File .....	79
Configuration File Customization .....	79



Customizing a Configuration File .....	79
Configuration File Attributes .....	80
Resource Files .....	80
Supported Resource Files .....	80
Files Download Process .....	81
Provisioning Methods .....	82
Provisioning Methods Priority .....	83
Web User Interface .....	83
Accessing the Web User Interface .....	83
Quick Login Configuration .....	84
Web Server Type Configuration .....	85
Web Access Time Limit Configuration .....	86
Navigating the Web User Interface .....	88
Phone User Interface .....	88
Central Provisioning .....	88
Auto Provisioning Settings Configuration .....	89
User-Triggered Provisioning Settings Configuration .....	94
PIN Code Provisioning Settings Configuration .....	95
Viewing Configurations Configured via Different Provisioning Methods .....	96
Setting Up a Provisioning Server .....	96
Supported Provisioning Protocols .....	97
Provisioning Protocols Configuration .....	97
Supported Provisioning Server Discovery Methods .....	97
Zero Touch Provision Configuration .....	98
PnP Provision Configuration .....	99
DHCP Provision Configuration .....	99
Static Provision Configuration .....	101
Configuring a Provisioning Server .....	102
Keeping User's Personalized Settings after Auto Provisioning .....	102
Keeping User's Personalized Settings Configuration .....	103
Auto Provisioning Flowchart for Keep User's Personalized Configuration Settings .....	103
Example: Keeping User's Personalized Settings .....	104
Clearing User's Personalized Configuration Settings .....	105
Example: Deploying Phones from the Provisioning Server .....	105
<b>Security Features .....</b>	<b>108</b>
User and Administrator Identification .....	108
User and Administrator Identification Configuration .....	108
User Access Level Configuration .....	110
Auto Logout Time .....	111
Auto Logout Time Configuration .....	111
Phone Lock .....	111
Operation Behaviors on Lock Phone .....	112
Phone Lock Configuration .....	113
Transport Layer Security (TLS) .....	115

Supported Cipher Suites .....	115
Supported Trusted and Server Certificates .....	116
Supported Trusted Certificates .....	116
TLS Configuration .....	118
Secure Real-Time Transport Protocol (SRTP) .....	124
SRTP Configuration .....	125
Encrypting and Decrypting Files .....	126
Configuration Files Encryption Tools .....	127
Configuration Files Encryption and Decryption .....	127
Contact Files Encryption and Decryption .....	127
Encryption and Decryption Configuration .....	127
Incoming Network Signaling Validation .....	131
Incoming Network Signaling Validation Configuration .....	131
USB Port Lock .....	132
USB Port Lock Configuration .....	132
<b>Firmware Upgrade .....</b>	<b>133</b>
Firmware for Each Phone Model .....	133
Firmware Upgrade Configuration .....	134
Upgrading Yealink Headset Firmware .....	134
<b>Using DECT Handsets with T57W/T54W/T53W/T53/T53C Phones .....</b>	<b>136</b>
Handset Backlight .....	136
Handset Backlight Configuration .....	136
Handset Keypad Light .....	137
Handset Keypad Light Configuration .....	137
Handset Wallpaper .....	138
Handset Wallpaper Configuration .....	138
Handset Screen Saver .....	139
Handset Screen Saver Configuration .....	139
Handset Name .....	139
Handset Name Configuration .....	139
Number Assignment .....	140
Number Assignment Configuration .....	140
End Call on Hook .....	141
End Call on Hook Configuration .....	141
Advisory Tones .....	142
Advisory Tones Configuration .....	142
Base PIN .....	143
Base PIN Configuration .....	144
DECT Intercom .....	145
DECT Intercom Configuration .....	145
Handset LDAP Configuration .....	145
Handset Network Directory .....	150
Shared Directory .....	150
Shared Directory Configuration .....	150

Shared Contact File Customization .....	151
Shared Contact File Elements and Attributes .....	151
Customizing Shared Contact File .....	151
Satellite Mode .....	151
Satellite Mode Configuration .....	152
Example: Configuring the Satellite Mode Feature .....	153
Repeater Settings Parameters .....	154
Handset Settings Parameters .....	155
Custom Handset Related Configurations .....	159
Handset Firmware Upgrade Configuration .....	160
Emergency Alarm .....	162
Emergency Alarm Configuration .....	162
Line Keys .....	165
Line Keys Configuration .....	166
Visual and Audio Alert for Monitor Lines .....	167
Visual and Audio Alert for BLF Lines Configuration .....	167
<b>Audio Features .....</b>	<b>170</b>
Alert Tone .....	170
Alert Tone Configuration .....	170
Touch Tone .....	172
Touch Tone Configuration .....	172
Ring Tones .....	172
Custom Ringtone Limit .....	172
Ringtone Configuration .....	173
Distinctive Ring Tones .....	175
Supported Alert-Info Headers Format .....	175
Alert-Info: Bellcore-drN .....	176
Alert-Info: ringtone-N/Alert-Info: ringtone-RingN.wav (or Alert-Info: MyMelodyN/Alert-Info: MyMelodyRingN.wav) .....	178
Alert-Info: <URL> .....	179
Alert-Info: info=info text;x-line-id=0 .....	179
Distinctive Ring Tones Configuration .....	180
Ringer Device .....	181
Ringer Device Configuration .....	182
Audio Volume .....	182
Ringer Volume Configuration .....	182
Sending Volume Configuration .....	183
Tones .....	185
Supported Tones .....	185
Tones Configuration .....	186
Audio Codecs .....	191
Supported Audio Codecs .....	191
Audio Codecs Configuration .....	193
Packetization Time (PTime) .....	197
Supported PTime of Audio Codec .....	197

PTime Configuration .....	198
Early Media .....	198
Early Media Configuration .....	198
Headset Prior .....	199
Headset Prior Configuration .....	199
Dual Headset .....	200
Dual Headset Configuration .....	200
Acoustic Clarity Technology .....	200
Acoustic Echo Cancellation (AEC) .....	201
AEC Configuration .....	201
Noise Suppression .....	201
Noise Suppression Configuration .....	201
Background Noise Suppression (BNS) .....	201
Automatic Gain Control (AGC) .....	202
Voice Activity Detection (VAD) .....	202
VAD Configuration .....	202
Comfort Noise Generation (CNG) .....	202
CNG Configuration .....	202
Jitter Buffer .....	202
Jitter Buffer Configuration .....	203
Smart Noise Block .....	204
Smart Noise Block Configuration .....	204
Acoustic Shield .....	205
Acoustic Shield Configuration .....	205
Smart Noise Filtering .....	206
Smart Noise Filtering Configuration .....	206
DTMF .....	206
DTMF Keypad .....	206
Transmitting DTMF Digit .....	207
Transmitting DTMF Digit Configuration .....	207
Suppress DTMF Display .....	209
Suppress DTMF Display Configuration .....	209
Transfer via DTMF .....	209
Transfer via DTMF Configuration .....	209
Local DTMF Tone .....	210
Local DTMF Tone Configuration .....	210
Voice Quality Monitoring (VQM) .....	210
RTCP-XR .....	210
RTCP-XR Configuration .....	211
VQ-RTCPXR .....	211
Voice Quality Reports .....	211
Voice Quality Reports Configuration .....	211
VQ-RTCPXR Display .....	213
VQ-RTCPXR Display Configuration .....	214
Central Report Collector .....	217

Central Report Collector Configuration .....	217
Ultrasonic Configuration .....	217
<b>Phone Customization .....</b>	<b>219</b>
Language .....	219
Supported Languages .....	219
Language Display Configuration .....	220
Language for Phone Display Customization .....	221
Customizing a Language Pack for Phone Display .....	221
Custom Language for Phone Display Configuration .....	222
Example: Setting a Custom Language for Phone Display .....	222
Language for Web Display Customization .....	223
Customizing a Language Pack for Web Display .....	223
Customizing a Language Pack for Note Display .....	224
Custom Language for Web and Note Display Configuration .....	224
Contrast .....	225
Contrast Configuration .....	225
Wallpaper .....	226
Wallpaper Configuration .....	226
Wallpaper Customization .....	228
Custom Wallpaper Picture Limit .....	228
Custom Wallpaper Configuration .....	228
Deleting a Custom Picture .....	228
Adding a Wallpaper from a USB Flash Drive .....	229
Example: Setting a Custom Picture as Wallpaper .....	229
Transparency .....	229
Transparency Configuration .....	229
Screen Saver .....	230
Screensaver Display Customization .....	230
Screensaver File Elements and Attributes .....	231
Customizing the Screen Saver File .....	232
Custom Screensaver Picture Limit .....	232
Screensaver Configuration .....	232
Adding a Screensaver Picture from a USB Flash Drive .....	236
Deleting a Screensaver Picture .....	236
Backlight .....	236
Supported Backlight Options .....	237
Backlight and Time Configuration .....	237
Label Length for Line Key Display .....	239
Label Length Display Configuration .....	240
Label Alignment for Line/Ext Key Display .....	241
Label Alignment Display Configuration .....	241
Page Switch Key .....	241
Page Switch Key Configuration .....	242
Page Tips .....	242

Phone Page Tips .....	242
Phone Page Tips Indicator .....	242
Phone Page Tips Configuration .....	243
Expansion Module Page Tips .....	244
Expansion Module Page Tips Indicator .....	244
Expansion Module Page Tips Configuration .....	244
Time and Date .....	244
Time Zone .....	245
NTP Settings .....	248
NTP Configuration .....	248
DST Settings .....	250
Auto DST File Attributes .....	251
Customizing Auto DST File .....	251
DST Configuration .....	252
Time and Date Manually Configuration .....	254
Time and Date Format Configuration .....	254
Date Customization Rule .....	256
Idle Clock Display .....	257
Idle Clock Display Configuration .....	257
Logo Customization .....	257
Custom Logo Picture Limit .....	258
Customizing a Logo Picture .....	258
Custom Logo Configuration .....	259
Example: Setting a Custom Logo Display .....	260
Call Display .....	260
Call Display Configuration .....	261
Display Method on Dialing .....	264
Display Method on Dialing Configuration .....	265
Key As Send .....	265
Key As Send Configuration .....	265
Softkey Layout .....	266
Softkey Layout File Customization .....	266
Softkey Layout File Elements and Attributes .....	267
Customizing Softkey Layout File .....	267
Softkey Layout Configuration .....	268
Example: Setting the Soft Keys Layout in Talking State .....	270
Input Method .....	270
Keypad Input Method File Customization .....	270
Customizing the Keypad Input Method File .....	270
Onscreen Keyboard Input Method File Customization .....	271
Description of the Onscreen Keyboard Input Method Files .....	271
Lang File Elements and Attributes .....	272
Customizing a Lang File .....	272
Ime File Elements and Attributes .....	273
Customizing an Ime File .....	274

---

Layout File Elements and Attributes .....	274
Customizing a Layout File .....	275
Input Method Configuration .....	275
Example: Configuring the French Onscreen Keyboard Input Method .....	277
Notification Popups .....	278
Notification Popups Configuration .....	278
Power LED Indicator .....	279
Power LED Indicator Configuration .....	280
Bluetooth .....	282
Bluetooth Configuration .....	283
Handset/Headset/Speakerphone Mode .....	284
Handset/Headset/Speakerphone Mode Configuration .....	284
DSS Keys .....	286
Supported DSS Keys .....	286
Supported Dsskey Types .....	287
Line Keys .....	288
Line Keys Configuration .....	288
Example: Set a Park/Retrieve Key for FAC Call Park Mode .....	292
Example: Set a Park/Retrieve Key for Transfer Call Park Mode .....	293
Example: Setting a Line Key as Directed Pickup Key .....	293
Example: Setting a Line Key as Group Pickup Key .....	294
Example: Setting a Line Key as Forward Key .....	294
Example: Setting a Line Key as BLF List Key .....	295
Example: Setting a Line Key as Private Hold Key .....	295
Example: Setting a Line Key as Multicast Paging Key .....	295
Programmable Keys .....	296
Supported Programmable Keys .....	296
Programmable Keys Configuration .....	297
Ext Keys .....	300
Ext Keys Configuration .....	300
Dsskey Lock Configuration .....	303
Dsskey Page Reset Configuration .....	304
URL Icon Hide .....	305
URL Icon Hide Configuration .....	305
Enhanced DSS Keys .....	305
Guidelines for Configuring Enhanced DSS Keys .....	306
Macro Action Strings .....	306
EDK Configuration .....	309
EDK List Configuration .....	310
EDK User Input Prompt Configuration .....	311
EDK Soft Keys Configuration .....	312
Example: Configuring EDK List for a Line Key .....	316
Example: Using EDK Macro Strings as the Contact Number .....	317
Power Saving .....	317
Power Saving Configuration .....	317

Search Source List in Dialing .....	320
Search Source File Customization .....	320
Search Source File Attributes .....	320
Customizing Search Source File .....	322
Search Source List Configuration .....	322
Recent Call Display in Dialing .....	323
Recent Call in Dialing Configuration .....	324
Icon Customization .....	324
Custom Icons Configuration .....	324
Warnings Display .....	325
Warnings Display Configuration .....	325
Out of Service .....	325
Out of Service Configuration .....	325
Analog Headset Mode .....	326
Analog Headset Mode Configuration .....	326
<b>Account Settings .....</b>	<b>327</b>
Account Registration .....	327
Supported Accounts .....	327
SIP Accounts Registration Configuration .....	327
PSTN Account Configuration .....	332
Registration Settings Configuration .....	333
Outbound Proxy in Dialog .....	335
Outbound Proxy in Dialog Configuration .....	335
Server Redundancy .....	336
Behaviors When Working Server Connection Fails .....	337
Registration Method of the Failover/Fallback Mode .....	337
Fallback Server Redundancy Configuration .....	337
Failover Server Redundancy Configuration .....	338
SIP Server Name Resolution .....	342
SIP Server Name Resolution Configuration .....	342
Static DNS Cache .....	343
Behave with a Configured DNS Server .....	344
Static DNS Cache Configuration .....	344
Logon Wizard .....	347
Logon Wizard Configuration .....	347
Multiple Line Keys per Account .....	349
Multiple Line Keys per Account Configuration .....	349
Auto Line Labels Rule Configuration .....	351
Default Account .....	352
<b>Directory .....</b>	<b>354</b>
Local Directory .....	354
Contact Avatars and Icons Picture Limit .....	354
Preparing the Tar Formatted File .....	355
Local Contact File Customization .....	356



---

XML Conversion Table .....	356
Local Contact File Elements and Attributes .....	356
Customizing Local Contact File .....	358
Local Contact Files and Resource Upload .....	358
Example: Adding Contacts Using a Contact File .....	360
Local Contacts Backup .....	361
Local Contacts Order Configuration .....	362
Local Contacts Number Configuration .....	362
Favorite Contacts .....	362
Favorites Configuration .....	363
Google Contacts .....	364
Google Contacts Configuration .....	364
Signing in to the Google Contact Server .....	365
Lightweight Directory Access Protocol (LDAP) .....	365
LDAP Attributes .....	365
Securely Storing the LDAP Credentials .....	366
LDAP Configuration .....	366
Remote Phone Book .....	373
Remote Phone Book File Customization .....	373
Remote Phone Book File Elements .....	373
Customizing Remote Phone Book File .....	374
Remote Phone Book Configuration .....	375
Example: Configuring a Remote Phone Book .....	376
Directory List for Directory/Dir Soft Key .....	377
Directory List File Customization .....	377
Directory List File Attributes .....	377
Customizing Directory List File .....	378
Directory List Configuration .....	379
Example: Configuring a Directory List .....	380
Directory Search Settings .....	380
Directory Search Settings Configuration .....	381
Number Matching Settings .....	381
Number Matching Settings Configuration .....	382
Example: Matching Contacts / Blocklist with the Caller's Phone Number Using the Regular Expression .....	383
Enterprise Directory .....	383
Enterprise Directory Configuration .....	383
<b>Call Log .....</b>	<b>386</b>
Call Log Display .....	386
Call Log Configuration .....	386
Call Logs Backup .....	389
<b>Call Features .....</b>	<b>391</b>
Dial Plan Defined by Four Patterns (Old Dial Plan Mechanism) .....	391
Basic Regular Expression Syntax for Four Patterns .....	392
Replace Rule File Customization .....	392

Replace Rule File Attributes .....	392
Customizing the Replace Rule File .....	393
Dial Now File Customization .....	393
Dial Now File Attributes .....	393
Customizing the Dial Now File .....	394
Replace Rule Configuration .....	394
Dial Now Configuration .....	395
Area Code Configuration .....	396
Block Out Configuration .....	397
Example: Adding Replace Rules Using a Replace Rule File .....	398
Dial Plan Defined by Digit Map (New Dial Plan Mechanism) .....	398
Basic Regular Expression Syntax for Digit Map .....	399
Digit Map for All Lines Configuration .....	400
Digit Map for a Specific Line Configuration .....	403
Emergency Dialplan and Enhanced 911 .....	406
Emergency Dialplan and Enhanced 911 Configuration .....	407
Hotline .....	413
Hotline Configuration .....	414
Off Hook Hot Line Dialing .....	415
Off Hook Hot Line Dialing Configuration .....	415
Live Dialpad .....	416
Live Dialpad Configuration .....	416
Auto Redial .....	416
Auto Redial Configuration .....	416
Recall Configuration .....	418
Speed Dial .....	418
Speed Dial Key Configuration .....	418
Password Dial .....	419
Password Dial Configuration .....	419
Call Timeout .....	419
Call Timeout Configuration .....	420
Anonymous Call .....	420
Anonymous Call Configuration .....	420
Call Number Filter .....	422
Call Number Filter Configuration .....	422
IP Address Call .....	422
IP Address Call Configuration .....	422
Ignoring Incoming Calls .....	423
Ignoring Incoming Calls Configuration .....	423
Off Hook Answering .....	424
Off Hook Answering Configuration .....	424
Auto Answer .....	424
Auto Answer Configuration .....	424
Anonymous Call Rejection .....	427
Anonymous Call Rejection Configuration .....	428

Call Waiting .....	429
Call Waiting Configuration .....	429
Do Not Disturb (DND) .....	430
DND Settings Configuration .....	431
DND Feature Configuration .....	433
DND in Phone Mode Configuration .....	433
DND in Custom Mode Configuration .....	434
DND Synchronization for Server-side Configuration .....	435
Multiple Call Appearances .....	437
Multiple Call Appearances Configuration .....	437
Call Hold .....	438
Call Hold Configuration .....	438
Music on Hold (MoH) Configuration .....	440
Call Mute .....	441
Microphone Mute Configuration .....	441
Keep Mute .....	441
Keep Mute Configuration .....	442
Mute Alert Tone .....	442
Mute Alert Tone Configuration .....	442
Call Forward .....	443
Call Forward Settings Configuration .....	443
Call Forward Feature Configuration .....	445
Call Forward in Phone Mode Configuration .....	445
Call Forward in Custom Mode Configuration .....	450
Call Forward Synchronization for Server-side Configuration .....	454
Call Transfer .....	456
Call Transfer Configuration .....	456
Transfer Mode for Dsskey Configuration .....	458
Conference .....	458
Conference Type Configuration .....	458
Local Conference Configuration .....	459
Network Conference Configuration .....	460
USB Recording .....	461
USB Recording Configuration .....	461
Multicast Paging .....	462
Multicast Paging Group Configuration .....	463
Multicast Listening Group Configuration .....	464
Multicast Paging Settings .....	465
Multicast Paging Settings Configuration .....	465
<b>Advanced Features .....</b>	<b>468</b>
Call Pickup .....	468
Directed Call Pickup .....	468
Directed Call Pickup Configuration .....	468
Group Call Pickup .....	470

Group Call Pickup Configuration .....	470
Dialog Info Call Pickup .....	471
Dialog Info Call Pickup Configuration .....	472
Call Completion .....	472
Call Completion Configuration .....	475
Example: Using Call Completion .....	475
Call Park and Retrieve .....	475
Call Park and Retrieve Configuration .....	475
Example: Setting Call Park and Retrieve in FAC Mode .....	477
Example: Setting Call Park and Retrieve in Transfer Mode .....	477
Automatic Call Distribution (ACD) .....	478
ACD Key Configuration .....	478
ACD Configuration .....	478
Example: Setting ACD .....	480
Busy Lamp Field .....	480
BLF Key Configuration .....	481
BLF List Configuration .....	481
State Indicator of Remote Line .....	484
BLF/BLF List Subscription .....	484
BLF/BLF List Subscription Configuration .....	485
Visual and Audio Alert for Monitor Lines .....	487
Visual and Audio Alert for BLF Lines Configuration .....	487
Example: Configuring Visual and Audio Alert for Monitor Lines .....	489
LED Mode for BLF/BLF List Key .....	490
Supported BLF LED Modes .....	490
BLF LED Mode Configuration .....	492
BLF/BLF List Key LED Status and Behavior Configuration .....	492
Supported BLF/BLF List Key Behaviors .....	492
BLF Key LED/Icon and Behavior for Idle State Configuration .....	493
BLF Key LED/Icon and Behavior for Call-in State Configuration .....	494
BLF Key LED/Icon and Behavior for Call-out State Configuration .....	495
BLF Key LED/Icon and Behavior for Talking State Configuration .....	496
BLF Key LED/Icon and Behavior for Parked-Against State Configuration .....	498
BLF Key LED/Icon and Behavior for Hold State Configuration .....	499
BLF Key LED/Icon and Behavior for DND State Configuration .....	500
BLF Key for Intercom Configuration .....	500
Call Information Display Configuration .....	501
BLF Send DTMF Configuration .....	501
Shared Line .....	502
State Indicator of Shared Line .....	502
Shared Call Appearance (SCA) Configuration .....	503
SCA Configuration .....	504
Bridge Lines Appearance (BLA) .....	505
BLA Configuration .....	505
Intercom .....	507

Intercom Key Configuration .....	507
State Monitor for Intercom Contact .....	507
State Indicator of Intercom Contact .....	508
State Monitor for Intercom Contact Configuration .....	508
Outgoing Intercom Configuration .....	508
Incoming Intercom Configuration .....	509
CSTA Control .....	511
CSTA Control Configuration .....	512
Action URL .....	512
Predefined Events List .....	512
Variable Values List .....	514
Action URL Configuration .....	516
Action URI .....	526
Supported HTTP/HTTPS GET Request .....	526
Supported SIP Notify Message .....	527
Variable Values List .....	527
Action URI Configuration .....	532
Example: Capturing the Current Screen of the Phone .....	532
Example: Placing a Call via Web User Interface .....	533
Voice Mail .....	534
MWI for Voice Mail Configuration .....	534
Short Message Service (SMS) .....	537
SMS Configuration .....	537
XML Browser .....	538
XML Browser Configuration .....	538
Hot Desking .....	540
Hot Desking Key Configuration .....	540
Hot Desking Configuration .....	541
<b>Device Management .....</b>	<b>544</b>
Device Management Configuration .....	544
<b>General Features .....</b>	<b>546</b>
Line Identification Presentation .....	546
CLIP and COLP Configuration .....	546
Return Code for Refused Call .....	548
Return Code for Refused Call and not answer Configuration .....	548
Return Code for Unanswered Call .....	548
Return Code for Unanswered Call Configuration .....	549
Hide Feature Access Codes .....	549
Hide Feature Access Codes Configuration .....	549
Accept SIP Trust Server Only .....	550
Accept SIP Trust Server Only Configuration .....	550
100 Reliable Retransmission .....	551
100 Reliable Retransmission Configuration .....	551
SIP Session Timer .....	552

SIP Session Timer Configuration .....	552
Session Timer .....	553
Session Timer Configuration .....	553
Reboot in Talking .....	554
Reboot in Talking Configuration .....	554
Reserve # in User Name .....	554
Reserve # in User Name Configuration .....	555
Busy Tone Delay .....	555
Busy Tone Delay Configuration .....	555
CFG File Version Information .....	556
CFG File Version Information Configuration .....	556
Media Loopback .....	557
Media Loopback Configuration .....	557
Cloud .....	559
Cloud Configuration .....	559
<b>Configuration Parameters .....</b>	<b>560</b>
BroadSoft Parameters .....	560
BroadSoft Settings .....	560
Broadsoft UC .....	561
Broadsoft XSI .....	564
Broadsoft ACD .....	566
Broadsoft Centralized Call Recording .....	570
Broadsoft Security Classification .....	571
Broadsoft Hoteling .....	571
Broadsoft Flexible Seating .....	572
Broadsoft Call Decline .....	573
Broadsoft Network Directory .....	574
Broadsoft Visual Voice Mail .....	578
Broadsoft SCA .....	579
Broadsoft Call Park .....	580
Broadsoft Emergency Call .....	582
BroadSoft Call Waiting Sync .....	582
Zoom Parameters .....	582
Zoom Settings .....	582
Zoom Barge in Parameters .....	583
Zoom Call Settings .....	586
Zoom SCA .....	587
Zoom Emergency Call .....	588
Zoom Security .....	588
Start2Start ACD Parameters .....	589
Alcatel-Lucent Barge in Parameters .....	590
Ethernet Interface MTU Parameters .....	592
SIP Settings Parameters .....	592
Call Settings Parameters .....	596

Unify Parameters .....	598
Provisioning Parameters .....	598
<b>Troubleshooting Methods .....</b>	<b>599</b>
Exporting All the Diagnostic Files .....	599
Exporting Headset Audio Diagnostic File .....	599
Exporting Headset Log .....	600
Log Files .....	600
Local Logging .....	600
Local Logging Configuration .....	600
Exporting the Log Files to a Local PC .....	603
Uploading Log to the USB Flash Drive .....	603
Viewing the Log Files .....	604
Syslog Logging .....	604
Syslog Logging Configuration .....	605
Viewing the Syslog Messages on Your Syslog Server .....	607
Resetting Phone and Configuration .....	607
Reset to Factory Configuration .....	608
Resetting the IP phone to Default Factory Settings .....	608
Resetting the IP phone to Custom Factory Settings .....	609
Custom Factory Configuration .....	609
Deleting the Custom Factory Settings Files .....	609
Resetting a Configuration to Default Factory Setting .....	610
Packets Capture .....	610
Capturing the Packets via Web User Interface .....	610
Capturing the Packets in Enhanced Way .....	610
Capturing the Packets in Normal Way .....	611
Ethernet Software Capturing Configuration .....	611
Span to PC Port Configuration .....	612
Watch Dog .....	612
Watch Dog Configuration .....	612
Network Diagnostics .....	612
Ping and Traceroute Diagnostics .....	612
Network Reachability Detection Configuration .....	613
Analyzing Configuration Files .....	614
Exporting CFG Configuration Files from Phone .....	615
Importing CFG Configuration Files to Phone .....	615
Configuration Files Import URL Configuration .....	615
Exporting BIN Files from the Phone .....	615
Importing BIN Files from the Phone .....	616
BIN Files Import URL Configuration .....	616
Device Status .....	616
Viewing Device Status .....	616
Phone Reboot .....	617
Rebooting the IP Phone Remotely .....	617

Notify Reboot Configuration .....	617
Rebooting the Device via the Phone User Interface .....	617
Rebooting the Device via Web User Interface .....	618
<b>Troubleshooting Solutions .....</b>	<b>619</b>
IP Address Issues .....	619
The device does not get an IP address .....	619
Solving the IP conflict problem .....	619
The Specific format in configuring IPv6 on Yealink phones .....	619
Time and Date Issues .....	620
Display time and date incorrectly .....	620
Display Issues .....	620
The phone screen is blank .....	620
The phone displays "No Service" .....	620
Phone Book Issues .....	620
Difference between a remote phone book and a local phone book .....	620
Audio Issues .....	620
Increasing or decreasing the volume .....	620
Get poor sound quality during a call .....	620
There is no sound when the other party picks up the call .....	621
Play the local ringback tone instead of media when placing a long-distance number without plus 0 .....	621
Wi-Fi and Bluetooth Issues .....	621
The wireless signal strength is low .....	621
The phone cannot connect to Bluetooth devices all the time .....	621
The Bluetooth headset affects IP phone's voice quality .....	621
Firmware and Upgrading Issues .....	621
Fail to upgrade the phone firmware .....	621
Verifying the firmware version .....	622
The IP phone does not update the configurations .....	622
System Log Issues .....	623
Fail to export the system log to a provisioning server (FTP/TFTP server) .....	623
Fail to export the system log to a syslog server .....	623
Protocols and Ports Issues .....	623
What communication protocols and ports do Yealink IP phones support? .....	623
Password Issues .....	624
Restore the administrator password .....	624
The web screen displays "Default password is in use. Please change!" .....	624
Logo Issues .....	625
Why does the IP phone use DOB format logo file instead of popular BMP, JPG and so on? .....	625
Power and Startup Issues .....	625
Both PoE cable and power adapter is connected to the phone .....	625
The power LED indicator has no lights .....	625
The Phone screen is black .....	625
The IP phone always displays the Yealink logo .....	625
Other Issues .....	625



---

The difference among user name, register name, and display name .....	625
On code and off code .....	625
The difference between RFC 2543 Hold enabled and disabled .....	626
The difference between Shared Call Appearance (SCA) and Bridge Lines Appearance (BLA) .....	626
<b>Appendix .....</b>	<b>627</b>
RFC and Internet Draft Support .....	627
Reading Icons .....	629



## Getting Started

This chapter describes where Yealink devices fit in your network and provides basic initialization instructions of devices.

### Topics

[Requirements](#)

[Yealink IP Phones in a Network](#)

[Initialization Process Overview](#)

[Verifying Startup](#)

## Requirements

In order to perform as SIP endpoints in your network successfully, you need the following in deployments:


- A working IP network is established.
- VoIP gateways configured for SIP.
- The latest (or compatible) firmware of the device is available.
- A call server is active and configured to receive and send SIP messages.
- A text editor, such as Notepad++, to create and edit boot files, configuration files, and resource files.

## Yealink IP Phones in a Network

Most Yealink phones are connected physically through a Category 5E (CAT5E) cable to a 10/100/1000Mbps Ethernet LAN, and send and receive all data using the same packet-based technology. Some phones support the wireless network.

Since the IP phone is a data terminal, digitized audio being just another type of data from its perspective, the phone is capable of vastly more than traditional business phones. Moreover, Yealink phones run the same protocols as your office personal computer, which means that you can develop many innovative applications without resorting to specialized technology.

There are many ways to set up a phone network using Yealink phones. The following shows an example of a network setup:

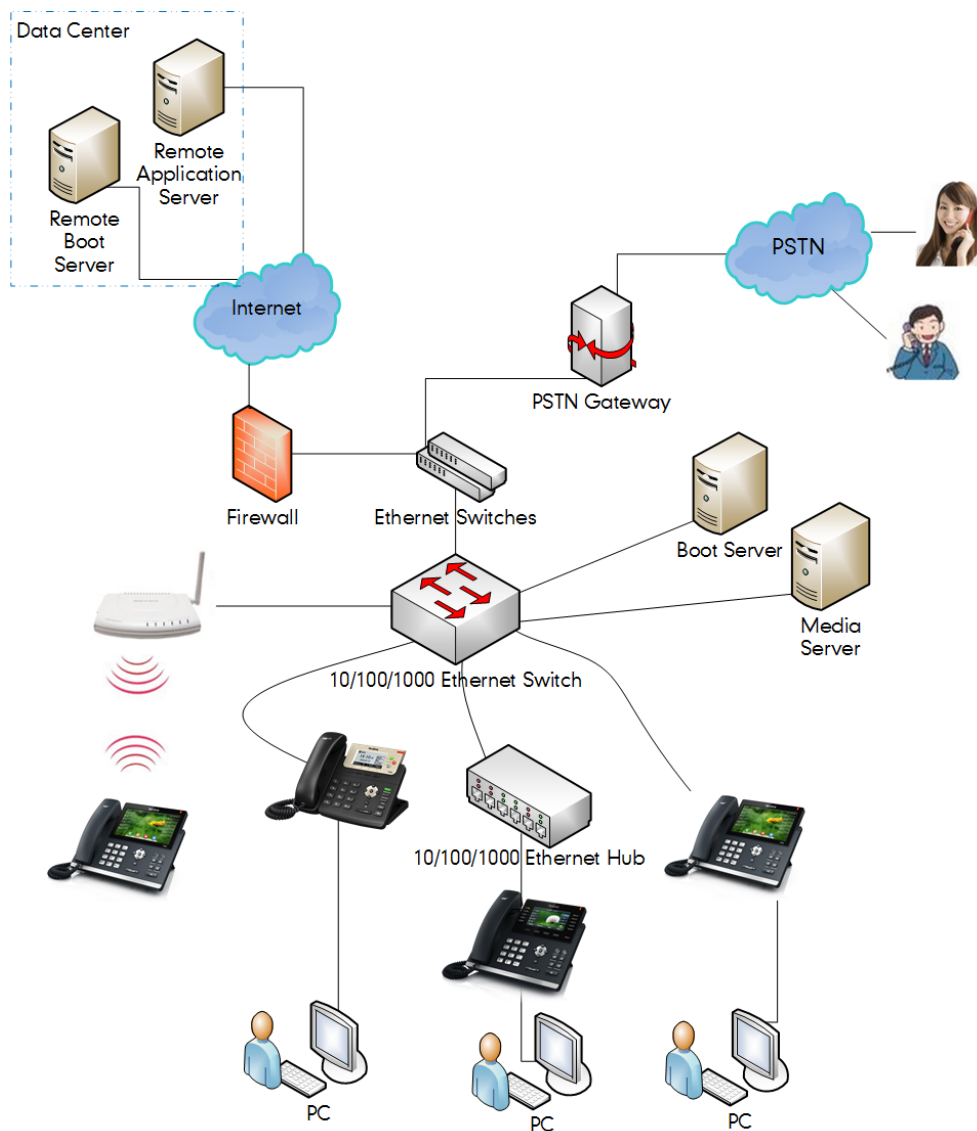

## Initialization Process Overview

The initialization process of the device is responsible for network connectivity and operation of the device in your local network. Once you connect your device to the network and to an electrical supply, the device begins its initialization process.

### Topics

- [Loading the ROM File](#)
- [Configuring the VLAN](#)
- [Querying the DHCP \(Dynamic Host Configuration Protocol\) Server](#)
- [Contacting the Provisioning Server](#)
- [Updating Firmware](#)
- [Downloading the Resource Files](#)

## Loading the ROM File

The ROM file resides in the flash memory of the device. The device comes from the factory with a ROM file pre-loaded. During initialization, the device runs a bootstrap loader that loads and executes the ROM file.

## Configuring the VLAN

If you connect the device to a switch, the switch notifies the device of the VLAN information defined on the switch (if using LLDP or CDP). The device can then proceed with the DHCP request for its network settings (if using DHCP).

## Querying the DHCP (Dynamic Host Configuration Protocol) Server

The device is capable of querying a DHCP server.

After establishing network connectivity, the device can obtain the following network parameters from the DHCP server during initialization:

- IP Address
- Subnet Mask
- Default Gateway
- Primary DNS (Domain Name Server)
- Secondary DNS

By default, the devices obtain these parameters from a DHCPv4. You can configure network parameters of the device manually if any of them are not supplied by the DHCP server.

## Contacting the Provisioning Server

If you configure the device to obtain configurations from the provisioning server, it will be connected to the provisioning server, and then download the boot file and configuration file(s) during startup. The device will be able to resolve and update configurations written in the configuration file(s). If the device does not obtain configurations from the provisioning server, it will use the configurations stored in the flash memory.

## Updating Firmware

If you define the access URL of firmware in the configuration file, the device will download the firmware from the provisioning server. If the MD5 value of the downloaded firmware file differs from that stored in the flash memory, the device will perform a firmware update.


You can manually upgrade the firmware if the device does not download the firmware from the provisioning server.

## Downloading the Resource Files

In addition to the configuration file(s), the device may require resource files before it provides service. These resource files are optional, but if you deploy some particular features, these files are required.

## Verifying Startup

When the IP phone begins the initialization process, it cycles through the following steps:

1. The power LED indicator glows red.
2. The message "Welcome Initializing... please wait" appears on the phone screen when the phone starts up.
3. The main phone screen displays the following:
  - Time and date
  - Soft key labels
4. Press the OK/  key or select **Menu (More) > Status** to check the phone status, for example, firmware version.

If the phone has successfully passed through these steps, it starts up properly and is ready for use.

# Network Configurations

You can make custom network configurations.

## Topics

[IPv4 and IPv6 Wired Network Settings](#)

[DHCP Option for IPv4](#)

[DHCP Option for IPv6](#)

[VLAN](#)

[Wi-Fi](#)

[Real-Time Transport Protocol \(RTP\) Ports](#)

[Network Address Translation \(NAT\)](#)

[Internet Port and PC Port](#)

[VPN](#)

[Quality of Service \(QoS\)](#)

[802.1x Authentication](#)

[TR-069 Device Management](#)

## IPv4 and IPv6 Wired Network Settings

You can configure the devices to operate in IPv4, IPv6, or dual-stack (IPv4/IPv6) mode.

After establishing wired network connectivity, the devices obtain the IPv4 or IPv6 network settings from a Dynamic Host Configuration Protocol (DHCPv4 or DHCPv6) server. We recommend using DHCP where possible to eliminate repetitive manual data entry.

You can also configure IPv4 or IPv6 network settings manually.

**Note:** Yealink devices comply with the DHCPv4 specifications documented in [RFC 2131](#), and DHCPv6 specifications documented in [RFC 3315](#).

## Topics

[Wired Network IP Addressing Mode Configuration](#)

[IPv4 Wired Network Configuration](#)

[IPv6 Wired Network Configuration](#)

## Wired Network IP Addressing Mode Configuration

The following table lists the parameters you can use to configure IP addressing mode for the wired network.

<b>Parameter</b>	static.network.ip_address_mode	<y0000000000xx>.cfg
<b>Description</b>	It configures the IP addressing mode for the wired network.	
<b>Permitted Values</b>	0-IPv4 1-IPv6 2-IPv4 & IPv6	
<b>Default</b>	0	
<b>Web UI</b>	Network > Basic > Internet Port > Mode (IPv4/IPv6)	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Advanced (default password: admin) > Network > WAN Port > IPAddress Mode <u>CP925:</u> More > Advanced (default password: admin) > Network > WAN Port > IPAddress Mode	

	<u>Black-and-white Screen Phones:</u> Menu > Settings > Advanced Settings (default password: admin) > Network > WAN Port > IP Mode	
<b>Parameter</b>	static.network.preference	<y0000000000xx>.cfg
<b>Description</b>	It specifies IPv4 or IPv6 as the preferred wired network in a Dual-Stack mode. <b>Note:</b> It works only if “static.network.ip_address_mode” is set to 2 (IPv4 & IPv6).	
<b>Permitted Values</b>	0-IPv6 1-IPv4	
<b>Default</b>	0	
<b>Web UI</b>	Network > Basic > Internet Port > Preference(IPv4/IPv6)	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Advanced (default password: admin) > Network > WAN Port > Preference <u>CP925:</u> More > Advanced (default password: admin) > Network > WAN Port > Preference <u>Black-and-white Screen Phones:</u> Menu > Settings > Advanced Settings (default password: admin) > Network > WAN Port > Preference	
<b>Parameter</b>	account.X.sip_server_mode <sup>[2]</sup>	<MAC>.cfg
<b>Description</b>	It specifies the preferred network in a Dual-Stack mode when a domain name is configured for a SIP server. <b>Note:</b> It works only if “static.network.ip_address_mode” is set to 2 (IPv4 & IPv6).	
<b>Permitted Values</b>	0-Specify IPv4 as the preferred network and A query will be performed preferentially. 1-Specify IPv6 as the preferred network and AAAA query will be performed preferentially. 2-The preferred network is configured by “static.network.preference”.	
<b>Default</b>	0	

[2]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925, X=1.

## IPv4 Wired Network Configuration

The following table lists the parameters you can use to configure IPv4 wired network.

<b>Parameter</b>	static.network.internet_port.type	<y0000000000xx>.cfg
<b>Description</b>	It configures the Internet port type for IPv4 wired network. <b>Note:</b> It works only if “static.network.ip_address_mode” is set to 0 (IPv4) or 2 (IPv4 & IPv6).	
<b>Permitted Values</b>	0-DHCP 2-Static IP	
<b>Default</b>	0	
<b>Web UI</b>	<u>T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/CP925:</u> Network > Basic > IPv4 Config > Configuration Type <u>Other Phones:</u> Network > Basic > IPv4 Config	

<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Advanced (default password: admin) > Network > WAN Port > IPv4 > Type <u>CP925:</u> More > Advanced (default password: admin) > Network > WAN Port > IPv4 > Type <u>Black-and-white Screen Phones:</u> Menu > Settings > Advanced Settings (default password: admin) > Network > WAN Port > IPv4 > Type	
<b>Parameter</b>	static.network.internet_port.ip	<y0000000000xx>.cfg
<b>Description</b>	It configures the IPv4 address for the wired network. <b>Note:</b> It works only if "static.network.internet_port.type" is set to 2 (Static IP).	
<b>Permitted Values</b>	IPv4 Address	
<b>Default</b>	Blank	
<b>Web UI</b>	<u>T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/CP925:</u> Network > Basic > IPv4 Config > Configuration Type (Static IP) > IP Address <u>Other Phones:</u> Network > Basic > IPv4 Config > Static IP Address > IP Address	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Advanced (default password: admin) > Network > WAN Port > IPv4 > Static IP > IP Address <u>CP925:</u> More > Advanced (default password: admin) > Network > WAN Port > IPv4 > Static IP > IP Address <u>Black-and-white Screen Phones:</u> Menu > Settings > Advanced Settings (default password: admin) > Network > WAN Port > IPv4 > Static IPv4 Client > IP Address	
<b>Parameter</b>	static.network.internet_port.mask	<y0000000000xx>.cfg
<b>Description</b>	It configures the IPv4 subnet mask for the wired network. <b>Note:</b> It works only if "static.network.internet_port.type" is set to 2 (Static IP).	
<b>Permitted Values</b>	Subnet Mask	
<b>Default</b>	Blank	
<b>Web UI</b>	<u>T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/CP925:</u> Network > Basic > IPv4 Config > Configuration Type (Static IP) > Subnet Mask <u>Other Phones:</u> Network > Basic > IPv4 Config > Static IP Address > Subnet Mask	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Advanced (default password: admin) > Network > WAN Port > IPv4 > Static IP > Subnet Mask <u>CP925:</u> More > Advanced (default password: admin) > Network > WAN Port > IPv4 > Static IP > Subnet Mask	



	<u>Black-and-white Screen Phones:</u> Menu > Settings > Advanced Settings (default password: admin) > Network > WAN Port > IPv4 > Static IPv4 Client > Subnet Mask	
<b>Parameter</b>	static.network.internet_port.gateway	<y0000000000xx>.cfg
<b>Description</b>	It configures the IPv4 default gateway for the wired network. <b>Note:</b> It works only if "static.network.internet_port.type" is set to 2 (Static IP).	
<b>Permitted Values</b>	IPv4 Address	
<b>Default</b>	Blank	
<b>Web UI</b>	<u>T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/CP925:</u> Network > Basic > IPv4 Config > Configuration Type (Static IP) > Default Gateway  <u>Other Phones:</u> Network > Basic > IPv4 Config > Static IP Address > Default Gateway	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Advanced (default password: admin) > Network > WAN Port > IPv4 > Static IP > Default Gateway  <u>CP925:</u> More > Advanced (default password: admin) > Network > WAN Port > IPv4 > Static IP > Default Gateway  <u>Black-and-white Screen Phones:</u> Menu > Settings > Advanced Settings (default password: admin) > Network > WAN Port > IPv4 > Static IPv4 Client > Default Gateway	
<b>Parameter</b>	static.network.static_dns_enable	<y0000000000xx>.cfg
<b>Description</b>	It triggers the static DNS feature to on or off for the wired network. <b>Note:</b> It works only if "static.network.internet_port.type" is set to 0 (DHCP).	
<b>Permitted Values</b>	0-Off, the phone will use the IPv4 DNS obtained from DHCP. 1-On, the phone will use manually configured static IPv4 DNS.	
<b>Default</b>	0	
<b>Web UI</b>	Network > Basic > IPv4 Config > Static DNS	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Advanced (default password: admin) > Network > WAN Port > IPv4 > Type(DHCP) > Static DNS  <u>CP925:</u> More > Advanced (default password: admin) > Network > WAN Port > IPv4 > Type(DHCP) > Static DNS  <u>Black-and-white Screen Phones:</u> Menu > Settings > Advanced Settings (default password: admin) > Network > WAN Port > IPv4 > DHCP IPv4 Client > Static DNS	
<b>Parameter</b>	static.network.primary_dns	<y0000000000xx>.cfg
<b>Description</b>	It configures the primary IPv4 DNS server for the wired network. <b>Note:</b> It works only if "static.network.ip_address_mode" is set to 0 (IPv4) or 2 (IPv4 & IPv6). In the DHCP environment, you need to make sure "static.network.static_dns_enable" is set to 1	

	(On).
<b>Permitted Values</b>	IPv4 Address
<b>Default</b>	Blank
<b>Web UI</b>	<p><a href="#">T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/CP925:</a>  Network &gt; Basic &gt; IPv4 Config &gt; Static DNS &gt; Primary DNS</p> <p><a href="#">Other Phones:</a>  Network &gt; Basic &gt; IPv4 Config &gt; Static IP Address &gt; Primary DNS</p>
<b>Phone UI</b>	<p><a href="#">Color Screen Phones:</a>  Menu &gt; Advanced (default password: admin) &gt; Network &gt; WAN Port &gt; IPv4 &gt; Static IP &gt; Pri.DNS</p> <p><a href="#">CP925:</a>  More &gt; Advanced (default password: admin) &gt; Network &gt; WAN Port &gt; IPv4 &gt; Static IP &gt; Pri.DNS</p> <p>In the DHCP environment:  Menu &gt; Advanced (default password: admin) &gt; Network &gt; WAN Port &gt; IPv4 &gt; DHCP &gt; Static DNS (Enabled) &gt; Pri.DNS</p> <p><a href="#">CP925:</a>  More &gt; Advanced (default password: admin) &gt; Network &gt; WAN Port &gt; IPv4 &gt; DHCP &gt; Static DNS (Enabled) &gt; Pri.DNS</p> <p><a href="#">Black-and-white Screen Phones:</a>  Menu &gt; Settings &gt; Advanced Settings (default password: admin) &gt; Network &gt; WAN Port &gt; IPv4 &gt; Static IPv4 Client &gt; Pri.DNS</p> <p>In the DHCP environment:  Menu &gt; Settings &gt; Advanced Settings (default password: admin) &gt; Network &gt; WAN Port &gt; IPv4 &gt; DHCP IPv4 Client &gt; Static DNS (Enabled) &gt; Pri.DNS</p>
<b>Parameter</b>	static.network.secondary_dns <y000000000xx>.cfg
<b>Description</b>	<p>It configures the secondary IPv4 DNS server for the wired network.</p> <p><b>Note:</b> It works only if "static.network.ip_address_mode" is set to 0 (IPv4) or 2 (IPv4 &amp; IPv6). In the DHCP environment, you need to make sure "static.network.static_dns_enable" is set to 1 (On).</p>
<b>Permitted Values</b>	IPv4 Address
<b>Default</b>	Blank
<b>Web UI</b>	<p><a href="#">T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/CP925:</a>  Network &gt; Basic &gt; IPv4 Config &gt; Static DNS &gt; Secondary DNS</p> <p><a href="#">Other Phones:</a>  Network &gt; Basic &gt; IPv4 Config &gt; Static IP Address &gt; Secondary DNS</p>
<b>Phone UI</b>	<p><a href="#">Color Screen Phones:</a>  Menu &gt; Advanced (default password: admin) &gt; Network &gt; WAN Port &gt; IPv4 &gt; Static IP &gt; Sec.DNS</p> <p><a href="#">CP925:</a>  More &gt; Advanced (default password: admin) &gt; Network &gt; WAN Port &gt; IPv4 &gt; Static IP &gt;</p>

	<p>Sec.DNS</p> <p>In the DHCP environment:</p> <p>Menu &gt; Advanced (default password: admin) &gt; Network &gt; WAN Port &gt; IPv4 &gt; DHCP &gt; Static DNS (Enabled) &gt; Sec.DNS</p> <p><u>CP925:</u></p> <p>More &gt; Advanced (default password: admin) &gt; Network &gt; WAN Port &gt; IPv4 &gt; DHCP &gt; Static DNS (Enabled) &gt; Sec.DNS</p> <p><u>Black-and-white Screen Phones:</u></p> <p>Menu &gt; Settings &gt; Advanced Settings (default password: admin) &gt; Network &gt; WAN Port &gt; IPv4 &gt; Static IPv4 Client &gt; Sec.DNS</p> <p>In the DHCP environment:</p> <p>Menu &gt; Settings &gt; Advanced Settings (default password: admin) &gt; Network &gt; WAN Port &gt; IPv4 &gt; DHCP IPv4 Client &gt; Static DNS (Enabled) &gt; Sec.DNS</p>
--	--

## IPv6 Wired Network Configuration

If you configure the network settings on the phone for an IPv6 wired network, you can set up an IP address for the phone by using SLAAC (ICMPv6), DHCPv6 or by manually entering an IP address. Ensure that your network environment supports IPv6. Contact your ISP for more information.

When you enable both SLAAC and DHCPv6 on the phone, the server can specify the IP phone to obtain the IPv6 address and other network settings either from SLAAC or from DHCPv6, if the SLAAC server is not working, the phone will try to obtain the IPv6 address and other network settings via DHCPv6.

The following table lists the parameters you can use to configure IPv6 wired network.

<b>Parameter</b>	static.network.ipv6_internet_port.type	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the Internet port type for IPv6 wired network.</p> <p><b>Note:</b> It works only if "static.network.ip_address_mode" is set to 1 (IPv6) or 2 (IPv4 &amp; IPv6).</p>	
<b>Permitted Values</b>	<p>0-DHCP</p> <p>1-Static IP</p>	
<b>Default</b>	0	
<b>Web UI</b>	<p><u>T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/CP925:</u></p> <p>Network &gt; Basic &gt; IPv6 Config &gt; Configuration Type</p> <p><u>Other Phones:</u></p> <p>Network &gt; Basic &gt; IPv6 Config</p>	
<b>Phone UI</b>	<p><u>Color Screen Phones:</u></p> <p>Menu &gt; Advanced (default password: admin) &gt; Network &gt; WAN Port &gt; IPv6</p> <p><u>CP925:</u></p> <p>More &gt; Advanced (default password: admin) &gt; Network &gt; WAN Port &gt; IPv6</p> <p><u>Black-and-white Screen Phones:</u></p> <p>Menu &gt; Settings &gt; Advanced Settings (default password: admin) &gt; Network &gt; WAN Port &gt; IPv6</p>	
<b>Parameter</b>	static.network.ipv6_internet_ip	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the IPv6 address for the wired network.</p> <p><b>Note:</b> It works only if "static.network.ipv6_internet_port.type" is set to 1 (Static IP).</p>	

<b>Permitted Values</b>	IPv6 Address	
<b>Default</b>	Blank	
<b>Web UI</b>	<a href="#">T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/CP925:</a> Network > Basic > IPv6 Config > Configuration Type (Static IP) > IP Address <a href="#">Other Phones:</a> Network > Basic > IPv6 Config > Static IP Address > IP Address	
<b>Phone UI</b>	<a href="#">Color Screen Phones:</a> Menu > Advanced (default password: admin) > Network > WAN Port > IPv6 > Static IP > IP Address <a href="#">CP925:</a> More > Advanced (default password: admin) > Network > WAN Port > IPv6 > Static IP > IP Address <a href="#">Black-and-white Screen Phones:</a> Menu > Settings > Advanced Settings (default password: admin) > Network > WAN Port > IPv6 > Static IPv6 Client > IP Address	
<b>Parameter</b>	static.network.ipv6_prefix	<y000000000xx>.cfg
<b>Description</b>	It configures the IPv6 prefix for the wired network. <b>Note:</b> It works only if "static.network.ipv6_internet_port.type" is set to 1 (Static IP).	
<b>Permitted Values</b>	Integer from 0 to 128	
<b>Default</b>	64	
<b>Web UI</b>	<a href="#">T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/CP925:</a> Network > Basic > IPv6 Config > Configuration Type (Static IP) > IPv6 Prefix(0~128) <a href="#">Other Phones:</a> Network > Basic > IPv6 Config > Static IP Address > IPv6 Prefix(0~128)	
<b>Phone UI</b>	<a href="#">Color Screen Phones:</a> Menu > Advanced (default password: admin) > Network > WAN Port > IPv6 > Static IP > IPv6 IP Prefix <a href="#">CP925:</a> More > Advanced (default password: admin) > Network > WAN Port > IPv6 > Static IP > IPv6 IP Prefix <a href="#">Black-and-white Screen Phones:</a> Menu > Settings > Advanced Settings (default password: admin) > Network > WAN Port > IPv6 > Static IPv6 Client > IPv6 IP Prefix	
<b>Parameter</b>	static.network.ipv6_internet_port.gateway	<y000000000xx>.cfg
<b>Description</b>	It configures the IPv6 default gateway for the wired network. <b>Note:</b> It works only if "static.network.ipv6_internet_port.type" is set to 1 (Static IP).	
<b>Permitted Values</b>	IPv6 Address	
<b>Default</b>	Blank	
<b>Web UI</b>	<a href="#">T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/CP925:</a> Network > Basic > IPv6 Config > Configuration Type (Static IP) > Default Gateway <a href="#">Other Phones:</a>	

	Network > Basic > IPv6 Config > Static IP Address > Default Gateway	
<b>Phone UI</b>	<p><u>Color Screen Phones:</u> Menu &gt; Advanced (default password: admin) &gt; Network &gt; WAN Port &gt; IPv6 &gt; Static IP &gt; Default Gateway</p> <p><u>CP925:</u> More &gt; Advanced (default password: admin) &gt; Network &gt; WAN Port &gt; IPv6 &gt; Static IP &gt; Default Gateway</p> <p><u>Black-and-white Screen Phones:</u> Menu &gt; Settings &gt; Advanced Settings (default password: admin) &gt; Network &gt; WAN Port &gt; IPv6 &gt; Static IPv6 Client &gt; Default Gateway</p>	
<b>Parameter</b>	static.network.ipv6_static_dns_enable	<y0000000000xx>.cfg
<b>Description</b>	<p>It triggers the static IPv6 DNS feature to on or off for the wired network.</p> <p><b>Note:</b> It works only if "static.network.ipv6_internet_port.type" is set to 0 (DHCP).</p>	
<b>Permitted Values</b>	<p>0-Off, the phone will use the IPv6 DNS obtained from DHCP.</p> <p>1-On, the phone will use manually configured static IPv6 DNS.</p>	
<b>Default</b>	0	
<b>Web UI</b>	Network > Basic > IPv6 Config > IPv6 Static DNS (Static IPv6 DNS)	
<b>Phone UI</b>	<p><u>Color Screen Phones:</u> Menu &gt; Advanced (default password: admin) &gt; Network &gt; WAN Port &gt; IPv6 &gt; Type(DHCP) &gt; Static DNS</p> <p><u>CP925:</u> More &gt; Advanced (default password: admin) &gt; Network &gt; WAN Port &gt; IPv6 &gt; Type(DHCP) &gt; Static DNS</p> <p><u>Black-and-white Screen Phones:</u> Menu &gt; Settings &gt; Advanced Settings (default password: admin) &gt; Network &gt; WAN Port &gt; IPv6 &gt; DHCP IPv6 Client &gt; Static DNS</p>	
<b>Parameter</b>	static.network.ipv6_primary_dns	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the primary IPv6 DNS server for the wired network.</p> <p><b>Note:</b> It works only if "static.network.ip_address_mode" is set to 1 (IPv6) or 2 (IPv4 &amp; IPv6). In DHCP environment, you also need to make sure "static.network.ipv6_static_dns_enable" is set to 1 (On).</p>	
<b>Permitted Values</b>	IPv6 Address	
<b>Default</b>	Blank	
<b>Web UI</b>	<p><u>T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/CP925:</u> Network &gt; Basic &gt; IPv6 Config &gt; Static IPv6 DNS &gt; Primary DNS</p> <p><u>Other Phones:</u> Network &gt; Basic &gt; IPv6 Config &gt; Static IP Address &gt; Primary DNS</p>	
<b>Phone UI</b>	<p><u>Color Screen Phones:</u> Menu &gt; Advanced (default password: admin) &gt; Network &gt; WAN Port &gt; IPv6 &gt; Static IP &gt; Pri.DNS</p> <p><u>CP925:</u> More &gt; Advanced (default password: admin) &gt; Network &gt; WAN Port &gt; IPv6 &gt; Static IP &gt; Pri.DNS</p>	

	<p>In DHCP environment:</p> <p>Menu &gt; Advanced (default password: admin) &gt; Network &gt; WAN Port &gt; IPv6 &gt; DHCP &gt; Static DNS (Enabled) &gt; Pri.DNS</p> <p><u>CP925:</u></p> <p>More &gt; Advanced (default password: admin) &gt; Network &gt; WAN Port &gt; IPv6 &gt; DHCP &gt; Static DNS (Enabled) &gt; Pri.DNS</p> <p><u>Black-and-white Screen Phones:</u></p> <p>Menu &gt; Settings &gt; Advanced Settings (default password: admin) &gt; Network &gt; WAN Port &gt; IPv6 &gt; Static IPv6 Client &gt; Pri.DNS</p> <p>In DHCP environment:</p> <p>Menu &gt; Settings &gt; Advanced Settings (default password: admin) &gt; Network &gt; WAN Port &gt; IPv6 &gt; DHCP IPv6 Client &gt; Static DNS(Enabled) &gt; Pri.DNS</p>	
<b>Parameter</b>	static.network.ipv6_secondary_dns	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the secondary IPv6 DNS server for the wired network.</p> <p><b>Note:</b> It works only if "static.network.ip_address_mode" is set to 1 (IPv6) or 2 (IPv4 &amp; IPv6). In DHCP environment, you also need to make sure "static.network.ipv6_static_dns_enable" is set to 1 (On).</p>	
<b>Permitted Values</b>	IPv6 Address	
<b>Default</b>	Blank	
<b>Web UI</b>	<p><u>T57W/T54W/T53W/T53C/T48U/T46U/T43U/T42U/CP925:</u></p> <p>Network &gt; Basic &gt; IPv6 Config &gt; Static IPv6 DNS &gt; Secondary DNS</p> <p><u>Other Phones:</u></p> <p>Network &gt; Basic &gt; IPv6 Config &gt; Static IP Address &gt; Secondary DNS</p>	
<b>Phone UI</b>	<p><u>Color Screen Phones:</u></p> <p>Menu &gt; Advanced (default password: admin) &gt; Network &gt; WAN Port &gt; IPv6 &gt; Static IP &gt; Sec.DNS</p> <p><u>CP925:</u></p> <p>More &gt; Advanced (default password: admin) &gt; Network &gt; WAN Port &gt; IPv6 &gt; Static IP &gt; Sec.DNS</p> <p>In DHCP environment:</p> <p>Menu &gt; Advanced (default password: admin) &gt; Network &gt; WAN Port &gt; IPv6 &gt; DHCP &gt; Static DNS (Enabled) &gt; Sec.DNS</p> <p><u>CP925:</u></p> <p>More &gt; Advanced (default password: admin) &gt; Network &gt; WAN Port &gt; IPv6 &gt; DHCP &gt; Static DNS (Enabled) &gt; Sec.DNS</p> <p><u>Black-and-white Screen Phones:</u></p> <p>Menu &gt; Settings &gt; Advanced Settings (default password: admin) &gt; Network &gt; WAN Port &gt; IPv6 &gt; Static IPv6 Client &gt; Sec.DNS</p> <p>In DHCP environment:</p> <p>Menu &gt; Settings &gt; Advanced Settings (default password: admin) &gt; Network &gt; WAN Port &gt; IPv6 &gt; DHCP IPv6 Client &gt; Static DNS(Enabled) &gt; Sec.DNS</p>	
<b>Parameter</b>	static.network.ipv6_icmp_v6.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to obtain IPv6 wired network settings via SLAAC (Stateless Address Autoconfiguration).	

	<b>Note:</b> It works only if "static.network.ipv6_internet_port.type" is set to 0 (DHCP).
<b>Permitted Values</b>	0-Disabled 1-Enabled
<b>Default</b>	1
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T48G, T46U, T46S, T46G, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30, T29G, CP920, CP925
<b>Web UI</b>	Network > Advanced > ICMPv6 Status > Active

## DHCP Option for IPv4

The phone can obtain IPv4-related parameters in an IPv4 network via the DHCP option.

**Note:** For more information on DHCP options, refer to [RFC 2131](#) or [RFC 2132](#).

### Topics

[Supported DHCP Option for IPv4](#)  
[DHCP Option 66, Option 43 and Custom Option](#)  
[DHCP Option 42, Option 2 and Option 100](#)  
[DHCP Option 12](#)  
[DHCP Option 120](#)  
[DHCP Option 60](#)

## Supported DHCP Option for IPv4

The following table lists common DHCP options for IPv4 supported by Yealink phones.

Parameters	DHCP Option	Description
Subnet Mask	1	Specify the client's subnet mask.
Time Offset	2	Specify the offset of the client's subnet in seconds from Coordinated Universal Time (UTC).
Router	3	Specify a list of IP addresses for routers on the client's subnet.
Time Server	4	Specify a list of time servers available to the client.
Domain Name Server	6	Specify a list of domain name servers available to the client.
Host Name	12	Specify the name of the client.
Domain Server	15	Specify the domain name that the client should use when resolving host-names via DNS.
Network Time Protocol Servers	42	Specify a list of NTP servers available to the client by IP address.
Vendor-Specific Information	43	Identify the vendor-specific information.
Vendor Class Identifier	60	Identify the vendor type.
TFTP Server Name	66	Identify a TFTP server when the 'sname' field in the DHCP header has been used for DHCP options.
Timezone/DST	100	Specify a POSIX timezone string.
SIP Server/Outbound Proxy Server	120	Convey a SIP server's or outbound proxy server's location to the client.

## DHCP Option 66, Option 43 and Custom Option

During the startup, the phone automatically detects the DHCP option for obtaining the provisioning server address. The priority is as follows: custom option > option 66 (identify the TFTP server) > option 43.

The phone can obtain the Auto Configuration Server (ACS) address by detecting option 43 during startup.

**Note:** If you fail to configure the DHCP options for discovering the provisioning server on the DHCP server, enable the phone to automatically discover the provisioning server address. One possibility is that connecting to the secondary DHCP server that responds to DHCP INFORM queries with a requested provisioning server address. For more information, refer to [RFC 3925](#).

### Related Topic

[DHCP Provision Configuration](#)

## DHCP Option 42, Option 2 and Option 100

Yealink phones support using the NTP server address offered by DHCP.

DHCP option 42 is used to specify a list of NTP servers available to the client by IP address. NTP servers should be listed in order of preference.

DHCP option 2 is used to specify the offset of the client's subnet in seconds from Coordinated Universal Time (UTC).

DHCP option 100 is used to specify the timezone information (time zone and daylight-saving offset). The priority is as follows: option 100 > option 2.

### Related Topic

[NTP Settings](#)

## DHCP Option 12

You can specify a hostname for the phone when using DHCP. The DHCP client uses option 12 to send a pre-defined hostname to the DHCP registration server.

See [RFC 1035](#) for character set restrictions.

### Topic

[DHCP Option 12 Hostname Configuration](#)

## DHCP Option 12 Hostname Configuration

The following table lists the parameter you can use to configure DHCP option 12 hostname.

<b>Parameter</b>	static.network.dhcp_host_name	<y0000000000xx>.cfg
<b>Description</b>	It specifies a hostname for the phone when using DHCP.	
<b>Permitted Values</b>	String within 99 characters	
<b>Default</b>	For T57W phones: SIP-T57W For T54W phones: SIP-T54W For T53W phones: SIP-T53W For T53 phones: SIP-T53 For T53C phones: SIP-T53C For T48U phones: SIP-T48U For T48G phones: SIP-T48G	



	<p>For T48S phones: SIP-T48S</p> <p>For T46U phones: SIP-T46U</p> <p>For T46G phones: SIP-T46G</p> <p>For T46S phones: SIP-T46S</p> <p>For T43U phones: SIP-T43U</p> <p>For T42G phones: SIP-T42G</p> <p>For T42S phones: SIP-T42S</p> <p>For T42U phones: SIP-T42U</p> <p>For T41P phones: SIP-T41P</p> <p>For T41S phones: SIP-T41S</p> <p>For T40P phones: SIP-T40P</p> <p>For T40G phones: SIP-T40G</p> <p>For T33G phones: SIP-T33G</p> <p>For T33P phones: SIP-T33P</p> <p>For T31G phones: SIP-T31G</p> <p>For T31P phones: SIP-T31P</p> <p>For T31 phones: SIP-T31</p> <p>For T30P phones: SIP-T30P</p> <p>For T30 phones: SIP-T30</p> <p>For T29G phones: SIP-T29G</p> <p>For T27G phones: SIP-T27G</p> <p>For T23P phones: SIP-T23P</p> <p>For T23G phones: SIP-T23G</p> <p>For T21(P) E2 phones: SIP-T21P_E2</p> <p>For T19(P) E2 phones: SIP-T19P_E2</p> <p>For CP920 phones: SIP-CP920</p> <p>For CP925 phones: SIP-CP925</p> <p>For CP935W phones: SIP-CP935W</p>
<b>Web UI</b>	Features > General Information > DHCP Hostname

## DHCP Option 120

DHCP option 120 is used by the SIP client to locate a SIP server or outbound proxy server.

### Topic

[DHCP Option 120 Configuration](#)

## DHCP Option 120 Configuration

The following table lists the parameter you can use to configure DHCP option 120.

<b>Parameter</b>	sip.dhcp.option120.mode	<y0000000000xx>.cfg
<b>Description</b>	It configures whether to use DHCP option 120 for obtaining the outbound proxy server IP address.	
<b>Permitted Values</b>	<p><b>0</b>-Do not check with the DHCP server for the outbound proxy server IP address.</p> <p><b>1</b>-The value obtained from DHCP option 120 is used as outbound proxy server IP address (can resolve up to two domain names or IPv4 addresses). If “account.X.outbound_proxy_enable = 1”, and the primary outbound proxy server is configured, the address from DHCP option 120 is used as secondary one; if the primary outbound proxy server is not configured, the address from DHCP option 120 is used as the primary one.</p> <p><b>2</b>-The value obtained from DHCP option 120 is used as SIP server IP address (can resolve up to only one IPv4 address). If the primary SIP server is configured, the address from DHCP option 120 is used as secondary one; if the primary SIP server is not configured, the address from DHCP option 120 is used as the primary one.</p>	
<b>Default</b>	0	

## DHCP Option 60

DHCP option 60 is used to indicate the vendor type. Servers can use option 43 to return the vendor-specific information to the client.

You can set the DHCP option 60 type.

### Topic

[DHCP Option 60 Configuration](#)

## DHCP Option 60 Configuration

The following table lists the parameters you can use to configure DHCP option 60.

<b>Parameter</b>	static.network.dhcp.option60type	<y0000000000xx>.cfg
<b>Description</b>	It configures the DHCP option 60 type.	
<b>Permitted Values</b>	<p><b>0</b>-ASCII, vendor-identifying information is in ASCII format.</p> <p><b>1</b>-Binary, vendor-identifying information is in the format defined in <a href="#">RFC 3925</a>.</p>	
<b>Default</b>	0	
<b>Parameter</b>	static.auto_provision.dhcp_option.option60_value	<y0000000000xx>.cfg
<b>Description</b>	It configures the vendor class identifier string to use in the DHCP interaction.	
<b>Permitted Values</b>	String within 99 characters	
<b>Default</b>	yealink	
<b>Web UI</b>	Settings > Auto Provision > IPv4 DHCP Option Value	
<b>Phone UI</b>	<p><u>Color Screen Phones:</u></p> <p>Menu &gt; Advanced (default password: admin) &gt; Auto Provision &gt; IPv4 DHCP Option Value</p> <p><u>CP925/CP935W:</u></p> <p>More &gt; Advanced (default password: admin) &gt; Auto Provision &gt; IPv4 DHCP Option Value</p> <p><u>Black-and-white Screen Phones:</u></p> <p>Menu &gt; Settings &gt; Advanced Settings (default password: admin) &gt; Auto Provision &gt; IPv4 DHCP Option Value</p>	

## DHCP Option for IPv6

The phone can obtain IPv6-related parameters in an IPv6 network via DHCP option.

### Topics

[Supported DHCP Option for IPv6](#)  
[DHCP Option 59 and Custom Option](#)

## Supported DHCP Option for IPv6

The following table lists common DHCP options for IPv6 supported by Yealink phones.

Parameters	DHCPv6 Option	Description
ACS URL	17	Specify the access URL of the TR-069 ACS server.
DNS Server	23	Specify a list of DNS servers available to the client.
DNS Domain Search List	24	Specify a domain search list to a client.
SNTP Server	31	Specify a list of Simple Network Time Protocol (SNTP) servers available to the client.
Information Refresh Time	32	Specify an upper bound for how long a client should wait before refreshing information retrieved from DHCPv6.
Boot File URL	59	Specify a URL for the boot file to be downloaded by the client.

## DHCP Option 59 and Custom Option

During the startup, the phone automatically detects the DHCP option for obtaining the provisioning server address. The priority is as follows: custom option > option 59.

### Related Topic

[DHCP Provision Configuration](#)

## VLAN

The purpose of VLAN configurations on the phone is to insert a tag with VLAN information to the packets generated by the phone. When VLAN is properly configured for the ports (Internet port and PC port) on the phone, the phone will tag all packets from these ports with the VLAN ID. The switch receives and forwards the tagged packets to the corresponding VLAN according to the VLAN ID in the tag as described in IEEE Std 802.3.

In addition to manual configuration, the phone also supports the automatic discovery of VLAN via LLDP, CDP or DHCP. The assignment takes effect in this order: assignment via LLDP/CDP, manual configuration, then assignment via DHCP.

For more information on VLAN, refer to [VLAN Feature on Yealink IP Phones](#).

### Topics

[LLDP Configuration](#)  
[CDP Configuration](#)  
[Manual VLAN Configuration](#)  
[DHCP VLAN Configuration](#)  
[VLAN Change Configuration](#)

## LLDP Configuration

LLDP (Linker Layer Discovery Protocol) is a vendor-neutral Link Layer protocol, which allows the phones to advertise its identity and capabilities on the local network.

When LLDP feature is enabled on the phones, the phones periodically advertise their own information to the directly connected LLDP-enabled switch. The phones can also receive LLDP packets from the connected switch and obtain their VLAN IDs.

The following table lists the parameters you can use to configure LLDP.

<b>Parameter</b>	static.network.lldp.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the LLDP feature.	
<b>Permitted Values</b>	0-Disabled 1-Enabled, the phone attempts to determine its VLAN ID through LLDP.	
<b>Default</b>	1	
<b>Web UI</b>	Network > Advanced > LLDP > Active	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Advanced (default password: admin) > Network > LLDP > LLDP Status <u>CP925:</u> More > Advanced (default password: admin) > Network > LLDP > LLDP Status <u>Black-and-white Screen Phones:</u> Menu > Settings > Advanced Settings (default password: admin) > Network > LLDP > LLDP Status	
<b>Parameter</b>	static.network.lldp.packet_interval	<y0000000000xx>.cfg
<b>Description</b>	It configures the interval (in seconds) that how often the phone sends the LLDP request. <b>Note:</b> It works only if “static.network.lldp.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	Integer from 1 to 3600	
<b>Default</b>	60	
<b>Web UI</b>	Network > Advanced > LLDP > Packet Interval (1~3600s)	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Advanced (default password: admin) > Network > LLDP > Packet Interval <u>CP925:</u> More > Advanced (default password: admin) > Network > LLDP > Packet Interval <u>Black-and-white Screen Phones:</u> Menu > Settings > Advanced Settings (default password: admin) > Network > LLDP > Packet Interval	

## CDP Configuration

CDP (Cisco Discovery Protocol) allows the phones to receive and/or transmit device-related information from/to directly connected devices on the local network.

When CDP feature is enabled on the phones, the phones periodically advertise their own information to the directly connected CDP-enabled switch. The phones can also receive CDP packets from the connected switch and obtain their VLAN IDs.

The following table lists the parameters you can use to configure CDP.

<b>Parameter</b>	static.network.cdp.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the CDP feature.	
<b>Permitted</b>	0-Disabled	

<b>Values</b>	1-Enabled, the phone attempts to determine its VLAN ID through CDP.	
<b>Default</b>	1	
<b>Web UI</b>	Network > Advanced > CDP > Active	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Advanced (default password: admin) > Network > CDP > CDP Status	
	<u>CP925:</u> More > Advanced (default password: admin) > Network > CDP > CDP Status	
	<u>Black-and-white Screen Phones:</u>	
	Menu > Settings > Advanced Settings (default password: admin) > Network > CDP > CDP Status	
<b>Parameter</b>	static.network.cdp.packet_interval	<y0000000000xx>.cfg
<b>Description</b>	It configures the interval (in seconds) that how often the phone sends the CDP request. <b>Note:</b> It works only if "static.network.cdp.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	Integer from 1 to 3600	
<b>Default</b>	60	
<b>Web UI</b>	Network > Advanced > CDP > Packet Interval (1~3600s)	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Advanced (default password: admin) > Network > CDP > CDP Interval	
	<u>CP925:</u> More > Advanced (default password: admin) > Network > CDP > CDP Interval	
	<u>Black-and-white Screen Phones:</u>	
	Menu > Settings > Advanced Settings (default password: admin) > Network > CDP > CDP Interval	

## Manual VLAN Configuration

You can configure VLAN for the Internet port and PC port manually. Before configuring VLAN on the phones, you need to obtain the VLAN ID from your network administrator.

For CP920/CP925 phones, you can only configure VLAN for the Internet port manually, because they only have an Internet port.

The following table lists the parameters you can use to configure VLAN manually.

<b>Parameter</b>	static.network.vlan.internet_port_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the VLAN for the Internet port.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Network > Advanced > VLAN > WAN Port > Active	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Advanced (default password: admin) > Network > VLAN > WAN Port > VLAN Status	
	<u>CP925:</u> More > Advanced (default password: admin) > Network > VLAN > WAN Port > VLAN Status	

	<u>Black-and-white Screen Phones:</u> Menu > Settings > Advanced Settings (default password: admin) > Network > VLAN > WAN Port > VLAN Status	
<b>Parameter</b>	static.network.vlan.internet_port_vid	<y0000000000xx>.cfg
<b>Description</b>	It configures the VLAN ID for the Internet port. <b>Note:</b> It works only if "static.network.vlan.internet_port_enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	Integer from 1 to 4094	
<b>Default</b>	1	
<b>Web UI</b>	Network > Advanced > VLAN > WAN Port > VID (1-4094)	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Advanced (default password: admin) > Network > VLAN > WAN Port > VID Number <u>CP925:</u> More > Advanced (default password: admin) > Network > VLAN > WAN Port > VID Number <u>Black-and-white Screen Phones:</u> Menu > Settings > Advanced Settings (default password: admin) > Network > VLAN > WAN Port > VID Number	
<b>Parameter</b>	static.network.vlan.internet_port_priority	<y0000000000xx>.cfg
<b>Description</b>	It configures the VLAN priority for the Internet port. 7 is the highest priority, 0 is the lowest priority. <b>Note:</b> It works only if "static.network.vlan.internet_port_enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	Integer from 0 to 7	
<b>Default</b>	0	
<b>Web UI</b>	Network > Advanced > VLAN > WAN Port > Priority	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Advanced (default password: admin) > Network > VLAN > WAN Port > Priority <u>CP925:</u> More > Advanced (default password: admin) > Network > VLAN > WAN Port > Priority <u>Black-and-white Screen Phones:</u> Menu > Settings > Advanced Settings (default password: admin) > Network > VLAN > WAN Port > Priority	
<b>Parameter</b>	static.network.vlan.pc_port_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the VLAN for the PC port. <b>Note:</b> It works only if "static.network.pc_port.enable" is set to 1 (Auto Negotiation).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except CP920/CP925	

<b>Web UI</b>	Network > Advanced > VLAN > PC Port > Active	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Advanced (default password: admin) > Network > VLAN > PC Port > VLAN Status	
	<u>Black-and-white Screen Phones:</u> Menu > Settings > Advanced Settings (default password: admin) > Network > VLAN > PC Port > VLAN Status	
<b>Parameter</b>	static.network.vlan.pc_port_vid	<y0000000000xx>.cfg
<b>Description</b>	It configures the VLAN ID for the PC port. <b>Note:</b> It works only if “static.network.pc_port.enable” is set to 1 (Auto Negotiation) and “static.network.vlan.pc_port_enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	Integer from 1 to 4094	
<b>Default</b>	1	
<b>Supported Devices</b>	All phones except CP920/CP925	
<b>Web UI</b>	Network > Advanced > VLAN > PC Port > VID (1-4094)	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Advanced (default password: admin) > Network > VLAN > PC Port > VID Number	
	<u>Black-and-white Screen Phones:</u> Menu > Settings > Advanced Settings (default password: admin) > Network > VLAN > PC Port > VID Number	
<b>Parameter</b>	static.network.vlan.pc_port_priority	<y0000000000xx>.cfg
<b>Description</b>	It configures the VLAN priority for the PC port. 7 is the highest priority, 0 is the lowest priority. <b>Note:</b> It works only if “static.network.pc_port.enable” is set to 1 (Auto Negotiation) and “static.network.vlan.pc_port_enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	Integer from 0 to 7	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except CP920/CP925	
<b>Web UI</b>	Network > Advanced > VLAN > PC Port > Priority	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Advanced (default password: admin) > Network > VLAN > PC Port > Priority	
	<u>Black-and-white Screen Phones:</u> Menu > Settings > Advanced Settings (default password: admin) > Network > VLAN > PC Port > Priority	

## DHCP VLAN Configuration

When the VLAN discovery method is set to DHCP, the phone examines the DHCP option for a valid VLAN ID. You can customize the DHCP option used to request the VLAN ID.

The following table lists the parameters you can use to configure DHCP VLAN discovery.

<b>Parameter</b>	static.network.vlan.dhcp_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the DHCP VLAN discovery feature.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Web UI</b>	Network > Advanced > VLAN > DHCP VLAN > Active	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Advanced (default password: admin) > Network > VLAN > DHCP VLAN > DHCP VLAN <u>CP925:</u> More > Advanced (default password: admin) > Network > VLAN > DHCP VLAN > DHCP VLAN <u>Black-and-white Screen Phones:</u> Menu > Settings > Advanced Settings (default password: admin) > Network > VLAN > DHCP VLAN > DHCP VLAN	
<b>Parameter</b>	static.network.vlan.dhcp_option	<y0000000000xx>.cfg
<b>Description</b>	It configures the DHCP option from which the phone will obtain the VLAN settings. Multiple DHCP options (at most five) are separated by commas.	
<b>Permitted Values</b>	Integer from 1 to 255	
<b>Default</b>	132	
<b>Web UI</b>	Network > Advanced > VLAN > DHCP VLAN > Option (1-255)	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Advanced (default password: admin) > Network > VLAN > DHCP VLAN > Option <u>CP925:</u> More > Advanced (default password: admin) > Network > VLAN > DHCP VLAN > Option <u>Black-and-white Screen Phones:</u> Menu > Settings > Advanced Settings (default password: admin) > Network > VLAN > DHCP VLAN > Option	

## VLAN Change Configuration

The following table lists the parameter you can use to configure the VLAN change.

<b>Parameter</b>	static.network.vlan.vlan_change.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to obtain VLAN ID using lower preference of VLAN assignment method, or to close the VLAN feature when the phone cannot obtain VLAN ID. The priority of each method is LLDP/CDP > Manual > DHCP VLAN.	
<b>Permitted Values</b>	0-Disabled 1-Enabled, the phone attempts to use the lower priority method when failing to obtain the VLAN ID using higher priority method. If all the methods are attempted, the phone will disable VLAN feature.	
<b>Default</b>	0	



## Wi-Fi

Wi-Fi feature enables you to connect the phones to the organization's wireless network. Wi-Fi feature is only applicable to

T57W/T54W/T53W/T53/T53C/T48U/T48S/T48G/T46U/T46S/T46G/T43U/T42U/T42S/T41S/T29G/T27G/CP920/CP925/CP935W phones.

You can configure the phones to operate in IPv4, IPv6, or dual-stack (IPv4/IPv6) mode, and configure IPv4 or IPv6 wireless network settings manually.

**Note:** To use Wi-Fi feature on T53/T53C/T48U/T48S/T48G/T46U/T46S/T46G/T43U/T42U/T42S/T41S/T29G/T27G phones, make sure the Wi-Fi USB dongle is properly connected to the USB port on the back of the phone.

### Topics

[Wi-Fi Configuration](#)

[Wireless Network IP Addressing Mode Configuration](#)

[IPv4 Wireless Network Configuration](#)

[IPv6 Wireless Network Configuration](#)

## Wi-Fi Configuration

The following table lists the parameters you can use to configure Wi-Fi.

<b>Parameter</b>	static.wifi.function.enable <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the Wi-Fi feature.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T48G, T46U, T46S, T46G, T43U, T42U, T42S, T41S, T29G, T27G, CP920, CP925, CP935W	
<b>Parameter</b>	static.network.redundancy.mode	<y0000000000xx>.cfg
<b>Description</b>	It configures the network connection mode to be used preferentially.	
<b>Permitted Values</b>	0-If Wi-Fi mode is activated, the wired network is unavailable; Wi-Fi mode must be deactivated if you want to use the wired network. 1-Use wireless network preferentially. 2-Use wired network preferentially.	
<b>Default</b>	2	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T48G, T46U, T46S, T46G, T43U, T42U, T42S, T41S, T29G, T27G, CP920, CP925	
<b>Parameter</b>	static.network.redundancy.failback.timeout	<y0000000000xx>.cfg
<b>Description</b>	It configures the time to wait (minutes) for the phone to switch to the preferentially used network. <b>Note:</b> It works only if "static.network.redundancy.mode" is not set to 0 and there are multiple networks on the phone at the same time.	
<b>Permitted Values</b>	Integer from 0 to 1440 0-The phone will not switch as long as the current network is available. 1 to 1440-The phone will keep using the current network for the specified time after the preferentially used network becomes available. If the preferentially used network is still available after the specified time, the phone performs a network switch while the phone is not in use.	

<b>Default</b>	55	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T48G, T46U, T46S, T46G, T43U, T42U, T42S, T41S, T29G, T27G, CP920, CP925	
<b>Parameter</b>	static.wifi.enable	<y0000000000xx>.cfg
<b>Description</b>	It activates or deactivates the Wi-Fi mode. <b>Note:</b> It works only if “static.wifi.function.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T48G, T46U, T46S, T46G, T43U, T42U, T42S, T41S, T29G, T27G, CP920, CP925, CP935W	
<b>Web UI</b>	Network > Wi-Fi > Wi-Fi Active	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Basic > Wi-Fi > Wi-Fi <u>CP925/CP935W:</u> More > Basic > Wi-Fi > Wi-Fi <u>Black-and-white Screen Phones:</u> Menu > Settings > Basic Settings > Wi-Fi	
<b>Parameter</b>	static.wifi.X.ssid <sup>[2]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the SSID of a specific wireless network. SSID is a unique identifier for accessing wireless access points. <b>Note:</b> It works only if “static.wifi.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	ASCII code from 1 to 31 in length	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T48G, T46U, T46S, T46G, T43U, T42U, T42S, T41S, T29G, T27G, CP920, CP925, CP935W	
<b>Web UI</b>	Network > Wi-Fi > Add > SSID	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Basic > Wi-Fi > Wi-Fi (On) > Known Network (press Add) > SSID Menu > Basic > Wi-Fi > Wi-Fi (On) > Known Network > Option > Edit > SSID <u>CP925/CP935W:</u> More > Basic > Wi-Fi > Wi-Fi (On) > Known Network (press Add) > SSID <u>Black-and-white Screen Phones:</u> Menu > Settings > Basic Settings > Wi-Fi (On) > Known Network (press Add) > SSID Menu > Settings > Basic Settings > Wi-Fi > Wi-Fi (On) > Known Network > Option > Edit > SSID	
<b>Parameter</b>	static.wifi.X.priority <sup>[2]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the priority for a specific wireless network. 5 is the highest priority, 1 is the lowest priority.	

	<b>Note:</b> It works only if "static.wifi.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	Integer from 1 to 5	
<b>Default</b>	1	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T48G, T46U, T46S, T46G, T43U, T42U, T42S, T41S, T29G, T27G, CP920, CP925, CP935W	
<b>Web UI</b>	Network > Wi-Fi > Change Priority	
<b>Phone UI</b>	<p><u>Color Screen Phones:</u> Menu &gt; Basic &gt; Wi-Fi &gt; Wi-Fi (On) &gt; Known Network &gt; Option &gt; Move Up/Move Down</p> <p><u>CP925/CP935W:</u> More &gt; Basic &gt; Wi-Fi &gt; Wi-Fi (On) &gt; Known Network &gt; Option &gt; Move Up/Move Down</p> <p><u>Black-and-white Screen Phones:</u> Menu &gt; Settings &gt; Basic Settings &gt; Wi-Fi &gt; Wi-Fi (On) &gt; Known Network &gt; Option &gt; Move Up/Move Down</p>	
<b>Parameter</b>	static.wifi.X.security_mode <sup>[2]</sup>	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the security mode of a specific wireless network.</p> <p><b>Note:</b> It works only if "static.wifi.enable" is set to 1 (Enabled). If it is set to 802.1x EAP, the CA certificate can be uploaded by the parameter "static.network.802_1x.root_cert_url", the user certificate can be uploaded by the parameter "static.network.802_1x.client_cert_url".</p>	
<b>Permitted Values</b>	NONE, WEP, WPA/WPA2 PSK, WPA3-Personal, 802.1x EAP	
<b>Default</b>	NONE	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T48G, T46U, T46S, T46G, T43U, T42U, T42S, T41S, T29G, T27G, CP920, CP925, CP935W	
<b>Web UI</b>	Network > Wi-Fi > Add > Secure Mode	
<b>Phone UI</b>	<p><u>Color Screen Phones:</u> Menu &gt; Basic &gt; Wi-Fi &gt; Wi-Fi (On) &gt; Known Network (press Add) &gt; Security Mode Menu &gt; Basic &gt; Wi-Fi &gt; Wi-Fi (On) &gt; Known Network &gt; Option &gt; Edit &gt; Security Mode</p> <p><u>CP925/CP935W:</u> More &gt; Basic &gt; Wi-Fi &gt; Wi-Fi (On) &gt; Known Network (press Add) &gt; Security Mode</p> <p><u>Black-and-white Screen Phones:</u> Menu &gt; Settings &gt; Basic Settings &gt; Wi-Fi (On) &gt; Known Network (press Add) &gt; Security Mode Menu &gt; Settings &gt; Basic Settings &gt; Wi-Fi &gt; Wi-Fi (On) &gt; Known Network &gt; Option &gt; Edit &gt; Security Mode</p>	
<b>Parameter</b>	static.wifi.X.password <sup>[2]</sup>	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the password of a specific wireless network.</p> <p><b>Note:</b> It works only if "static.wifi.enable" is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	String within 64 characters	
<b>Default</b>	Blank	
<b>Supported</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T48G, T46U, T46S, T46G, T43U, T42U, T42S, T41S,	

<b>Devices</b>	T29G, T27G, CP920, CP925, CP935W	
<b>Web UI</b>	Network > Wi-Fi > Add > Password	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Basic > Wi-Fi > Wi-Fi (On) > Known Network (press Add) > Password Menu > Basic > Wi-Fi > Wi-Fi (On) > Known Network > Option > Edit > Password	
	<u>CP925/CP935W:</u> More > Basic > Wi-Fi > Wi-Fi (On) > Known Network (press Add) > Password	
	<u>Black-and-white Screen Phones:</u> Menu > Settings > Basic Settings > Wi-Fi (On) > Known Network (press Add) > Password Menu > Settings > Basic Settings > Wi-Fi > Wi-Fi (On) > Known Network > Option > Edit > Password	
<b>Parameter</b>	static.wifi.X.eap_type <sup>[2]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the EAP authentication mode of a specific wireless network. <b>Note:</b> It works only if “static.wifi.enable” is set to 1 (Enabled) and “static.wifi.X.security_mode” is set to <b>802.1x EAP</b> .	
<b>Permitted Values</b>	Auto, PEAP, TLS, TTLS or PWD	
<b>Default</b>	Auto	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T48G, T46U, T46S, T46G, T43U, T42U, T42S, T41S, T29G, T27G, CP920, CP925, CP935W	
<b>Web UI</b>	Network > Wi-Fi > Add > EAP Method	
<b>Parameter</b>	static.wifi.X.eap_user_name <sup>[2]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the EAP authentication username of a specific wireless network. <b>Note:</b> It works only if “static.wifi.enable” is set to 1 (Enabled) and “static.wifi.X.security_mode” is set to <b>802.1x EAP</b> .	
<b>Permitted Values</b>	ASCII code from 1 to 32 in length	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T48G, T46U, T46S, T46G, T43U, T42U, T42S, T41S, T29G, T27G, CP920, CP925, CP935W	
<b>Web UI</b>	Network > Wi-Fi > Add > Identity	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Basic > Wi-Fi > Wi-Fi (On) > Known Network (press Add) > User Name Menu > Basic > Wi-Fi > Wi-Fi (On) > Known Network > Option > Edit > User Name	
	<u>CP925/CP935W:</u> More > Basic > Wi-Fi > Wi-Fi (On) > Known Network (press Add) > User Name	
	<u>Black-and-white Screen Phones:</u> Menu > Settings > Basic Settings > Wi-Fi > Wi-Fi (On) > Known Network (press Add) > User Name Menu > Settings > Basic Settings > Wi-Fi > Wi-Fi (On) > Known Network > Option > Edit > User Name	
<b>Parameter</b>	static.wifi.X.802_1x.anonymous_identity <sup>[2]</sup>	<y0000000000xx>.cfg

<b>Description</b>	It configures the anonymous identity (user name) for Wi-Fi 802.1X authentication. <b>Note:</b> It works only if “static.wifi.enable” is set to 1 (Enabled) and “static.wifi.X.security_mode” is set to <b>802.1x EAP</b> .	
<b>Permitted Values</b>	String within 255 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T48S, T46S, T42S, T41S, T33P, T33G, T31P, T31G, T31, T30P, T30, T27G, CP920, CP925, CP935W	
<b>Web UI</b>	Network > Wi-Fi > Add > Anonymous Identity	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Basic > Wi-Fi > Wi-Fi (On) > Known Network (press Add) > Anonymous Identity Menu > Basic > Wi-Fi > Wi-Fi (On) > Known Network > Option > Edit > Anonymous Identity <u>CP925/CP935W:</u> More > Basic > Wi-Fi > Wi-Fi (On) > Known Network (press Add) > Anonymous Identity <u>Black-and-white Screen Phones:</u> Menu > Settings > Basic Settings > Wi-Fi > Wi-Fi (On) > Known Network (press Add) > Anonymous Identity Menu > Settings > Basic Settings > Wi-Fi > Wi-Fi (On) > Known Network > Option > Edit > Anonymous Identity	
<b>Parameter</b>	static.wifi.X.eap_password <sup>[2]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the EAP authentication password of a specific wireless network. <b>Note:</b> It works only if “static.wifi.enable” is set to 1 (Enabled) and “static.wifi.X.security_mode” is set to <b>802.1x EAP</b> .	
<b>Permitted Values</b>	String within 64 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T48G, T46U, T46S, T46G, T43U, T42U, T42S, T41S, T29G, T27G, CP920, CP925, CP935W	
<b>Web UI</b>	Network > Wi-Fi > Add > Password	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Basic > Wi-Fi > Wi-Fi (On) > Known Network (press Add) > Password Menu > Basic > Wi-Fi > Wi-Fi (On) > Known Network > Option > Edit > Password <u>CP925/CP935W:</u> More > Basic > Wi-Fi > Wi-Fi (On) > Known Network (press Add) > Password <u>Black-and-white Screen Phones:</u> Menu > Settings > Basic Settings > Wi-Fi > Wi-Fi (On) > Known Network (press Add) > Password Menu > Settings > Basic Settings > Wi-Fi > Wi-Fi (On) > Known Network > Option > Edit > Password	
<b>Parameter</b>	static.wifi.show_scan_prompt	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to prompt you whether to scan Wi-Fi after connecting Wi-Fi USB dongle to the IP phone.	

<b>Permitted Values</b>	0-Disabled, the phone will enable the Wi-Fi feature and try to connect to the known wireless network (according to the priority) automatically. But if the phone fails to connect to any known wireless network, the phone will still display the Wi-Fi scanning prompt when connecting to the phone. 1-Enabled	
<b>Default</b>	1	
<b>Supported Devices</b>	T53, T53C, T48U, T48S, T48G, T46U, T46S, T46G, T43U, T42U, T42S, T41S, T29G, T27G	
<b>Parameter</b>	phone_setting.wifi_security_check.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables a pop-up prompt to confirm the unencrypted Wi-Fi connection.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T46U, T46S, T43U, T42U, T42S, T41S, T27G, CP920, CP925, CP935W	

[1]If you change this parameter, the phone will reboot to make the change take effect.

[2]X is Wi-Fi ID. X=1-5.

## Wireless Network IP Addressing Mode Configuration

The following table lists the parameters you can use to configure IP addressing mode for the wireless network.

<b>Parameter</b>	static.network.wifi.ip_address_mode	<y0000000000xx>.cfg
<b>Description</b>	It configures the IP addressing mode for the wireless network.	
<b>Permitted Values</b>	0-IPv4 1-IPv6 2-IPv4 & IPv6	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T46U, T46S, T43U, T42U, T42S, T41S, T27G, CP920, CP925, CP935W	
<b>Web UI</b>	Network > Wi-Fi > Internet Port > Mode (IPv4/IPv6)	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Advanced (default password: admin) > Network > Wi-Fi Port > IPAddress Mode <u>CP925/CP935W:</u> More > Advanced (default password: admin) > Network > Wi-Fi Port > IPAddress Mode <u>Black-and-white Screen Phones:</u> Menu > Settings > Advanced Settings (default password: admin) > Network > Wi-Fi Port > IP Mode	
<b>Parameter</b>	static.network.wifi.preference	<y0000000000xx>.cfg
<b>Description</b>	It specifies IPv4 or IPv6 as the preferred wireless network in a Dual-Stack mode. <b>Note:</b> It works only if "static.network.wifi.ip_address_mode" is set to 2 (IPv4 & IPv6).	
<b>Permitted Values</b>	0-IPv6 1-IPv4	

<b>Default</b>	0
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T46U, T46S, T43U, T42U, T42S, T41S, T27G, CP920, CP925, CP935W
<b>Web UI</b>	Network > Wi-Fi > Internet Port > Preference(IPv4/IPv6)
<b>Phone UI</b>	<p><u>Color Screen Phones:</u> Menu &gt; Advanced (default password: admin) &gt; Network &gt; Wi-Fi Port &gt; Preference</p> <p><u>CP925/CP935W:</u> More &gt; Advanced (default password: admin) &gt; Network &gt; Wi-Fi Port &gt; Preference</p> <p><u>Black-and-white Screen Phones:</u> Menu &gt; Settings &gt; Advanced Settings (default password: admin) &gt; Network &gt; Wi-Fi Port &gt; Preference</p>

## IPv4 Wireless Network Configuration

The following table lists the parameters you can use to configure IPv4 wireless network.

<b>Parameter</b>	static.network.wifi.internet_port.type	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the Internet port type for IPv4 wireless network.</p> <p><b>Note:</b> It works only if "static.network.wifi.ip_address_mode" is set to 0 (IPv4) or 2 (IPv4 &amp; IPv6).</p>	
<b>Permitted Values</b>	<p>0-DHCP</p> <p>2-Static IP</p>	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T46U, T46S, T43U, T42U, T42S, T41S, T27G, CP920, CP925, CP935W	
<b>Web UI</b>	<p><u>T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/CP925/CP935W:</u> Network &gt; Wi-Fi &gt; IPv4 Config &gt; Configuration Type</p> <p><u>Other Phones:</u> Network &gt; Wi-Fi &gt; IPv4 Config</p>	
<b>Phone UI</b>	<p><u>Color Screen Phones:</u> Menu &gt; Advanced (default password: admin) &gt; Network &gt; Wi-Fi Port &gt; IPv4</p> <p><u>CP925/CP935W:</u> More &gt; Advanced (default password: admin) &gt; Network &gt; Wi-Fi Port &gt; IPv4</p> <p><u>Black-and-white Screen Phones:</u> Menu &gt; Settings &gt; Advanced Settings (default password: admin) &gt; Network &gt; Wi-Fi Port &gt; IPv4</p>	
<b>Parameter</b>	static.network.wifi.internet_port.ip	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the IPv4 address for the wireless network.</p> <p><b>Note:</b> It works only if "static.network.wifi.internet_port.type" is set to 2 (Static IP).</p>	
<b>Permitted Values</b>	IPv4 Address	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T46U, T46S, T43U, T42U, T42S, T41S, T27G, CP920, CP925, CP935W	
<b>Web UI</b>	<u>T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/CP925/CP935W:</u>	

	Network > Wi-Fi > IPv4 Config > Configuration Type (Static IP) > IP Address <u>Other Phones:</u> Network > Wi-Fi > IPv4 Config > Static IP Address > IP Address	
<b>Phone UI</b>	Color Screen Phones: Menu > Advanced (default password: admin) > Network > Wi-Fi Port > IPv4 > Static IP > IP Address <u>CP925/CP935W:</u> More > Advanced (default password: admin) > Network > Wi-Fi Port > IPv4 > Static IP > IP Address <u>Black-and-white Screen Phones:</u> Menu > Settings > Advanced Settings (default password: admin) > Network > Wi-Fi Port > IPv4 > Static IPv4 Client > IP Address	
<b>Parameter</b>	static.network.wifi.internet_port.mask	<y0000000000xx>.cfg
<b>Description</b>	It configures the IPv4 subnet mask for the wireless network. <b>Note:</b> It works only if "static.network.wifi.internet_port.type" is set to 2 (Static IP).	
<b>Permitted Values</b>	IPv4 Address	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T46U, T46S, T43U, T42U, T42S, T41S, T27G, CP920, CP925, CP935W	
<b>Web UI</b>	<u>T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/CP925/CP935W:</u> Network > Wi-Fi > IPv4 Config > Configuration Type (Static IP) > Subnet Mask <u>Other Phones:</u> Network > Wi-Fi > IPv4 Config > Static IP Address > Subnet Mask	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Advanced (default password: admin) > Network > Wi-Fi Port > IPv4 > Static IP > Subnet Mask <u>CP925/CP935W:</u> More > Advanced (default password: admin) > Network > Wi-Fi Port > IPv4 > Static IP > Subnet Mask <u>Black-and-white Screen Phones:</u> Menu > Settings > Advanced Settings (default password: admin) > Network > Wi-Fi Port > IPv4 > Static IPv4 Client > Subnet Mask	
<b>Parameter</b>	static.network.wifi.internet_port.gateway	<y0000000000xx>.cfg
<b>Description</b>	It configures the IPv4 default gateway for the wireless network. <b>Note:</b> It works only if "static.network.wifi.internet_port.type" is set to 2 (Static IP).	
<b>Permitted Values</b>	IPv4 Address	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T46U, T46S, T43U, T42U, T42S, T41S, T27G, CP920, CP925, CP935W	
<b>Web UI</b>	<u>T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/CP925/CP935W:</u> Network > Wi-Fi > IPv4 Config > Configuration Type (Static IP) > Default Gateway <u>Other Phones:</u> Network > Wi-Fi > IPv4 Config > Static IP Address > Default Gateway	



<b>Phone UI</b>	<p><u>Color Screen Phones:</u></p> <p>Menu &gt; Advanced (default password: admin) &gt; Network &gt; Wi-Fi Port &gt; IPv4 &gt; Static IP &gt; Default Gateway</p> <p><u>CP925/CP935W:</u></p> <p>More &gt; Advanced (default password: admin) &gt; Network &gt; Wi-Fi Port &gt; IPv4 &gt; Static IP &gt; Default Gateway</p> <p><u>Black-and-white Screen Phones:</u></p> <p>Menu &gt; Settings &gt; Advanced Settings (default password: admin) &gt; Network &gt; Wi-Fi Port &gt; IPv4 &gt; Static IPv4 Client &gt; Default Gateway</p>	
<b>Parameter</b>	static.network.wifi.static_dns_enable	<y0000000000xx>.cfg
<b>Description</b>	<p>It triggers the static DNS feature to on or off for the wireless network.</p> <p><b>Note:</b> It works only if "static.network.wifi.internet_port.type" is set to 0 (DHCP).</p>	
<b>Permitted Values</b>	<p>0-Off, the phone will use the IPv4 DNS obtained from DHCP.</p> <p>1-On, the phone will use manually configured static IPv4 DNS.</p>	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T46U, T46S, T43U, T42U, T42S, T41S, T27G, CP920, CP925, CP935W	
<b>Web UI</b>	Network > Wi-Fi > IPv4 Config > Static DNS	
<b>Phone UI</b>	<p><u>Color Screen Phones:</u></p> <p>Menu &gt; Advanced (default password: admin) &gt; Network &gt; Wi-Fi Port &gt; IPv4 &gt; Type(DHCP) &gt; Static DNS</p> <p><u>CP925/CP935W:</u></p> <p>More &gt; Advanced (default password: admin) &gt; Network &gt; Wi-Fi Port &gt; IPv4 &gt; Type(DHCP) &gt; Static DNS</p> <p><u>Black-and-white Screen Phones:</u></p> <p>Menu &gt; Settings &gt; Advanced Settings (default password: admin) &gt; Network &gt; Wi-Fi Port &gt; IPv4 &gt; DHCP IPv4 Client &gt; Static DNS</p>	
<b>Parameter</b>	static.network.wifi.primary_dns	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the primary IPv4 DNS server for the wireless network.</p> <p><b>Note:</b> It works only if "static.network.wifi.ip_address_mode" is set to 0 (IPv4) or 2 (IPv4 &amp; IPv6). In DHCP environment, you also need to make sure "static.network.wifi.static_dns_enable" is set to 1 (On).</p>	
<b>Permitted Values</b>	IPv4 Address	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T46U, T46S, T43U, T42U, T42S, T41S, T27G, CP920, CP925, CP935W	
<b>Web UI</b>	<p><u>T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/CP925/CP935W:</u></p> <p>Network &gt; Wi-Fi &gt; IPv4 Config &gt; Static DNS &gt; Primary DNS</p> <p><u>Other Phones:</u></p> <p>Network &gt; Wi-Fi &gt; IPv4 Config &gt; Static IP Address &gt; Primary DNS</p>	
<b>Phone UI</b>	<p><u>Color Screen Phones:</u></p>	

	<p>Menu &gt; Advanced (default password: admin) &gt; Network &gt; Wi-Fi Port &gt; IPv4 &gt; Static IP &gt; Pri.DNS</p> <p><u>CP925/CP935W:</u></p> <p>More &gt; Advanced (default password: admin) &gt; Network &gt; Wi-Fi Port &gt; IPv4 &gt; Static IP &gt; Pri.DNS</p> <p>In DHCP environment:</p> <p>Menu &gt; Advanced (default password: admin) &gt; Network &gt; Wi-Fi Port &gt; IPv4 &gt; DHCP &gt; Static DNS (Enabled) &gt; Pri.DNS</p> <p><u>CP925/CP935W:</u></p> <p>More &gt; Advanced (default password: admin) &gt; Network &gt; Wi-Fi Port &gt; IPv4 &gt; DHCP &gt; Static DNS (Enabled) &gt; Pri.DNS</p> <p><u>Black-and-white Screen Phones:</u></p> <p>Menu &gt; Settings &gt; Advanced Settings (default password: admin) &gt; Network &gt; Wi-Fi Port &gt; IPv4 &gt; Static IPv4 Client &gt; Pri.DNS</p> <p>In DHCP environment:</p> <p>Menu &gt; Settings &gt; Advanced Settings (default password: admin) &gt; Network &gt; Wi-Fi Port &gt; IPv4 &gt; DHCP IPv4 Client &gt; Static DNS (Enabled) &gt; Pri.DNS</p>	
<b>Parameter</b>	static.network.wifi.secondary_dns	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the secondary IPv4 DNS server for the wireless network.</p> <p><b>Note:</b> It works only if “static.network.wifi.ip_address_mode” is set to 0 (IPv4) or 2 (IPv4 &amp; IPv6). In DHCP environment, you also need to make sure “static.network.wifi.static_dns_enable” is set to 1 (On).</p>	
<b>Permitted Values</b>	IPv4 Address	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T46U, T46S, T43U, T42U, T42S, T41S, T27G, CP920, CP925, CP935W	
<b>Web UI</b>	<p><u>T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/CP925/CP935W:</u></p> <p>Network &gt; Wi-Fi &gt; IPv4 Config &gt; Static DNS &gt; Secondary DNS</p> <p><u>Other Phones:</u></p> <p>Network &gt; Wi-Fi &gt; IPv4 Config &gt; Static IP Address &gt; Secondary DNS</p>	
<b>Phone UI</b>	<p><u>Color Screen Phones:</u></p> <p>Menu &gt; Advanced (default password: admin) &gt; Network &gt; Wi-Fi Port &gt; IPv4 &gt; Static IP &gt; Sec.DNS</p> <p><u>CP925/CP935W:</u></p> <p>More &gt; Advanced (default password: admin) &gt; Network &gt; Wi-Fi Port &gt; IPv4 &gt; Static IP &gt; Sec.DNS</p> <p>In DHCP environment:</p> <p>Menu &gt; Advanced (default password: admin) &gt; Network &gt; Wi-Fi Port &gt; IPv4 &gt; DHCP &gt; Static DNS (Enabled) &gt; Sec.DNS</p> <p><u>CP925/CP935W:</u></p> <p>More &gt; Advanced (default password: admin) &gt; Network &gt; Wi-Fi Port &gt; IPv4 &gt; DHCP &gt; Static DNS (Enabled) &gt; Sec.DNS</p> <p><u>Black-and-white Screen Phones:</u></p> <p>Menu &gt; Settings &gt; Advanced Settings (default password: admin) &gt; Network &gt; Wi-Fi Port &gt; IPv4 &gt;</p>	

	Static IPv4 Client > Sec.DNS  In DHCP environment:  Menu > Settings > Advanced Settings (default password: admin) > Network > Wi-Fi Port > IPv4 > DHCP IPv4 Client > Static DNS (Enabled) > Sec.DNS
--	---

## IPv6 Wireless Network Configuration

If you configure the network settings on the phone for an IPv6 network, you can set up an IP address for the phone by using SLAAC (ICMPv6), DHCPv6 or by manually entering an IP address. Ensure that your network environment supports IPv6. Contact your ISP for more information.

When you enable both SLAAC and DHCPv6 on the phone, the server can specify the IP phone to obtain the IPv6 address and other network settings either from SLAAC or from DHCPv6, if the SLAAC server is not working, the phone will try to obtain the IPv6 address and other network settings via DHCPv6.

The following table lists the parameters you can use to configure IPv6 wireless network.

<b>Parameter</b>	static.network.wifi.ipv6_internet_port.type	<y0000000000xx>.cfg
<b>Description</b>	It configures the Internet port type for IPv6 wireless network. <b>Note:</b> It works only if "static.network.wifi.ip_address_mode" is set to 1 (IPv6) or 2 (IPv4 & IPv6).	
<b>Permitted Values</b>	0-DHCP 1-Static IP	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T46U, T46S, T43U, T42U, T42S, T41S, T27G, CP920, CP925, CP935W	
<b>Web UI</b>	T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/CP925/CP935W: Network > Wi-Fi > IPv6 Config > Configuration Type  Other Phones: Network > Wi-Fi > IPv6 Config	
<b>Phone UI</b>	Color Screen Phones: Menu > Advanced (default password: admin) > Network > Wi-Fi Port > IPv6  CP925/CP935W: More > Advanced (default password: admin) > Network > Wi-Fi Port > IPv6  Black-and-white Screen Phones: Menu > Settings > Advanced Settings (default password: admin) > Network > Wi-Fi Port > IPv6	
<b>Parameter</b>	static.network.wifi.ipv6_internet_port.ip	<y0000000000xx>.cfg
<b>Description</b>	It configures the IPv6 address for the wireless network. <b>Note:</b> It works only if "static.network.wifi.ipv6_internet_port.type" is set to 1 (Static IP).	
<b>Permitted Values</b>	IPv6 Address	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T46U, T46S, T43U, T42U, T42S, T41S, T27G, CP920, CP925, CP935W	
<b>Web UI</b>	T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/CP925/CP935W: Network > Wi-Fi > IPv6 Config > Configuration Type (Static IP) > IP Address	

	<u>Other Phones:</u> Network > Wi-Fi > IPv6 Config > Static IP Address > IP Address	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Advanced (default password: admin) > Network > Wi-Fi Port > IPv6 > Static IP > IP Address CP925/CP935W: More > Advanced (default password: admin) > Network > Wi-Fi Port > IPv6 > Static IP > IP Address <u>Black-and-white Screen Phones:</u> Menu > Settings > Advanced Settings (default password: admin) > Network > Wi-Fi Port > IPv6 > Static IPv6 Client > IP Address	
	<b>Parameter</b>	static.network.wifi.ipv6_prefix <y0000000000xx>.cfg
<b>Description</b>	It configures the IPv6 prefix for the wireless network. <b>Note:</b> It works only if "static.network.wifi.ipv6_internet_port.type" is set to 1 (Static IP).	
<b>Permitted Values</b>	Integer from 1 to 128	
<b>Default</b>	64	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T46U, T46S, T43U, T42U, T42S, T41S, T27G, CP920, CP925, CP935W	
<b>Web UI</b>	T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/CP925/CP935W: Network > Wi-Fi > IPv6 Config > Configuration Type (Static IP) > IPv6 Prefix(0~128)	
	<u>Other Phones:</u> Network > Wi-Fi > IPv6 Config > Static IP Address > IPv6 Prefix(0~128)	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Advanced (default password: admin) > Network > Wi-Fi Port > IPv6 > Static IP > IPv6 IP Prefix CP925/CP935W: More > Advanced (default password: admin) > Network > Wi-Fi Port > IPv6 > Static IP > IPv6 IP Prefix <u>Black-and-white Screen Phones:</u> Menu > Settings > Advanced Settings (default password: admin) > Network > Wi-Fi Port > IPv6 > Static IPv6 Client > IPv6 IP Prefix	
	<b>Parameter</b>	static.network.wifi.ipv6_internet_port.gateway <y0000000000xx>.cfg
<b>Description</b>	It configures the IPv6 default gateway for the wireless network. <b>Note:</b> It works only if "static.network.wifi.ipv6_internet_port.type" is set to 1 (Static IP).	
<b>Permitted Values</b>	IPv6 Address	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T46U, T46S, T43U, T42U, T42S, T41S, T27G, CP920, CP925, CP935W	
<b>Web UI</b>	T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/CP925/CP935W: Network > Wi-Fi > IPv6 Config > Configuration Type (Static IP) > Default Gateway	
	<u>Other Phones:</u> Network > Wi-Fi > IPv6 Config > Static IP Address > Default Gateway	
<b>Phone UI</b>	<u>Color Screen Phones:</u>	

	<p>Menu &gt; Advanced (default password: admin) &gt; Network &gt; Wi-Fi Port &gt; IPv6 &gt; Static IP &gt; Default Gateway</p> <p><u>CP925/CP935W:</u></p> <p>More &gt; Advanced (default password: admin) &gt; Network &gt; Wi-Fi Port &gt; IPv6 &gt; Static IP &gt; Default Gateway</p> <p><u>Black-and-white Screen Phones:</u></p> <p>Menu &gt; Settings &gt; Advanced Settings (default password: admin) &gt; Network &gt; Wi-Fi Port &gt; IPv6 &gt; Static IPv6 Client &gt; Default Gateway</p>	
<b>Parameter</b>	static.network.wifi.ipv6_static_dns_enable	<y0000000000xx>.cfg
<b>Description</b>	<p>It triggers the static IPv6 DNS feature to on or off for the wireless network.</p> <p><b>Note:</b> It works only if "static.network.wifi.ipv6_internet_port.type" is set to 0 (DHCP).</p>	
<b>Permitted Values</b>	<p><b>0</b>-Off, the phone will use the IPv6 DNS obtained from DHCP.</p> <p><b>1</b>-On, the phone will use manually configured static IPv6 DNS.</p>	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T46U, T46S, T43U, T42U, T42S, T41S, T27G, CP920, CP925, CP935W	
<b>Web UI</b>	Network > Wi-Fi > IPv6 Config > Static IPv6 DNS	
<b>Phone UI</b>	<p><u>Color Screen Phones:</u></p> <p>Menu &gt; Advanced (default password: admin) &gt; Network &gt; Wi-Fi Port &gt; IPv6 &gt; Type(DHCP) &gt; Static DNS</p> <p><u>CP925/CP935W:</u></p> <p>More &gt; Advanced (default password: admin) &gt; Network &gt; Wi-Fi Port &gt; IPv6 &gt; Type(DHCP) &gt; Static DNS</p> <p><u>Black-and-white Screen Phones:</u></p> <p>Menu &gt; Settings &gt; Advanced Settings (default password: admin) &gt; Network &gt; Wi-Fi Port &gt; IPv6 &gt; DHCP IPv6 Client &gt; Static DNS</p>	
<b>Parameter</b>	static.network.wifi.ipv6_primary_dns	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the primary IPv6 DNS server for the wireless network.</p> <p><b>Note:</b> It works only if "static.network.wifi.ip_address_mode" is set to 1 (IPv6) or 2 (IPv4 &amp; IPv6). In DHCP environment, you also need to make sure "static.network.wifi.ipv6_static_dns_enable" is set to 1 (On).</p>	
<b>Permitted Values</b>	IPv6 Address	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T46U, T46S, T43U, T42U, T42S, T41S, T27G, CP920, CP925, CP935W	
<b>Web UI</b>	<p><u>T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/CP925/CP935W:</u></p> <p>Network &gt; Wi-Fi &gt; IPv6 Config &gt; Static IPv6 DNS &gt; Primary DNS</p> <p><u>Other Phones:</u></p> <p>Network &gt; Wi-Fi &gt; IPv6 Config &gt; Static IP Address &gt; Primary DNS</p>	
<b>Phone UI</b>	<p><u>Color Screen Phones:</u></p> <p>Menu &gt; Advanced (default password: admin) &gt; Network &gt; Wi-Fi Port &gt; IPv6 &gt; Static IP &gt; Pri.DNS</p>	

	<p><u>CP925/CP935W:</u></p> <p>More &gt; Advanced (default password: admin) &gt; Network &gt; Wi-Fi Port &gt; IPv6 &gt; Static IP &gt; Pri.DNS</p> <p>In DHCP environment:</p> <p>Menu &gt; Advanced (default password: admin) &gt; Network &gt; Wi-Fi Port &gt; IPv6 &gt; DHCP &gt; Static DNS (Enabled) &gt; Pri.DNS</p> <p><u>CP925/CP935W:</u></p> <p>More &gt; Advanced (default password: admin) &gt; Network &gt; Wi-Fi Port &gt; IPv6 &gt; DHCP &gt; Static DNS (Enabled) &gt; Pri.DNS</p> <p><u>Black-and-white Screen Phones:</u></p> <p>Menu &gt; Settings &gt; Advanced Settings (default password: admin) &gt; Network &gt; Wi-Fi Port &gt; IPv6 &gt; Static IPv6 Client &gt; Pri.DNS</p> <p>In DHCP environment:</p> <p>Menu &gt; Settings &gt; Advanced Settings (default password: admin) &gt; Network &gt; Wi-Fi Port &gt; IPv6 &gt; DHCP IPv6 Client &gt; Static DNS(Enabled) &gt; Pri.DNS</p>	
<b>Parameter</b>	static.network.wifi.ipv6_secondary_dns	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the secondary IPv6 DNS server for the wireless network.</p> <p><b>Note:</b> It works only if "static.network.wifi.ip_address_mode" is set to 1 (IPv6) or 2 (IPv4 &amp; IPv6). In DHCP environment, you also need to make sure "static.network.wifi.ipv6_static_dns_enable" is set to 1 (On).</p>	
<b>Permitted Values</b>	IPv6 Address	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T46U, T46S, T43U, T42U, T42S, T41S, T27G, CP920, CP925, CP935W	
<b>Web UI</b>	<p><u>T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/CP925/CP935W:</u></p> <p>Network &gt; Wi-Fi &gt; IPv6 Config &gt; Static IPv6 DNS &gt; Secondary DNS</p> <p><u>Other Phones:</u></p> <p>Network &gt; Wi-Fi &gt; IPv6 Config &gt; Static IP Address &gt; Secondary DNS</p>	
<b>Phone UI</b>	<p><u>Color Screen Phones:</u></p> <p>Menu &gt; Advanced (default password: admin) &gt; Network &gt; Wi-Fi Port &gt; IPv6 &gt; Static IP &gt; Sec.DNS</p> <p><u>CP925/CP935W:</u></p> <p>More &gt; Advanced (default password: admin) &gt; Network &gt; Wi-Fi Port &gt; IPv6 &gt; Static IP &gt; Sec.DNS</p> <p>In DHCP environment:</p> <p>Menu &gt; Advanced (default password: admin) &gt; Network &gt; Wi-Fi Port &gt; IPv6 &gt; DHCP &gt; Static DNS (Enabled) &gt; Sec.DNS</p> <p><u>CP925/CP935W:</u></p> <p>More &gt; Advanced (default password: admin) &gt; Network &gt; Wi-Fi Port &gt; IPv6 &gt; DHCP &gt; Static DNS (Enabled) &gt; Sec.DNS</p> <p><u>Black-and-white Screen Phones:</u></p> <p>Menu &gt; Settings &gt; Advanced Settings (default password: admin) &gt; Network &gt; Wi-Fi Port &gt; IPv6 &gt; Static IPv6 Client &gt; Sec.DNS</p>	

	In DHCP environment: Menu > Settings > Advanced Settings (default password: admin) > Network > Wi-Fi Port > IPv6 > DHCP IPv6 Client > Static DNS(Enabled) > Sec.DNS	
<b>Parameter</b>	static.network.wifi.ipv6_icmp_v6.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to obtain IPv6 wireless network settings via SLAAC (Stateless Address Autoconfiguration). <b>Note:</b> It works only if "static.network.wifi.ipv6_internet_port.type" is set to 0 (DHCP).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T46U, T46S, T43U, T42U, CP920, CP925, CP935W	
<b>Web UI</b>	Network > Advanced > Wi-Fi ICMPv6 Status > Active	

## Real-Time Transport Protocol (RTP) Ports

Since the phone supports conferencing and multiple RTP streams, it can use several ports concurrently. You can specify the phone's RTP port range.

The UDP port used for RTP streams is traditionally an even-numbered port. If the port 11780 is used to send and receive RTP for the first voice session, additional calls would then use ports 11782, 11784, 11786, and so on. The phone is compatible with [RFC 1889 - RTP: A Transport Protocol for Real-Time Applications](#) - and the updated [RFC 3550](#).

### Topic

[RTP Ports Configuration](#)

## RTP Ports Configuration

The following table lists the parameters you can use to configure RTP ports.

<b>Parameter</b>	static.network.port.min_rtpport	<y0000000000xx>.cfg
<b>Description</b>	It configures the minimum local RTP port.	
<b>Permitted Values</b>	Integer from 1024 to 65535	
<b>Default</b>	11780	
<b>Web UI</b>	Network > Advanced > Local RTP Port > Min RTP Port (1024~65535)	
<b>Parameter</b>	static.network.port.max_rtpport	<y0000000000xx>.cfg
<b>Description</b>	It configures the maximum local RTP port.	
<b>Permitted Values</b>	Integer from 1024 to 65535	
<b>Default</b>	12780	
<b>Web UI</b>	Network > Advanced > Local RTP Port > Max RTP Port (1024~65535)	
<b>Parameter</b>	features.rtp_symmetric.enable	<y0000000000xx>.cfg
<b>Description</b>	It configures the symmetrical RTP feature.	
<b>Permitted</b>	0-Disabled	

<b>Values</b>	1-reject RTP packets arriving from a non-negotiated IP address
	2-reject RTP packets arriving from a non-negotiated port
	3-reject RTP packets arriving from a non-negotiated IP address or a non-negotiated port
<b>Default</b>	0

## Network Address Translation (NAT)

NAT enables phones with private unregistered addresses to communicate with devices with globally unique registered addresses.

### Topics

[NAT Traversal Configuration](#)

[Keep Alive Configuration](#)

[Rport Configuration](#)

[SIP Port and TLS Port Configuration](#)

## NAT Traversal Configuration

The phones can traverse NAT gateways to establish and maintain connections with external devices.

Yealink phones support three NAT traversal techniques: manual NAT, STUN and ICE. If you enable manual NAT and STUN, the phone will use the manually-configured external IP address for NAT traversal. The TURN protocol is used as part of the ICE approach to NAT traversal.

The following table lists the parameters you can use to configure NAT traversal.

<b>Parameter</b>	account.X.nat.nat_traversal <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the NAT traversal for a specific account. <b>Note:</b> If it is set to 1 (STUN), it works only if “static.sip.nat_stun.enable” is set to 1 (Enabled); if it is set to 2 (Manual NAT), it works only if “static.network.static_nat.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-STUN 2-Manual NAT	
<b>Default</b>	0	
<b>Web UI</b>	Account > Register > NAT	
<b>Phone UI</b>	<p><u>Color Screen Phones:</u></p> <p>Menu &gt; Advanced (default password: admin) &gt; Accounts &gt; Account X &gt; NAT Status</p> <p><u>CP925/CP935W:</u></p> <p>More &gt; Advanced (default password: admin) &gt; Accounts &gt; Account X &gt; NAT Status</p> <p><u>Black-and-white Screen Phones:</u></p> <p>Menu &gt; Settings &gt; Advanced Settings (default password: admin) &gt; Accounts &gt; AccountX &gt; NAT Status</p> <p><b>Note:</b> Manual NAT cannot be configured via the phone user interface.</p>	
<b>Parameter</b>	static.network.static_nat.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the manual NAT feature.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	



<b>Default</b>	0	
<b>Web UI</b>	Network > NAT > Manual NAT > Active	
<b>Parameter</b>	static.network.static_nat.addr	<y0000000000xx>.cfg
<b>Description</b>	It configures the IP address to be advertised in SIP signaling. It should match the external IP address used by the NAT device. <b>Note:</b> It works only if "static.network.static_nat.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	IP Address	
<b>Default</b>	Blank	
<b>Web UI</b>	Network > NAT > Manual NAT > IP Address	
<b>Parameter</b>	static.sip.nat_stun.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the STUN (Simple Traversal of UDP over NATs) feature.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Network > NAT > STUN > Active	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Advanced (default password: admin) > Network > NAT > NAT Status <u>CP925/CP935W:</u> More > Advanced (default password: admin) > Network > NAT > NAT Status <u>Black-and-white Screen Phones:</u> Menu > Settings > Advanced Settings (default password: admin) > Network > NAT > NAT Status	
<b>Parameter</b>	static.sip.nat_stun.server	<y0000000000xx>.cfg
<b>Description</b>	It configures the IP address or domain name of the STUN server. <b>Note:</b> It works only if "static.sip.nat_stun.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Web UI</b>	Network > NAT > STUN > STUN Server	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Advanced (default password: admin) > Network > NAT > STUN Server <u>CP925/CP935W:</u> More > Advanced (default password: admin) > Network > NAT > STUN Server <u>Black-and-white Screen Phones:</u> Menu > Settings > Advanced Settings (default password: admin) > Network > NAT > STUN Server	
<b>Parameter</b>	static.sip.nat_stun.port	<y0000000000xx>.cfg
<b>Description</b>	It configures the port of the STUN server.	

	<b>Note:</b> It works only if “static.sip.nat_stun.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	Integer from 1024 to 65535	
<b>Default</b>	3478	
<b>Web UI</b>	Network > NAT > STUN > STUN Port (1024~65535)	
<b>Phone UI</b>	<p><u>Color Screen Phones:</u> Menu &gt; Advanced (default password: admin) &gt; Network &gt; NAT &gt; STUN Port</p> <p><u>CP925/CP935W:</u> More &gt; Advanced (default password: admin) &gt; Network &gt; NAT &gt; STUN Port</p> <p><u>Black-and-white Screen Phones:</u> Menu &gt; Settings &gt; Advanced Settings (default password: admin) &gt; Network &gt; NAT &gt; STUN Port</p>	
<b>Parameter</b>	static.ice.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the ICE (Interactive Connectivity Establishment) feature.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Network > NAT > ICE > Active	
<b>Parameter</b>	static.sip.nat_turn.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the TURN (Traversal Using Relays around NAT) feature.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Network > NAT > TURN > Active	
<b>Parameter</b>	static.sip.nat_turn.server	<y0000000000xx>.cfg
<b>Description</b>	It configures the IP address or the domain name of the TURN server. <b>Note:</b> It works only if “static.sip.nat_turn.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	IP Address or Domain Name	
<b>Default</b>	Blank	
<b>Web UI</b>	Network > NAT > TURN > TURN Server	
<b>Parameter</b>	static.sip.nat_turn.port	<y0000000000xx>.cfg
<b>Description</b>	It configures the port of the TURN server. <b>Note:</b> It works only if “static.sip.nat_turn.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	Integer from 1024 to 65535	
<b>Default</b>	3478	

<b>Web UI</b>	Network > NAT > TURN > TURN Port (1024~65535)	
<b>Parameter</b>	static.sip.nat_turn.username	<y0000000000xx>.cfg
<b>Description</b>	It configures the user name to authenticate to the TURN server. <b>Note:</b> It works only if "static.sip.nat_turn.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Web UI</b>	Network > NAT > TURN > User Name (Username)	
<b>Parameter</b>	static.sip.nat_turn.password	<y0000000000xx>.cfg
<b>Description</b>	It configures the password to authenticate to the TURN server. <b>Note:</b> It works only if "static.sip.nat_turn.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Web UI</b>	Network > NAT > TURN > Password	

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## Keep Alive Configuration

Yealink phones can send keep-alive packets to the NAT device for keeping the communication port open.

The following table lists the parameters you can use to configure keep alive.

<b>Parameter</b>	account.X.nat.udp_update_enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It sets the type of keep-alive packets sent by phone.	
<b>Permitted Values</b>	<b>0</b> -Disabled <b>1</b> -Default (the phone sends the corresponding packets according to the transport protocol) <b>2</b> -Options (the phone sends SIP OPTIONS packets to the server) <b>3</b> -Notify (the phone sends SIP NOTIFY packets to the server)	
<b>Default</b>	1	
<b>Web UI</b>	Account > Advanced > Keep Alive Type	
<b>Parameter</b>	account.X.nat.udp_update_time <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the interval (in seconds) at which the phone sends a keep-alive package. <b>Note:</b> It works only if "account.X.nat.udp_update_enable" is set to 1, 2 or 3.	
<b>Permitted Values</b>	Integer from 0 to 3600	
<b>Default</b>	30	
<b>Web UI</b>	Account > Advanced > Keep Alive Interval(Seconds)	

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## Rport Configuration

Rport allows a client to request that the server sends the response back to the source IP address and port from which the request originated. It helps the phone traverse symmetric NATs.

Rport feature depends on support from a SIP server. For more information, refer to [RFC 3581](#).

The following table lists the parameter you can use to configure rport.

<b>Parameter</b>	account.X.nat.rport <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the phone to add the "rport" parameter in the Via header.	
<b>Permitted Values</b>	<p><b>0</b>-Disabled</p> <p><b>1</b>-Enabled, the INVITE Contact header uses the port in the "rport" parameter but does not use the source IP address in the "received" parameter in the Via header of server's response.</p> <p><b>2</b>-Enable Direct Process, the INVITE Contact header uses the port in the "rport" parameter and uses the source IP address in the "received" parameter in the Via header of server's response.</p>	
<b>Default</b>	0	
<b>Web UI</b>	Account > Advanced > RPort	

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## SIP Port and TLS Port Configuration

You can configure the SIP and TLS source ports on the phone. Otherwise, the phone uses default values (5060 for UDP/TCP and 5061 for TLS).

If NAT is disabled, the port number shows in the Via and Contact SIP headers of SIP messages. If NAT is enabled, the phone uses the NAT port number (and NAT IP address) in the Via and Contact SIP headers of SIP messages, but still using the configured source port.

The following table lists the parameters you can use to configure SIP port and TLS port.

<b>Parameter</b>	sip.listen_port	<y0000000000xx>.cfg
<b>Description</b>	<p>It specifies the local SIP port.</p> <p>If it is set to 0, the phone will automatically listen to the local SIP port.</p>	
<b>Permitted Values</b>	0, Integer from 1024 to 65535	
<b>Default</b>	5060	
<b>Web UI</b>	Settings > SIP > Local SIP Port	
<b>Parameter</b>	sip.tls_listen_port	<y0000000000xx>.cfg
<b>Description</b>	<p>It specifies the local TLS listen port.</p> <p>If it is set to 0, the phone will not listen to the TLS service.</p>	
<b>Permitted Values</b>	0, Integer from 1024 to 65535	

<b>Default</b>	5061
<b>Web UI</b>	Settings > SIP > TLS SIP Port

## Internet Port and PC Port

Yealink phones support two Ethernet ports: Internet port and PC port. You can enable or disable the PC port on the phones. The CP920/CP925 phones have Internet port only.

### Topics

[Supported Transmission Methods](#)  
[Internet Port and PC Port Configuration](#)

## Supported Transmission Methods

Three optional methods of transmission configuration for the IP phone Internet port and PC port:

- Auto-negotiate
- Half-duplex (transmit in 10Mbps or 100Mbps)
- Full-duplex (transmit in 10Mbps, 100Mbps or 1000Mbps (1000Mbps is only applicable to T57W/T54W/T53W/T53/T53C/T48U/T48S/T48G/T46U/T46S/T46G/T43U/T42U/T42G/T42S/T40G/T33G/T31G/T2-9G/T27G/T23G phones))

Auto-negotiate is configured for both Internet and PC ports on the IP phone by default.

## Internet Port and PC Port Configuration

The following table lists the parameters you can use to configure the Internet port and PC port.

<b>Parameter</b>	static.network.pc_port.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the PC port.	
<b>Permitted Values</b>	0-Disabled 1-Auto Negotiation	
<b>Default</b>	1	
<b>Supported Devices</b>	All phones except CP920/CP925	
<b>Web UI</b>	Network > PC Port > PC Port Active	
<b>Parameter</b>	static.network.internet_port.speed_duplex	<y0000000000xx>.cfg
<b>Description</b>	It configures the network speed over Ethernet of the Internet port. <b>Note:</b> For T57W/T54W/T53W/T53/T53C/T48U/T48S/T48G/T46U/T46S/T46G/T43U/T42U/T42G/T42S/T40G/T33G/T31G/T29G/T27G/T23G phones, you can set the transmission speed to 1000Mbps/Auto Negotiation to transmit in 1000Mbps if the phone is connected to the switch supports Gigabit Ethernet. We recommend that you do not change this parameter.	
<b>Permitted Values</b>	0-Auto Negotiation 1-Full Duplex 10Mbps 2-Full Duplex 100Mbps 3-Half Duplex 10Mbps	

	<b>4</b> -Half Duplex 100Mbps <b>5</b> -Full Duplex 1000Mbps (only applicable to T57W/T54W/T53W/T53/T53C/T48U/T48S/T48G/T46U/T46S/T46G/T43U/T42U/T42G/T42S/T40G/T33G/T31G/T29G/T27G/T23G phones)	
<b>Default</b>	0	
<b>Web UI</b>	Network > Advanced > Port Link > WAN Port Link	
<b>Parameter</b>	static.network.pc_port.speed_duplex	<y0000000000xx>.cfg
<b>Description</b>	It configures the network speed over Ethernet of the PC port. <b>Note:</b> It works only if “static.network.pc_port.enable” is set to 1 (Auto Negotiation). For T57W/T54W/T53W/T53/T53C/T48U/T48S/T48G/T46U/T46S/T46G/T43U/T42U/T42G/T42S/T40G/T33G/T31G/T29G/T27G/T23G phones, you can set the transmission speed to 1000Mbps/ Auto Negotiation to transmit in 1000Mbps if the phone is connected to the switch supports Gigabit Ethernet. We recommend that you do not change this parameter.	
<b>Permitted Values</b>	<b>0</b> -Auto Negotiation <b>1</b> -Full Duplex 10Mbps <b>2</b> -Full Duplex 100Mbps <b>3</b> -Half Duplex 10Mbps <b>4</b> -Half Duplex 100Mbps <b>5</b> -Full Duplex 1000Mbps (only applicable to T57W/T54W/T53W/T53/T53C/T48U/T48S/T48G/T46U/T46S/T46G/T43U/T42U/T42G/T42S/T40G/T33G/T31G/T29G/T27G/T23G)	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except CP920/CP925	
<b>Web UI</b>	Network > Advanced > Port Link > PC Port Link	
<b>Parameter</b>	static.network.vlan.pc_port_mode	<y0000000000xx>.cfg
<b>Description</b>	It configures how the phone processes packets for the PC port when VLAN is enabled on the PC port.	
<b>Permitted Values</b>	<b>0</b> -The phone forwards the packets sent from the PC port to the Internet port directly. <b>1</b> -If there are no VLAN tags in the packets sent from the PC port to the Internet port, the phone tags the packets and then forward them; else, the phone forwards the packets directly.	
<b>Default</b>	1	
<b>Supported Devices</b>	All phones except CP920/CP925	
<b>Parameter</b>	static.network.pc_port.mode	<y0000000000xx>.cfg
<b>Description</b>	It configures the PC port mode.	
<b>Permitted Values</b>	<b>0</b> -The phone can only share the wired network with the connected PC, not the wireless network. <b>1</b> -The phone can share both the wired network and wireless network with the connected PC.	

<b>Default</b>	0
<b>Supported Devices</b>	T57W, T54W, T53W
<b>Case Scenario</b>	When the phone is connected to the wireless network, the office's PC can obtain the network through the phone's PC port.

## VPN

Yealink phones use OpenVPN or L2TP (not available on T3 phones) to achieve VPN feature.

For more information on OpenVPN, refer to [OpenVPN Feature on Yealink phones](#).

### Topics

[OpenVPN Related Files](#)

[VPN Configuration](#)

[Example: Using VPN based on L2TP Protocol](#)

[Exporting the OpenVPN Configuration File from the Phone](#)

[Importing the OpenVPN Configuration File to Phone](#)

## OpenVPN Related Files

To use OpenVPN, you should collect the VPN-related files into one archive file in .tar format and then upload this tar file. The VPN-related files include certificates (ca.crt and client.crt), key (client.key) and the configuration file (vpn.cnf) of the VPN client.

The following table lists the name of the OpenVPN certificates and key in the configuration file (vpn.cnf) for Yealink phones:

VPN Files	Description
ca.crt	CA certificate
client.crt	Client certificate
client.key	Private key of the client

## VPN Configuration

The following table lists the parameters you can use to configure the VPN.

<b>Parameter</b>	static.network.vpn_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the VPN feature.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Network > Advanced > VPN > Active	
<b>Phone UI</b>	Color Screen Phones: Menu > Advanced (default password: admin) > Network > VPN > VPN Active CP925/CP935W: More > Advanced (default password: admin) > Network > VPN > VPN Active	

	Black-and-white Screen Phones: Menu > Settings > Advanced Settings (default password: admin) > Network > VPN > VPN Active	
<b>Parameter</b>	static.openvpn.url	<y0000000000xx>.cfg
<b>Description</b>	It configures the access URL of the *.tar file for OpenVPN. <b>Note:</b> It works only if "static.network.vpn.mode" is set to 1 (OpenVPN).	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Network > Advanced > VPN > OpenVPN > Upload VPN Config	
<b>Parameter</b>	static.network.openvpn_file.url	<y0000000000xx>.cfg
<b>Description</b>	It configures the URL for uploading the OpenVPN configuration file (vpn.cnf). <b>Note:</b> It works only if "static.network.vpn.mode" is set to 1 (OpenVPN).	
<b>Permitted Values</b>	String within 512 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T48S, T46S, T42S, T41S, T33P, T33G, T31P, T31G, T31, T30P, T30, T27G, CP920, CP925, CP935W	
<b>Web UI</b>	Network > Advanced > VPN > OpenVPN > Import VPN Configuration File	
<b>Parameter</b>	static.network.vpn.mode	<y0000000000xx>.cfg
<b>Description</b>	It configures the VPN type.	
<b>Permitted Values</b>	0-L2TP 1-OpenVPN	
<b>Default</b>	1	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T48S, T46S, T42S, T41S, T27G, CP920, CP925, CP935W	
<b>Web UI</b>	Network > Advanced > VPN > Mode	
<b>Parameter</b>	static.network.l2tp_server.address	<y0000000000xx>.cfg
<b>Description</b>	It configures the L2TP server address. <b>Note:</b> It works only if "static.network.vpn.mode" is set to 0 (L2TP).	
<b>Permitted Values</b>	String within 512 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T48S, T46S, T42S, T41S, T27G, CP920, CP925, CP935W	
<b>Web UI</b>	Network > Advanced > VPN > Layer 2 Tunneling Protocol(L2TP) > L2TP Server Address	
<b>Parameter</b>	static.network.l2tp_server.username	<y0000000000xx>.cfg
<b>Description</b>	It configures the user name of the L2TP server. <b>Note:</b> It works only if "static.network.vpn.mode" is set to 0 (L2TP).	
<b>Permitted Values</b>	String within 512 characters	



<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T48S, T46S, T42S, T41S, T27G, CP920, CP925, CP935W	
<b>Web UI</b>	Network > Advanced > VPN > Layer 2 Tunneling Protocol(L2TP) > Authentication Name	
<b>Parameter</b>	static.network.l2tp_server.password	<y0000000000xx>.cfg
<b>Description</b>	It configures the password of the L2TP server. <b>Note:</b> It works only if "static.network.vpn.mode" is set to 0 (L2TP).	
<b>Permitted Values</b>	String within 512 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T48S, T46S, T42S, T41S, T27G, CP920, CP925, CP935W	
<b>Web UI</b>	Network > Advanced > VPN > Layer 2 Tunneling Protocol(L2TP) > Authentication Password	

## Example: Using VPN based on L2TP Protocol

### Before you begin

You have set up the L2TP VPN server.

### Procedure

1. Set the following parameters in the configuration file and perform an auto provisioning.

**#Set the VPN type to L2TP.**

```
static.network.vpn.mode = 0
```

**#Configure the address, user name, and password of the L2TP server.**

```
static.network.l2tp_server.address = 192.168.10.25
```

```
static.network.l2tp_server.username = vpnuser
```

```
static.network.l2tp_server.password = 0123456
```

2. After provisioning, connect the phone to the VPN environment.

## Exporting the OpenVPN Configuration File from the Phone

You can export the OpenVPN configuration file via web user interface.

### Procedure

1. From the web user interface, click **Network > Advanced > VPN**.
2. Turn on VPN feature.
3. In the **Export VPN Configuration File** field, click **Export** to open the file download window, and then save the file to your local system.

## Importing the OpenVPN Configuration File to Phone

You can import the OpenVPN configuration file from local to the phones via the web user interface. The changes in the configuration file will take effect after the file is imported.

### Procedure

1. From the web user interface, click **Network > Advanced > VPN**.
2. Turn on VPN feature.

3. In the **Import VPN Configuration File** field, click **Browse** to locate a OpenVPN configuration file in your local system.
4. Click **Upload** to import the configuration file.

## Quality of Service (QoS)

VoIP is extremely bandwidth and delay-sensitive. QoS is a major issue in VoIP implementations, regarding how to guarantee that packet traffic is not delayed or dropped due to interference from other lower priority traffic. VoIP can guarantee high-quality QoS only if the voice and the SIP packets are given priority over other kinds of network traffic. The phones support the DiffServ model of QoS.

### Voice QoS

In order to make VoIP transmissions intelligible to receivers, voice packets should not be dropped, excessively delayed, or made to suffer varying delay. DiffServ model can guarantee high-quality voice transmission when the voice packets are configured to a higher DSCP value.

### SIP QoS

The SIP protocol is used for creating, modifying, and terminating two-party or multi-party sessions. To ensure good voice quality, SIP packets emanated from the phones should be configured with a high transmission priority.

DSCPs for voice and SIP packets can be specified respectively.

**Note:** For voice and SIP packets, the phone obtains DSCP info from the network policy if LLDP feature is enabled, which takes precedence over manual settings. For more information on LLDP, refer to [LLDP Configuration](#).

### Topic

[Voice and SIP QoS Configuration](#)

## Voice and SIP QoS Configuration

The following table lists the parameters you can use to configure voice QoS and SIP QoS.

<b>Parameter</b>	static.network.qos.audiotos	<y0000000000xx>.cfg
<b>Description</b>	It configures the DSCP (Differentiated Services Code Point) for voice packets. The default DSCP value for RTP packets is 46 (Expedited Forwarding).	
<b>Permitted Values</b>	Integer from 0 to 63	
<b>Default</b>	46	
<b>Web UI</b>	<a href="#">T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/CP925/CP935W:</a> Network > Advanced > QoS > Voice QoS/Audio QoS (0~63) (0~63) <u>Other Phones:</u> Network > Advanced > Voice QoS > Voice QoS (0~63)	
<b>Parameter</b>	static.network.qos.signaltos	<y0000000000xx>.cfg
<b>Description</b>	It configures the DSCP (Differentiated Services Code Point) for SIP packets. The default DSCP value for SIP packets is 26 (Assured Forwarding).	
<b>Permitted Values</b>	Integer from 0 to 63	
<b>Default</b>	26	
<b>Web UI</b>	<a href="#">T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/CP925/CP935W:</a> Network > Advanced > QoS > SIP QoS (0~63)	

	<p><u>Other Phones:</u>                  Network &gt; Advanced &gt; Voice QoS &gt; SIP QoS (0~63)</p>
--	---

## 802.1x Authentication

Yealink phones support the following protocols for 802.1x authentication:

- EAP-MD5
- EAP-TLS (requires Device and CA certificates, requires no password)
- EAP-PEAP/MSCHAPv2 (requires CA certificates)
- EAP-TTLS/EAP-MSCHAPv2 (requires CA certificates)
- EAP-PEAP/GTC (requires CA certificates)
- EAP-TTLS/EAP-GTC (requires CA certificates)
- EAP-FAST (supports EAP In-Band provisioning, requires CA certificates if the provisioning method is Authenticated Provisioning)

For more information on 802.1x authentication, refer to [Yealink 802.1X Authentication](#).

### Topic

[802.1x Authentication Configuration](#)

## 802.1x Authentication Configuration

The following table lists the parameters you can use to configure 802.1x authentication.

<b>Parameter</b>	static.network.802_1x.mode	<y0000000000xx>.cfg
<b>Description</b>	It configures the 802.1x authentication method.	
<b>Permitted Values</b>	0-EAP-None, no authentication 1-EAP-MD5 2-EAP-TLS 3-EAP-PEAP/MSCHAPv2 (EAP-MSCHAPv2) 4-EAP-TTLS/EAP-MSCHAPv2 5-EAP-PEAP/GTC 6-EAP-TTLS/EAP-GTC 7-EAP-FAST	
<b>Default</b>	0	
<b>Web UI</b>	Network > Advanced > 802.1x > 802.1x Mode	
<b>Phone UI</b>	<p><u>Color Screen Phones:</u>                  Menu &gt; Advanced (default password: admin) &gt; Network &gt; 802.1x &gt; 802.1x Mode</p> <p><u>CP925:</u>                  More &gt; Advanced (default password: admin) &gt; Network &gt; 802.1x &gt; 802.1x Mode</p> <p><u>Black-and-white Screen Phones:</u>                  Menu &gt; Settings &gt; Advanced Settings (default password: admin) &gt; Network &gt; 802.1x &gt; 802.1x Mode</p>	
<b>Parameter</b>	static.network.802_1x.eap_fast_provision_mode	<y0000000000xx>.cfg
<b>Description</b>	It configures the EAP In-Band provisioning method for EAP-FAST.	

	<b>Note:</b> It works only if "static.network.802_1x.mode" is set to 7 (EAP-FAST).	
<b>Permitted Values</b>	0-Unauthenticated Provisioning, EAP In-Band provisioning is enabled by server unauthenticated PAC (Protected Access Credential) provisioning using the anonymous Diffie-Hellman key exchange. 1-Authenticated Provisioning, EAP In-Band provisioning is enabled by server authenticated PAC provisioning using certificate-based server authentication.	
<b>Default</b>	0	
<b>Web UI</b>	Network > Advanced > 802.1x > Provisioning Mode	
<b>Parameter</b>	static.network.802_1x.anonymous_identity	<y0000000000xx>.cfg
<b>Description</b>	It configures the anonymous identity (user name) for 802.1X authentication. It is used for constructing a secure tunnel for 802.1X authentication. <b>Note:</b> It works only if "static.network.802_1x.mode" is set to 2, 3, 4, 5, 6 or 7.	
<b>Permitted Values</b>	String within 512 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Network > Advanced > 802.1x > Anonymous Identity	
<b>Parameter</b>	static.network.802_1x.identity	<y0000000000xx>.cfg
<b>Description</b>	It configures the identity (user name) for 802.1x authentication.	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Network > Advanced > 802.1x > Identity	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Advanced (default password: admin) > Network > 802.1x > Identity <u>CP925:</u> More > Advanced (default password: admin) > Network > 802.1x > Identity <u>Black-and-white Screen Phones:</u> Menu > Settings > Advanced Settings (default password: admin) > Network > 802.1x > Identity	
<b>Parameter</b>	static.network.802_1x.md5_password	<y0000000000xx>.cfg
<b>Description</b>	It configures the password for 802.1x authentication. <b>Note:</b> It is required for all methods except EAP-TLS.	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Network > Advanced > 802.1x > MD5 Password	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Advanced (default password: admin) > Network > 802.1x > MD5 Password <u>CP925:</u> More > Advanced (default password: admin) > Network > 802.1x > MD5 Password <u>Black-and-white Screen Phones:</u>	

	Menu > Settings > Advanced Settings (default password: admin) > Network > 802.1x > MD5 Password	
<b>Parameter</b>	static.network.802_1x.root_cert_url	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the URL for uploading the 802.1x CA certificate.</p> <p>The format of the certificate must be *.pem, *.crt, *.cer or *.der.</p> <p><b>Note:</b> It works only if "static.network.802_1x.mode" is set to 2, 3, 4, 5, 6 or 7. If the authentication method is EAP-FAST, you also need to set "static.network.802_1x.eap_fast_provision_mode" to 1 (Authenticated Provisioning).</p>	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Network > Advanced > 802.1x > CA Certificates	
<b>Parameter</b>	static.network.802_1x.client_cert_url	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the URL for uploading the 802.1x client certificate.</p> <p>The format of the certificate must be *.pem.</p> <p><b>Note:</b> It works only if "static.network.802_1x.mode" is set to 2 (EAP-TLS).</p>	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Network > Advanced > 802.1x > Device Certificates	
<b>Parameter</b>	static.network.802_1x.proxy_eap_logoff.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the 802.1x-logoff feature for the PC port.	
<b>Permitted Values</b>	<p>0-Disabled</p> <p>1-Enabled, the 802.1x logoff message is sent to the authenticator when the PC is disconnected.</p>	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except CP920/CP925/CP935W	

## TR-069 Device Management

TR-069 is a technical specification defined by the Broadband Forum, which defines a mechanism that encompasses secure auto-configuration of a CPE (Customer-Premises Equipment), and incorporates other CPE management functions into a common framework. TR-069 uses common transport mechanisms (HTTP and HTTPS) for communication between CPE and ACS (Auto Configuration Servers). The HTTP(S) messages contain XML-RPC methods defined in the standard for configuration and management of the CPE.

### Topics

[Supported RPC Methods](#)  
[TR-069 Configuration](#)

## Supported RPC Methods

The following table provides a description of RPC methods supported by the phones.

RPC Method	Description
GetRPCMethods	This method is used to discover the set of methods supported by the CPE.
SetParameterValues	This method is used to modify the value of one or more CPE parameters.
GetParameterValues	This method is used to obtain the value of one or more CPE parameters.
GetParameterNames	This method is used to discover the parameters accessible on a particular CPE.
GetParameterAttributes	This method is used to read the attributes associated with one or more CPE parameters.
SetParameterAttributes	This method is used to modify attributes associated with one or more CPE parameters.
Reboot	This method causes the CPE to reboot.
Download	This method is used to cause the CPE to download a specified file from the designated location. File types supported by the phones are: <ul style="list-style-type: none"> <li>• Firmware Image</li> <li>• Configuration File</li> </ul>
Upload	This method is used to cause the CPE to upload a specified file to the designated location. File types supported by the phones are: <ul style="list-style-type: none"> <li>• Configuration File</li> <li>• Log File</li> </ul>
ScheduleInform	This method is used to request the CPE to schedule a one-time Inform method call (separate from its periodic Inform method calls) sometime in the future.
FactoryReset	This method resets the CPE to its factory default state.
TransferComplete	This method informs the ACS of the completion (either successful or unsuccessful) of a file transfer initiated by an earlier Download or Upload method call.
AddObject	This method is used to add a new instance of an object defined on the CPE.
DeleteObject	This method is used to remove a particular instance of an object.

## TR-069 Configuration

The following table lists the parameters you can use to configure TR-069.

<b>Parameter</b>	static.managementserver.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the TR-069 feature.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Settings > TR069 > Enable TR069	
<b>Parameter</b>	static.managementserver.username	<y0000000000xx>.cfg
<b>Description</b>	It configures the TR-069 ACS server user name used to authenticate the phone. Leave it blank if no authentication is required.	
<b>Permitted Values</b>	String within 128 characters	

<b>Default</b>	Blank	
<b>Web UI</b>	Settings > TR069 > ACS Username	
<b>Parameter</b>	static.managementserver.password	<y0000000000xx>.cfg
<b>Description</b>	It configures the TR-069 ACS server password used to authenticate the phone. Leave it blank if no authentication is required.	
<b>Permitted Values</b>	String within 64 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Settings > TR069 > ACS Password	
<b>Parameter</b>	static.managementserver.url	<y0000000000xx>.cfg
<b>Description</b>	It configures the access URL of the TR-069 ACS server. <b>Note:</b> The phones also support obtaining the URL of the ACS by detecting DHCP option 43 or DHCPv6 option 17. In a Dual-Stack mode, the value obtained from DHCPv6 option 17 has a higher priority than that obtained from DHCP option 43.	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Settings > TR069 > ACS URL	
<b>Parameter</b>	static.managementserver.connection_request_username	<y0000000000xx>.cfg
<b>Description</b>	It configures the user name used to authenticate the connection requests from the ACS server.	
<b>Permitted Values</b>	String within 128 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Settings > TR069 > Connection Request Username	
<b>Parameter</b>	static.managementserver.connection_request_password	<y0000000000xx>.cfg
<b>Description</b>	It configures the password used to authenticate the connection requests from the ACS server.	
<b>Permitted Values</b>	String within 64 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Settings > TR069 > Connection Request Password	
<b>Parameter</b>	static.managementserver.periodic_inform_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to periodically report its configuration information to the ACS server.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Web UI</b>	Settings > TR069 > Enable Periodic Inform	
<b>Parameter</b>	static.managementserver.periodic_inform_interval	<y0000000000xx>.cfg
<b>Description</b>	It configures the interval (in seconds) at which the phone reports its configuration to the ACS server.	

---

	<b>Note:</b> It works only if "static.managementserver.periodic_inform_enable" is set to 1 (Enabled).
<b>Permitted Values</b>	Integer from 5 to 4294967295
<b>Default</b>	60
<b>Web UI</b>	Settings > TR069 > Periodic Inform Interval (seconds)



# Phone Provisioning

You can provision multiple phones with the same settings for large-scale deployments.

For more information, refer to [Yealink SIP IP Phones Auto Provisioning Guide](#).

## Topics

[Boot Files, Configuration Files, and Resource Files](#)  
[Provisioning Methods](#)  
[Setting Up a Provisioning Server](#)  
[Keeping User's Personalized Settings after Auto Provisioning](#)  
[Example: Deploying Phones from the Provisioning Server](#)

## Boot Files, Configuration Files, and Resource Files

You can use boot files, configuration files, and resource files to configure phone features and apply feature settings to phones. You can create or edit these files using a text editor such as Notepad++.

You can ask the distributor or Yealink FAE for template files. You can also obtain the template files online: <http://support.yealink.com/documentFront/forwardToDocumentFrontDisplayPage>.

## Topics

[Boot Files](#)  
[Configuration Files](#)  
[Resource Files](#)  
[Files Download Process](#)

## Boot Files

Yealink phones support boot files. The boot files maximize the flexibility to allow you to customize features and settings for multiple phones.

With the boot file, you can specify which configuration files should be downloaded. It is effective for you to provision the phones in different deployment scenarios:

- For all phones
- For a group of phones
- For specific phone models
- For a single phone

Yealink phones support two types of boot files: common boot file and MAC-Oriented boot file. You can use the default boot template file "y000000000000.boot" to create MAC-Oriented boot file by making a copy and renaming it.

**Note:** You can select whether to use the boot file or not according to your deployment scenario. If you do not want to use the boot file, please go to [Configuration Files](#).

## Topics

[Common Boot File](#)  
[MAC-Oriented Boot File](#)  
[Boot File Attributes](#)  
[Customizing a Boot File](#)

## Common Boot File

Common boot file, named y000000000000.boot, is effective for all phones. You can use a common boot file to apply common feature settings to all of the phones rather than a single phone.

## MAC-Oriented Boot File

MAC-Oriented boot file, named <MAC>.boot. It will only be effective for a specific IP phone. In this way, you have high permission to control each phone by making changes on a per-phone basis.

You can create a MAC-Oriented boot file for each phone by making a copy and renaming the boot template file (y000000000000.boot). For example, if your phone MAC address is 00156574B150, rename the template file as 00156574b150.boot (lowercase).

**Tip:** MAC address, a unique 12-digit serial number is assigned to each phone. You can obtain it from the bar code on the back of the phone.

## Boot File Attributes

The following table lists the attributes you need to know in the boot template file.

Attributes	Description
#!version:1.0.0.1	It must be placed in the first line. Do not edit and delete.
include:config <xxx.cfg> include:config "xxx.cfg"	Each "include" statement can specify a location of a configuration file. The configuration file format must be *.cfg.  The locations in the angle brackets or double quotation marks support two forms: <ul style="list-style-type: none"> <li>Relative path (relative to the boot file): For example, sip.cfg, HTTP Directory/sip.cfg</li> <li>Absolute path (or URL): For example, http://10.2.5.258/HTTP Directory/sip.cfg</li> </ul> The location must point to a specific CFG file.
[\$MODEL]	The [\$MODEL] can be added to specify settings for specific phone models. \$MODEL represents the phone model name.  The valid phone model names are T57W, T54W, T53W, T53, T53C, T48U, T48S, T48G, T46U, T46S, T46G, T43U, T42U, T42S, T42G, T41P, T41S, T40P, T40G, T33P, T33G, T31P, T31G, T31, T30P, T30, T29G, T27G, T23P, T23G, T21P_E2, T19P_E2, CP920, CP925, CP935W.  Multiple phone models are separated by commas. For example, [T46S, T23G].  <b>Note:</b> The phone model name T21P_E2 is applicable to T21P E2 and T21 E2 phones.
overwrite_mode	Enable or disable the overwrite mode.  <b>1</b> -(Enabled) - If the value of a parameter in configuration files is left blank, or if a non-static parameter in configuration files is deleted or commented out, the factory default value takes effect.  <b>0</b> -(Disabled) - If the value of a parameter in configuration files is left blank, deleted or commented out, the pre-configured value is kept.  <b>Note:</b> Overwrite mode can only be used in boot files. If a boot file is used but "overwrite_mode" is not configured, the overwrite mode is enabled by default.
static.specific_model.excluded_mode	Enable or disable the exclude mode. The exclude mode applies to the configuration files specified in the boot file.  <b>0</b> -Disabled (Append Mode), the phone downloads its own model-specific configuration files and downloads other model-unspecified configuration files.  <b>1</b> -Enabled (Exclude Mode), the phone attempts to download its own model-specific configuration files; if there are no own model-specific configuration files

Attributes	Description
	<p>found on the server, it downloads model-unspecified configuration files.</p> <p><b>Note:</b> Exclude mode can only be used in boot files. If a boot file is used but “static.specific_model.excluded_mode” is not configured, the exclude mode is disabled by default.</p>

**Tip:** The line beginning with “#” is considered to be a comment. You can use “#” to make any comment on the boot file.

## Customizing a Boot File

### Procedure

1. Open a boot template file.
2. To add a configuration file, add `include:config < >` or `include:config ""` to the file. Each starts on a separate line.
3. Specify a configuration file for downloading.  
For example:  

```
include:config <configure/sip.cfg >
include:config "http://10.2.5.206/configure/account.cfg"
include:config "http://10.2.5.206/configure/dialplan.cfg"
```
4. To specify configuration files for specific phone models, add specific phone models in front of `include:config < >` or `include:config ""`. Multiple phone model names are separated by commas.  
For example:  

```
[T46S, T48S]include:config <configure/sip.cfg>
[T23G]include:config "http://10.2.5.206/configure/account.cfg"
## file sip.cfg only applies to T46S and T48S phones, file account.cfg only applies to T23G phones
```
5. Specify the overwrite mode and exclude mode.  
For example:  

```
overwrite_mode = 1
static.specific_model.excluded_mode = 1
```
6. Save the boot file and place it on the provisioning server.

### Related Topic

[Boot File Attributes](#)

## Configuration Files

Yealink supports two configuration template files: Common CFG file and MAC-Oriented CFG file.

These configuration files contain two kinds of parameters:

- Static: The parameters start with a prefix “static.”, for example, `static.auto_provision.custom.protect`.
- Non-static: The parameters do not start with a prefix “static.”, for example, `local_time.date_format`.

You can deploy and maintain a mass of Yealink phones automatically through configuration files stored in a provisioning server.

**Note:** For protecting against unauthorized access, you can encrypt configuration files. For more information on encrypting configuration files, refer to [Encrypting and Decrypting Files](#).

### Topics

[Common CFG File](#)

[MAC-Oriented CFG File](#)

[MAC-local CFG File](#)

[Configuration File Customization](#)

## Configuration File Attributes

## Common CFG File

Common CFG file, named <y0000000000xx>.cfg, contains parameters that affect the basic operation of the IP phone, such as language and volume. It will be effective for all phones in the same model. The common CFG file has a fixed name for each phone model.

The following table lists the name of the common CFG file for each phone model:

Phone Model	Common CFG file
T57W	y000000000097.cfg
T54W	y000000000096.cfg
T53W/T53/T53C	y000000000095.cfg
T48U	y000000000109.cfg
T48G	y000000000035.cfg
T48S	y000000000065.cfg
T46U	y000000000108.cfg
T46G	y000000000028.cfg
T46S	y000000000066.cfg
T43U	y000000000107.cfg
T42G	y000000000029.cfg
T42S	y000000000067.cfg
T42U	y000000000116.cfg
T41P	y000000000036.cfg
T41S	y000000000068.cfg
T40P	y000000000054.cfg
T40G	y000000000076.cfg
T33P/T33G	y000000000124.cfg
T31P/T31G/T31	y000000000123.cfg
T30P/T30	y000000000127.cfg
T29G	y000000000046.cfg
T27G	y000000000069.cfg
T23P/G	y000000000044.cfg
T21(P) E2	y000000000052.cfg
T19(P) E2	y000000000053.cfg
CP920	y000000000078.cfg
CP925	y000000000148.cfg

Phone Model	Common CFG file
CP935W	y000000000149.cfg

## MAC-Oriented CFG File

MAC-Oriented CFG file, which is named after the MAC address of the IP phone. For example, if the MAC address of an IP phone is 00156574B150, the name of MAC-Oriented CFG file is 00156574b150.cfg (lowercase). It contains parameters unique to a particular phone, such as account registration. It will only be effective for a MAC-specific IP phone.

## MAC-local CFG File

MAC-local CFG file, which is named after the MAC address of the IP phone. For example, if the MAC address of an IP phone is 00156574B150, the name of the MAC-local CFG file is 00156574b150-local.cfg (lowercase). It contains changes associated with a non-static parameter that you make via the web user interface or phone user interface (for example, changes for time and date formats, ring tones, and DSS keys).

This file generates only if you enable the provisioning priority mechanism. It is stored locally on the IP phone and you can upload it to the provisioning server each time the file updates. This file enables the users to keep their personalized configuration settings, even though the IP phone performs auto provisioning.

This file supports the overwrite mode. That is, you can clear the user's personalized configurations settings by deleting a parameter or leaving the value of a parameter blank in the MAC-local CFG file on the server. Note that if there is no MAC-local CFG file found on the server, the MAC-local CFG file on the phone will not be cleared.

**Note:** The non-static changes that you made before enabling the provisioning priority mechanism are not saved in the generated MAC-local file, but the previous settings still take effect on the phone. The static changes are never be saved to the <MAC>-local.cfg file.

The provisioning priority mechanism is enabled by the parameter "static.auto\_provision.custom.protect".

## Configuration File Customization

You can create some new CFG files by making a copy and renaming the configuration template file (for example, sip.cfg, account.cfg). You can rearrange the parameters in the configuration template file and create your own configuration files with parameters you want. This flexibility is especially useful when you want to apply specific settings to a group of phones.

### Topic

#### [Customizing a Configuration File](#)

### Customizing a Configuration File

1. Copy and rename a configuration template file. For example, sip.cfg.
2. Rearrange the parameters in the sip.cfg, and set the valid values for them.

For example:

```
phone_setting.contrast = 7
local_time.time_format = 1
account.1.anonymous_call = 1
account.2.dnd.enable = 1
features.dnd.enable = 0
```

3. To specify parameters for specific phone models, add specific phone models in the front of the corresponding parameters. Multiple phone model names are separated by commas.

For example:

```
[T46S,T48S]voice_mail.number.1 = *5
[T27G]account.1.dnd.enable = 1
[T46S]account.2.dnd.enable = 1
[T48S]features.dnd.enable = 0
```

## These parameters only apply to their own specific phone models.

4. Save the configuration file and place it on the provisioning server.

**Related Topic**

[Configuration File Attributes](#)

**Configuration File Attributes**

The following table lists the attributes you need to know in the configuration template file.

Attributes	Description
#lversion:1.0.0.1	It must be placed in the first line. Do not edit and delete.
Configuration Parameter=Valid Value  (for example, account.1.dnd.enable = 1)	Specify the parameters and values to apply specific settings to the phones. <ul style="list-style-type: none"> <li>• Separate each configuration parameter and value with an equal sign</li> <li>• Set only one configuration parameter per line</li> <li>• Put the configuration parameter and value on the same line and do not break the line</li> </ul>
[\$MODEL]	The [\$MODEL] can be added in front of the configuration parameter to specify the value for specific phone models. \$MODEL represents the phone model.  The valid phone model names are T57W, T54W, T53W, T53, T53C, T48U, T48S, T48G, T46U, T46S, T46G, T43U, T42U, T42S, T42G, T41P, T41S, T40P, T40G, T33P, T33G, T31P, T31G, T31, T30P, T30, T29G, T27G, T23P, T23G, T21P_E2, T19P_E2, CP920, CP925, CP935W.  Multiple phone models are separated by commas. For example, [T46S, T23G].  <b>Note:</b> The phone updates model-specific configurations and those model-unspecified configurations. The phone model name T21P_E2 is applicable to T21P E2 and T21 E2 phones.

**Tip:** The line beginning with “#” is considered to be a comment. You can use “#” to make any comment on the configuration file.

**Resource Files**

Resource files are optional, but if the particular feature is being employed, these files are required. You need to place resource files on the provisioning server. The phones request the resource files in addition to the configuration files during auto provisioning.

**Tip:** If you want to specify the desired phone to use the resource file, the access URL of the resource file should be specified in the MAC-Oriented CFG file. During auto provisioning, the phones will request the resource files in addition to the configuration files.

**Topic**

[Supported Resource Files](#)

**Supported Resource Files**

Yealink supplies some template of resource files for you, so you can directly edit the files as required.


The following table lists the resource files Yealink supplies:

Template File	File Name	Description	Reference in Section
AutoDST Template	AutoDST.xml	Add or modify time zone and DST settings.	<a href="#">DST Settings</a>
Language Packs	For example,	Customize the translation of the existing lan-	<a href="#">Language for Phone</a>

Template File	File Name	Description	Reference in Section
	000.GUI.English.lang 1.English_note.xml 1.English.js	guage on the phone/web user interface.	<a href="#">Display Customization Language for Web</a> <a href="#">Display Customization</a>
Keypad Input Method File	ime.txt Russian_ime.txt Hebrew_ime.txt	Customize the existing input method.	<a href="#">Keypad Input Method File Customization</a>
Onscreen Keyboard Input Method File	keyboard_lang.xml keyboard_ime_*.xml keyboard_layout_*.xml	Customize the onscreen keyboard input method.	<a href="#">Onscreen Keyboard Input Method File Customization</a>
Replace Rule Template	DialPlan.xml	Customize replace rules for the dial plan.	<a href="#">Replace Rule File Customization</a>
Dial Now Template	DialNow.xml	Customize dial now rules for the dial plan.	<a href="#">Dial Now File Customization</a>
Softkey Layout Template	CallFailed.xml CallIn.xml Connecting.xml Dialing.xml RingBack.xml Talking.xml	Customize soft key layout for different call states.	<a href="#">Softkey Layout File Customization</a>
Directory Template	favorite_setting.xml	Customize the directory list.	<a href="#">Directory List File Customization</a>
Super Search Template	super_search.xml	Customize the search source list.	<a href="#">Search Source File Customization</a>
Local Contact File	contact.xml	Add or modify multiple local contacts.	<a href="#">Local Contact File Customization</a>
Remote Phone Book Template	Department.xml Menu.xml	Add or modify multiple remote contacts.	<a href="#">Remote Phone Book File Customization</a>
Screen Saver Template	CustomScreenSaver.xml	Customize the XML items (for example, notifications, company logo) which will be displayed on the screen saver.	<a href="#">Screensaver Display Customization</a>

## Files Download Process

When you provision the phones, the phones will request to download the boot files, configuration files and resource files from the provisioning server according to the following flowchart:

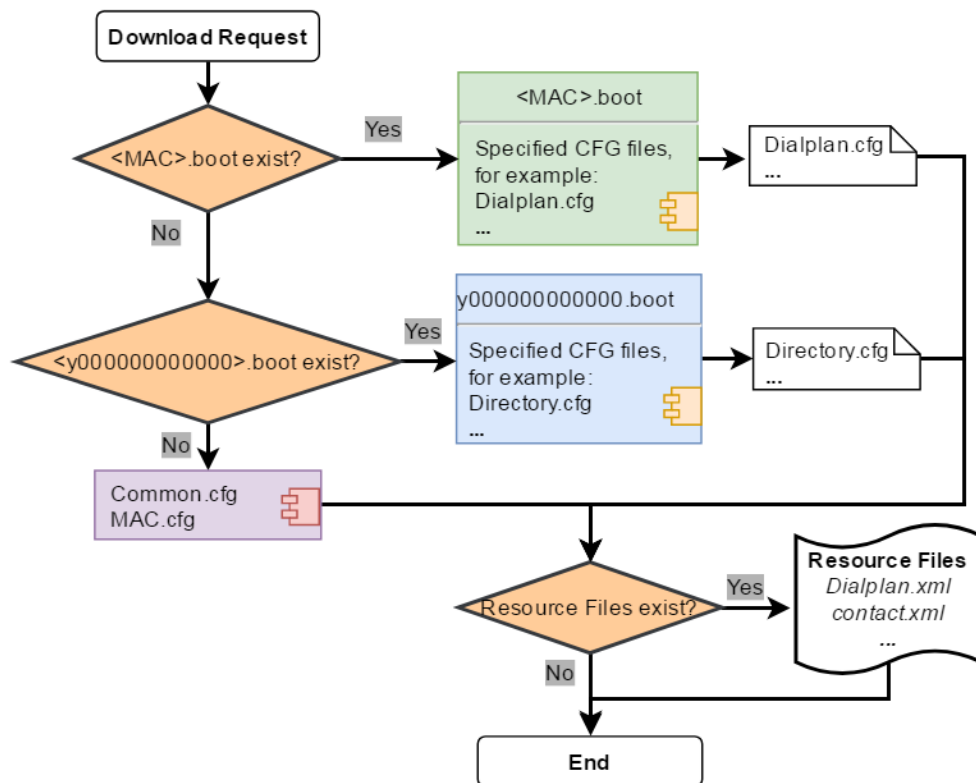

The parameters in the newly downloaded configuration files will override the same parameters in files downloaded earlier.

**Note:** For the phone running firmware version 82 or earlier, it downloads configuration files referenced in the boot file in sequence.

For the phone running firmware version 83 or later, “static.specific\_model.excluded\_mode” determines which configuration files referenced in the boot file to be downloaded.

## Provisioning Methods

Yealink provides two ways to provision your phones:

- Manual Provisioning: provisioning via the local phone user interface or web user interface.
- Central Provisioning: provisioning through configuration files stored in a central provisioning server.

The method you use depends on how many phones need to be deployed and what features and settings to be configured. Manual provisioning on the web or phone user interface does not contain all of the phone settings available with the centralized method. You can use the web user interface method in conjunction with a central provisioning method and phone user interface method. We recommend using centralized provisioning as your primary provisioning method when provisioning multiple phones.

### Topics

[Provisioning Methods Priority](#)

[Web User Interface](#)

[Phone User Interface](#)

[Central Provisioning](#)


[Viewing Configurations Configured via Different Provisioning Methods](#)



## Provisioning Methods Priority

There is a priority for configuration among the provisioning methods - settings you make using a higher priority provisioning method override settings made using a lower priority provisioning method.

The precedence order for configuration parameter changes is as follows (highest to lowest):

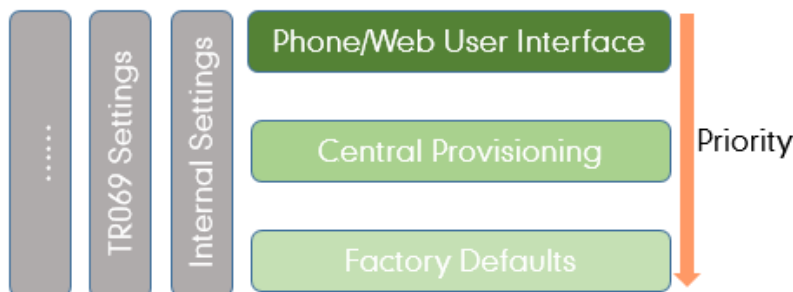

**Note:** The provisioning priority mechanism takes effect only if “static.auto\_provision.custom.protect” is set to 1. For more information on this parameter, refer to [Keeping User’s Personalized Settings Configuration](#).

Static parameters have no priority. They take effect no matter what method (web user interface or phone user interface or configuration files) you are using for provisioning.

Static parameters are the parameters that start with a prefix “static.”, for example, the parameters associated with auto provisioning/network/syslog, TR069 settings and internal settings (the temporary configurations to be used for program running).

## Web User Interface

You can configure the phones via the web user interface, a web-based interface that is especially useful for remote configuration.

Because features and configurations vary by phone models and firmware versions, options available on each page of the web user interface can vary as well. Note that the features configured via the web user interface are limited. Therefore, you can use the web user interface in conjunction with a central provisioning method and phone user interface.

When configuring the phones via the web user interface, you require a user name and password for access. For a user, the default user name and password are “user” (case-sensitive). For an administrator, the default user name and password are “admin” (case-sensitive).

**Note:** When you manually configure a phone via the web user interface or phone user interface, the changes associated with non-static parameters you make will be stored in the MAC-local CFG file. For more information on the MAC-local CFG file, refer to [MAC-local CFG File](#).

### Topics

[Accessing the Web User Interface](#)  
[Quick Login Configuration](#)  
[Web Server Type Configuration](#)  
[Web Access Time Limit Configuration](#)  
[goingthe Web User Interface](#)

## Accessing the Web User Interface

### Procedure

1. Find the device IP address. Press the OK/  $\swarrow$  /  $\circ$  key when the phone is idle or go to **Menu (More) > Status** on the phone.
2. Enter the IP address in the address bar of a web browser on your PC.

For example, for IPv4: <http://192.168.0.10> or 192.168.0.10; for IPv6: [http://\[2005:1:1:1:215:65ff:fe64:6e0a\]](http://[2005:1:1:1:215:65ff:fe64:6e0a]) or [2005:1:1:1:215:65ff:fe64:6e0a].

3. Enter the user name and password.
4. Click **Login**.

**Related Topics**

[Web Server Type Configuration](#)  
[User and Administrator Identification](#)

**Quick Login Configuration**

You can access the web user interface quickly using the request URI. It will locate you in the **Status** web page after accessing the web user interface. It is helpful to quickly log into the web user interface without entering the user-name and password on the login page.

The request URI for T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/CP925/CP935W phones:

*<https://phoneIPAddress/api/auth/login?@username:password>*

**Example:** <https://192.168.0.10/api/auth/login?@admin:admin>

The request URI for other phones:

*<https://username:password@phoneIPAddress>*

**Example:** <https://admin:admin@192.168.0.10>

Yealink phones support domain name customization. You can use a custom domain name to access the web user interface.

**Note:** Accessing the web user interface by request URI may be restricted by the web explorer (for example, Internet Explorer).

For security purposes, we recommend that you use this feature in a secure network environment.

The following table lists the parameters you can use to configure quick login.

<b>Parameter</b>	wui.quick_login	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the quick login feature. <b>Note:</b> It works only if "static.wui.https_enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled, you can quickly log into the web user interface using a request URI (for example, <a href="https://IP/api/auth/login?@admin:admin">https://IP/api/auth/login?@admin:admin</a> ).	
<b>Default</b>	0	
<b>Parameter</b>	wui.secure_domain_list	<y0000000000xx>.cfg
<b>Description</b>	It configures the valid domain name to access the web user interface of the phone. Multiple domain names are separated by semicolons. <b>Example:</b> wui.secure_domain_list = test.abc.com You are only allowed to use test.abc.com or IP address to access the web user interface of the phone. <b>Note:</b> To use a domain name to access the web user interface of the phone, make sure your DNS server can resolve the domain name to the IP address of the phone.	
<b>Permitted Values</b>	String If it is left blank, you are only allowed to use the IP address to access the web user interface of the	

	phone. If it is set to “any”, you can use IP address or any domain name to access the web user interface of the phone.
<b>Default</b>	any

## Web Server Type Configuration

Yealink phones support both HTTP and HTTPS protocols for accessing the web user interface. You can configure the web server type. Web server type determines the access protocol of the web user interface. If you disable to access the web user interface using the HTTP/HTTPS protocol, both you and the user cannot access the web user interface.

The following table lists the parameters you can use to configure the web server type.

<b>Parameter</b>	static.wui.http_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables to access the web user interface of the phone over a non-secure tunnel (HTTP).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Web UI</b>	Network > Advanced > Web Server > HTTP	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Advanced (default password: admin) > Network > Web Server > HTTP Status <u>CP925/CP935W:</u> More > Advanced (default password: admin) > Network > Web Server > HTTP Status <u>Black-and-white Screen Phones:</u> Menu > Settings > Advanced Settings (default password: admin) > Network > Web Server > HTTP Status	
<b>Parameter</b>	static.network.port.http	<y0000000000xx>.cfg
<b>Description</b>	It configures the port used to access the web user interface of the phone over a non-secure tunnel (HTTP).	
<b>Permitted Values</b>	Integer from 1 to 65535	
<b>Default</b>	80	
<b>Web UI</b>	Network > Advanced > Web Server > HTTP Port (1~65535)	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Advanced (default password: admin) > Network > Web Server > HTTP Port <u>CP925/CP935W:</u> More > Advanced (default password: admin) > Network > Web Server > HTTP Port <u>Black-and-white Screen Phones:</u> Menu > Settings > Advanced Settings (default password: admin) > Network > Web Server > HTTP Port	
<b>Parameter</b>	static.wui.https_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables to access the web user interface of the phone over a secure tunnel (HTTPS).	

<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Web UI</b>	Network > Advanced > Web Server > HTTPS	
<b>Phone UI</b>	<p><u>Color Screen Phones:</u> Menu &gt; Advanced (default password: admin) &gt; Network &gt; Web Server &gt; HTTPS Status</p> <p><u>CP925/CP935W:</u> More &gt; Advanced (default password: admin) &gt; Network &gt; Web Server &gt; HTTPS Status</p> <p><u>Black-and-white Screen Phones:</u> Menu &gt; Settings &gt; Advanced Settings (default password: admin) &gt; Network &gt; Web Server &gt; HTTPS Status</p>	
<b>Parameter</b>	static.network.port.https	<y0000000000xx>.cfg
<b>Description</b>	It configures the port used to access the web user interface of the phone over a secure tunnel (HTTPS).	
<b>Permitted Values</b>	Integer from 1 to 65535	
<b>Default</b>	443	
<b>Web UI</b>	Network > Advanced > Web Server > HTTPS Port (1~65535)	
<b>Phone UI</b>	<p><u>Color Screen Phones:</u> Menu &gt; Advanced (default password: admin) &gt; Network &gt; Web Server &gt; HTTPS Port</p> <p><u>CP925/CP935W:</u> More &gt; Advanced (default password: admin) &gt; Network &gt; Web Server &gt; HTTPS Port</p> <p><u>Black-and-white Screen Phones:</u> Menu &gt; Settings &gt; Advanced Settings (default password: admin) &gt; Network &gt; Web Server &gt; HTTPS Port</p>	
<b>Parameter</b>	static.wui.default_https_enable	<y0000000000xx>.cfg
<b>Description</b>	<p>It enables or disables to access the web user interface of the phone over a secure tunnel (HTTPS) by default.</p> <p><b>Note:</b> It works only if "static.wui.https_enable" is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T48S, T46S, T42S, T41S, T33P, T33G, T31P, T31G, T31, T30P, T30, T27G, CP920, CP925, CP935W	

## Web Access Time Limit Configuration

The following table lists the parameters you can use to configure the web access time limit.

<b>Parameter</b>	wui.login_wait_time	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the allowable time (in minutes) before logging in to the web user interface.</p> <p><b>Example:</b></p>	

	<p>wui.login_wait_time = 3</p> <p>It means if you haven't logged into the web page after 3 minutes, the web page is disabled.</p> <p>If you want to access the web user interface again, do one of the following:</p> <ul style="list-style-type: none"> <li>• Configure "static.wui.https_enable = 1" via auto provisioning.</li> <li>• Enable <b>HTTPS/HTTPS Status</b> via phone user interface at the path: <b>Menu &gt; Advanced &gt; Network &gt; Advanced &gt; Web Server</b> or <b>Menu &gt; Settings &gt; Advanced Settings &gt; Network &gt; Advanced &gt; Web Server</b>.</li> </ul>	
<b>Permitted Values</b>	Integer from 0 to 120 (0 means no time limit)	
<b>Default</b>	15	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Phone UI</b>	<p><u>Color Screen Phones:</u></p> <p>Menu &gt; Advanced (default password: admin) &gt; Network &gt; Web Server &gt; Login Timer</p> <p><u>Black-and-white Screen Phones:</u></p> <p>Menu &gt; Settings &gt; Advanced Settings (default password: admin) &gt; Network &gt; Web Server &gt; Login Timer</p>	
<b>Parameter</b>	wui.stay_active_wait_time	<y000000000xx>.cfg
<b>Description</b>	<p>It configures the allowable time (in minutes) of no operation after logging in to the web user interface.</p> <p><b>Example:</b></p> <p>wui.stay_active_wait_time = 3</p> <p>It means if you log into the web page for 3 minutes and still do not perform any configuration operations, the web page is disabled.</p> <p>If you want to access the web user interface again, do one of the following:</p> <ul style="list-style-type: none"> <li>• Configure "static.wui.https_enable = 1" via auto provisioning.</li> <li>• Enable <b>HTTPS/HTTPS Status</b> via phone user interface at the path: <b>Menu &gt; Advanced &gt; Network &gt; Advanced &gt; Web Server</b> or <b>Menu &gt; Settings &gt; Advanced Settings &gt; Network &gt; Advanced &gt; Web Server</b>.</li> </ul>	
<b>Permitted Values</b>	Integer from 0 to 120 (0 means no time limit)	
<b>Default</b>	15	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Phone UI</b>	<p><u>Color Screen Phones:</u></p> <p>Menu &gt; Advanced (default password: admin) &gt; Network &gt; Web Server &gt; Activity Timer</p> <p><u>Black-and-white Screen Phones:</u></p> <p>Menu &gt; Settings &gt; Advanced Settings (default password: admin) &gt; Network &gt; Web Server &gt; Activity Timer</p>	
<b>Parameter</b>	wui.operate_wait_time	<y000000000xx>.cfg
<b>Description</b>	<p>It configures the maximum allowable operation time after logging in to the web user interface.</p> <p><b>Example:</b></p> <p>wui.operate_wait_time = 30</p>	

	<p>It means if you log into the web page and perform configuration operations for 30 minutes, regardless of whether you are operating or not, the web page will be forcibly disabled.</p> <p>If you want to access the web user interface again, do one of the following:</p> <ul style="list-style-type: none"> <li>• Configure "static.wui.https_enable = 1" via auto provisioning.</li> <li>• Enable <b>HTTPS/HTTPS Status</b> via phone user interface at the path: <b>Menu &gt; Advanced &gt; Network &gt; Advanced &gt; Web Server</b> or <b>Menu &gt; Settings &gt; Advanced Settings &gt; Network &gt; Advanced &gt; Web Server</b>.</li> </ul>
<b>Permitted Values</b>	Integer from 0 to 120 (0 means no time limit)
<b>Default</b>	30
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30
<b>Phone UI</b>	<p><u>Color Screen Phones:</u></p> <p>Menu &gt; Advanced (default password: admin) &gt; Network &gt; Web Server &gt; Max Timer</p> <p><u>Black-and-white Screen Phones:</u></p> <p>Menu &gt; Settings &gt; Advanced Settings (default password: admin) &gt; Network &gt; Web Server &gt; Max Timer</p>

## Navigating the Web User Interface

When you log into the web user interface successfully, the device status is displayed on the first page of the web user interface. You can click the navigation bar to customize or click **Log Out/Logout** to log out of the web user interface.

The following figure is an example when you go to **Settings > Preference**:

|

## Phone User Interface

The phone user interface makes configurations available to users and administrators; but the **Advanced/Advanced Settings** option is only available to administrators and requires an administrator password (default: admin).

You can configure the phones via the phone user interface on a per-phone basis.

**Note:** When you manually configure a phone via the phone user interface, the changes associated with non-static parameters you make will be stored in the MAC-local CFG file. For more information on MAC-local CFG file, refer to [MAC-local CFG File](#).


### Related Topic

[User and Administrator Identification](#)

## Central Provisioning

Central provisioning enables you to provision multiple phones from a provisioning server that you set up, and maintain a set of boot files, configuration files and resource files for all phones in the central provisioning server.

The following figure shows how the phone interoperates with provisioning server when you use the centralized provisioning method:

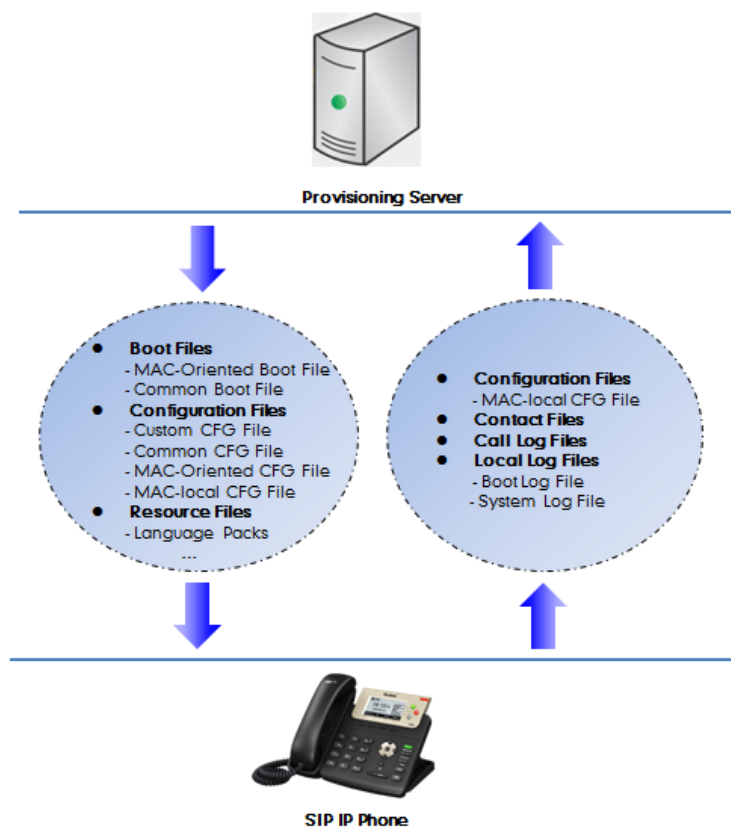

Yealink phones can obtain the provisioning server address during startup. Then the phones first download boot files and configuration files from the provisioning server and then resolve and update the configurations written in configuration files. This entire process is called auto provisioning. For more information on auto provisioning, refer to [Yealink SIP IP Phones Auto Provisioning Guide](#).

The phones can be configured to upload log files (log files provide a history of phone events), call log files and contact files to the provisioning server. You can also configure a directory for each of these three files respectively.

## Topics

- [Auto Provisioning Settings Configuration](#)
- [User-Triggered Provisioning Settings Configuration](#)
- [PIN Code Provisioning Settings Configuration](#)

## Auto Provisioning Settings Configuration

The following table lists the parameters you can use to configure settings for auto provisioning.

<b>Parameter</b>	static.auto_provision.attempt_expired_time	<y0000000000xx>.cfg
<b>Description</b>	It configures the timeout (in seconds) to transfer a file via auto provisioning. <b>Note:</b> It has a higher priority than the value defined by the parameter “static.network.attempt_expired_time”.	
<b>Permitted Values</b>	Integer from 1 to 300	
<b>Default</b>	20	
<b>Web UI</b>	Settings > Auto Provision > Attempt Expired Time(s)	
<b>Parameter</b>	static.network.attempt_expired_time <sup>[1]</sup>	<y0000000000xx>.cfg

<b>Description</b>	It configures the timeout (in seconds) to transfer a file for HTTP/HTTPS connection. <b>Note:</b> It has a lower priority than the value defined by the parameter "static.auto_provision.attempt_expired_time".	
<b>Permitted Values</b>	Integer from 1 to 20	
<b>Default</b>	10	
<b>Parameter</b>	static.auto_provision.attempt_before_failed	<y0000000000xx>.cfg
<b>Description</b>	It configures the maximum number of attempts to transfer a file before the transfer fails during auto provisioning.	
<b>Permitted Values</b>	Integer from 1 to 10	
<b>Default</b>	3	
<b>Parameter</b>	static.auto_provision.retry_delay_after_file_transfer_failed	<y0000000000xx>.cfg
<b>Description</b>	It configures the time (in seconds) to wait after a file transfer fails before retrying the transfer via auto provisioning.	
<b>Permitted Values</b>	Integer from 0 to 300	
<b>Default</b>	5	
<b>Parameter</b>	static.auto_provision.reboot_force.enable <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to reboot after auto provisioning, even if there is no specific configuration requiring a reboot. <b>Note:</b> It works only for the current auto provisioning process. If you want the phone to reboot after every auto provisioning process, the parameter must be always contained in the configuration file and set to 1. If the phone reboots repeatedly after it is set to 1, you can try to set "static.auto_provision.power_on" to 0 (Off).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	Blank	
<b>Parameter</b>	features.action_uri_force_autop	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to end the call for triggering auto provisioning immediately when receiving an HTTP or HTTPS GET request with the variable value set to AutoP during a call. <b>Note:</b> It works only if "features.action_uri.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled, the phone triggers auto provisioning after the call. 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	static.auto_provision.power_on	<y0000000000xx>.cfg
<b>Description</b>	It triggers the power on feature to on or off.	
<b>Permitted Values</b>	0-Off 1-On, the phone performs auto provisioning when powered on.	
<b>Default</b>	1	



<b>Web UI</b>	Settings > Auto Provision > Power On	
<b>Parameter</b>	static.auto_provision.repeat.enable	<y0000000000xx>.cfg
<b>Description</b>	It triggers the repeatedly feature to on or off.	
<b>Permitted Values</b>	0-Off 1-On	
<b>Default</b>	0	
<b>Web UI</b>	Settings > Auto Provision > Repeatedly	
<b>Parameter</b>	static.auto_provision.repeat.minutes	<y0000000000xx>.cfg
<b>Description</b>	It configures the interval (in minutes) for the phone to perform auto provisioning repeatedly. <b>Note:</b> It works only if “static.auto_provision.repeat.enable” is set to 1 (On).	
<b>Permitted Values</b>	Integer from 1 to 43200	
<b>Default</b>	1440	
<b>Web UI</b>	Settings > Auto Provision > Interval(Minutes)	
<b>Parameter</b>	static.auto_provision.weekly.enable	<y0000000000xx>.cfg
<b>Description</b>	It triggers the weekly feature to on or off.	
<b>Permitted Values</b>	0-Off 1-On, the phone performs an auto provisioning process weekly.	
<b>Default</b>	0	
<b>Web UI</b>	Settings > Auto Provision > Weekly	
<b>Parameter</b>	static.auto_provision.weekly_upgrade_interval	<y0000000000xx>.cfg
<b>Description</b>	It configures the time interval (in weeks) for the phone to perform auto provisioning. If it is set to 0, the phone performs auto provisioning at the specific day(s) configured by the parameter “static.auto_provision.weekly.dayofweek” every week. If it is set to other values (for example, 3), the phone performs auto provisioning at a random day between the specific day(s) configured by the parameter “static.auto_provision.weekly.dayofweek” every three weeks. <b>Note:</b> It works only if “static.auto_provision.weekly.enable” is set to 1 (On).	
<b>Permitted Values</b>	Integer from 0 to 12	
<b>Default</b>	0	
<b>Web UI</b>	Settings > Auto Provision > Weekly Upgrade Interval(0~12week)	
<b>Parameter</b>	static.auto_provision.inactivity_time_expire	<y0000000000xx>.cfg
<b>Description</b>	It configures the delay time (in minutes) to perform auto provisioning when the phone is inactive at regular week. If it is set to 0, the phone performs auto provisioning at random between a starting time configured by the parameter “static.auto_provision.weekly.begin_time” and an ending time configured by the parameter “static.auto_provision.weekly.end_time”. If it is set to other values (for example, 60), the phone performs auto provisioning only when it has	

	<p>been inactivated for 60 minutes (1 hour) between the starting time and ending time.</p> <p><b>Note:</b> The phone may perform auto provisioning when you are using the phone during office hour. It works only if "static.auto_provision.weekly.enable" is set to 1 (On).</p>	
<b>Permitted Values</b>	Integer from 0 to 120	
<b>Default</b>	0	
<b>Web UI</b>	Settings > Auto Provision > Inactivity Time Expire(0~120min)	
<b>Parameter</b>	static.auto_provision.weekly.dayofweek	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the days of the week for the phone to perform auto provisioning weekly.</p> <p><b>Example:</b></p> <p>static.auto_provision.weekly.dayofweek = 01</p> <p>If "static.auto_provision.weekly_upgrade_interval" is set to 0, it means the phone performs auto provisioning every Sunday and Monday.</p> <p>If "static.auto_provision.weekly_upgrade_interval" is set to other value (for example, 3), it means the phone performs auto provisioning by randomly selecting a day from Sunday and Monday every three weeks.</p> <p><b>Note:</b> It works only if "static.auto_provision.weekly.enable" is set to 1 (On).</p>	
<b>Permitted Values</b>	<p>0,1,2,3,4,5,6 or a combination of these digits</p> <p><b>0</b>-Sunday</p> <p><b>1</b>-Monday</p> <p><b>2</b>-Tuesday</p> <p><b>3</b>-Wednesday</p> <p><b>4</b>-Thursday</p> <p><b>5</b>-Friday</p> <p><b>6</b>-Saturday</p>	
<b>Default</b>	0123456	
<b>Web UI</b>	Settings > Auto Provision > Day of Week	
<b>Parameter</b>	static.auto_provision.weekly.begin_time static.auto_provision.weekly.end_time	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the starting/ending time of the day for the phone to perform auto provisioning weekly.</p> <p><b>Note:</b> It works only if "static.auto_provision.weekly.enable" is set to 1 (On).</p>	
<b>Permitted Values</b>	Time from 00:00 to 23:59	
<b>Default</b>	00:00	
<b>Web UI</b>	Settings > Auto Provision > Time	
<b>Parameter</b>	static.auto_provision.flexible.enable	<y0000000000xx>.cfg
<b>Description</b>	<p>It triggers the flexible feature to on or off.</p> <p><b>Note:</b> The day within the period is based upon the phone's MAC address and does not change with a reboot, whereas the time within the start and end is calculated again with every reboot.</p>	

<b>Permitted Values</b>	<b>0-Off</b> <b>1-On</b> , the phone performs auto provisioning at random between a starting time configured by the parameter "static.auto_provision.flexible.begin_time" and an ending time configured by the parameter "static.auto_provision.flexible.end_time" on a random day within the period configured by the parameter "static.auto_provision.flexible.interval".	
<b>Default</b>	0	
<b>Web UI</b>	Settings > Auto Provision > Flexible Auto Provision	
<b>Parameter</b>	static.auto_provision.flexible.interval	<y0000000000xx>.cfg
<b>Description</b>	It configures the interval (in days) for the phone to perform auto provisioning. The auto provisioning occurs on a random day within this period based on the phone's MAC address. The phone performs auto provisioning on a random day (for example, 18) based on the phone's MAC address. <b>Note:</b> It works only if "static.auto_provision.flexible.enable" is set to 1 (On).	
<b>Permitted Values</b>	Integer from 1 to 1000	
<b>Default</b>	30	
<b>Web UI</b>	Settings > Auto Provision > Flexible Interval Days	
<b>Parameter</b>	static.auto_provision.flexible.begin_time	<y0000000000xx>.cfg
<b>Description</b>	It configures the starting time of the day for the phone to perform auto provisioning at random. <b>Note:</b> It works only if "static.auto_provision.flexible.enable" is set to 1 (On).	
<b>Permitted Values</b>	Time from 00:00 to 23:59	
<b>Default</b>	02:00	
<b>Web UI</b>	Settings > Auto Provision > Flexible Time	
<b>Parameter</b>	static.auto_provision.flexible.end_time	<y0000000000xx>.cfg
<b>Description</b>	It configures the ending time of the day for the phone to perform auto provisioning at random. If it is left blank or set to a specific value equal to starting time configured by the parameter "static.auto_provision.weekly.begin_time", the phone performs auto provisioning at the starting time. If it is set to a specific value greater than starting time configured by the parameter "static.auto_provision.weekly.begin_time", the phone performs auto provisioning at random between the starting time and ending time. If it is set to a specific value less than starting time configured by the parameter "static.auto_provision.weekly.begin_time", the phone performs auto provisioning at random between the starting time on that day and ending time in the next day. <b>Note:</b> It works only if "static.auto_provision.flexible.enable" is set to 1 (On).	
<b>Permitted Values</b>	Time from 00:00 to 23:59	
<b>Default</b>	Blank	
<b>Web UI</b>	Settings > Auto Provision > Flexible Time	
<b>Parameter</b>	static.auto_provision.prompt.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to prompt you for the configuration update and the result (if any con-	

	figuration changes) during auto provisioning. <b>Note:</b> If the phone performs auto provisioning when receiving a SIP NOTIFY message which contains the header "Event: check-sync", the phone will display the prompt message no matter whether the configuration is updated.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	static.auto_provision.connect.keep_alive	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the long connection for downloading files via auto provisioning.	
<b>Permitted Values</b>	0-Disabled, the phone uses the short connection for downloading files via auto provisioning 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	static.auto_provision.authentication.expired_time	<y0000000000xx>.cfg
<b>Description</b>	It configures the timeout (in seconds) after which the authentication pop-up box for auto provisioning disappears.	
<b>Permitted Values</b>	0-The authentication pop-up box does not disappear from the phone screen automatically. <b>Integer from 10 to 86400</b> -The authentication pop-up box automatically disappears from the phone screen after the designated time.	
<b>Default</b>	7200	
<b>Parameter</b>	static.auto_provision.dns_resolv_nretry	<y0000000000xx>.cfg
<b>Description</b>	It configures the retry times when the phone fails to resolve the access URL of the provisioning server. <b>Note:</b> For each different DNS server, it works only if "static.auto_provision.dns_resolv_nosys" is set to 1 (Enabled).	
<b>Permitted Values</b>	Integer from 1 to 10	
<b>Default</b>	2	
<b>Parameter</b>	static.auto_provision.dns_resolv_timeout	<y0000000000xx>.cfg
<b>Description</b>	It configures the timeout (in seconds) for the phone to retry to resolve the access URL of the provisioning server. <b>Note:</b> For each different DNS server, it works only if "static.auto_provision.dns_resolv_nosys" is set to 1 (Enabled).	
<b>Permitted Values</b>	Integer from 1 to 60	
<b>Default</b>	5	

[1]If you change this parameter, the phone will reboot to make the change take effect.

## User-Triggered Provisioning Settings Configuration

You can enable the users to trigger phones to perform provisioning by dialing an activation code. This method works only if there is no registered account on the phone.

The following table lists the parameters you can use to configure settings for user-triggered provisioning.

<b>Parameter</b>	static.autoprovision.X.name <sup>[1][2]</sup>	<y0000000000xx>.cfg
------------------	---	---------------------

<b>Description</b>	It configures the code name to trigger auto provisioning.	
<b>Permitted Values</b>	String within 64 characters	
<b>Default</b>	Blank	
<b>Parameter</b>	static.autoprovision.X.code <sup>[1][2]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the activation code to trigger auto provisioning. <b>Example:</b> static.autoprovision.1.code = 123 static.autoprovision.2.code = ** static.autoprovision.3.code = *123	
<b>Permitted Values</b>	Numbers, #/*, or a combination of numbers and */#	
<b>Default</b>	Blank	
<b>Parameter</b>	static.autoprovision.X.url <sup>[1][2]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the access URL of the provisioning server for the phone to perform auto provisioning which is triggered by an activation code.	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Parameter</b>	static.autoprovision.X.user <sup>[1][2]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the user name for authentication during auto provisioning which is triggered by an activation code.	
<b>Permitted Values</b>	String within 64 characters	
<b>Default</b>	Blank	
<b>Parameter</b>	static.autoprovision.X.password <sup>[1][2]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the password for authentication during auto provisioning which is triggered by an activation code.	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	

<sup>[1]</sup>X is an activation code ID. X=1-50.

<sup>[2]</sup>If you change this parameter, the phone will reboot to make the change take effect.

## PIN Code Provisioning Settings Configuration

You can enable the users to trigger phones to perform provisioning by dialing a PIN code.

For more information on PIN code provisioning, refer to [Yealink SIP IP Phones Auto Provisioning Guide](#).

The following table lists the parameters you can use to configure settings for PIN code provisioning.

<b>Parameter</b>	phone_setting.retain_pin.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to save the entered PIN code.	

<b>Permitted Values</b>	0-Disabled 1-Enabled, the phone saves the entered PIN code and users do not need to enter again.
<b>Default</b>	1
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T48S, T46S, T42S, T41S, T33P, T33G, T31P, T31G, T31, T30P, T30, T27G, CP920, CP925, CP935W

## Viewing Configurations Configured via Different Provisioning Methods

On the web user interface, you can click the question mark "?" after each configuration to see its detailed information. It is only applicable to T57W/T54W/T53W/T53/T53C/T48U/T48S/T46U/T46S/T43U/T42S/T42U/T41S/T27G/CP920/CP925/CP935W phones.

From the detailed information, you can do the following:

- Check whether settings you make using a higher priority provisioning method override settings made using a lower priority provisioning method.
- Reset a configuration to factory setting.
- See the default value of the desired configuration.

The table lists each parameter in the detailed information.

Parameter	Description	
<b>Description</b>	Description of this configuration item	
<b>CFG Configuration</b>	The parameter in the configuration file	
<b>Valid Value</b>	The permitted values	
<b>Configuration Source Values</b> (This appears only when the parameter "static.auto_provision.custom.protect" is set to 1.)	Web/Local: (It appears only for a non-static parameter.)	Not Applicable: the value is not changed via phone or web user interface.
		Specific value: the value is changed via phone or web user interface. Click <b>Reset</b> to reset the value.
	Config: (It appears only for a non-static parameter.)	Not Applicable: the parameter is not changed in the configuration files.
		Specific value: the parameter is changed in the configuration files. Click <b>Reset</b> to reset the value.
	Static: (It appears only for a static parameter)	Not Applicable: the parameter is not configured in any provisioning method.
		Specific value: the value is configured in any provisioning method. Click <b>Reset</b> to reset the value.
Default:	Default value	

## Setting Up a Provisioning Server

You can use a provisioning server to configure your phones. A provisioning server allows for flexibility in upgrading, maintaining and configuring the phone. Boot files, configuration files, and resource files are normally located on this server.

### Topics

[Supported Provisioning Protocols](#)  
[Supported Provisioning Server Discovery Methods](#)  
[Configuring a Provisioning Server](#)

## Supported Provisioning Protocols

Yealink phones support several transport protocols for provisioning:

- Trivial File Transfer Protocol (TFTP)
- File Transfer Protocol (FTP)
- Hyper Text Transfer Protocol – Secure (HTTPS)
- File Transfer Protocol – Secure (FTPS)

**Note:** There are two types of FTP methods—active and passive. The phones are not compatible with active FTP.

You can specify the transport protocol in the provisioning server address, for example, `http://xxxxxxx`. If not specified, the TFTP protocol is used.

### Topic

[Provisioning Protocols Configuration](#)

## Provisioning Protocols Configuration

The following table lists the parameters you can use to configure provisioning protocols.

<b>Parameter</b>	<code>static.auto_provision.server.type</code>	<code>&lt;y0000000000xx&gt;.cfg</code>
<b>Description</b>	It configures the protocol the phone uses to connect to the provisioning server. <b>Note:</b> It works only if the protocol type is not defined in the access URL of the provisioning server configured by the parameter "static.auto_provision.server.url".	
<b>Permitted Values</b>	1-http 2-https 3-ftp <b>Other values-</b> tftp	
<b>Default</b>	tftp	
<b>Parameter</b>	<code>static.auto_provision.user_agent_mac.enable</code>	<code>&lt;y0000000000xx&gt;.cfg</code>
<b>Description</b>	It enables or disables the phone's MAC address to be included in the User-Agent header of HTTP/HTTPS request via auto provisioning.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	

## Supported Provisioning Server Discovery Methods

After the phone has established network settings, it must discover a provisioning server to obtain software updates and configuration settings.

The IP phone supports the following methods to discover the provisioning server address:

- **Zero Touch:** Zero Touch feature guides you to configure network settings and the provisioning server address via the phone user interface after startup.
- **PnP:** PnP feature allows the phones to discover the provisioning server address by broadcasting the PnP SUBSCRIBE message during startup.

- **DHCP:** DHCP option can be used to provide the address or URL of the provisioning server to phones. When the IP phone requests an IP address using the DHCP protocol, the resulting response may contain option 66 (for IPv4)/option 59 (for IPv6) or the custom option (if configured) that contains the provisioning server address.
- **Static:** You can manually configure the server address via the phone user interface or web user interface.

**Topics**

- [Zero Touch Provision Configuration](#)
- [PnP Provision Configuration](#)
- [DHCP Provision Configuration](#)
- [Static Provision Configuration](#)

**Zero Touch Provision Configuration**

The following table lists the parameters you can use to configure the Zero Touch provision.

<b>Parameter</b>	static.zero_touch.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the zero touch for the phone to configure the network parameters and provisioning server address via the phone user interface during startup.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Settings > Auto Provision > Zero Active	
<b>Parameter</b>	static.zero_touch.wait_time	<y0000000000xx>.cfg
<b>Description</b>	It configures the duration time (in seconds) for the phone to display Zero Touch screen during startup.	
<b>Permitted Values</b>	Integer from 1 to 100	
<b>Default</b>	5	
<b>Web UI</b>	Settings > Auto Provision > Wait Time(1~100s)	
<b>Parameter</b>	static.zero_touch.network_fail_wait_times	<y0000000000xx>.cfg
<b>Description</b>	It configures the reconnection times when zero touch module fails to obtain network parameters.	
<b>Permitted Values</b>	Integer from 1 to 2147483646	
<b>Default</b>	8	
<b>Parameter</b>	static.zero_touch.network_fail_delay_times	<y0000000000xx>.cfg
<b>Description</b>	It configures the duration time (in milliseconds) of every reconnection when zero touch module fails to obtain network parameters.	
<b>Permitted Values</b>	Integer from 1000 to 2147483646	
<b>Default</b>	1000	
<b>Parameter</b>	static.features.hide_zero_touch_url.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to hide the provisioning URL item on the Zero Touch screen.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	



## PnP Provision Configuration

The following table lists the parameter you can use to configure PnP provision.

<b>Parameter</b>	static.auto_provision.pnp_enable	<y0000000000xx>.cfg
<b>Description</b>	It triggers the Plug and Play (PnP) feature to on or off.	
<b>Permitted Values</b>	<b>0</b> -Off <b>1</b> -On, the phone broadcasts SIP SUBSCRIBE messages to obtain a provisioning server URL where the phone can request the configuration from during startup.	
<b>Default</b>	1	
<b>Web UI</b>	Settings > Auto Provision > PNP Active	
<b>Parameter</b>	static.auto_provision.pnp_check_url.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to match the received provisioning URL with the last one from where the phone successfully requests the configuration via a PnP provision.	
<b>Permitted Values</b>	<b>0</b> -Disabled <b>1</b> -Enabled, the phone performs a PnP provision again only when the provisioning URLs are matched.	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P and T29G	

## DHCP Provision Configuration

You can select to use IPv4 or IPv6 custom DHCP option according to your network environment. The IPv4 or IPv6 custom DHCP option must be in accordance with the one defined in the DHCP server.

The following table lists the parameters you can use to configure the DHCP provision.

<b>Parameter</b>	static.auto_provision.dhcp_option.enable	<y0000000000xx>.cfg
<b>Description</b>	It triggers the DHCP Active feature to on or off.	
<b>Permitted Values</b>	<b>0</b> -Off <b>1</b> -On, the phone obtains the provisioning server address by detecting DHCP options.	
<b>Default</b>	1	
<b>Web UI</b>	Settings > Auto Provision > DHCP Active	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Advanced (default password: admin) > Auto Provision > DHCP Active <u>CP925/CP935W:</u> More > Advanced (default password: admin) > Auto Provision > DHCP Active <u>Black-and-white Screen Phones:</u> Menu > Settings > Advanced Settings (default password: admin) > Auto Provision > DHCP Active	
<b>Parameter</b>	static.auto_provision.dhcp_option.list_user_options	<y0000000000xx>.cfg
<b>Description</b>	It configures the IPv4 custom DHCP option for requesting provisioning server address. Multiple options are separated by commas. <b>Note:</b> It works only if “static.auto_provision.dhcp_option.enable” is set to 1 (On).	
<b>Permitted</b>	Integer from 128 to 254	

<b>Values</b>	
<b>Default</b>	Blank
<b>Web UI</b>	Settings > Auto Provision > IPv4 Custom Option
<b>Phone UI</b>	<p><u>Color Screen Phones:</u> Menu &gt; Advanced (default password: admin) &gt; Auto Provision &gt; IPv4 Custom Option</p> <p><u>CP925/CP935W:</u> More &gt; Advanced (default password: admin) &gt; Auto Provision &gt; IPv4 Custom Option</p> <p><u>Black-and-white Screen Phones:</u> Menu &gt; Settings &gt; Advanced Settings (default password: admin) &gt; Auto Provision &gt; IPv4 Custom Option</p>
<b>Parameter</b>	static.auto_provision.dhcp_option.list_user6_options <y0000000000xx>.cfg
<b>Description</b>	<p>It configures the IPv6 custom DHCP option for requesting provisioning server address.</p> <p>Multiple options are separated by commas.</p> <p><b>Note:</b> It works only if "static.auto_provision.dhcp_option.enable" is set to 1 (On).</p>
<b>Permitted Values</b>	Integer from 135 to 65535, except 143
<b>Default</b>	Blank
<b>Web UI</b>	Settings > Auto Provision > IPv6 Custom Option
<b>Phone UI</b>	<p><u>Color Screen Phones:</u> Menu &gt; Advanced (default password: admin) &gt; Auto Provision &gt; IPv6 Custom Option</p> <p><u>CP925/CP935W:</u> More &gt; Advanced (default password: admin) &gt; Auto Provision &gt; IPv6 Custom Option</p> <p><u>Black-and-white Screen Phones:</u> Menu &gt; Settings &gt; Advanced Settings (default password: admin) &gt; Auto Provision &gt; IPv6 Custom Option</p>
<b>Parameter</b>	static.auto_provision.url_wildcard.pn <y0000000000xx>.cfg
<b>Description</b>	<p>It configures the characters to replace the wildcard \$PN in the received URL of the provisioning server.</p> <p><b>Note:</b> The configured characters must be in accordance with the actual directory name of the provisioning server.</p>
<b>Permitted Values</b>	String within 32 characters
<b>Default</b>	<p>For T57W phones: T57W</p> <p>For T54W phones: T54W</p> <p>For T53W phones: T53W</p> <p>For T53 phones: T53</p> <p>For T53C phones: T53C</p> <p>For T48U phones: T48U</p> <p>For T48G phones: T48G</p>

For T48S phones: T48S
For T46U phones: T46U
For T46G phones: T46G
For T46S phones: T46S
For T43U phones: T43U
For T42G phones: T42G
For T42S phones: T42S
For T42U phones: T42U
For T41P phones: T41P
For T41S phones: T41S
For T40P phones: T40P
For T40G phones: T40G
For T33G phones: T33G
For T33P phones: T33P
For T31G phones: T31G
For T31P phones: T31P
For T31 phones: T31
For T30P phones: T30P
For T30 phones: T30
For T29G phones: T29G
For T27G phones: T27G
For T23P phones: T23P
For T23G phones: T23G
For T21(P) E2 phones: T21P_E2
For T19(P) E2 phones: T19P_E2
For CP920 phones: CP920
For CP925 phones: CP925
For CP935W phones: CP935W

## Static Provision Configuration

To use the static provision method, you need to obtain the provisioning server address first when configuring a provisioning server.

The provisioning server address can be IP address, domain name or URL. If a user name and password are specified as part of the provisioning server address, for example, `http://user:pwd@server/dir`, they will be used only if the server supports them.

**Note:** A URL should contain forward slashes instead of backslashes and should not contain spaces. Escape characters are not supported.

If a user name and password are not specified as part of the provisioning server address, the User Name and Password of the provisioning server configured on the phone will be used.

The following table lists the parameters you can use to configure static provision.

<b>Parameter</b>	static.auto_provision.server.url	<y0000000000xx>.cfg
<b>Description</b>	It configures the access URL of the provisioning server.	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Settings > Auto Provision > Server URL	
<b>Parameter</b>	static.auto_provision.server.username	<y0000000000xx>.cfg
<b>Description</b>	It configures the user name for provisioning server access.	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Settings > Auto Provision > Username	
<b>Parameter</b>	static.auto_provision.server.password	<y0000000000xx>.cfg
<b>Description</b>	It configures the password for provisioning server access.	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Settings > Auto Provision > Password	

## Configuring a Provisioning Server

The provisioning server can be set up on the local LAN or anywhere on the Internet. Use the following procedure as a recommendation if this is your first provisioning server setup.

To set up the provisioning server:

1. Install a provisioning server application or locate a suitable existing server, such as 3CDaemon.
2. Create an account and home directory.
3. Set security permissions for the account.
4. Create boot files and configuration files, and then edit them as desired.
5. Copy the boot files, configuration files and resource files to the provisioning server.
6. If performing static provisioning, obtain the provisioning server address.

**Tip:** Typically, all phones are configured with the same server account, but the server account provides a means of conveniently partitioning the configuration. Give each account a unique home directory on the server and change the configuration on a per-line basis.

## Keeping User's Personalized Settings after Auto Provisioning

Generally, you deploy phones in batch and timely maintain company phones via auto provisioning, yet some users would like to keep the personalized settings (for example, ring tones, wallpaper or DSS keys) after auto provisioning.

### Topics

[Keeping User's Personalized Settings Configuration](#)

[Auto Provisioning Flowchart for Keep User's Personalized Configuration Settings](#)

[Example: Keeping User's Personalized Settings](#)  
[Clearing User's Personalized Configuration Settings](#)


## Keeping User's Personalized Settings Configuration

The following table lists the parameters you can use to keep the user's personalized settings.

<b>Parameter</b>	static.auto_provision.custom.protect	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to keep the user's personalized settings after auto provisioning. <b>Note:</b> The provisioning priority mechanism (phone/web user interface > central provisioning > factory defaults) takes effect only if the value of this parameter is set to 1 (Enabled). If "overwrite_mode" is set to 1 in the boot file, the value of this parameter will be set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled, <MAC>-local.cfg file generates and personalized non-static settings configured via the web or phone user interface will be kept after auto provisioning.	
<b>Default</b>	0	
<b>Parameter</b>	static.auto_provision.custom.sync	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to upload the <MAC>-local.cfg file to the server each time the file updates, and to download the <MAC>-local.cfg file from the server during auto provisioning. <b>Note:</b> It works only if "static.auto_provision.custom.protect" is set to 1 (Enabled). The upload/download path is configured by the parameter "static.auto_provision.custom.sync.path".	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	static.auto_provision.custom.sync.path	<y0000000000xx>.cfg
<b>Description</b>	It configures the URL for uploading/downloading the <MAC>-local.cfg file. If it is left blank, the phone will try to upload/download the <MAC>-local.cfg file to/from the provisioning server. <b>Note:</b> It works only if "static.auto_provision.custom.sync" is set to 1 (Enabled).	
<b>Permitted Values</b>	URL	
<b>Default</b>	Blank	
<b>Parameter</b>	static.auto_provision.custom.upload_method	<y0000000000xx>.cfg
<b>Description</b>	It configures the way the phone uploads the <MAC>-local.cfg file, <MAC>-calllog.xml file or <MAC>-contact.xml file to the provisioning server (for HTTP/HTTPS server only).	
<b>Permitted Values</b>	0-PUT 1-POST	
<b>Default</b>	0	

## Auto Provisioning Flowchart for Keep User's Personalized Configuration Settings

The following shows an auto provisioning flowchart for Yealink phones when a user wishes to keep the user's personalized configuration settings.

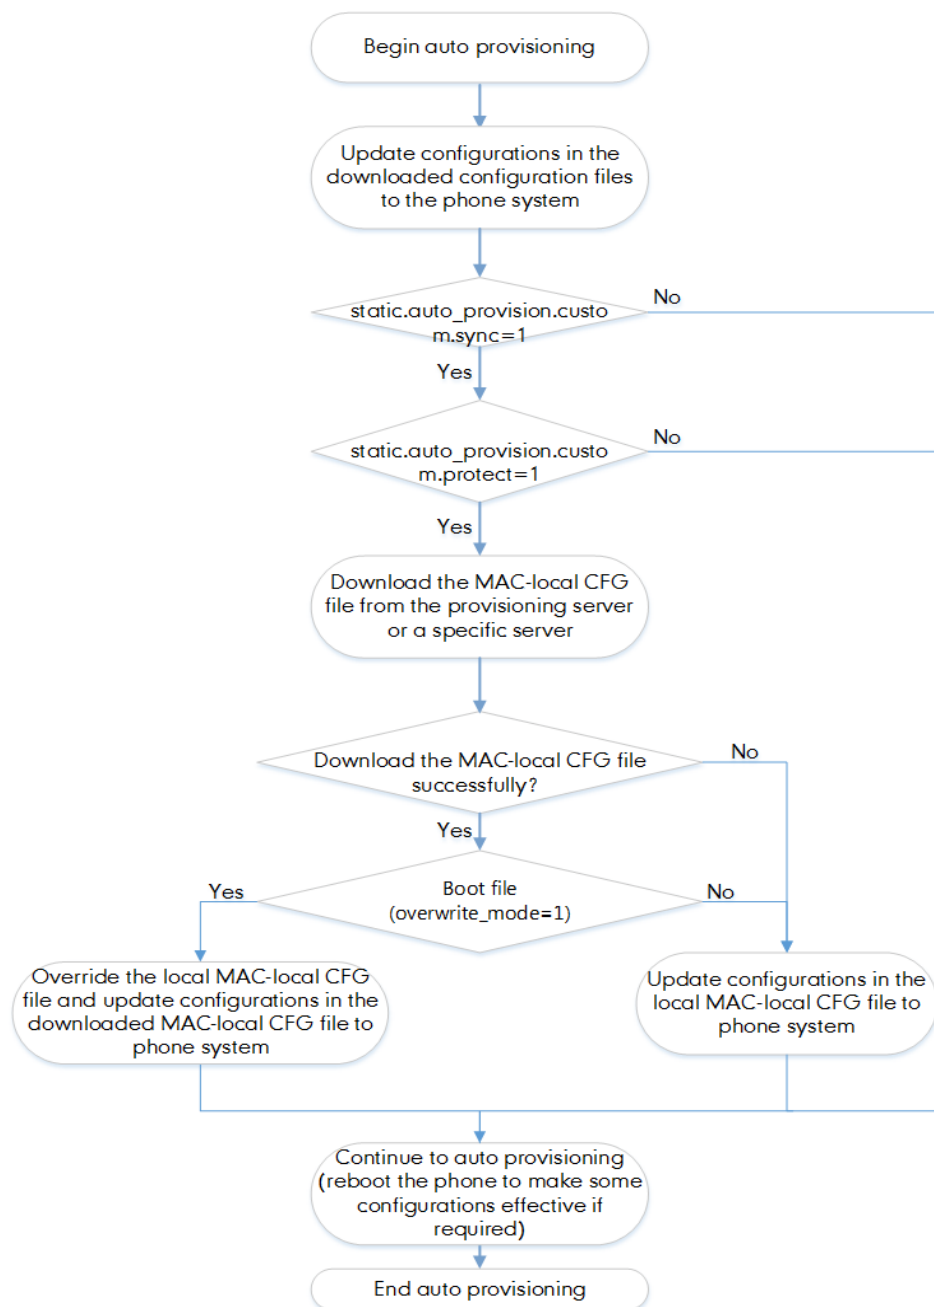

## Example: Keeping User's Personalized Settings

This section shows you how to keep the personalized settings.

### Parameters Settings:

*static.auto\_provision.custom.protect=1*

After provisioning, if the users make changes via the phone user interface or web user interface, the MAC-local.cfg file with non-static personal settings generates locally.

### Scenario: Keeping user's personalized settings when upgrading the firmware

If you set "*static.auto\_provision.custom.sync=1*", then the phones attempt to upload the MAC-local.cfg file to the provisioning server each time the file updates. When performing auto provisioning, they download their own MAC-

local.cfg file from the provisioning server, and then update settings in MAC-local.cfg file to the IP phone system. The personalized settings locally are overridden by the MAC-local.cfg file from the provisioning server.

If you set “*static.auto\_provision.custom.sync = 0*”, the MAC-local.cfg file will be kept locally. The personalized settings will not be overridden after auto provisioning.

### Scenario: Keeping user personalized settings after factory reset

The IP phone requires a factory reset when it has a breakdown, but the user wishes to keep personalized settings of the phone after a factory reset. Before factory reset, make sure that you have set “*static.auto\_provision.custom.sync = 1*”, and the MAC-local.cfg file has kept on the provisioning server.

After resetting all configurations to factory defaults, both the parameters settings “*static.auto\_provision.custom.protect*” and “*static.auto\_provision.custom.sync*” are reset to 0. Although the MAC-local.cfg files locally are cleared, they are still kept on the provisioning server.

You can set “*static.auto\_provision.custom.protect = 1*” and “*static.auto\_provision.custom.sync = 1*”, and then trigger the phone to perform auto provisioning. The phones download their own MAC-local.cfg file from the provisioning server, and then update settings in MAC-local.cfg file to the IP phone system.

As a result, the personalized configuration settings of the phone are retrieved after the factory reset.

## Clearing User's Personalized Configuration Settings

When the IP phone is given to a new user but many personalized configurations settings of the last user are saved on the phone; or when the end-user encounters some problems because of the wrong configurations, you can clear the user's personalized configuration settings.

- Via phone user interface at the path: **Menu > Advanced** (default password: admin) > **Reset Config > Reset local settings**, **Menu > Settings > Advanced Settings** (default password: admin) > **Reset Config > Reset local settings**, **Menu > Basic > Reset local settings**, **Menu > Settings > Basic Settings > Reset local settings** or **More > Advanced** (default password: admin) > **Reset Config**.
- Via web user interface at the path: **Settings > Upgrade > Reset Local Settings**.
- Via auto provisioning: set “*overwrite\_mode = 1*”, delete the value of a parameter or comment out a parameter in <MAC>-local.cfg on the server, and then perform an auto provisioning.

**Note:** The **Reset local settings** option on the web/phone user interface appears only if you set “*static.auto\_provision.custom.protect = 1*”.

If you set “*static.auto\_provision.custom.sync = 1*”, the MAC-local.cfg file on the provisioning server will be cleared too. If not, the MAC-local.cfg file is kept on the provisioning server, and the phone could download it and update the configurations to the phone after the next auto provisioning.

## Example: Deploying Phones from the Provisioning Server

After setting up your provisioning server(s), you can deploy your phone devices. The following example shows you how to use the boot and configuration files to deploy phones from the provisioning server.

### Procedure

1. Create a per-phone boot file and common boot file.  
For example, 001565b09d886.boot and y000000000000.boot.
2. Create per-phone configuration files or common configuration files, and edit the feature parameters in the file you want to apply to the phones. For example,

Custom configuration file: CustomSettings.cfg	<pre>phone_setting.contrast = 7 local_time.time_format = 1 lang.gui = Chinese_S [T42S,T41S]voice_mail.number.1 = *5 [T27G]account.1.dnd.enable = 1</pre>
--	--

	[T41S]account.1.dnd.enable = 0 [T42S]features.dnd.enable = 0
Custom configuration file: Linekey.cfg	linekey.2.type=13 linekey.2.line=1 linekey.2.value = 4603 linekey.2.label=Bill
MAC-Oriented configuration files: 001565b09d886.cfg	account.1.enable = 1 account.1.label = Bill account.1.display_name = 1023 account.1.auth_name = 1023 account.1.user_name = 1023 account.1.password = 1023 account.1.sip_server.1.address = 10.2.1.199 account.1.sip_server.1.port = 5060

- Place the configuration files to the home directory of the provisioning server. For example, D:\TFTP Provision.
- Specify the configuration files paths in the boot file as desired. For example,

y000000000000.boot	include:config<ftp://10.2.5.193/CustomSettings.cfg> [T46S,T48S]include:config "ftp://10.2.5.193/Linekey.cfg"
001565b09d886.boot	include:config<ftp://10.2.5.193/Linekey.cfg> include:config<ftp://10.2.5.193/001565b09d886.cfg>

- Place the boot files to the home directory of the provisioning server. For example, D:\TFTP Provision.
- Reboot the phones to trigger auto provisioning.


For the phone with MAC 001565b09d886, it will download the 001565b09d886.boot file, and then download Linekey.cfg and 001565b09d886.cfg files referenced in the 001565b09d886.boot file in sequence from the provisioning server.

For the phones except for MAC-specific phone, they will request to download the y000000000000.boot file, and then request to download the referenced files. The phone-specific configuration file Linekey.cfg only applies to T46S and T48S phones. The only difference is that T46S and T48S phones will download both the two files since the exclude mode is disabled by default. The other phones will only download the CustomSettings.cfg file.

For the parameter settings in the CustomSettings.cfg file, the phone-specific parameters will only take effect on the specific phone models.

The following shows the provisioning flowchart for different phone models with phone-specific settings.



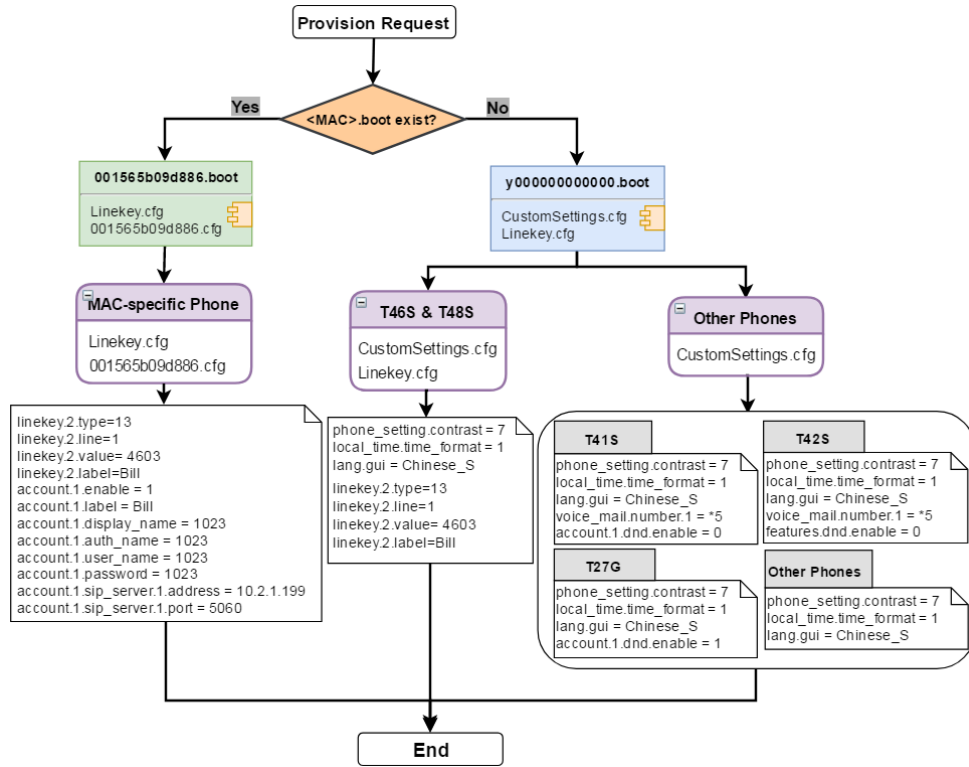

# Security Features

This chapter provides information about configuring the security features for the phone.

## Topics

[User and Administrator Identification](#)  
[Auto Logout Time](#)  
[Phone Lock](#)  
[Transport Layer Security \(TLS\)](#)  
[Secure Real-Time Transport Protocol \(SRTP\)](#)  
[Encrypting and Decrypting Files](#)  
[Incoming Network Signaling Validation](#)  
[USB Port Lock](#)

## User and Administrator Identification

By default, some menu options are protected by privilege levels: user and administrator, each with its own password. You can also customize the access permission for the configurations on the web user interface and phone user interface. Yealink phones support the access levels of admin, var, and user.

When logging into the web user interface or access advanced settings on the phone, as an administrator, you need an administrator password to access various menu options. The default username and password for administrator is “admin”. Both you and the user can log into the web user interface, and you will see all of the user options. The default username and password for the user is “user”.

For security reasons, you should change the default user or administrator password as soon as possible. Since advanced menu options are strictly used by the administrator, users can configure them only if they have administrator privileges.

## Topics

[User and Administrator Identification Configuration](#)  
[User Access Level Configuration](#)

## User and Administrator Identification Configuration

The following table lists the parameters you can use to configure the user and administrator identification.

<b>Parameter</b>	static.security.user_name.user	<y0000000000xx>.cfg
<b>Description</b>	It configures the user name for the user to access the phone's web user interface.	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	user	
<b>Parameter</b>	static.security.user_name.admin	<y0000000000xx>.cfg
<b>Description</b>	It configures the user name for the administrator to access the phone's web user interface.	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	admin	
<b>Parameter</b>	static.security.user_name.var	<y0000000000xx>.cfg
<b>Description</b>	It configures the user name for the var to access the phone's web user interface. <b>Note:</b> It works only if “static.security.var_enable” is set to 1 (Enabled).	

<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	var	
<b>Parameter</b>	static.security.user_password	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the password.</p> <p>The phone uses "user" as the default user password, "var" as the default var password and "admin" as the default administrator password.</p> <p>The valid value format is &lt;username&gt;:&lt;new password&gt;.</p> <p><b>Example:</b></p> <p>static.security.user_password = user:123 means setting the password of user to 123.</p> <p>static.security.user_password = admin:456 means setting the password of administrator to 456.</p> <p>static.security.user_password = var:789 means setting the password of var to 789.</p> <p><b>Note:</b> The phones support ASCII characters 32-126(0x20-0x7E) in passwords. If you want to set space and colon characters in the password, you need to configure it via the web user interface. And you can set the password to be empty via the web user interface only.</p>	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Security > Password	
<b>Phone UI</b>	<p><u>Color Screen Phones:</u></p> <p>Menu &gt; Advanced (default password: admin) &gt; Change Password</p> <p><u>CP925/CP935W:</u></p> <p>More &gt; Advanced (default password: admin) &gt; Set Password</p> <p><u>Black-and-white Screen Phones:</u></p> <p>Menu &gt; Settings &gt; Advanced Settings (default password: admin) &gt; Change Password</p> <p><b>Note:</b> You cannot change the user password via the phone user interface.</p>	
<b>Parameter</b>	static.security.password_use_default.mode <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures whether to allow users to use the default password, including admin and user permissions.	
<b>Permitted Values</b>	<p><b>0</b>-Default mode, allowing users to use the default password.</p> <p><b>1</b>-Mandatory mode, forcing users to change the default password. To use the phone normally, users must change the default password. And it is not allowed to change the password to the default password.</p>	
<b>Default</b>	0	
<b>Parameter</b>	static.security.password_function_only.enable	<y0000000000xx>.cfg
<b>Description</b>	It configures whether the user can only modify the password after logging in to the web user interface.	
<b>Permitted Values</b>	<p><b>0</b>-Other functions can still be used after logging in to the web user interface.</p> <p><b>1</b>-The user needs to modify the password before using other functions after logging in to the web user interface.</p>	

<b>Default</b>	0
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30
<b>Parameter</b>	static.security.custom_password_rule.X <sup>[2]</sup> <y0000000000xx>.cfg
<b>Description</b>	<p>It configures the regular expression rules for passwords.</p> <p>Multiple rules can be separated by comma.</p> <p><b>Example:</b></p> <p>static.security.custom_password_rule.1 = ^((?!{d}){2})*\$</p> <p>It means the password cannot contain three consecutive numbers.</p> <p>static.security.custom_password_rule.2 = ^((?!((admin) (administrator) (var) (user) (test)))*\$</p> <p>It means the password cannot contain admin, administrator, var, user or test.</p>
<b>Permitted Values</b>	regular expression
<b>Default</b>	Blank
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30

<sup>[1]</sup>If you change this parameter, the phone will reboot to make the change take effect.

## User Access Level Configuration

For more information, refer to [Yealink SIP IP Phones Configuration Guide for User Access Level](#).

The following table lists the parameters you can use to configure the user access level.

<b>Parameter</b>	static.security.var_enable <sup>[1]</sup> <y0000000000xx>.cfg
<b>Description</b>	It enables or disables the 3-level access permissions (admin, user, var).
<b>Permitted Values</b>	0-Disabled 1-Enabled
<b>Default</b>	0
<b>Parameter</b>	static.web_item_level.url <sup>[1]</sup> <y0000000000xx>.cfg
<b>Description</b>	It configures the access URL of the file, which defines 3-level access permissions.
<b>Permitted Values</b>	URL within 511 characters
<b>Default</b>	Blank
<b>Parameter</b>	static.security.default_access_level <sup>[1]</sup> <y0000000000xx>.cfg
<b>Description</b>	<p>It configures the default access level to access the phone user interface.</p> <p><b>Note:</b> It works only if “static.security.var_enable” is set to 1 (Enabled).</p>
<b>Permitted Values</b>	0-user 1-var 2-admin
<b>Default</b>	0

<b>Parameter</b>	static.security.web_limited_access_level	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the access level that cannot access the web user interface.</p> <p>Multiple access levels are separated by commas.</p> <p><b>Example:</b></p> <p>static.security.web_limited_access_level = var,user</p> <p><b>Note:</b> It has a higher priority than “static.security.var_enable”.</p>	
<b>Permitted Values</b>	any one or combination of admin, var, and user	
<b>Default</b>	Blank	

[1]If you change this parameter, the phone will reboot to make the change take effect.

[2]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925, X=1.

## Auto Logout Time

Auto logout time defines how long the phone will log out of the web user interface automatically when you do not perform any actions on the web user interface. Once logging out, you must re-enter username and password for web access authentication.

### Topic

[Auto Logout Time Configuration](#)

## Auto Logout Time Configuration

The following table lists the parameter you can use to configure the auto logout time.

<b>Parameter</b>	features.relog_offtime	<y0000000000xx>.cfg
<b>Description</b>	It configures the timeout interval (in minutes) for web access authentication.	
<b>Permitted Values</b>	Integer from 1 to 1000	
<b>Default</b>	5	
<b>Web UI</b>	Features > General Information > Auto Logout Time(1~1000min)	

## Phone Lock

You can lock the IP phone to prevent it from unauthorized use. Once the IP phone is locked, anyone must enter the password to unlock it.

Yealink phones offer three types for phone lock:

- **Lock the Menu soft key:** it prevents unauthorized users from accessing the menu and changing the personal settings for your phone.
- **Lock the Function keys:** it only allows unauthorized users to use the keypad for placing, answering, rejecting, or ending calls.
- **Lock all keys:** it only allows unauthorized users to use the keypad for dialing emergency numbers or authorized numbers that set up by your administrator, answering, rejecting and ending a call. The T57W/T48U/T48S/T48G phones only support All Keys type of phone lock.

You can set a waiting time, after which the phone is locked automatically. If the waiting time is set to 0, the phone will not be automatically locked. You need to lock the phone manually.

**Note:** The Volume key, HEADSET key and Speakerphone key are always available even when you lock the phone.

## Topics

[Operation Behaviors on Lock Phone](#)  
[Phone Lock Configuration](#)

## Operation Behaviors on Lock Phone

The following table lists the operation behavior when configuring the type of phone lock:

	All Keys	Function Keys	Menu key
<b>Idle screen</b>	<p><b>Allowable Behavior:</b> You are allowed to press the desired Line Key (key type is Line) or the Speakerphone/off-hook key to enter the dialing screen.</p> <p><b>Keys not Locked:</b> Line keys (key type is Line), digit keys, HEADSET key, Volume key, Speakerphone key, off-hook key, and on-hook key.</p> <p><b>Note:</b> Line key is not applicable to T30P/T30/T19(P) E2/CP920 phones; Speakerphone key is not applicable to CP920/CP925/CP935W phones. Off-hook key and on-hook key are only applicable to CP920 phones.</p>	The same as All Keys.	The Menu key (key type is Menu) is locked.
<b>Incoming call</b>	<p><b>Allowable Behavior:</b> You are allowed to answer or reject incoming calls.</p> <p><b>Keys not Locked: Answer and Reject soft key; OK/ √/ ○, X, HEADSET key, Speakerphone key, off-hook key, and on-hook key.</b></p> <p><b>Note:</b> Pressing X key to reject the call is not applicable to T31P/T31G/T31/T30P/T30/T23P/T23G/T21(P) E2/T19(P) E2/CP920/CP925/CP935W phones; HEADSET key and Speakerphone key are not applicable to CP920/CP925/CP935W phones. Off-hook key and on-hook key are only applicable to CP920 phones.</p>	The same as All Keys.	The Menu key (key type is Menu) is locked.
<b>Pre-dialing/Dialing screen</b>	<p><b>Allowable Behavior:</b> You are allowed to press the Line Key (key type is Line), input or modify numbers, dial emergency numbers and return to the idle screen.</p> <p><b>Keys not Locked:</b> IME, More, Cancel, Send, Delete and Line soft key; line key (key type is Line), X, OK/ √/ ○, Volume key, Speakerphone key, digit keys, HEADSET key, “*”/“#” (key as send), off-hook key and on-hook key.</p> <p><b>Note:</b> Line key is not applicable to T30P/T30/T19(P) E2/CP920 phones; Speakerphone key is not applicable to CP920/CP925/CP935W phones. Off-hook key and on-hook key are only applicable to CP920 phones.</p>	The same as All Keys, but you can dial any number.	The Menu key (key type is Menu) is locked.
<b>Talking</b>	<p><b>Allowable Behavior:</b> You are allowed to end the call, initiate a new call to the emergency number and resume a call.</p> <p><b>Keys not Locked:</b> End Call, Cancel, Resume, NewCall soft key; line key (key type is Line), digit keys, X, Volume key, HEADSET key, Speakerphone key, off-hook key, and on-hook key.</p> <p><b>Note:</b> Pressing X key to end the call is not applicable to T31P/T31G/T31/T30P/T30/T23P/T23G/T21(P) E2/T19(P) E2/CP920/CP925/CP935W phones; Line key is not applicable to T30P/T30/T19(P) E2/CP920 phones. HEADSET and Speakerphone key is not applicable to CP920/CP925/CP935W phones. Off-hook key and on-hook key are only applicable to CP920 phones.</p>	The same as All Keys, but you can dial any number.	The Menu key (key type is Menu) is locked.

For T57W/T48U/T48S/T48G, all keys and screen are locked except the HEADSET key, Volume key, digit keys, # key, \* key, and Speakerphone key.

## Phone Lock Configuration

The following table lists the parameters you can use to configure the phone lock.

<b>Parameter</b>	phone_setting.phone_lock.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone lock feature.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Features > Phone Lock > Phone Lock Enable	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Basic > Phone Lock > Lock Enable <u>CP925/CP935W:</u> More > Advanced (default password: admin) > Phone Lock > Lock Enable <u>Black-and-white Screen Phones:</u> Menu > Settings > Basic Settings > Phone Lock > Lock Enable	
<b>Parameter</b>	phone_setting.phone_lock.lock_key_type	<y0000000000xx>.cfg
<b>Description</b>	It configures the type of phone lock. <b>Note:</b> It works only if "phone_setting.phone_lock.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-All Keys 1-Function Keys 2-Menu Key	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T57W, T48U, T48S and T48G	
<b>Web UI</b>	Features > Phone Lock > Phone Lock Type	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Basic > Phone Lock > Lock Type <u>Black-and-white Screen Phones:</u> Menu > Settings > Basic Settings > Phone Lock > Lock Type	
<b>Parameter</b>	phone_setting.phone_lock.unlock_pin	<y0000000000xx>.cfg
<b>Description</b>	It configures the password for unlocking the phone.	
<b>Permitted Values</b>	Characters within 15 digits	
<b>Default</b>	123	
<b>Web UI</b>	Features > Phone Lock > Phone Unlock PIN (0~15 Digit)	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Basic > Change PIN	

	<u>CP925/CP935W:</u> More > Basic > Change PIN <u>Black-and-white Screen Phones:</u> Menu > Settings > Basic Settings > Change PIN	
<b>Parameter</b>	phone_setting.phone_lock.lock_time_out	<y0000000000xx>.cfg
<b>Description</b>	It configures the idle time (in seconds) before the phone is automatically locked. The default value is 0 (the phone is locked only by long pressing the pound key or pressing the phone lock DSS key). <b>Note:</b> It works only if “phone_setting.phone_lock.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	Integer from 0 to 3600	
<b>Default</b>	0	
<b>Web UI</b>	Features > Phone Lock > Auto Lock (0~3600s)	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Basic > Phone Lock > Auto Lock <u>CP925/CP935W:</u> More > Advanced (default password: admin) > Phone Lock > Auto Lock <u>Black-and-white Screen Phones:</u> Menu > Settings > Basic Settings > Phone Lock > Auto Lock	
<b>Parameter</b>	phone_setting.emergency.number	<y0000000000xx>.cfg
<b>Description</b>	It configures emergency numbers. Multiple emergency numbers are separated by commas. For T57W/T48U/T48S/T48G: If “phone_setting.phone_lock.enable” is set to 1 (Enabled), you are only allowed to dial the configured emergency numbers. For other phones: If “phone_setting.phone_lock.enable” is set to 1 (Enabled) and “phone_setting.phone_lock.lock_key_type” is set to 0 (All Keys), you are only allowed to dial the configured emergency numbers.	
<b>Permitted Values</b>	String within 99 characters	
<b>Default</b>	112,911,110	
<b>Web UI</b>	Features > Phone Lock > Emergency	
<b>Parameter</b>	phone_setting.phone_lock.emergency.number_rule	<y0000000000xx>.cfg
<b>Description</b>	It configures the digit map pattern used for emergency numbers. Multiple emergency numbers are separated by " ". <b>Example:</b> phone_setting.phone_lock.emergency.number_rule = xxxxxx 86xx5 886x. 003 <b>Note:</b> The value configured by the parameter “phone_setting.emergency.number” takes precedence over that configured by this parameter.	
<b>Permitted</b>	String within 2048 characters	



<b>Values</b>	
<b>Default</b>	Blank

### Related Topics

[Basic Regular Expression Syntax for Digit Map](#)

## Transport Layer Security (TLS)

TLS is a commonly-used protocol for providing communications privacy and managing the security of message transmission, allowing the phones to communicate with other remote parties and connect to the HTTPS URL for provisioning in a way that is designed to prevent the data from being eavesdropped and tampered.

Yealink phones support TLS version 1.0, 1.1, 1.2, and 1.3. When TLS is enabled for an account, the SIP message of this account will be encrypted, and a lock icon appears on the LCD screen after the successful TLS negotiation.

**Note:** To improve the security of the phone web service, you cannot access the web user interface of the phone running firmware version V84 by default when the web browser only supports TLS 1.0 protocol. But you are allowed to configure the supported TLS version to use for handshake negotiation between the phone and web browser.

The compatible browsers are Google Chrome V22 or higher, Mozilla Firefox V27 or higher, Internet Explorer 8-10 (if TLS 1.1 or TLS 1.2 is enabled), Internet Explorer 11 and higher (TLS 1.1 and TLS 1.2 is enabled by default), Apple Safari V7 or higher, and Microsoft Edge.

Try to enable TLS 1.1 and/or TLS 1.2 protocols on web browsers when you cannot access the phone's web user interface using the lower version browser. If you still cannot access the phone's web user interface when using Internet Explorer, try to enable TLS 1.1 and disable TLS 1.2, or use other web browsers. Refer to the web resources for more information.

### Topics

[Supported Cipher Suites](#)

[Supported Trusted and Server Certificates](#)

[TLS Configuration](#)

## Supported Cipher Suites

A cipher suite is a named combination of authentication, encryption, and message authentication code (MAC) algorithms used to negotiate the security settings for a network connection using the TLS/SSL network protocol.

Yealink phones support the following cipher suites:

- DHE-RSA-AES256-SHA
- DHE-DSS-AES256-SHA
- AES256-SHA
- EDH-RSA-DES-CBC3-SHA
- EDH-DSS-DES-CBC3-SHA
- DES-CBC3-SHA
- DES-CBC3-MD5
- DHE-RSA-AES128-SHA
- DHE-DSS-AES128-SHA
- AES128-SHA
- RC2-CBC-MD5
- IDEA-CBC-SHA
- DHE-DSS-RC4-SHA
- RC4-SHA
- RC4-MD5
- RC4-64-MD5
- EXP1024-DHE-DSS-DES-CBC-SHA

- EXP1024-DES-CBC-SHA
- EDH-RSA-DES-CBC-SHA
- EDH-DSS-DES-CBC-SHA
- DES-CBC-SHA
- DES-CBC-MD5
- EXP1024-DHE-DSS-RC4-SHA
- EXP1024-RC4-SHA
- EXP1024-RC4-MD5
- EXP-EDH-RSA-DES-CBC-SHA
- EXP-EDH-DSS-DES-CBC-SHA
- EXP-DES-CBC-SHA
- EXP-RC2-CBC-MD5
- EXP-RC4-MD5
- ECDHE

## Supported Trusted and Server Certificates

The IP phone can serve as a TLS client or a TLS server. In the TLS feature, we use the terms trusted and server certificate. These are also known as CA and device certificates.

The TLS requires the following security certificates to perform the TLS handshake:

- **Trusted Certificate:** When the IP phone requests a TLS connection with a server, the phone should verify the certificate sent by the server to decide whether it is trusted based on the trusted certificates list. You can upload 10 custom certificates at most. The format of the trusted certificate files must be \*.pem, \*.cer, \*.crt and \*.der and the maximum file size is 5MB.
- **Server Certificate:** When clients request a TLS connection with the IP phone, the phone sends the server certificate to the clients for authentication. The IP phone has two types of built-in server certificates: a unique server certificate and a generic server certificate. You can only upload one server certificate to the IP phone. The old server certificate will be overridden by the new one. The format of the server certificate files must be \*.pem and \*.cer and the maximum file size is 5MB.

**A unique server certificate:** It is unique to an IP phone (based on the MAC address) and issued by the Yealink Certificate Authority (CA).

**A generic server certificate:** It is issued by the Yealink Certificate Authority (CA). Only if no unique certificate exists, the phone may send a generic certificate for authentication.

The IP phone can authenticate the server certificate based on the trusted certificates list. The trusted certificates list and the server certificates list contain the default and custom certificates. You can specify the type of certificates the IP phone accepts: default certificates, custom certificates or all certificates.

Common Name Validation feature enables the IP phone to mandatorily validate the common name of the certificate sent by the connecting server. The security verification rules are compliant with RFC 2818.

**Note:** Resetting the IP phone to factory defaults will delete custom certificates by default. However, this feature is configurable by the parameter "static.phone\_setting.reserve\_certs\_enable" using the configuration file.

Resetting the IP phone to factory defaults will delete trusted and server certificates settings by default. However, this feature is configurable by the parameter "static.phone\_setting.reserve\_certs\_config.enable" using the configuration file.

### Topic

#### [Supported Trusted Certificates](#)

## Supported Trusted Certificates

Yealink phones trust the following CAs by default:

- DigiCert High Assurance EV Root CA
- Deutsche Telekom Root CA 2

- Equifax Secure Certificate Authority
- Equifax Secure eBusiness CA-1
- Equifax Secure Global eBusiness CA-1
- GeoTrust Global CA
- GeoTrust Global CA2
- GeoTrust Primary Certification Authority
- GeoTrust Primary Certification Authority G2
- GeoTrust Universal CA
- GeoTrust Universal CA2
- Thawte Personal Freemail CA
- Thawte Premium Server CA
- Thawte Primary Root CA
- Thawte Primary Root CA - G2
- Thawte Primary Root CA - G3
- Thawte Server CA
- VeriSign Class 1 Public Primary Certification Authority
- VeriSign Class 1 Public Primary Certification Authority - G2
- VeriSign Class 1 Public Primary Certification Authority - G3
- VeriSign Class 2 Public Primary Certification Authority - G2
- VeriSign Class 2 Public Primary Certification Authority - G3
- VeriSign Class 3 Public Primary Certification Authority
- VeriSign Class 3 Public Primary Certification Authority - G2
- VeriSign Class 3 Public Primary Certification Authority - G3
- VeriSign Class 3 Public Primary Certification Authority - G4
- VeriSign Class 3 Public Primary Certification Authority - G5
- VeriSign Class 4 Public Primary Certification Authority - G2
- VeriSign Class 4 Public Primary Certification Authority - G3
- VeriSign Universal Root Certification Authority
- ISRG Root X1 (Let's Encrypt Authority X1, Let's Encrypt Authority X2, Let's Encrypt Authority X3 and Let's Encrypt Authority X4 certificates are signed by the root certificate ISRG Root X1.)
- Baltimore CyberTrust Root
- DST Root CA X3
- Verizon Public SureServer CA G14-SHA2
- AddTrust External CA Root
- Go Daddy Class 2 Certification Authority
- Class 2 Primary CA
- Cybertrust Public SureServer SV CA
- DigiCert Assured ID Root G2
- DigiCert Assured ID Root G3
- DigiCert Assured ID Root CA
- DigiCert Global Root G2
- DigiCert Global Root G3
- DigiCert Global Root CA
- DigiCert Trusted Root G4
- Entrust Root Certification Authority
- Entrust Root Certification Authority - G2
- Entrust.net Certification Authority (2048)
- GeoTrust Primary Certification Authority - G3

- GlobalSign Root CA
- GlobalSign Root CA - R2
- Starfield Root Certificate Authority - G2
- TC TrustCenter Class 2 CA II
- TC TrustCenter Class 3 CA II
- TC TrustCenter Class 4 CA II
- TC TrustCenter Universal CA I
- TC TrustCenter Universal CA III
- Thawte Universal CA Root
- VeriSign Class 3 Secure Server CA - G2
- VeriSign Class 3 Secure Server CA – G3
- Thawte SSL CA
- StartCom Certification Authority
- StartCom Certification Authority G2
- Starfield Services Root Certificate Authority - G2
- RapidSSL CA
- Go Daddy Root Certificate Authority - G2
- Cybertrust Global Root
- COMODO RSA Certification Authority
- SectigoSSLCA
- Sectigo RSA Domain Validation Secure Server CA
- Sectigo RSA Certification Authority
- AmazonRootCA4
- AmazonRootCA3
- AmazonRootCA2
- AmazonRootCA1
- Yealink Root CA
- Yealink Equipment Issuing CA
- SIP Core
- QuoVadis Root CA 2
- QuoVadis Root Certification Authority
- USERTrust RSA Certification Authority
- Starfield Secure Certificate Authority - G2
- HydrantID SSL ICA G2

**Note:** Yealink endeavors to maintain a built-in list of most common used CA Certificates. Due to memory constraints, we cannot ensure a complete set of certificates. If you are using a certificate from a commercial Certificate Authority not in the list above, you can send a request to your local distributor. At this point, you can upload your particular CA certificate into your phone.

## TLS Configuration

The following table lists the parameters you can use to configure TLS.

<b>Parameter</b>	account.X.sip_server.Y.transport_type <sup>[1][2]</sup>	<MAC>.cfg
<b>Description</b>	It configures the type of transport protocol.	
<b>Permitted Values</b>	<b>0</b> -UDP <b>1</b> -TCP <b>2</b> -TLS	

	<b>3</b> -DNS NAPTR, if no server port is given, the phone performs the DNS NAPTR and SRV queries for the service type and port.	
<b>Default</b>	0	
<b>Web UI</b>	Account > Register > SIP Server Y > Transport	
<b>Parameter</b>	static.security.default_ssl_method	<y0000000000xx>.cfg
<b>Description</b>	It configures the TLS version to use for handshake negotiation between the phone and server (for example, SIP registration server, provisioning server).	
<b>Permitted Values</b>	<b>0</b> -TLS 1.0 <b>3</b> -SSL V23 (automatic negotiation with the server. The phone starts with TLS 1.2 for negotiation.) <b>4</b> -TLS 1.1 <b>5</b> -TLS 1.2 <b>6</b> -TLS 1.3	
<b>Default</b>	3	
<b>Parameter</b>	static.security.server_ssl_method	<y0000000000xx>.cfg
<b>Description</b>	It configures the supported TLS version to use for handshake negotiation between the phone and web browser.	
<b>Permitted Values</b>	<b>0</b> -TLS 1.0, TLS 1.1 and TLS 1.2 <b>1</b> -TLS 1.1 and TLS 1.2 <b>2</b> -TLS 1.2 <b>3</b> -TLS1.1, TLS1.2 and TLS1.3	
<b>Default</b>	1	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P and T29G	
<b>Parameter</b>	security.web_server.ssl_method static.security.xmpp_xsi.ssl_method static.security.xml_browser.ssl_method static.security.remote_phonebook.ssl_method static.security.dm.ssl_method static.security.auto_provision.ssl_method static.security.tr069.ssl_method static.security.802_1x.ssl_method static.security.sip.ssl_method static.security.sopi.ssl_method	<y0000000000xx>.cfg
<b>Description</b>	It configures the TLS version to use for handshake negotiation between the phone and the desired module. <b>Note:</b> If it is left blank: for "security.web_server.ssl_method", the value configured by "static.security.server_ssl_method" takes effect; for other modules, the value configured by "static.security.default_ssl_method" takes effect.	
<b>Permitted</b>	<b>0</b> -TLS 1.0	

<b>Values</b>	<b>3</b> -SSL V23 (automatic negotiation with the server. The phone starts with TLS 1.2 for negotiation.) <b>4</b> -TLS 1.1 <b>5</b> -TLS 1.2 <b>6</b> -TLS 1.3	
<b>Default</b>	Blank	
<b>Parameter</b>	security.web_server.tls_cipher_list security.xmpp_xsi.tls_cipher_list static.security.xml_browser.tls_cipher_list static.security.remote_phonebook.tls_cipher_list static.security.dm.tls_cipher_list static.security.auto_provision.tls_cipher_list static.security.tr069.tls_cipher_list static.security.802_1x.tls_cipher_list static.security.sip.tls_cipher_list static.security.sopi.tls_cipher_list	<y0000000000xx>.cfg
<b>Description</b>	It specifies the cipher list for the specific module.	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Parameter</b>	static.security.trust_certificates	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to only trust the server certificates in the Trusted Certificates list.	
<b>Permitted Values</b>	<b>0</b> -Disabled <b>1</b> -Enabled, the phone will authenticate the server certificate based on the trusted certificates list. Only when the authentication succeeds, will the phone trust the server.	
<b>Default</b>	1	
<b>Web UI</b>	Security > Trusted Certificates > Module(Default) > Only Accept Trusted Certificates	
<b>Parameter</b>	static.security.xmpp_xsi.trust_certificates static.security.xml_browser.trust_certificates static.security.remote_phonebook.trust_certificates static.security.dm.trust_certificates static.security.auto_provision.trust_certificates static.security.tr069.trust_certificates static.security.802_1x.trust_certificates static.security.sip.trust_certificates static.security.sopi.trust_certificates	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the desired module to only trust the server certificates in the Trusted Certificates list.	

<b>Permitted Values</b>	<p>0-Disabled</p> <p>1-Enabled, the desired module will authenticate the server certificate based on the trusted certificates list. Only when the authentication succeeds, will the desired module trust the server.</p>	
<b>Default</b>	Blank	
<b>Web UI</b>	Security > Trusted Certificates > Module(auto_provision/xml_browser/remote_phonebook/sip/sopi/802_1x/dm/tr069) > Only Accept Trusted Certificates	
<b>Parameter</b>	static.security.ca_cert	<y0000000000xx>.cfg
<b>Description</b>	It configures the type of certificates in the Trusted Certificates list for the phone to authenticate for TLS connection.	
<b>Permitted Values</b>	<p>0-Default Certificates</p> <p>1-Custom Certificates</p> <p>2-All Certificates</p>	
<b>Default</b>	2	
<b>Web UI</b>	Security > Trusted Certificates > Module(Default) > CA Certificates	
<b>Parameter</b>	static.security.xmpp_xsi.ca_cert static.security.xml_browser.ca_cert static.security.remote_phonebook.ca_cert static.security.dm.ca_cert static.security.auto_provision.ca_cert static.security.tr069.ca_cert static.security.802_1x.ca_cert static.security.sip.ca_cert static.security.sopi.ca_cert	<y0000000000xx>.cfg
<b>Description</b>	It configures the type of certificates in the Trusted Certificates list for the desired module to authenticate for TLS connection.	
<b>Permitted Values</b>	<p>0-Default Certificates</p> <p>1-Custom Certificates</p> <p>2-All Certificates</p>	
<b>Default</b>	Blank	
<b>Web UI</b>	Security > Trusted Certificates > Module(web_server/auto_provision/xml_browser/remote_phonebook/sip/sopi/802_1x/dm/tr069) > CA Certificates	
<b>Parameter</b>	static.security.cn_validation	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to mandatorily validate the CommonName or SubjectAltName of the certificate sent by the server.	
<b>Permitted Values</b>	<p>0-Disabled</p> <p>1-Enabled</p>	
<b>Default</b>	0	
<b>Web UI</b>	Security > Trusted Certificates > Module(Default) > Common Name Validation	
<b>Parameter</b>	static.security.xmpp_xsi.cn_validation static.security.xml_browser.cn_validation	<y0000000000xx>.cfg

	static.security.remote_phonebook.cn_validation static.security.dm.cn_validation static.security.auto_provision.cn_validation static.security.tr069.cn_validation static.security.802_1x.cn_validation static.security.sip.cn_validation static.security.sopi.cn_validation	
<b>Description</b>	It enables or disables the desired module to mandatorily validate the CommonName or SubjectAltName of the certificate sent by the server.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	Blank	
<b>Web UI</b>	Security > Trusted Certificates > Module(web_server/auto_provision/xml_browser/remote_phonebook/sip/sopi/802_1x/dm/tr069) > Common Name Validation	
<b>Parameter</b>	static.security.dev_cert	<y0000000000xx>.cfg
<b>Description</b>	It configures the type of device certificates for the phone to send for TLS authentication.	
<b>Permitted Values</b>	0-Default Certificates 1-Custom Certificates	
<b>Default</b>	0	
<b>Web UI</b>	Security > Server Certificates > Module(Default) > Device Certificates	
<b>Parameter</b>	static.security.xmpp_xsi.dev_cert static.security.xml_browser.dev_cert static.security.remote_phonebook.dev_cert static.security.dm.dev_cert static.security.auto_provision.dev_cert static.security.tr069.dev_cert static.security.802_1x.dev_cert static.security.sip.dev_cert static.security.sopi.dev_cert	<y0000000000xx>.cfg
<b>Description</b>	It configures the type of device certificates for the desired module to send for TLS authentication.	
<b>Permitted Values</b>	0-Default Certificates 1-Custom Certificates	
<b>Default</b>	0	
<b>Web UI</b>	Security > Server Certificates > Module(auto_provision/xml_browser/remote_phonebook/sip/sopi/802_1x/dm/tr069) > Device Certificates	
<b>Parameter</b>	static.trusted_certificates.url	<y0000000000xx>.cfg
<b>Description</b>	It configures the access URL of the custom trusted certificate used to authenticate the connecting server. <b>Note:</b> The certificate you want to upload must be in *.pem, *.crt, *.cer or *.der format.	



<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	<a href="#">T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/CP925/CP935W:</a> Security > Trusted Certificates > Upload Trusted Certificate File <a href="#">Other Phones:</a> Security > Trusted Certificates > Load Trusted Certificates File	
<b>Parameter</b>	static.trusted_certificates.delete	<y0000000000xx>.cfg
<b>Description</b>	It configures to delete all uploaded trusted certificates.	
<b>Permitted Values</b>	<p><b>http://localhost/all:</b> It deletes all uploaded trusted certificates.</p> <p><b>http://localhost/specified CN field or OU field or O field:</b> It deletes some specified uploaded trusted certificates according to CN, OU, O fields, the priority is CN field higher than OU field and OU field is higher than O field, if you want to delete multiple certificates, you can separate by comma.</p> <p><b>Example:</b></p> <p>trusted_certificates.delete = http://localhost/TrustedCertificates1.pem , http://localhost/TrustedCertificates2.pem</p> <p>TrustedCertificates2 is the CN, OU or O field of the certificate, .pem is the file format of the certificate.</p>	
<b>Default</b>	Blank	
<b>Parameter</b>	static.server_certificates.url	<y0000000000xx>.cfg
<b>Description</b>	It configures the access URL of the certificate the phone sends for authentication. <b>Note:</b> The certificate you want to upload must be in *.pem or *.cer format.	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	<a href="#">T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/CP925/CP935W:</a> Security > Server Certificates > Upload Server Certificate File <a href="#">Other Phones:</a> Security > Server Certificates > Load Server Certificates File	
<b>Parameter</b>	static.server_certificates.delete	<y0000000000xx>.cfg
<b>Description</b>	It deletes all uploaded server certificates.	
<b>Permitted Values</b>	http://localhost/all	
<b>Default</b>	Blank	
<b>Parameter</b>	static.phone_setting.reserve_certs_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to reserve custom certificates after it is reset to factory defaults.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	

<b>Parameter</b>	static.phone_setting.reserve_certs_config.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to reserve the trusted and server certificates settings after the phone reset to factory defaults.	
<b>Permitted Values</b>	<b>0</b> -Disabled, "static.security.trust_certificates", "static.security.ca_cert", "static.security.cn_validation" and "static.security.dev_cert" will be reset. <b>1</b> -Enabled, "static.security.trust_certificates", "static.security.ca_cert", "static.security.cn_validation", "static.security.dev_cert" and "static.phone_setting.reserve_certs_config.enable" will not be reset.	
<b>Default</b>	0	

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

[2]Y is the server ID. For T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/T33P/T33G/T31P/T31G/T31/T30P/T30, Y=1-3; for other phones, Y=1-2.

## Secure Real-Time Transport Protocol (SRTP)

Secure Real-Time Transport Protocol (SRTP) encrypts the audio streams during VoIP phone calls to avoid interception and eavesdropping. The parties participating in the call must enable SRTP feature simultaneously. When this feature is enabled on both phones, the type of encryption to use for the session is negotiated between the phones. This negotiation process is compliant with [RFC 4568](#).

When you place a call on the enabled SRTP phone, the phone sends an INVITE message with the RTP/RTCP encryption algorithm to the destination phone. As described in [RFC 3711](#), RTP/RTCP streams may be encrypted using an AES (Advanced Encryption Standard) algorithm.

Example of the RTP encryption algorithm carried in the SDP of the INVITE message:

```
m=audio 11780 RTP/SAVP 0 8 18 9 101
a=crypto:1 AES_CM_128_HMAC_SHA1_80 > inline:NzFINTUwZDk2OGVIOTc3YzNkYTkwZWVkMTM1YWFj
a=crypto:2 AES_CM_128_HMAC_SHA1_32 > inline:NzkyM2FjNzQ2ZDgxYjg0MzQwMGVmMGUxMzdmNWFm
a=crypto:3 F8_128_HMAC_SHA1_80 inline:NDIiMWIzZGE1ZTAwZjA5ZGFhNjQ5YmEANTMzYzA0
a=rtpmap:0 PCMU/8000
a=rtpmap:8 PCMA/8000
a=rtpmap:18 G729/8000
a=fmtp:18 annexb=no
a=rtpmap:9 G722/8000
a=fmtp:101 0-15
a=rtpmap:101 telephone-event/8000
a=ptime:20
a=sendrecv
```

The callee receives the INVITE message with the RTP encryption algorithm and then answers the call by responding with a 200 OK message which carries the negotiated RTP encryption algorithm.

Example of the RTP encryption algorithm carried in the SDP of the 200 OK message:

```
m=audio 11780 RTP/SAVP 0 101
```

```
a=rtpmap:0 PCMU/8000
a=rtpmap:101 telephone-event/8000
a=crypto:1 AES_CM_128_HMAC_SHA1_80 inline:NGY4OGViMDYzZjZjYzYTNiOTNkOWRiYzRiMjM0YzZj
a=sendrecv
a=ptime:20
a=fmtp:101 0-15
```

When SRTP is enabled on both phones, RTP streams will be encrypted, and a lock icon appears on the LCD screen of each IP phone after a successful negotiation.

**Note:** If you enable SRTP, then you should also enable TLS. This ensures the security of SRTP encryption. For more information on TLS, refer to [Transport Layer Security \(TLS\)](#). You can configure the IP phone to include unencrypted RTP/RTCP streams in SDP offers by “account.X.srtp.unencrypted\_rtp.enable”/“account.X.srtp.unencrypted\_rtcp.enable”.

**Topic**

[SRTP Configuration](#)

## SRTP Configuration

The following table lists the parameters you can use to configure the SRTP.

<b>Parameter</b>	account.X.srtp_encryption <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures whether to use audio encryption service.	
<b>Permitted Values</b>	<p><b>0</b>-Disabled</p> <p><b>1</b>-Optional, the phone will negotiate with the other phone what type of encryption to use for the session.</p> <p><b>2</b>-Compulsory, the phone must use SRTP during a call.</p>	
<b>Default</b>	0	
<b>Web UI</b>	Account > Advanced > RTP Encryption (SRTP)	
<b>Parameter</b>	account.X.srtp_lifetime <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	<p>It configures the lifetime of the master key used for the cryptographic parameter in SDP. The value specified is the number of SRTP packets.</p> <p>When the lifetime is set, a re-invite with a new key is sent when the number of SRTP packets sent for an outgoing call exceeds half the value of the master key lifetime.</p> <p><b>Note:</b> Setting this parameter to a non-zero value may affect the performance of the phone. It works only if “account.X.srtp_encryption” is set to 1 (Optional) or 2 (Compulsory).</p>	
<b>Permitted Values</b>	<p>Integer greater than or equal to 0</p> <p><b>0</b>-the master key lifetime is not set.</p> <p><b>1 to 1024</b>-the master key lifetime is 1024.</p> <p><b>1025 to 2<sup>48</sup></b>-the master key lifetime is the configured value.</p> <p><b>A value greater than 2<sup>48</sup></b>-the master key lifetime is 2<sup>48</sup>.</p>	
<b>Default</b>	0	
<b>Parameter</b>	account.X.srtp.unencrypted_rtp.enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the phone's capability to include unencrypted RTP streams in SDP offers when	

	using SRTP. <b>Note:</b> It works only if “account.X.srtp_encryption” is set to 1 (Optional) or 2 (Compulsory).
<b>Permitted Values</b>	<b>0</b> -Disabled <b>1</b> -Enabled, the phone offers both encrypted and unencrypted RTP streams (Unencrypted RTP streams carry UNENCRYPTED_SRTP session parameters) in SDP offers. After a successful negotiation, whether the RTP stream is encrypted or not depends on the SDP answer.
<b>Default</b>	0
<b>Parameter</b>	account.X.srtp.unencrypted_rtcp.enable <sup>[1]</sup> <MAC>.cfg
<b>Description</b>	It enables or disables the phone’s capability to include unencrypted RTCP streams in SDP offers when using SRTP. <b>Note:</b> It works only if “account.X.srtp_encryption” is set to 1 (Optional) or 2 (Compulsory).
<b>Permitted Values</b>	<b>0</b> -Disabled <b>1</b> -Enabled, the phone offers both encrypted and unencrypted RTCP streams (Unencrypted RTCP streams carry UNENCRYPTED_SRTCP session parameters) in SDP offers. After a successful negotiation, whether the RTCP stream is encrypted or not depends on the SDP answer.
<b>Default</b>	0
<b>Parameter</b>	account.X.tls.srtp_encryption_compulsorily <sup>[1]</sup> <MAC>.cfg
<b>Description</b>	It controls the mode of dynamic SRTP.
<b>Permitted Values</b>	<b>0</b> -Whether the phone enables SRTP is controlled by "account.X.srtp_encryption". <b>1</b> -If the account is registered with TLS, SRTP is forced to be enabled, and the configuration of "account.X.srtp_encryption" is invalid; if the account is registered with TCP or UDP, whether to enable SRTP is controlled by "account.X.srtp_encryption". <b>2</b> -If the account is registered with TLS, SRTP is forced to be enabled, and no Mediasec related header field will be carried during registration. The configuration of "account.X.srtp_encryption" is invalid; if the account is registered with TCP or UDP, whether to enable SRTP is controlled by "account.X.srtp_encryption".
<b>Default</b>	0

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## Encrypting and Decrypting Files

Yealink phones support downloading encrypted files from the server and encrypting files before/when uploading them to the server.

You can encrypt the following files:

- **Configuration files:** MAC-Oriented CFG file (<MAC>.cfg), Common CFG file (y0000000000xx.cfg), MAC-local CFG file (<MAC>-local.cfg) or other custom CFG files (for example, sip.cfg, account.cfg)
- **Contact Files:** <MAC>-contact.xml

To encrypt/decrypt files, you may have to configure an AES key.

**Note:** AES keys must be 16 characters/32 characters. The supported characters contain: 0 ~ 9, A ~ Z, a ~ z and special characters: # \$ % \* + , - . : = ? @ [ ] ^ \_ { } ~.

### Topics

[Configuration Files Encryption Tools](#)  
[Configuration Files Encryption and Decryption](#)  
[Contact Files Encryption and Decryption](#)  
[Encryption and Decryption Configuration](#)

## Configuration Files Encryption Tools

Yealink provides three configuration files encryption tools:

- Config\_Encrypt\_Tool.exe (via graphical tool for Windows platform)
- YealinkEncryptCMD.exe (via DOS command line for Windows platform)
- yealinkencrypt (for Linux platform)

The encryption tools support two encryption modes: RSA Mode and Compatibility Mode.

For more information on the encryption tools, refer to [Yealink Configuration Encryption Tool User Guide](#).

## Configuration Files Encryption and Decryption

Encrypted configuration files can be downloaded from the provisioning server to protect against unauthorized access and tampering of sensitive information (for example, login passwords, registration information).

You can encrypt the configuration files using encryption tools. You can also configure the <MAC>-local.cfg files to be automatically encrypted using 16-character/32-character symmetric keys when uploading to the server (by setting "static.auto\_provision.encryption.config" to 1).

For security reasons, you should upload encrypted configuration files to the root directory of the provisioning server. During auto provisioning, the phone requests to download the boot file first and then download the referenced configuration files. For example, the phone downloads an encrypted account.cfg file. The phone will decrypt it into the plaintext key (for example, key2) using the built-in key (for example, key1). Then the IP phone decrypts account.cfg file using key2. After decryption, the phone resolves configuration files and updates configuration settings onto the IP phone system.

## Contact Files Encryption and Decryption

Encrypted contact files can be used to protect against unauthorized access and tampering of private information (for example, contact number). It is helpful for protecting trade secrets.

You can configure the contact files to be automatically encrypted using 16-character/32 characters symmetric keys (configured by "static.auto\_provision.aes\_key.mac") when uploading to the server (by setting "static.auto\_provision.encryption.directory=1"). The encrypted contact files have the same file names as before. The encrypted contact files can be downloaded from the server and decrypted using 16-character/32 characters symmetric keys during auto provisioning. If the parameter static.auto\_provision.aes\_key.mac is left blank, "static.auto\_provision.aes\_key.com" will be used.

If the downloaded contact files are encrypted, the phone will try to decrypt <MAC>-contact.xml file using the plaintext AES key. After decryption, the phone resolves contact files and updates contact information onto the IP phone system.

## Encryption and Decryption Configuration

The following table lists the parameters you can use to configure the encryption and decryption.

<b>Parameter</b>	static.auto_provision.update_file_mode	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone only to download the encrypted files.	
<b>Permitted Values</b>	<p><b>0</b>-Disabled, the phone will download the configuration files (for example, sip.cfg, account.cfg, &lt;MAC&gt;-local.cfg) and &lt;MAC&gt;-contact.xml file from the server during auto provisioning no matter whether the files are encrypted or not. And then resolve these files and update settings onto the phone system.</p> <p><b>1</b>-Enabled, the phone will only download the encrypted configuration files (for example, sip.cfg, account.cfg, &lt;MAC&gt;-local.cfg) or &lt;MAC&gt;-contact.xml file from the server during auto provisioning, and then resolve these files and update settings onto the phone system.</p>	

<b>Default</b>	0	
<b>Parameter</b>	static.auto_provision.aes_key_in_file	<y0000000000xx>.cfg
<b>Description</b>	It configures how the phone decrypts files.	
<b>Permitted Values</b>	<p><b>0</b>-The phone will decrypt the encrypted configuration files using plaintext AES keys configured on the phone.</p> <p><b>1</b>-The phone determines whether the file is an encrypted file generated in RSA mode. If yes, the phone will decrypt the encrypted configuration file using the phone built-in RSA private key or self-define RSA private key. If no, the phone will request the &lt;xx&gt;.enc file first and decrypt the file using RSA private key, when there is no &lt;xx&gt;.enc file, the phone will request the &lt;xx_Security&gt;.enc file. Then the phone decrypt this file into the plaintext key (e.g., key2) using the phone built-in AES key (e.g., key1). The IP phone then decrypts the encrypted configuration file using the corresponding key (e.g., key2).</p>	
<b>Default</b>	0	
<b>Parameter</b>	static.auto_provision.aes_key.com	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the plaintext AES key for encrypting/decrypting the Common CFG/Custom CFG file.</p> <p>The valid characters contain: 0 ~ 9, A ~ Z, a ~ z and the following special characters are also supported: # \$ % * + , - . : = ? @ [ ] ^ _ { } ~.</p> <p><b>Example:</b></p> <p>static.auto_provision.aes_key.com = 0123456789abcdef</p> <p><b>Note:</b> For decrypting, it works only if “static.auto_provision.aes_key_in_file” is set to 0. If the downloaded MAC-Oriented file is encrypted and the parameter “static.auto_provision.aes_key.mac” is left blank, the phone will try to encrypt/decrypt the MAC-Oriented file using the AES key configured by the parameter “static.auto_provision.aes_key.com”.</p>	
<b>Permitted Values</b>	16/32 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Settings > Auto Provision > Common AES Key	
<b>Phone UI</b>	<p><u>Color Screen Phones:</u></p> <p>Menu &gt; Advanced (default password: admin) &gt; Auto Provision &gt; Common AES</p> <p><u>CP925/CP935W:</u></p> <p>More &gt; Advanced (default password: admin) &gt; Auto Provision &gt; Common AES</p> <p><u>Black-and-white Screen Phones:</u></p> <p>Menu &gt; Settings &gt; Advanced Settings (default password: admin) &gt; Auto Provision &gt; Common AES</p>	
<b>Parameter</b>	static.auto_provision.aes_key.mac	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the plaintext AES key for encrypting/decrypting the MAC-Oriented files (&lt;MAC&gt;.cfg, &lt;MAC&gt;-local.cfg and &lt;MAC&gt;-contact.xml).</p> <p>The valid characters contain: 0 ~ 9, A ~ Z, a ~ z and the following special characters are also supported: # \$ % * + , - . : = ? @ [ ] ^ _ { } ~.</p> <p><b>Example:</b></p> <p>static.auto_provision.aes_key.mac = 0123456789abmins</p> <p><b>Note:</b> For decrypting, it works only if “static.auto_provision.aes_key_in_file” is set to 0. If the down-</p>	

	loaded MAC-Oriented file is encrypted and the parameter "static.auto_provision.aes_key.mac" is left blank, the phone will try to encrypt/decrypt the MAC-Oriented file using the AES key configured by the parameter "static.auto_provision.aes_key.com".	
<b>Permitted Values</b>	16/32 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Settings > Auto Provision > MAC-Oriented AES Key	
<b>Phone UI</b>	<p><u>Color Screen Phones:</u> Menu &gt; Advanced (default password: admin) &gt; Auto Provision &gt; MAC-Oriented AES</p> <p><u>CP925/CP935W:</u> More &gt; Advanced (default password: admin) &gt; Auto Provision &gt; MAC-Oriented AES</p> <p><u>Black-and-white Screen Phones:</u> Menu &gt; Settings &gt; Advanced Settings (default password: admin) &gt; Auto Provision &gt; MAC-Oriented AES</p>	
<b>Parameter</b>	static.autoprovision.X.com_aes <sup>[1][2]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the plaintext AES key for decrypting the Common CFG file. If it is configured, it has a higher priority than the value configured by the parameter "static.auto_provision.aes_key.com".	
<b>Permitted Values</b>	16/32 characters	
<b>Default</b>	Blank	
<b>Parameter</b>	static.autoprovision.X.mac_aes <sup>[1][2]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the plaintext AES key for decrypting the MAC-Oriented CFG file. If it is configured, it has a higher priority than the value configured by the parameter "static.auto_provision.aes_key.mac".	
<b>Permitted Values</b>	16/32 characters	
<b>Default</b>	Blank	
<b>Parameter</b>	static.auto_provision.encryption.directory	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to encrypt <MAC>-contact.xml file using the plaintext AES key.	
<b>Permitted Values</b>	<p><b>0</b>-Disabled, the contact file will be uploaded unencrypted and will replace the one (encrypted or unencrypted) stored on the server if you have configured to back up the contacts to the server by the parameter "static.auto_provision.local_contact.backup.enable".</p> <p><b>1</b>-Enabled, the contact file will be uploaded encrypted and will replace the one (encrypted or unencrypted) stored on the server if you have configured to back up the contacts to the server by the parameter "static.auto_provision.local_contact.backup.enable". The plaintext AES key is configured by the parameter "static.auto_provision.aes_key.mac".</p>	
<b>Default</b>	0	
<b>Parameter</b>	static.auto_provision.encryption.call_log	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to encrypt <MAC>-calllog.xml file using the plaintext AES key.	
<b>Permitted Values</b>	<p><b>0</b>-Disabled, the call log file will be uploaded unencrypted and will replace the one (encrypted or unencrypted) stored on the server if you have configured to back up the call log to the server by the parameter "static.auto_provision.local_calllog.backup.enable".</p>	

	<b>1</b> -Enabled, the call log file will be encrypted uploaded and will replace the one (encrypted or unencrypted) stored on the server if you have configured to back up the call log to the server by the parameter "static.auto_provision.local_calllog.backup.enable". The plaintext AES key is configured by the parameter "static.auto_provision.aes_key.mac".	
<b>Default</b>	0	
<b>Parameter</b>	static.auto_provision.encryption.config	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to encrypt <MAC>-local.cfg file using the plaintext AES key.	
<b>Permitted Values</b>	<p><b>0</b>-Disabled, the MAC-local CFG file will be uploaded unencrypted and will replace the one (encrypted or unencrypted) stored on the server if you have configured to back up the MAC-local CFG file to the server by the parameter "static.auto_provision.custom.sync".</p> <p><b>1</b>-Enabled, the MAC-local CFG file will be uploaded encrypted and will replace the one (encrypted or unencrypted) stored on the server if you have configured to back up the MAC-local CFG file to the server by the parameter "static.auto_provision.custom.sync". The plaintext AES key is configured by the parameter "static.auto_provision.aes_key.mac".</p>	
<b>Default</b>	0	
<b>Parameter</b>	static.auto_provision.rsa_pri_key.url	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the URL to import the self-define RSA private key file.</p> <p><b>Note:</b> The key file must be in *.key format. It works only if "static.auto_provision.rsa_pri_key.enable" is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T48S, T46S, T42S, T41S, T33P, T33G, T31P, T31G, T31, T30P, T30, T27G, CP920, CP925, CP935W	
<b>Web UI</b>	Settings > Auto Provision > Import RSA Pri Key	
<b>Parameter</b>	static.auto_provision.rsa_pri_key.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the self-define RSA private key.	
<b>Permitted Values</b>	<p><b>0</b>-Disabled, the phone decrypts the encrypted configuration files using phone built-in RSA keys.</p> <p><b>1</b>-Enabled, the phone decrypts the encrypted configuration files using self-define RSA private key.</p>	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T48S, T46S, T42S, T41S, T33P, T33G, T31P, T31G, T31, T30P, T30, T27G, CP920, CP925, CP935W	
<b>Web UI</b>	Settings > Auto Provision > Self-Define RSA Pri Key	
<b>Parameter</b>	static.auto_provision.rsa_pri_key.delete	<y0000000000xx>.cfg
<b>Description</b>	It deletes the self-define RSA private key file.	
<b>Permitted Values</b>	http://localhost/all	
<b>Default</b>	Blank	
<b>Supported</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T48S, T46S, T42S, T41S, T33P, T33G,	



<b>Devices</b>	T31P, T31G, T31, T30P, T30, T27G, CP920, CP925, CP935W
----------------	--

[1]X is an activation code ID. X=1-50.

[2]If you change this parameter, the phone will reboot to make the change take effect.

## Incoming Network Signaling Validation

Yealink phones support the following three optional levels of security for validating incoming network signaling:

- **Source IP address validation:** ensure the request is received from an IP address of a server belonging to the set of target SIP servers.
- **Digest authentication:** challenge requests with digest authentication using the local credentials for the associated registered account.
- **Source IP address validation and digest authentication:** apply both of the above methods.

### Topic

[Incoming Network Signaling Validation Configuration](#)

## Incoming Network Signaling Validation Configuration

The following table lists the parameters you can use to configure the incoming network signaling validation.

<b>Parameter</b>	sip.request_validation.source.list	<y0000000000xx>.cfg
<b>Description</b>	It configures the name of the request method for which source IP address validation will be applied.	
<b>Example:</b>	sip.request_validation.source.list = INVITE, NOTIFY	
<b>Permitted Values</b>	INVITE, ACK, BYE, REGISTER, CANCEL, OPTIONS, INFO, MESSAGE, SUBSCRIBE, NOTIFY, REFER, PRACK, UPDATE	
<b>Default</b>	Blank	
<b>Parameter</b>	sip.request_validation.digest.list	<y0000000000xx>.cfg
<b>Description</b>	It configures the name of the request method for which digest authentication will be applied.	
<b>Example:</b>	sip.request_validation.digest.list = INVITE, SUBSCRIBE	
<b>Permitted Values</b>	INVITE, ACK, BYE, REGISTER, CANCEL, OPTIONS, INFO, MESSAGE, SUBSCRIBE, NOTIFY, REFER, PRACK, UPDATE	
<b>Default</b>	Blank	
<b>Parameter</b>	sip.request_validation.digest.realm	<y0000000000xx>.cfg
<b>Description</b>	It configures the string used for the authentication parameter Realm when performing the digest authentication.	
<b>Permitted Values</b>	A valid string	
<b>Default</b>	YealinkSPIP	
<b>Parameter</b>	sip.request_validation.event	<y0000000000xx>.cfg
<b>Description</b>	It configures which events specified within the Event header of SUBSCRIBE or NOTIFY request should be validated.	
	If it is left blank, all events will be validated.	
<b>Permitted</b>	A valid string	

<b>Values</b>	
<b>Default</b>	Blank

## USB Port Lock

You can lock the USB port on T57W/T54W/T53W/T53/T53C/T48U/T48S/T48G/T46U/T46S/T46G/T43U/T42U/T42S/T41S/T29G/T27G/CP920/CP925/CP935W phones.

The following features are not available when you disable the USB port:

- [Adding a Wallpaper from a USB Flash Drive](#)
- [Adding a Screensaver Picture from a USB Flash Drive](#)
- [Wi-Fi](#) (except T57W/T54W/T53W/CP920/CP925/CP935W)
- [Bluetooth](#) (except T57W/T54W/T53W/CP920/CP925/CP935W)
- [USB Recording](#)

### Topic

[USB Port Lock Configuration](#)

## USB Port Lock Configuration

The following table lists the parameters you can use to configure the USB port lock.

<b>Parameter</b>	static.usb.power.enable <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the USB port.	
<b>Permitted Values</b>	0-Disabled, the phone does not provide power to the USB port and not detect USB devices attached to the USB port. All the USB devices are disabled on the phone. 1-Enabled	
<b>Default</b>	1	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T48G, T46U, T46S, T46G, T43U, T42U, T42S, T41S, T29G, T27G, CP920, CP925, CP935W	
<b>Parameter</b>	static.usbdisk.function.enable <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the USB flash drive feature. <b>Note:</b> It works only if "static.usb.power.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled, the phone cannot detect the USB flash drive attached to the USB port. The USB item will not appear on the menu screen and there is no USB icon on the status bar. Only the USB flash drive is disabled, other USB devices such as Bluetooth dongle are still available on the phone. 1-Enabled	
<b>Default</b>	1	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T46U, T46S, T43U, T42U, CP920, CP925, CP935W	

<sup>[1]</sup>If you change this parameter, the phone will reboot to make the change take effect.

## Firmware Upgrade

There are two methods of firmware upgrade:

- Manually, from the local system for a single device via the web user interface.
- Automatically, from the provisioning server for a mass of devices.

**Note:** We recommend that the devices running the latest firmware should not be downgraded to an earlier firmware version. The new firmware is compatible with old configuration parameters, but not vice versa. All configurations will be cleared on the T23P/T23G/T21(P) E2/T19(P) E2 phones when downgrading the phones from firmware version 84 to 83.

### Topics

[Firmware for Each Phone Model](#)  
[Firmware Upgrade Configuration](#)  
[Upgrading Yealink Headset Firmware](#)

## Firmware for Each Phone Model

You can download the latest firmware online: <http://support.yealink.com/documentFront/forwardToDocumentFrontDisplayPage>.

The following table lists the associated and latest firmware name for each device model (X is replaced by the actual firmware version).

IP Phone Model	Firmware Name	Example
T57W/T54W/T53W/T53/T53C (T5W firmware unified)	96.x.x.x.rom	96.86.0.15.rom
T48U/T46U/T43U/T42U (T4U firmware unified)	108.x.x.x.rom	108.86.0.15.rom
T48S/T46S/T42S/T41S (T4S firmware unified)	66.x.x.x.rom	66.86.0.15.rom
T48G	35.x.x.x.rom	35.83.0.30.rom
T46G	28.x.x.x.rom	28.83.0.30.rom
T42G	29.x.x.x.rom	29.83.0.30.rom
T41P	36.x.x.x.rom	36.83.0.30.rom
T40P	54.x.x.x.rom	54.84.0.60.rom
T40G	76.x.x.x.rom	76.84.0.60.rom
T33P/T33G/T31P/T31G/T31/T30P/T30 (T3 firmware unified)	124.x.x.x.rom	124.86.0.5.rom
T29G	46.x.x.x.rom	46.83.0.30.rom
T27G	69.x.x.x.rom	69.86.0.15.rom
T23P/G	44.x.x.x.rom	44.84.0.60.rom
T21(P) E2	52.x.x.x.rom	52.84.0.60.rom

IP Phone Model	Firmware Name	Example
T19(P) E2	53.x.x.x.rom	53.84.0.60.rom
CP920	78.x.x.x.rom	78.86.0.15.rom
CP925	148.x.x.x.rom	148.86.0.5.rom
CP935W	149.x.x.x.rom	149.86.0.5.rom

## Firmware Upgrade Configuration

Before upgrading firmware, you need to know the following:

- Do not close and refresh the browser when the device is upgrading firmware via the web user interface.
- Do not unplug the network cables and power cables when the device is upgrading firmware.

The following table lists the parameters you can use to upgrade firmware.

<b>Parameter</b>	static.firmware.url	<y0000000000xx>.cfg
<b>Description</b>	It configures the access URL of the firmware file.	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	<a href="#">T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/CP925/CP935W:</a> Settings > Upgrade > Upgrade Firmware Other Phones: Settings > Upgrade > Select And Upgrade Firmware	

## Upgrading Yealink Headset Firmware

You can upgrade Yealink USB headset WH62/WH63/UH33/UH36/CP900/CP700 on T5XW/T4XU phones.

### Procedure

1. From the web user interface, click **Settings > Upgrade**.
2. In the **Upgrade Yealink Headset Firmware** block, click **Browse** to locate the headset firmware from your local system.

The screenshot displays the Yealink T57W web interface. On the left is a dark sidebar menu with options: Status, Account, Network, Dsskey, Features, Settings (expanded), Preference, Time&Date, Call Display, Upgrade (highlighted in blue), Auto Provision, and Configuration. The main content area shows a warning message: "These users (admin,user) are using the default password, please change the password!". Below this, the "Version" section lists "Firmware Version" as 96.86.0.55 and "Hardware Version" as 97.1.2.0.2.1.2. The "Reset" section has a "Reset to Factory Settings" button. The "Reboot" section has a "Reboot" button. The "Upgrade" section contains two rows: "Upgrade Firmware" and "Upgrade Yealink Headset Firmware". Each row has a text input field showing "No selected file(.rom)", a "Browse" button, and an "Upload" button. The "Upload" button in the "Upgrade Yealink Headset Firmware" row is highlighted with a red rectangle.

### 3. Click Upload.

**Note:** You can also upgrade Yealink USB headset via phone user interface: **Menu->Headset->Firmware Update.**

## Using DECT Handsets with T57W/T54W/T53W/T53/T53C Phones

You can turn Yealink T57W/T54W/T53W/T53/T53C phone to the corded-cordless phone. The corded-cordless phone consists of a T57W/T54W/T53W/T53/T53C phone, a DECT USB dongle DD10K and at least a handset. The supported handsets include W78H, W73H, W59R, W52H, W56H, W53H, CP930W and DD phone. The T57W/T54W/T53W/T53/T53C phone acts as a base station and Handset 1. Users can register up to other four handsets to one phone. It allows users to manage calls when they are away from their desk.

To use this feature, you should insert a DD10K into the rear USB port on the phone in advance.

Note that you can still use the phone features as usual on the corded-cordless phone.

**Note:** To use this feature, you should set "static.usb.power.enable" to 1 (Enabled).  
When satellite mode is disabled, Yealink recommends using forward and DND features in custom mode.

### Topics

- [Handset Backlight](#)
- [Handset Keypad Light](#)
- [Handset Wallpaper](#)
- [Handset Screen Saver](#)
- [Handset Name](#)
- [Number Assignment](#)
- [End Call on Hook](#)
- [Advisory Tones](#)
- [Base PIN](#)
- [DECT Intercom](#)
- [Handset LDAP Configuration](#)
- [Handset Network Directory](#)
- [Shared Directory](#)
- [Satellite Mode](#)
- [Repeater Settings Parameters](#)
- [Handset Settings Parameters](#)
- [Handset Firmware Upgrade Configuration](#)
- [Emergency Alarm](#)
- [Line Keys](#)
- [Visual and Audio Alert for Monitor Lines](#)

## Handset Backlight

The handset supports different backlight status and you can configure it.

For W78H/W73H/W59R/W53H/W56H, the backlight in charger or out of charger can be configured independently. You can enable the backlight to be on for about 30 minutes when the handset is charged, and then you can check the charging state during this period. You can also enable the backlight to be on for about 30 minutes when the handset is not charged. The backlight will be turned off after the handset is idle for a period of time. When an incoming call arrives, a key is pressed or the status of handset changes, the backlight is automatically turned on.

### Topic

[Handset Backlight Configuration](#)

## Handset Backlight Configuration

The following table lists the parameters you can use to configure the handset backlight.

<b>Parameter</b>	custom.handset.backlight_in_charger.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the handset backlight to be on for about 30 minutes when it is charged. <b>Note:</b> It will take effect on all handsets that are registered on the same phone. It works only if "static.auto_provision.handset_configured.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	-1-Do not modify the handset configuration (Keep the original configuration of the handset). 0-Disabled, the backlight will be turned off after the handset is idle for about 10 seconds. 1-Enabled, the backlight will be turned off after the handset is idle for about 30 minutes.	
<b>Default</b>	-1	
<b>Supported Devices</b>	W78H, W73H, W59R, W53H, W56H	
<b>Handset UI</b>	OK > Settings > Display > Display Backlight > In Charger	
<b>Parameter</b>	custom.handset.backlight_out_of_charger.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the handset backlight to be on for about 30 minutes when it is not charged. <b>Note:</b> It will take effect on all handsets that are registered on the same phone. It works only if "static.auto_provision.handset_configured.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	-1-Do not modify the handset configuration (Keep the original configuration of the handset). 0-Disabled, the backlight will be turned off after the handset is idle for about 10 seconds. 1-Enabled, the backlight will be turned off after the handset is idle for about 30 minutes.	
<b>Default</b>	-1	
<b>Supported Devices</b>	W78H, W73H, W59R, W53H, W56H	
<b>Handset UI</b>	OK > Settings > Display > Display Backlight > Out Of Charger	
<b>Parameter</b>	phone_setting.on_call.backlight_mode	<y0000000000xx>.cfg
<b>Description</b>	It configures the backlight brightness of the CP935W during a call.	
<b>Permitted Values</b>	0-When talking for about 2 minutes without any operation on the phone, the backlight is reduced to 10% brightness when the Inactive Level is chosen Low. 1-The backlight always maintains the intensity set by " phone_setting.active_backlight_level" during a call.	
<b>Default</b>	0	
<b>Supported Devices</b>	CP935W	

## Handset Keypad Light

You can enable the handset keypad light to light up the keypad when any key is pressed. This helps you distinguish keys from each other in a dark environment.

### Topic

[Handset Keypad Light Configuration](#)

## Handset Keypad Light Configuration

The following table lists the parameter you can use to configure the handset keypad light.

<b>Parameter</b>	custom.handset.keypad_light.enable	<y000000000xx>.cfg
<b>Description</b>	It enables or disables the handset to turn on the keypad light (digital key, # key, * key, TRAN key, and Mute key) when any key is pressed. <b>Note:</b> It will take effect on all handsets that are registered to the same phone. It works only if “static.auto_provision.handset_configured.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	-1-Do not modify the configuration. 0-Disabled 1-Enabled	
<b>Default</b>	-1	
<b>Supported Devices</b>	W78H, W73H, W59R, W53H, W56H	
<b>Handset UI</b>	OK > Settings > Display > Keypad LED	

## Handset Wallpaper

Wallpaper is an image used as the background for the handset idle screen. Users can select an image from handset's built-in background.

### Topic

[Handset Wallpaper Configuration](#)

## Handset Wallpaper Configuration

The following table lists the parameter you can use to configure the handset wallpaper.

<b>Parameter</b>	custom.handset.wallpaper	<y000000000xx>.cfg
<b>Description</b>	It configures the wallpaper displayed on the handset LCD screen. <b>Note:</b> It will take effect on all handsets that are registered on the same phone. It works only if “static.auto_provision.handset_configured.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	1-Wallpaper1 2-Wallpaper2 3-Wallpaper3 4-Wallpaper4 5-Wallpaper5	
<b>Default</b>	-1, do not change the wallpaper set on each handset.	
<b>Supported Devices</b>	W78H, W73H, W59R, W53H, W56H	
<b>Handset UI</b>	W78H/W73H/W59R/W53H/W56H: OK > Settings > Display > Wallpaper CP935W: More > Basic > Display > Wallpaper	



## Handset Screen Saver

The screen saver of the handset is designed to protect your LCD screen. You can enable the screen saver to protect the LCD screen, an analog clock will be activated and appear on the LCD screen after the handset is idle for approximately 10 seconds.

It is only applicable to W78H/W73H/W59R/W56H/W53H handsets.

### Topic

[Handset Screen Saver Configuration](#)

## Handset Screen Saver Configuration

The following table lists the parameter you can use to configure the handset screen saver.

<b>Parameter</b>	custom.handset.screen_saver.enable <sup>[1]</sup>	<y000000000xx>.cfg
<b>Description</b>	It enables or disables screen saver feature. <b>Note:</b> It will take effect on all handsets that are registered on the same phone. It works only if "static.auto_provision.handset_configured.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	-1-Do not modify the handset configuration (Keep the original configuration of the handset). 0-Disabled 1-Enabled, an analog clock will be activated and appear on the LCD screen if no user activity is sensed for approximately 10 seconds.	
<b>Default</b>	-1	
<b>Supported Devices</b>	W78H, W73H, W59R, W53H, W56H	
<b>Handset UI</b>	OK > Settings > Display > Screen Saver	

## Handset Name

The handset will be assigned a name by default if successfully registered to the phone. You can personalize the handset name.

### Topic

[Handset Name Configuration](#)

## Handset Name Configuration

The following table lists the parameter you can use to configure the handset name.

<b>Parameter</b>	handset.X.name <sup>[1]</sup>	<y000000000xx>.cfg
<b>Description</b>	It configures the name of the handset. <b>Note:</b> If it is set to blank, it will display the corresponding default handset name.	
<b>Permitted Values</b>	String within 24 characters	
<b>Default</b>	The handset name for handset 1 is Corded phone. The handset name for handset 2 is Handset 2. The handset name for handset 3 is Handset 3. The handset name for handset 4 is Handset 4. The handset name for handset 5 is Handset 5.	

<b>Web UI</b>	Status > Handset > Handset Name > Handset X <sup>[1]</sup>
<b>Phone UI</b>	<u>T57W/T54W/T53C:</u> Menu > DECT Settings > Handsets > Handset X <sup>[1]</sup> <u>T53W/T53:</u> Menu > Settings > DECT Settings > Handsets > Handset X <sup>[1]</sup>
<b>Handset UI</b>	<u>W78H/W73H/W59R/W53H/W56H:</u> OK > Settings > Handset Name <u>DD Phone (Black-and-white Screen)/CP930W:</u> Menu > Settings > Basic Settings > Phone Name <u>DD Phone(Color Screen):</u> Menu > Basic Settings > Phone Name

[1]X is the handset ID. X=2-5.

## Number Assignment

After the handset is registered to the phone, you can assign one or more outgoing lines or incoming lines for the handset. The phone acts as the Handset 1 (Corded phone).

The handset can only use the assigned outgoing line(s) to place calls. When multiple outgoing lines are assigned to the handset, the handset uses the first line as the default outgoing line. You can change the default outgoing line of the handset.

The handset can only receive incoming calls via the assigned incoming line(s). You can assign incoming lines to all handsets that are registered to the same phone.

**Note:** You can only assign one outgoing line and one incoming line for the CP930W. And make sure that the outgoing line and the incoming line are the same line.

### Topic

[Number Assignment Configuration](#)

## Number Assignment Configuration

The following table lists the parameters you can use to assign lines.

<b>Parameter</b>	handset.X.incoming_lines <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the lines to receive incoming calls for a specific handset.	
<b>Permitted Values</b>	1-Line 1 2-Line 2 3-Line 3 4-Line 4 5-Line 5 Multiple line IDs are separated by commas.	
<b>Default</b>	The incoming line for Corded phone is line 1-line5. The incoming line for handset 1 is line 1. The incoming line for handset 2 is line 2.	

	The incoming line for handset 3 is line 3. The incoming line for handset 4 is line 4. The incoming line for handset 5 is line 5.	
<b>Web UI</b>	Account > Number Assignment > Incoming lines	
<b>Parameter</b>	handset.X.dial_out_lines <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the lines to place outgoing calls for a specific handset. Multiple line IDs are separated by commas.	
<b>Permitted Values</b>	1-Line 1 2-Line 2 3-Line 3 4-Line 4 5-Line 5	
<b>Default</b>	The outgoing line for Corded phone is line 1-line5. The outgoing line for handset 2 is line 2. The outgoing line for handset 3 is line 3. The outgoing line for handset 4 is line 4. The outgoing line for handset 5 is line 5.	
<b>Web UI</b>	Account > Number Assignment > Outgoing lines	
<b>Parameter</b>	handset.X.dial_out_default_line <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the default line to place outgoing calls for a specific handset.	
<b>Permitted Values</b>	Integer from 1 to 5	
<b>Default</b>	X	
<b>Supported Devices</b>	All handsets except CP930W	
<b>Web UI</b>	Account > Number Assignment > Outgoing lines > Default	

[1]X is the handset ID. X=1-5.

## End Call on Hook

You can configure whether to end a call when you place the handset into the charging cradle.

### Topic

[End Call on Hook Configuration](#)

## End Call on Hook Configuration

The following table lists the parameter you can use to configure the end call on hook.

<b>Parameter</b>	phone_setting.end_call_on_hook.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables to end a call when placing the handset into the charger cradle.	
<b>Permitted Values</b>	0-Never	

	1-Always
<b>Default</b>	1
<b>Supported Devices</b>	W78H, W73H, W59R, W53H, W56H
<b>Web UI</b>	Features > General Information > End Call On Hook

## Advisory Tones

Advisory tones are the acoustic signals of your handset, which inform you of different actions and states.

It is not applicable to DD phones.

You can configure the following advisory tones independently for each other:

- **Keypad Tone:** plays when you press any key of the keypad. For CP930W, you can only configure it by navigating to **Menu > Settings > Basic Settings > Sound > Advisory Tones > Keypad Tone**. It is not applicable to CP935W.
- **Key Tone:** plays when you tap the dial pad. It is only applicable to CP935W, you can configure it by navigating to **More > Basic > Sound > Advisory Tones > Key Tone**.
- **Touch Tone:** plays when you tap the keys (except the off-hook key and the touch keypad). You can only configure it by navigating to **Menu > Settings > Basic Settings > Sound > Advisory Tones > Touch Tone**. For CP935W, you can only configure it by navigating to **More > Basic > Sound > Advisory Tones > Touch Tone**. It is only applicable to CP930W/CP935W.
- **Confirmation:** plays when you save settings or place the handset in the charger cradle. For CP930W, you can only configure it by navigating to **Menu > Settings > Basic Settings > Sound > Advisory Tones > Confirmation**. It is not applicable to CP935W.
- **Low Battery:** plays when battery capacity is low and the handset requires being charged. For CP930W, you can only configure it by navigating to **Menu > Settings > Basic Settings > Sound > Advisory Tones > Low Battery**. For CP935W, you can only configure it by navigating to **More > Basic > Sound > Advisory Tones > Low Battery Tone**.

### Topic

[Advisory Tones Configuration](#)

## Advisory Tones Configuration

The following table lists the parameters you can use to configure the advisory tones.

<b>Parameter</b>	custom.handset.keypad_tone.enable	<y000000000xx>.cfg
<b>Description</b>	It enables or disables the handset to play a tone when any key is pressed. <b>Note:</b> It will take effect on all handsets that are registered on the same phone. It works only if "static.auto_provision.handset_configured.enable" is set to 1 (Enabled) and the silent mode is off.	
<b>Permitted Values</b>	-1-Do not modify the handset configuration (Keep the original configuration of the handset). 0-Disabled 1-Enabled	
<b>Default</b>	-1	
<b>Supported Devices</b>	W78H, W73H, W59R, W53H, W56H, CP930W	
<b>Handset UI</b>	W78H/W73H/W59R/W53H/W56H: OK > Settings > Audio > Advisory Tones > Keypad Tone	

	<u>CP930W:</u> Menu > Settings > Basic Settings > Sound > Advisory Tones > Keypad Tone	
<b>Parameter</b>	custom.handset.confirmation_tone.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the handset to play a tone when a user saves settings or places the handset in the charger cradle. <b>Note:</b> It will take effect on all handsets that are registered on the same phone. It works only if “static.auto_provision.handset_configured.enable” is set to 1 (Enabled) and the silent mode is off.	
<b>Permitted Values</b>	-1-Do not modify the handset configuration (Keep the original configuration of the handset). 0-Disabled 1-Enabled	
<b>Default</b>	-1	
<b>Supported Devices</b>	W78H, W73H, W59R, W53H, W56H, CP930W	
<b>Handset UI</b>	<u>W78H/W73H/W59R/W53H/W56H:</u> OK > Settings > Audio > Advisory Tones > Confirmation <u>CP930W:</u> Menu > Settings > Basic Settings > Sound > Confirmation	
<b>Parameter</b>	custom.handset.low_battery_tone.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the handset to play a tone when battery capacity is low. <b>Note:</b> It will take effect on all handsets that are registered on the same phone. It works only if “static.auto_provision.handset_configured.enable” is set to 1 (Enabled) and the silent mode is off.	
<b>Permitted Values</b>	-1-Do not modify the handset configuration (Keep the original configuration of the handset). 0-Disabled 1-Enabled	
<b>Default</b>	-1	
<b>Supported Devices</b>	W78H, W73H, W59R, W53H, W56H, CP930W, CP935W	
<b>Handset UI</b>	<u>W78H/W73H/W59R/W53H/W56H:</u> OK > Settings > Audio > Advisory Tones > Low Battery <u>CP930W:</u> Menu > Settings > Basic Settings > Sound > Low Battery <u>CP935W:</u> More > Basic > Sound > Low Battery Tone	

## Base PIN

To avoid unauthorized registration or access to some features on the handset, you should keep the base PIN secret.

You can change the base PIN for security.

### Topic

[Base PIN Configuration](#)

## Base PIN Configuration

The following table lists the parameters you can use to configure the base PIN.

<b>Parameter</b>	base.pin_code	<y0000000000xx>.cfg
<b>Description</b>	It configures the base PIN.	
<b>Permitted Values</b>	Integer from 0000 to 9999	
<b>Default</b>	0000	
<b>Web UI</b>	Security > Base PIN > Base Unit PIN	
<b>Handset UI</b>	<p><u>W78H/W73H/W59R/W53H/W56H:</u> OK &gt; Settings &gt; System Settings &gt; Change Base PIN</p> <p><u>DD Phone(Black-and-white Screen):</u> Menu &gt; Settings &gt; Advanced Settings (default password: 0000) &gt; Change Password</p> <p><u>DD Phone(Color Screen):</u> Menu &gt; Advanced Settings (default password: 0000) &gt; Change Password</p> <p><u>CP930W:</u> Menu &gt; Settings &gt; Advanced Settings (default PIN: 0000) &gt; Change PIN</p> <p><u>CP935W:</u> More &gt; Advanced (default PIN: 0000) &gt; Change PIN</p>	
<b>Phone UI</b>	<p><u>T57W/T54W/T53C:</u> Menu &gt; DECT Settings &gt; Change Base PIN</p> <p><u>T53W/T53:</u> Menu &gt; Settings &gt; DECT Settings &gt; Change Base PIN</p>	
<b>Parameter</b>	base.double_pin_code.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables double PIN feature.	
<b>Permitted Values</b>	<p><b>0</b>-Disabled, users use the PIN configured by "base.pin_code" to register the handset or access some features.</p> <p><b>1</b>-Enabled, users use the PIN configured by "base.pin_code_for_register" to register the handset, and use the PIN configured by "base.pin_code" to access some features.</p>	
<b>Default</b>	0	
<b>Parameter</b>	base.pin_code_for_register	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the PIN for registering or de-registering a handset.</p> <p><b>Note:</b> It works only if "base.double_pin_code.enable" is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	Integer from 0000 to 9999	
<b>Default</b>	0000	

## DECT Intercom

Intercom is a useful feature in an office environment to quickly connect with the operator or the secretary. Users can make internal intercom calls and external intercom calls on the handset. Internal intercom calls are made among handsets registered to the same phone.

The handset can automatically answer an incoming external intercom call and play warning tone.

### Topic

[DECT Intercom Configuration](#)

## DECT Intercom Configuration

The following table lists the parameters you can use to configure DECT intercom.

<b>Parameter</b>	custom.handset.auto_intercom	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the auto intercom feature on the handset.	
<b>Permitted Values</b>	<p><b>-1</b>-Do not modify the configuration.</p> <p><b>0</b>-Off, auto intercom feature is disabled. Users need to answer incoming internal intercom calls manually.</p> <p><b>1</b>-On(Beep Off), the phone/handset answers an incoming internal intercom call automatically without a warning tone.</p> <p><b>2</b>-On(Beep On), the phone/handset answers an incoming internal intercom call automatically and plays a warning tone. It works when the silence mode is off.</p>	
<b>Default</b>	-1	
<b>Handset UI</b>	OK > Settings > Telephony > Auto Intercom	
<b>Phone UI</b>	<p>T57W/T54W/T53C: Menu &gt; DECT Settings &gt; Auto Intercom &gt; Auto Intercom</p> <p>T53W/T53: Menu &gt; Settings &gt; DECT Settings &gt; Auto Intercom &gt; Auto Intercom</p>	
<b>Parameter</b>	features.intercom.headset_prior.enable	<y0000000000xx>.cfg
<b>Description</b>	It configures the channel mode when an incoming intercom call is automatically answered. <b>Note:</b> It works only if "custom.handset.auto_intercom" is set to 1 or 2. For the phone, the headset mode should be activated for use; for the handset registered to the phone, the headset should be connected in advance.	
<b>Permitted Values</b>	<p><b>0</b>-Speaker Mode</p> <p><b>1</b>-Headset Mode</p>	
<b>Default</b>	1	

## Handset LDAP Configuration

The following table lists the parameters you can use to configure LDAP for each handsets.

<b>Parameter</b>	handset.X ldap.enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the LDAP feature.	
<b>Permitted Values</b>	<p><b>0</b>-Disabled</p> <p><b>1</b>-Enabled</p>	

<b>Default</b>	0	
<b>Web UI</b>	Directory > LDAP > Handset X > Enable LDAP	
<b>Parameter</b>	handset.X.ldap.name_filter <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	<p>It configures the search criteria for LDAP contact names lookup.</p> <p>The “*” symbol in the filter stands for any character. The “%” symbol in the filter stands for the name entered by the user.</p> <p><b>Example:</b></p> <p>ldap.name_filter = ((cn=%)(sn=%))</p> <p>When the cn or sn of the LDAP contact matches the entered name, the record will be displayed on the phone screen.</p> <p>ldap.name_filter = (&amp;(cn=*)(sn=%))</p> <p>When the cn of the LDAP contact is set and the sn of the LDAP contact matches the entered name, the records will be displayed on the phone screen.</p> <p>ldap.name_filter = (!(cn=%))</p> <p>When the cn of the LDAP contact does not match the entered name, the records will be displayed on the phone screen.</p>	
<b>Permitted Values</b>	String within 512 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Directory > LDAP > Handset X > LDAP Name Filter	
<b>Parameter</b>	handset.X.ldap.number_filter <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	<p>It configures the search criteria for LDAP contact numbers lookup.</p> <p>The “*” symbol in the filter stands for any number. The “%” symbol in the filter stands for the number entered by the user.</p> <p><b>Example:</b></p> <p>ldap.number_filter = ((telephoneNumber=%)(mobile=%)(ipPhone=%))</p> <p>When the number of the telephoneNumber, mobile or ipPhone of the contact record matches the search criteria, the record will be displayed on the phone screen.</p> <p>ldap.number_filter = (&amp;(telephoneNumber=*)(mobile=%))</p> <p>When the telephoneNumber of the LDAP contact is set and the mobile of the LDAP contact matches the entered number, the record will be displayed on the phone screen.</p>	
<b>Permitted Values</b>	String within 512 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Directory > LDAP > Handset X > LDAP Number Filter	
<b>Parameter</b>	handset.X.ldap.tls_mode <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the connection mode between the LDAP server and the phone.	
<b>Permitted Values</b>	<p>0-LDAP—The unencrypted connection between the LDAP server and the IP phone (port 389 is used by default).</p> <p>1-LDAP TLS Start—The TLS/SSL connection between the LDAP server and the IP phone (port 389 is</p>	



	used by default).	
	2-LDAPs—The TLS/SSL connection between the LDAP server and the IP phone (port 636 is used by default).	
<b>Default</b>	0	
<b>Web UI</b>	Directory > LDAP > Handset X > LDAP TLS Mode	
<b>Parameter</b>	handset.X.ldap.host <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the IP address or domain name of the LDAP server.	
<b>Permitted Values</b>	IP address or domain name	
<b>Default</b>	Blank	
<b>Web UI</b>	Directory > LDAP > Handset X > Server Address	
<b>Parameter</b>	handset.X.ldap.port <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the port of the LDAP server.	
<b>Permitted Values</b>	Integer from 1 to 65535	
<b>Default</b>	389 (LDAPS: 636)	
<b>Web UI</b>	Directory > LDAP > Handset X > Port	
<b>Parameter</b>	handset.X.ldap.base <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the LDAP search base which corresponds to the location of the LDAP phonebook from which the LDAP search request begins. The search base narrows the search scope and decreases directory search time. <b>Example:</b> ldap.base = dc=yealink,dc=cn	
<b>Permitted Values</b>	String within 512 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Directory > LDAP > Handset X > Base	
<b>Parameter</b>	handset.X.ldap.user <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the user name used to log into the LDAP server. This parameter can be left blank in case the server allows anonymity to log into. Otherwise, you will need to provide the user name to log into the LDAP server. <b>Example:</b> ldap.user = cn=manager,dc=yealink,dc=cn	
<b>Permitted Values</b>	String within 512 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Directory > LDAP > Handset X > User Name	
<b>Parameter</b>	handset.X.ldap.password <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the password to log into the LDAP server.	

	This parameter can be left blank in case the server allows anonymous to log into. Otherwise, you will need to provide the password to log into the LDAP server.	
<b>Permitted Values</b>	String within 512 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Directory > LDAP > Handset X > Password	
<b>Parameter</b>	handset.X.ldap.max_hits <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the maximum number of search results to be returned by the LDAP server.	
<b>Permitted Values</b>	Integer from 1 to 1000	
<b>Default</b>	50	
<b>Web UI</b>	Directory > LDAP > Handset X > Max Hits (1~1000)	
<b>Parameter</b>	handset.X.ldap.name_attr <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	<p>It configures the name attributes of each record to be returned by the LDAP server. It compresses the search results. You can configure multiple name attributes separated by spaces.</p> <p><b>Example:</b></p> <p>ldap.name_attr = cn sn</p> <p>This requires the “cn” and “sn” attributes set for each contact record on the LDAP server.</p>	
<b>Permitted Values</b>	String within 512 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Directory > LDAP > Handset X > LDAP Name Attributes	
<b>Parameter</b>	handset.X.ldap.numb_attr <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	<p>It configures the number attributes of each record to be returned by the LDAP server. It compresses the search results. You can configure multiple number attributes separated by spaces.</p> <p><b>Example:</b></p> <p>ldap.numb_attr = mobile ipPhone</p> <p>This requires the “mobile” and “ipPhone” attributes set for each contact record on the LDAP server.</p>	
<b>Permitted Values</b>	String within 512 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Directory > LDAP > Handset X > LDAP Number Attributes	
<b>Parameter</b>	handset.X.ldap.display_name <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	<p>It configures the display name of the contact record displayed on the phone screen.</p> <p>The value must start with a “%” symbol.</p> <p><b>Example:</b></p> <p>ldap.display_name = %cn</p> <p>The cn of the contact record is displayed on the phone screen.</p>	
<b>Permitted Values</b>	String within 512 characters	

<b>Default</b>	Blank	
<b>Web UI</b>	Directory > LDAP > Handset X > LDAP Display Name	
<b>Parameter</b>	handset.X.ldap.version <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the LDAP protocol version supported by the IP phone. The version must be the same as the version assigned on the LDAP server.	
<b>Permitted Values</b>	2 or 3	
<b>Default</b>	3	
<b>Web UI</b>	Directory > LDAP > Handset X > Protocol	
<b>Parameter</b>	handset.X.ldap.call_in_lookup <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the phone to perform an LDAP search when receiving an incoming call.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Directory > LDAP > Handset X > LDAP Lookup for Incoming Call	
<b>Parameter</b>	handset.X.ldap.call_out_lookup <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the phone to perform an LDAP search when placing a call.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Web UI</b>	Directory > LDAP > Handset X > LDAP Lookup for Callout	
<b>Parameter</b>	handset.X.ldap.ldap_sort <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the phone to sort the search results in alphabetical order or numerical order.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Directory > LDAP > Handset X > LDAP Sorting Results	
<b>Parameter</b>	handset.X.ldap.incoming_call_special_search.enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	<p>It enables or disables the phone to search the telephone numbers starting with "+" symbol and "00" from the LDAP server if the incoming phone number starts with "+" or "00". When completing the LDAP search, all the search results will be displayed on the phone screen.</p> <p><b>Example:</b></p> <p>If the phone receives an incoming call from the phone number 0044123456789, it will search 0044123456789 from the LDAP server first, if no result found, it will search +44123456789 from the server again. The phone will display all the search results.</p> <p><b>Note:</b> It works only if "ldap.call_in_lookup" is set to 1 (Enabled). You may need to set "ldap.name_filter" to be ((cn=%)(sn=%)(telephoneNumber=%)(mobile=%)) for searching the telephone numbers starting with "+" symbol.</p>	
<b>Permitted Values</b>	0-Disabled 1-Enabled	

<b>Default</b>	0
----------------	---

[1]X is the handset ID. X=1-5.

## Handset Network Directory

<b>Parameter</b>	bw.xsi.directory.multiple_accounts.enable	<y0000000000xx>.cfg
<b>Description</b>	It configures the handset to display BSFT network directory on the screen. <b>Note:</b> It works only if "bw.xsi.directory.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-All handsets display network directory of account 1. 2-The handset displays the personal directory (configured individually) and the other network directory of account 1.	
<b>Default</b>	0	

## Shared Directory

Users can manage and call the contacts in the Shared Directory on the phone and all the registered handsets.

The shared directory can store up to 1000 contacts.

It is not applicable to DD phones.

### Topics

[Shared Directory Configuration](#)

[Shared Contact File Customization](#)

## Shared Directory Configuration

The following table lists the parameters you can use to configure the shared directory.

<b>Parameter</b>	static.directory_setting.shared_contact.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the Shared Directory feature.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	All handsets except DD phones	
<b>Parameter</b>	shared_contact_list.url	<y0000000000xx>.cfg
<b>Description</b>	It configures the access URL of the shared contact file (*.xml) of the phone and registered handsets. <b>Example:</b> shared_contact_list.url = http://192.168.10.25/contact.xml <b>Note:</b> It works only if "static.directory_setting.shared_contact.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All handsets except DD phones	

<b>Web UI</b>	Directory > DECT Directory > Import Contacts > Import to (Shared Directory) > Select .xml file form
---------------	---

## Shared Contact File Customization

You can customize the shared contacts using local contact template.

You can ask the distributor or Yealink FAE for local contact template. You can also obtain the template online: <http://support.yealink.com/documentFront/forwardToDocumentFrontDisplayPage>.

### Topics

[Shared Contact File Elements and Attributes](#)  
[Customizing Shared Contact File](#)

## Shared Contact File Elements and Attributes

The following table lists the elements and attributes you can use to add contacts in the shared contact file. We recommend that you do not edit these elements and attributes.

Elements	Attributes	Description
Contact	display_name	Specify the contact name. <b>Note:</b> The contact name cannot be blank or duplicated.
	office_number	Specify the office number.
	mobile_number	Specify the mobile number.
	other_number	Specify the other number.
	line	Do not modify this attribute and value.
	ring	Do not modify this attribute and value.
	default_photo	Do not modify this attribute and value.
	selected_photo	Do not modify this attribute and value.
	group_id_name	Do not modify this attribute and value.

## Customizing Shared Contact File

1. Open the shared contact file.
2. To add a contact, add `<contact display_name="" office_number="" mobile_number="" other_number="" line="-1" ring="Auto" default_photo="Default:default_contact_image.png" selected_photo="0" group_id_name="All Contacts"/>` to the file. Each starts on a new line.
3. Specify the values within double quotes.  
For example:  


```
<contact display_name="Lily" office_number="1020" mobile_number="1021" other_number="1112"/>
<contact display_name="Tom" office_number="2020" mobile_number="2021" other_number="2112"/>
```
4. Save the changes and place this file to the provisioning server.

## Satellite Mode

Yealink desk phone can be bound with a handset. The handset can share the line and contacts with the phone. The call can be shifted between the phone and handset.

**Important:** Satellite mode is available only when one handset is registered to the phone.

The following is an example of receiving an incoming call:

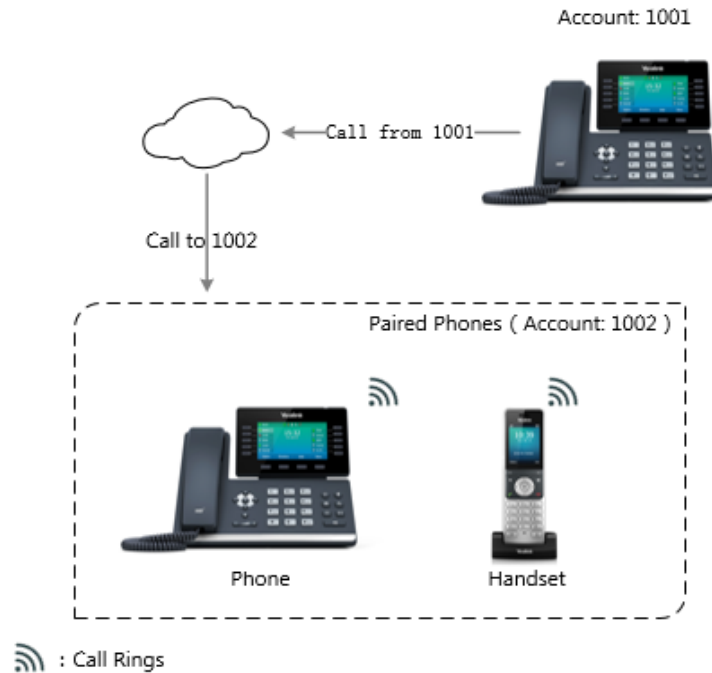

When a call is made from 1001 to 1002, both the phone and the handset ring. Users can answer the call either on the phone or handset.

When using satellite mode, note the following:

- The incoming and outgoing lines originally assigned to the handset are disabled.
- Calls made from the handset are handled as calls made from the phone (in the above example, 1002). (The caller information for such calls will be that of extension 1002.)
- You can configure a mode for whether to continue the conversation on the handset when the phone goes off-hook, or to send a busy signal to one of the paired phones while the device is not in a call but tries to initiate a call (prohibited on that device).

## Topics

[Satellite Mode Configuration](#)

[Example: Configuring the Satellite Mode Feature](#)

## Satellite Mode Configuration

The following table lists the parameters you can use to configure satellite mode.

<b>Parameter</b>	features.ms.X.slave_handset_number[1]	<y0000000000xx>.cfg
<b>Description</b>	It specifies which handset to use the satellite mode with the phone.	
<b>Permitted Values</b>	<b>0</b> -None, the satellite mode is disabled. <b>2</b> -Handset 2 <b>3</b> -Handset 3 <b>4</b> -Handset 4 <b>5</b> -Handset 5	
<b>Default</b>	0	

<b>Web UI</b>	Status > Handset > Satellite Mode > Select Handset	
<b>Phone UI</b>	T57W/T54W/T53C: Menu > DECT Settings > Satellite Mode > Select handset	
	T53W/T53: Menu > Settings > DECT Settings > Satellite Mode > Select handset	
<b>Parameter</b>	features.ms.X.mode <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the satellite mode for the phone. <b>Note:</b> It works only if "features.ms.X.slave_handset_number" is configured correctly.	
<b>Permitted Values</b>	0-Busy, users cannot switch the active call between the phone and handset. Regardless of the phone or the handset, the device which is during the call can initiate a new call. If users not in a call try to initiate a call on the phone/handset, the phone/handset will prompt "Path Busy". 1-Take over call, when the handset is during the call, users can retrieve the call after off-hook on the phone. When the phone is during the call, users can push the call to the handset.	
<b>Default</b>	1	
<b>Web UI</b>	Status > Handset > Satellite Mode > Mode	
<b>Phone UI</b>	T57W/T54W/T53C: Menu > DECT Settings > Satellite Mode > Select mode	
	T53W/T53: Menu > Settings > DECT Settings > Satellite Mode > Select mode	

[1]X is the handset ID. X is equal to 1.


## Example: Configuring the Satellite Mode Feature

You can configure the satellite mode only when one handset is registered to the phone.

The following table lists the supported phones and handsets:

Phone	Handset
T57W	
T54W	W53H
T53W	W56H
T53	W59R
T53C	

As an example, two W56H handsets along with two T54W phones are in use.

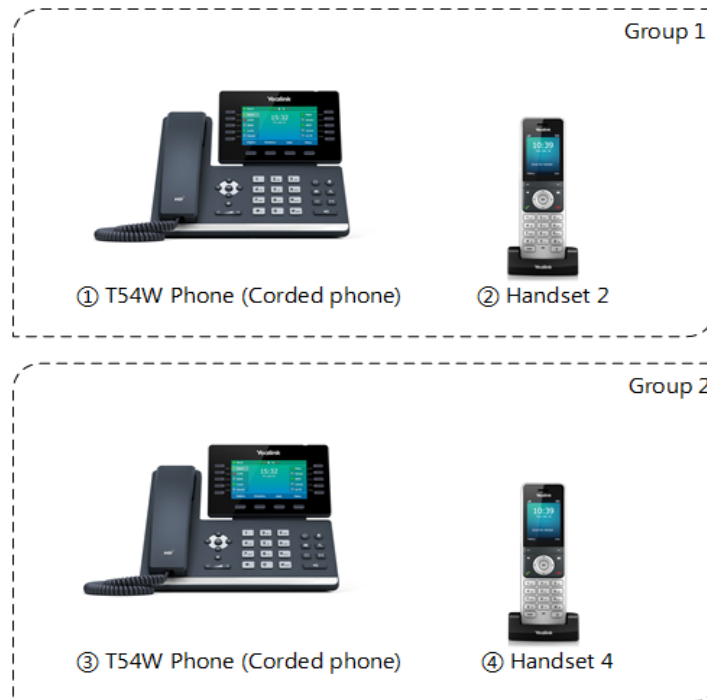**Group 1:**

features.ms.1.slave\_handset\_number = 2

features.ms.1.mode = 0

After provisioning, users cannot switch the active call between the phone and handset. Only the device which is during the call can initiate a new call. If users not in a call try to initiate a call on the phone/handset, the phone/handset screen will prompt "Path Busy".

**Group 2:**

features.ms.1.slave\_handset\_number = 4

features.ms.1.mode = 1

After provisioning, when the handset is during the call, users can retrieve the call after off-hook on the phone. When the phone is during the call, users can push the call to the handset.

## Repeater Settings Parameters

<b>Parameter</b>	static.base.repeater_mode.enable <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the repeater mode to extend the radio coverage of the phone.	
<b>Permitted Values</b>	0-Off 1-RT10/RT20 2-RT30	
<b>Default</b>	0	
<b>Phone UI</b>	<u>T57W/T54W/T53C:</u> Menu > DECT Settings > Repeater > Repeater Mode <u>T53W/T53:</u> Menu > Settings > DECT Settings > Repeater > Repeater Mode	



[1]If you change this parameter, the phone will reboot to make the change take effect.

## Handset Settings Parameters

<b>Parameter</b>	custom.handset.eco_mode.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the eco mode to greatly reduce the transmission power and signal output when the phone is in the talk mode.	
<b>Permitted Values</b>	-1-Do not modify the handset configuration (Keep the original configuration of the handset). 0-Disabled 1-Enabled	
<b>Default</b>	-1	
<b>Supported Devices</b>	All handsets except DD phones	
<b>Handset UI</b>	OK > Settings > System Settings (Basic Settings) > Eco Mode	
<b>Parameter</b>	custom.handset.color_scheme	<y0000000000xx>.cfg
<b>Description</b>	It configures the color scheme of the handset. <b>Note:</b> It will take effect on all handsets that are registered on the same phone. It works only if the value of the parameter "static.auto_provision.handset_configured.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	-1-Do not modify the handset configuration (Keep the original configuration of the handset). 0-Color scheme 1 1-Color scheme 2	
<b>Default</b>	-1	
<b>Supported Devices</b>	W52H	
<b>Handset UI</b>	OK > Settings > Display > Color Schemes	
<b>Parameter</b>	custom.handset.missed_call_notify_light.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the message key LED to flash red when the handset misses a call. <b>Note:</b> It will take effect on all handsets that are registered on the same phone. It works only if "static.auto_provision.handset_configured.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	-1-Do not modify the handset configuration (Keep the original configuration of the handset). 0-Disabled 1-Enabled	
<b>Default</b>	-1	
<b>Supported Devices</b>	W52H	
<b>Handset UI</b>	OK > Settings > Display > Notification Light > Missed Call	
<b>Parameter</b>	custom.handset.voice_mail_notify_light.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the message key LED to flash when the handset receives a voice mail. <b>Note:</b> It will take effect on all handsets that are registered on the same phone. It works only if "static.auto_provision.handset_configured.enable" is set to 1 (Enabled).	
<b>Permitted</b>	-1-Do not modify the handset configuration (Keep the original configuration of the handset).	

<b>Values</b>	0-Disabled 1-Enabled
<b>Default</b>	-1
<b>Supported Devices</b>	W52H
<b>Handset UI</b>	OK > Settings > Display > Notification Light > Voice Mail
<b>Parameter</b>	custom.handset.language   <y0000000000xx>.cfg
<b>Description</b>	It configures the language used on the DECT handset user interface. <b>Note:</b> It will take effect on all handsets that are registered on the same phone. It works only if “static.auto_provision.handset_configured.enable” is set to 1 (Enabled).
<b>Permitted Values</b>	<b>For W59R/W56H/W53H/CP930W handset:</b> 0-English 1-French 2-German 3-Italian 4-Polish 5-Portuguese 6-Spanish 7-Turkish 8-Swedish 9-Russian <b>For W52H handset:</b> 0-English 1-French 2-German 3-Italian 4-Polish 5-Portuguese 6-Spanish 7-Turkish 8-Czech 9-Swedish 10-Hebrew 11-Russian
<b>Default</b>	0
<b>Supported Devices</b>	W59R, W52H, W53H, W56H, CP930W

<b>Handset UI</b>	<u>W59R/W52H/W53H/W56H:</u> OK > Settings > Language <u>CP930W:</u> Menu > Settings > Basic Settings > Language	
<b>Parameter</b>	custom.handset.auto_answer.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables a user to answer incoming calls by lifting the handset from the charger cradle without pressing the off-hook key. <b>Note:</b> It works if the handset is placed in the charger cradle and the parameter "static.auto_provision.handset_configured.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	-1-Do not modify the handset configuration (Keep the original configuration of the handset). 0-Disabled 1-Enabled	
<b>Default</b>	-1	
<b>Supported Devices</b>	W78H, W73H, W59R, W53H, W56H	
<b>Handset UI</b>	OK > Settings > Telephony > Auto Answer	
<b>Parameter</b>	custom.handset.time_format	<y0000000000xx>.cfg
<b>Description</b>	It configures the time format for all registered handsets. <b>Note:</b> It works only if "static.auto_provision.handset_configured.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Hour 12, the time will be displayed in 12-hour format with AM or PM specified. 1-Hour 24, the time will be displayed in 24-hour format (for example, 2:00 PM displays as 14:00).	
<b>Default</b>	1	
<b>Web UI</b>	Settings > Time&Date > Time Format	
<b>Handset UI</b>	<u>W78H/W73H/W59R/W53H/W56H:</u> OK > Settings > Display > Time Format <u>DD Phone(Black-and-white Screen):</u> Menu > Settings > Basic Settings > Time&Date > Time & Date Format > Time Format <u>DD Phone(Color Screen):</u> Menu > Basic Settings > Display > Time Format <u>CP930W:</u> Menu > Settings > Basic Settings > Display > Time Format	
<b>Parameter</b>	custom.handset.date_format	<y0000000000xx>.cfg
<b>Description</b>	It configures the date format for all registered handsets.	
<b>Permitted Values</b>	0-WWW MMM DD 1-DD-MMM-YY 2-YYYY-MM-DD 3-DD/MM/YYYY 4-MM/DD/YY	

	<b>5-DD MMM YYYY</b> <b>6-WWW DD MMM</b> Use the following mapping: “WWW” represents the abbreviation of the week; “DD” represents a two-digit day; “MMM” represents the first three letters of the month; “YYYY” represents a four-digit year, and “YY” represents a two-digit year.	
<b>Default</b>	0	
<b>Web UI</b>	Settings > Time&Date > Date Format	
<b>Handset UI</b>	<u>W78H/W73H/W59R/W53H/W56H:</u> OK > Settings > Display > Date Format <u>DD Phone(Black-and-white Screen):</u> Menu > Settings > Basic Settings > Time&Date > Time & Date Format > Date Format <u>DD Phone(Color Screen):</u> Menu > Basic Settings > Time&Date > Time & Date Format > Date Format <u>CP930W:</u> Menu > Settings > Basic Settings > Display > Date Format	
<b>Parameter</b>	handset.X.hac.enable <sup>[1]</sup>	<y000000000xx>.cfg
<b>Description</b>	It enables or disables the HAC (Hearing Aid Compatibility) handset settings.	
<b>Permitted Values</b>	<b>0</b> -Disabled <b>1</b> -Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	All handsets except DD phones	
<b>Parameter</b>	static.auto_provision.handset_configured.enable	<y000000000xx>.cfg
<b>Description</b>	It enables or disables the handsets to keep user personalized settings after auto provisioning. <b>Note:</b> It is only applicable to the <a href="#">custom handset related configurations</a> .	
<b>Permitted Values</b>	<b>0</b> -Disabled, the phone will not deliver custom handset configurations via auto provisioning/handset reboot to the handset. The custom handset settings can be only changed via the handset user interface. <b>1</b> -Enabled, the phone will deliver the custom handset configurations via auto provisioning to the handset. Handset reboot or registration will also trigger the phone to deliver the stored handset settings to the handset. When the parameter "static.auto_provision.custom.handset.protect" is set to 0 (Disabled), the personalized handset settings will be overridden; if the parameter "static.auto_provision.custom.handset.protect" is set to 1 (Enabled), the personalized handset settings will not be overridden.	
<b>Default</b>	1	
<b>Supported Devices</b>	All handsets except DD phones	
<b>Parameter</b>	static.auto_provision.custom.handset.protect	<y000000000xx>.cfg

<b>Description</b>	It enables or disables the handsets to keep user personalized settings after handset reboot or registration. <b>Note:</b> It works only if "static.auto_provision.handset_configured.enable" is set to 0 (Disabled). It is only applicable to the <a href="#">custom handset related configurations</a> .	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Supported Devices</b>	All handsets except DD phones	
<b>Parameter</b>	handset.X.contact_list.url <sup>[2]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the access URL of the contact file (*.xml) for a specific handset. <b>Example:</b> handset.2.contact_list.url= http://192.168.10.25/contact.xml	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Directory > Dect Directory > Import Contacts > Import to (Handset X) > Select .xml file form	

<sup>[1]</sup>X is the handset ID. X=1 to 5.

<sup>[2]</sup>X is the handset ID. X=2 to 5.

## Custom Handset Related Configurations

This section shows you the custom handset related configurations.

Parameter	Related Topic
custom.handset.date_format	<a href="#">Handset Settings Parameters</a>
custom.handset.time_format	
custom.handset.eco_mode.enable	<a href="#">Handset Settings Parameters</a>
custom.handset.auto_answer.enable	<a href="#">Auto Answer Configuration</a>
custom.handset.missed_call_notify_light.enable	<a href="#">Handset Settings Parameters</a>
custom.handset.voice_mail_notify_light.enable	
custom.handset.color_scheme	<a href="#">Handset Settings Parameters</a>
custom.handset.low_battery_tone.enable	<a href="#">Advisory Tones Configuration</a>
custom.handset.confirmation_tone.enable	
custom.handset.keypad_tone.enable	
custom.handset.keypad_light.enable	<a href="#">Handset Keypad Light Configuration</a>
custom.handset.backlight_in_charger.enable	<a href="#">Handset Backlight Configuration</a>
custom.handset.backlight_out_of_charger.enable	

Parameter	Related Topic
custom.handset.screen_saver.enable	<a href="#">Handset Screen Saver Configuration</a>
custom.handset.auto_intercom	<a href="#">DECT Intercom Configuration</a>
custom.handset.language	<a href="#">Handset Settings Parameters</a>

## Handset Firmware Upgrade Configuration

The following table lists the parameters you can use to upgrade handset firmware.

<b>Parameter</b>	over_the_air.url	<y0000000000xx>.cfg
<b>Description</b>	It configures the access URL of the handset firmware file.	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Settings > Upgrade > Select and update handset firmware.	
<b>Parameter</b>	over_the_air.url.w56h	<y0000000000xx>.cfg
<b>Description</b>	It configures the access URL of the W56H handset firmware file. <b>Note:</b> The priority of parameter “over_the_air.url.w56h” is higher than “over_the_air.url”.	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Parameter</b>	over_the_air.url.cp930w	<y0000000000xx>.cfg
<b>Description</b>	It configures the access URL of the CP930W phone firmware file. <b>Note:</b> The priority of parameter “over_the_air.url.cp930w” is higher than “over_the_air.url”.	
<b>Permitted Values</b>	URL within 512 characters	
<b>Default</b>	Blank	
<b>Parameter</b>	over_the_air.handset_tip	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables to pop up a tip when upgrading the handset firmware from the provisioning server. <b>Note:</b> It works only if “over_the_air.base_trigger” and “over_the_air.handset_trigger” are set to 0 (Disabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled, the handset will pop up the message “Handset has a new firmware, update now?”.	
<b>Default</b>	1	
<b>Supported Devices</b>	All handsets except DD phones	
<b>Parameter</b>	over_the_air.handset_trigger	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables to upgrade the handset firmware compulsively when the handset is registered to a phone or turned on successfully. It is only applicable when the current handset firmware is different from the one on the provisioning server.	

<b>Permitted Values</b>	<p>0-Disabled, if “over_the_air.handset_tip” is set to 1 (Enabled), it will pop up a tip on the handset to notify the user of firmware upgrade. If “over_the_air.handset_tip” is set to 0, you may go to <b>Settings &gt; Upgrade Firmware</b> on the handset to trigger the upgrading manually.</p> <p>1-Enabled, it will upgrade the handset firmware compulsively without a pop-up tip on the handset.</p>	
<b>Default</b>	1	
<b>Supported Devices</b>	All handsets except DD phones	
<b>Parameter</b>	over_the_air.base_trigger	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables to upgrade the handset firmware compulsively when the phone detects a new handset firmware from the provisioning server.	
<b>Permitted Values</b>	<p>0-Disabled, if “over_the_air.handset_tip” is set to 1 (Enabled), it will pop up a tip on the handset to notify the user to confirm upgrading the firmware or not. If “over_the_air.handset_tip” is set to 0, you may go to <b>Settings &gt; Upgrade Firmware</b> on the handset to trigger the upgrading manually.</p> <p>1-Enabled, it will upgrade the handset firmware compulsively without a pop-up tip on the handset.</p>	
<b>Default</b>	1	
<b>Parameter</b>	over_the_air.url.w52h	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the access URL of the W52H handset firmware file.</p> <p><b>Note:</b> The priority of parameter “over_the_air.url.w52h” is higher than “over_the_air.url”.</p>	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Parameter</b>	over_the_air.url.w53h	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the access URL of the W53H handset firmware file.</p> <p><b>Note:</b> The priority of parameter “over_the_air.url.w53h” is higher than “over_the_air.url”.</p>	
<b>Permitted Values</b>	URL within 512 characters	
<b>Default</b>	Blank	
<b>Parameter</b>	over_the_air.url.w59r	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the access URL of the W59R handset firmware file.</p> <p><b>Note:</b> The priority of parameter “over_the_air.url.w59r” is higher than “over_the_air.url”.</p>	
<b>Permitted Values</b>	URL within 512 characters	
<b>Default</b>	Blank	
<b>Parameter</b>	over_the_air.url.t41s_dd10k	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the access URL of the DD phone firmware file.</p> <p><b>Note:</b> The priority of parameter “over_the_air.url.t41s_dd10k” is higher than “over_the_air.url”.</p>	
<b>Permitted Values</b>	URL within 512 characters	
<b>Default</b>	Blank	
<b>Parameter</b>	over_the_air.url.t54w_dd10k	<y0000000000xx>.cfg
<b>Description</b>	It configures the access URL of the DD Phone firmware file.	

	<b>Note:</b> The priority of parameter “over_the_air.url.t54w_dd10k” is higher than “over_the_air.url”.
<b>Permitted Values</b>	URL within 512 characters
<b>Default</b>	Blank

## Emergency Alarm

Emergency alarm can provide safety reliance for people who work in dangerous environment.

W59R handset supports the following four alarm types:

- **Button:** Long press the emergency alarm button for 2 seconds to manually set off the emergency alarm.
- **Man Down:** If the handset stays in a tilt angle less than 30 degrees with the ground for some time, an alarm will be triggered.
- **No-Movement:** If the handset stays in a fixed position without movement for a certain period of time, an alarm will be triggered.
- **Running:** The handset detects the running state, and maintains this state for a certain period of time, an alarm will be triggered.



In order to increase the accuracy of the alarm and prevent false alarms, you can also set the corresponding delayed alarm time. The delayed alarm time is actually the time during which the handset maintains the state, and the alarm will be triggered when the time is reached.

### Topic

[Emergency Alarm Configuration](#)

## Emergency Alarm Configuration

The following table lists the parameter you can use to configure the emergency alarm.

<b>Parameter</b>	alarm.X.name <sup>[1]</sup>	<y000000000xx>.cfg
<b>Description</b>	It configures the alarm name.	
<b>Permitted Values</b>	String within 64 characters	



<b>Default</b>	Blank	
<b>Web UI</b>	Features > Alarm > Alarm Template (Alarm Template X) > Alarm Name	
<b>Parameter</b>	alarm.X.type <sup>[1]</sup>	<y000000000xx>.cfg
<b>Description</b>	It configures the alarm type.	
<b>Permitted Values</b>	<p>0-None, do not turn on the alarm.</p> <p>1-Button</p> <p>2-Man Down</p> <p>3-No Movement</p> <p>4-Running</p>	
<b>Default</b>	0	
<b>Web UI</b>	Features > Alarm > Alarm Template (Alarm Template X) > Alarm Type	
<b>Parameter</b>	alarm.X.handset_stop.enable <sup>[1]</sup>	<y000000000xx>.cfg
<b>Description</b>	It enables or disables to terminate the alarm from the handset.	
<b>Permitted Values</b>	<p>0-Disabled</p> <p>1-Enabled</p>	
<b>Default</b>	1	
<b>Web UI</b>	Features > Alarm > Alarm Template (Alarm Template X) > Stop Alarm From Handset	
<b>Parameter</b>	alarm.X.trigger_delay <sup>[1]</sup>	<y000000000xx>.cfg
<b>Description</b>	It configures the delay time (in seconds) to trigger the alarm from the handset.	
<b>Permitted Values</b>	Integer from 1 to 7200	
<b>Default</b>	3	
<b>Web UI</b>	Features > Alarm > Alarm Template (Alarm Template X) > Trigger Delay	
<b>Parameter</b>	alarm.X.pre_alarm.handset_stop.enable <sup>[1]</sup>	<y000000000xx>.cfg
<b>Description</b>	It enables or disables the handset to stop the pre-alarm (reminder before the alarm).	
<b>Permitted Values</b>	<p>0-Disabled</p> <p>1-Enabled</p>	
<b>Default</b>	1	
<b>Web UI</b>	Features > Alarm > Alarm Template (Alarm Template X) > Stop Pre-Alarm From Handset	
<b>Parameter</b>	alarm.X.pre_alarm.delay <sup>[1]</sup>	<y000000000xx>.cfg
<b>Description</b>	It configures the pre-alarm time (in seconds) of the handset.	
<b>Permitted Values</b>	Integer from 0 to 7200	
<b>Default</b>	0	
<b>Web UI</b>	Features > Alarm > Alarm Template (Alarm Template X) > Pre-Alarm Delay	

<b>Parameter</b>	alarm.X.ring.enable <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables to play the ringtone when the handset initiates the pre-alarm.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Web UI</b>	Features > Alarm > Alarm Template (Alarm Template X) > Ring	
<b>Parameter</b>	alarm.X.weekly.begin_time <sup>[1]</sup> alarm.X.weekly.end_time <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the starting/ending time of the day for the handset to perform an alarm detection. The alarm detection occurs on a random time between the starting time and the ending time. <b>Note:</b> If the configured starting time is greater than the ending time, such as 23:00-06:00, it means that the alarm detection is enabled on the day from 00:00-06:00 and 23:00-00:00.	
<b>Permitted Values</b>	Time from 00:00 to 23:59	
<b>Default</b>	00:00	
<b>Web UI</b>	Features > Alarm > Alarm Template (Alarm Template X) > Time	
<b>Parameter</b>	alarm.X.weekly.dayofweek <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the days of the week for the handset to perform an alarm detection weekly.	
<b>Permitted Values</b>	0123456 or a combination of these digits	
<b>Default</b>	0123456	
<b>Web UI</b>	Features > Alarm > Alarm Template > Day of Week	
<b>Parameter</b>	handset.X.alarm.template <sup>[2]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the alarm template for the specific account. Multiple alarm templates are separated by commas.	
<b>Permitted Values</b>	Random combination of numbers 1 to 10	
<b>Default</b>	Blank	
<b>Parameter</b>	handset.X.alarm.number <sup>[2]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the handset X alarm number.	
<b>Permitted Values</b>	String within 128 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Account > Alarm Assignment > Config to (Handset X) > Alarm Number	
<b>Parameter</b>	alarm.server.address	<y0000000000xx>.cfg
<b>Description</b>	It configures the address of the alarm server.	
<b>Permitted Values</b>	String within 256 characters	

<b>Default</b>	Blank	
<b>Web UI</b>	Account > Alarm Assignment > Sever Host	
<b>Parameter</b>	alarm.server.port	<y0000000000xx>.cfg
<b>Description</b>	It configures the port of the alarm server.	
<b>Permitted Values</b>	Integer from 0 to 65535	
<b>Default</b>	5060	
<b>Web UI</b>	Account > Alarm Assignment > Port	
<b>Parameter</b>	alarm.server.transport_type	<y0000000000xx>.cfg
<b>Description</b>	It configures the type of alarm server transmission protocol.	
<b>Permitted Values</b>	<b>0</b> -UDP <b>1</b> -TCP <b>2</b> -TLS <b>3</b> -DNS-NAPTR	
<b>Default</b>	0	
<b>Web UI</b>	Account > Alarm Assignment > Transport	
<b>Parameter</b>	alarm.server.expires	<y0000000000xx>.cfg
<b>Description</b>	It configures the registration expiration time of the alarm server.	
<b>Permitted Values</b>	Integer from 30 to 2147483647	
<b>Default</b>	30	
<b>Web UI</b>	Account > Alarm Assignment > Sever Expires	
<b>Parameter</b>	alarm.server.retry_counts	<y0000000000xx>.cfg
<b>Description</b>	It configures the number of times to retry the request when the alarm server is unavailable or not responding.	
<b>Permitted Values</b>	Integer from 0 to 20	
<b>Default</b>	3	
<b>Web UI</b>	Account > Alarm Assignment > Sever Retry Counts	

[1]X is the alarm ID. X=1-10.

[2]X is the account ID. X=1-8.

## Line Keys

Line keys provide one-touch feature (for example, one-touch park). This allows you to quickly access features and to view the monitored status when the line keys are assigned with particular features (for example, BLF).

### Topics

[Line Keys Configuration](#)

## Line Keys Configuration

The following table lists the parameters you can use to configure line keys for DD phones and CP935W-Base.

<b>Parameter</b>	ddp.X.linekey.Y.type <sup>[1][2]</sup>		<y0000000000xx>.cfg
<b>Description</b>	It configures the key feature.		
<b>Permitted Values</b>	0-N/A 13-SpeedDial(Speed Dial)	15-Line 16-BLF	39-BLF List 56-Retrieve Park
<b>Default</b>	0		
<b>Supported Devices</b>	DD Phone(Color Screen), CP935W-Base		
<b>Phone UI</b>	<u>DD Phone:</u> Menu > Features > Dsskey > Line Key X > Type <u>CP935W:</u> More > Features > Dsskey > Line Key X > Type		
<b>Parameter</b>	ddp.X.linekey.Y.line <sup>[1][2]</sup>		<y0000000000xx>.cfg
<b>Description</b>	It configures the desired line to apply the line key feature.		
<b>Permitted Values</b>	0, 1-10		
<b>Default</b>	Blank		
<b>Supported Devices</b>	DD Phone(Color Screen), CP935W-Base		
<b>Phone UI</b>	<u>DD Phone:</u> Menu > Features > Dsskey > Line Key X > Account ID <u>CP935W:</u> More > Features > Dsskey > Line Key X > Account ID		
<b>Parameter</b>	ddp.X.linekey.Y.value <sup>[1][2]</sup>		<y0000000000xx>.cfg
<b>Description</b>	It configures the value for some line key features. For example, when you assign the Speed Dial to the line key, this parameter is used to specify the contact number you want to dial out.		
<b>Permitted Values</b>	String within 99 characters		
<b>Default</b>	Blank		
<b>Supported Devices</b>	DD Phone(Color Screen), CP935W-Base		
<b>Phone UI</b>	<u>DD Phone:</u> Menu > Features > Dsskey > Line Key X > Value <u>CP935W:</u> More > Features > Dsskey > Line Key X > Value		
<b>Parameter</b>	ddp.X.linekey.Y.label <sup>[1][2]</sup>		<y0000000000xx>.cfg
<b>Description</b>	It configures the label displayed on the phone screen. This is an optional configuration.		
<b>Permitted Values</b>	String within 99 characters		

<b>Default</b>	Blank	
<b>Supported Devices</b>	DD Phone(Color Screen), CP935W-Base	
<b>Phone UI</b>	<u>DD Phone:</u> Menu > Features > Dsskey > Line Key X > Label <u>CP935W:</u> More > Features > Dsskey > Line Key X > Label	
<b>Parameter</b>	ddp.X.linekey.Y.extension <sup>[1][2]</sup>	<y0000000000xx>.cfg
<b>Description</b>	For the BLF/BLF list feature: It configures the pickup code.	
<b>Permitted Values</b>	String within 99 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	DD Phone(Color Screen), CP935W-Base	
<b>Phone UI</b>	<u>DD Phone:</u> Menu > Features > Dsskey > Line Key X > Extension <u>CP935W:</u> More > Features > Dsskey > Line Key X > Extension	

<sup>[2]</sup>Y is the line key ID. Y=1-10(for DDphone)/Y=1-30(for CP935W-Base).

## Visual and Audio Alert for Monitor Lines

Visual and Audio Alert feature allows the phone to display the caller ID and play an audio alert when a BLF line receives an incoming call.

### Topics

[Visual and Audio Alert for BLF Lines Configuration](#)

## Visual and Audio Alert for BLF Lines Configuration

The following table lists the parameters you can use to configure a visual and audio alert for BLF lines.

<b>Parameter</b>	ddp.X.features.pickup.blf_visual_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to display a visual alert when the monitored user receives an incoming call.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	DD Phone(Color Screen)	
<b>Web UI</b>	Features > Pickup & Park > Visual Alert for BLF Pickup	
<b>Parameter</b>	ddp.X.features.pickup.blf_visual.list	<y0000000000xx>.cfg
<b>Description</b>	It configures the monitored users who want to enable the visual alert for BLF pickup feature. Multiple monitored users are separated by commas. <b>Example:</b> ddp.X.features.pickup.blf_visual.list = any or leave it blank	

	<p>The phone displays a visual alert when any monitored user receives an incoming call.</p> <p>ddp.X.features.pickup.blf_visual.list = 4604,4605</p> <p>The phone displays a visual alert when monitored user 4604 or 4605 receives an incoming call.</p> <p>ddp.X.features.pickup.blf_visual.list = List1</p> <p>The phone displays a visual alert when any user in the List 1 receives an incoming call. ListX stands for the BLF list of account X configured by the parameter "account.X.blf.blf_list_uri".</p> <p><b>Note:</b> It works only if "ddp.X.features.pickup.blf_visual_enable" is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	<p>any</p> <p>Monitored phone number</p> <p>ListX<sup>[1]</sup></p>	
<b>Default</b>	any	
<b>Supported Devices</b>	DD Phone(Color Screen)	
<b>Parameter</b>	ddp.X.features.pickup.blf_audio_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to play an audio alert when the monitored user receives an incoming call.	
<b>Permitted Values</b>	<p>0-Disabled</p> <p>1-Enabled</p>	
<b>Default</b>	0	
<b>Supported Devices</b>	DD Phone(Color Screen)	
<b>Web UI</b>	Features > Pickup & Park > Audio Alert for BLF Pickup	
<b>Parameter</b>	ddp.X.features.pickup.blf_audio.list	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the monitored users who want to enable the audio alert for BLF pickup feature.</p> <p>Multiple monitored users are separated by commas.</p> <p><b>Example:</b></p> <p>ddp.X.features.pickup.blf_audio.list = any or leave it blank</p> <p>The IP phone plays an audio alert when any monitored user receives an incoming call.</p> <p>ddp.X.features.pickup.blf_audio.list = 4604,4605</p> <p>The IP phone plays an audio alert when monitored user 4604 or 4605 receives an incoming call.</p> <p>ddp.X.features.pickup.blf_audio.list = List1</p> <p>The IP phone plays an audio alert when any user in the List 1 receives an incoming call. ListX stands for the BLF list of account X configured by the parameter "account.X.blf.blf_list_uri".</p> <p><b>Note:</b> It works only if "ddp.X.features.pickup.blf_audio_enable" is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	<p>any</p> <p>Monitored phone number</p> <p>ListX<sup>[1]</sup></p>	
<b>Default</b>	any	
<b>Supported</b>	DD Phone(Color Screen)	

<b>Devices</b>	
----------------	--

[1]X is the DDphone ID. X=1-8.

# Audio Features

This chapter describes the audio sound quality features and options you can configure for the IP phone.

## Topics

[Alert Tone](#)  
[Touch Tone](#)  
[Ring Tones](#)  
[Distinctive Ring Tones](#)  
[Ringer Device](#)  
[Audio Volume](#)  
[Tones](#)  
[Audio Codecs](#)  
[Packetization Time \(PTime\)](#)  
[Early Media](#)  
[Headset Prior](#)  
[Dual Headset](#)  
[Acoustic Clarity Technology](#)  
[DTMF](#)  
[Voice Quality Monitoring \(VQM\)](#)  
[Ultrasonic Configuration](#)

## Alert Tone

You can configure the following audio alert for the phone:

- Redial tone: allow the phones to continue to play the dial tone after inputting the preset numbers on the dialing screen.
- Voice mail tone: allow the IP phone to play a warning tone when receiving a new voice mail. You can customize the warning tone or select specialized tone sets (vary from country to country) for your IP phone.
- Send tone: allow the IP phone to play a key tone when you press the send key. It works only if the key tone is enabled.
- Dial tone: allow the IP phone to play a specific dial tone for a specified time.
- Key tone: allow the IP phone to play a key tone when you press any key.

## Topic

[Alert Tone Configuration](#)

## Alert Tone Configuration

The following table lists the parameters you can use to configure the alert tone.

Parameter	features.redial_tone	<y0000000000xx>.cfg
<b>Description</b>	It configures that after you enter a specific number on the dialing screen, the phone will replay the dial tone. <b>Example:</b> features.redial_tone = 123 The phone will continue to play the dial tone after entering "123" on the dialing screen.	
<b>Permitted Values</b>	Integer within 6 digits	
<b>Default</b>	Blank	
<b>Supported</b>	All phones except CP925/CP935W	



<b>Devices</b>		
<b>Web UI</b>	Features > Audio > Redial Tone	
<b>Parameter</b>	account.X.dial_tone <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the dial tone for the phone.	
<b>Permitted Values</b>	<b>0</b> -Default (depend on the country tone by "voice.tone.country") 1-440/250,0/250 2-1000/250,0/250	
<b>Default</b>	0	
<b>Parameter</b>	features.call.dialtone_time_out	<y0000000000xx>.cfg
<b>Description</b>	It configures the duration time (in seconds) that a dial tone plays before a call is dropped. If it is set to 0, the call is not dropped.	
<b>Permitted Values</b>	Integer from 0 to 65535	
<b>Default</b>	15	
<b>Parameter</b>	features.voice_mail_tone_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to play a warning tone when it receives a new voice mail. <b>Note:</b> It works only if "account.X.display_mwi.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	<b>0</b> -Disabled 1-Enabled	
<b>Default</b>	1	
<b>Web UI</b>	Features > General Information > Voice Mail Tone	
<b>Parameter</b>	features.send_key_tone	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to play a key tone when a user presses a send key. <b>Note:</b> It works only if "features.key_tone" is set to 1 (Enabled).	
<b>Permitted Values</b>	<b>0</b> -Disabled 1-Enabled	
<b>Default</b>	1	
<b>Web UI</b>	Features > Audio > Send Tone	
<b>Parameter</b>	features.key_tone	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to play a key tone when a user presses any key on your phone keypad.	
<b>Permitted Values</b>	<b>0</b> -Disabled 1-Enabled	
<b>Default</b>	1	
<b>Web UI</b>	Features > Audio > Key Tone	
<b>Phone UI</b>	Color Screen Phones: Menu > Basic > Sound > Key Tone > Key Tone CP925/CP935W:	

	More > Basic > Sound > Key Tone > Key Tone
	<u>Black-and-white Screen Phones:</u>
	Menu > Settings > Basic Settings > Sound > Key Tone > Key Tone

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## Touch Tone

If you enable touch tone and tap the keys (except the off-hook key), the phone will produce a sound when it is not on the dialing/pre-dialing screen and not in a call.

For CP925/CP935W, the phone will produce a sound when you tap an option on the phone screen.

It is only applicable to CP920/CP925/CP935W phones.

### Topic

[Touch Tone Configuration](#)

## Touch Tone Configuration

The following table lists the parameter you can use to configure the touch tone.

<b>Parameter</b>	features.touch_tone	<y000000000xx>.cfg
<b>Description</b>	It enables or disables the touch tone.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Supported Devices</b>	CP920, CP925, CP935W	
<b>Web UI</b>	Features > Audio > Touch Tone <b>Note:</b> It is only available to CP920 phones.	
<b>Phone UI</b>	Menu > Settings > Basic Settings > Sound > Touch Tone <u>CP925/CP935W:</u> More > Basic > Sound > Touch Tone	

## Ring Tones

Ring tones are used to play for incoming calls. You can select a built-in ring tone or a custom ring tone for the phone system or specific line registration. To set the custom ring tones, you need to upload the custom ring tones to the IP phone in advance.

You can also specify a period of time after which the phone will stop ringing if the call is not answered.

### Topics

[Custom Ringtone Limit](#)

[Ringtone Configuration](#)

## Custom Ringtone Limit

The ring tone format must meet the following:

Phone Model	Format	Single File Size
Color Screen Phones	.wav	<=8MB
Black-and-white Screen Phones	.wav	<=100KB

**Note:** The ring tone file must be in PCMU/PCMA audio format, mono channel, 8K sample rate, and 16-bit resolution.

## Ringtone Configuration

The following table lists the parameters you can use to configure ringtone.

<b>Parameter</b>	phone_setting.ring_type	<y000000000xx>.cfg
<b>Description</b>	It configures a ring tone for the phone.	
<b>Permitted Values</b>	Ring1.wav, Ring2.wav, Ring3.wav, Ring4.wav, Ring5.wav, Ring6.wav, Ring7.wav, Ring8.wav, Ring9.wav, Ring10.wav, Ring11.wav, Ring12.wav, Ring13.wav, Silent.wav, Splash.wav or custom ring tone name (for example, Customring.wav)  For T3 phones: Ring1.wav, Ring2.wav, Ring3.wav, Ring4.wav, Silent.wav, Splash.wav or custom ring tone name (for example, Customring.wav)	
<b>Default</b>	Ring1.wav	
<b>Web UI</b>	T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/CP925/CP935W: Settings > Preference > Upload Ringtone > System Ring  Other Phones: Settings > Preference > Ring Type	
<b>Phone UI</b>	Color Screen Phones: Menu > Basic > Sound > Ring Tones > Common CP925/CP935W: More > Basic > Sound > Ring Tones > Common Black-and-white Screen Phones: Menu > Settings > Basic Settings > Sound > Ring Tones > Common	
<b>Parameter</b>	account.X.ringtone.ring_type <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures a ring tone. <b>Example:</b> account.1.ringtone.ring_type = Ring3.wav It means configuring Ring3.wav for account1. account.1.ringtone.ring_type = Common It means account1 will use the ring tone selected for the phone configured by the parameter "phone_setting.ring_type".	
<b>Permitted Values</b>	Common, Ring1.wav, Ring2.wav, Ring3.wav, Ring4.wav, Ring5.wav, Ring6.wav, Ring7.wav, Ring8.wav, Ring9.wav, Ring10.wav, Ring11.wav, Ring12.wav, Ring13.wav, Silent.wav, Splash.wav or custom ring tone name (for example, Customring.wav)	

	For T3 phones: Ring1.wav, Ring2.wav, Ring3.wav, Ring4.wav, Silent.wav, Splash.wav or custom ring tone name (for example, Customring.wav)	
<b>Default</b>	Common	
<b>Web UI</b>	Account > Basic > Ring Type	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Basic > Sound > Ring Tones > AccountX	
	<u>CP925/CP935W:</u> More > Basic > Sound > Ring Tones > AccountX	
	<u>Black-and-white Screen Phones:</u> Menu > Settings > Basic Settings > Sound > Ring Tones > AccountX	
<b>Parameter</b>	pstn.account.X.ring_type <sup>[2]</sup>	<MAC>.cfg
<b>Description</b>	It configures a ring tone for PSTN account X. <b>Example:</b> pstn.account.1.ring_type = Ring3.wav It means PSTN account 1 will use the Ring3.wav as the ring tone. pstn.account.1.ring_type = Common It means PSTN account 1 will use the ring tone selected for the IP phone configured by the parameter "phone_setting.ring_type".	
<b>Permitted Values</b>	Common, Ring1.wav, Ring2.wav, Ring3.wav, Ring4.wav, Ring5.wav, Ring6.wav, Ring7.wav, Ring8.wav, Ring9.wav, Ring10.wav, Ring11.wav, Ring12.wav, Ring13.wav, Silent.wav, Splash.wav or custom ring tone name (for example, Customring.wav)	
<b>Default</b>	Common	
<b>Supported Devices</b>	CP925, CP920, T57W, T54W, T53W, T53, T53C	
<b>Web UI</b>	PSTN Account > Basic > Ring Type	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Basic > Sound > Ring Tones > PSTN Account X	
	<u>CP925:</u> More > Basic > Sound > Ring Tones > PSTN Account X	
	<u>Black-and-white Screen Phones:</u> Menu > Settings > Basic Settings > Sound > Ring Tones > PSTN Account X	
<b>Parameter</b>	ringtone.url	<y0000000000xx>.cfg
<b>Description</b>	It configures the access URL of the custom ring tone file.	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	<u>T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/CP925/CP935W:</u>	
	Settings > Preference > Upload Ringtone > Custom Ring > Upload Ringtone	

	Other Phones: Settings > Preference > Upload Ringtone	
<b>Parameter</b>	ringtone.delete	<y0000000000xx>.cfg
<b>Description</b>	It deletes all custom ring tone files.	
<b>Permitted Values</b>	http://localhost/all	
<b>Default</b>	Blank	
<b>Parameter</b>	phone_setting.ringing_timeout	<y0000000000xx>.cfg
<b>Description</b>	It configures the duration time (in seconds) in the ringing state. If it is set to 180, the phone will stop ringing if the call is not answered within 180 seconds.	
<b>Permitted Values</b>	Integer from 1 to 3600	
<b>Default</b>	120	
<b>Parameter</b>	phone_setting.ring_for_tranfailed	<y0000000000xx>.cfg
<b>Description</b>	It configures the ring tone when the phone fails to transfer a call and display "Transfer failed" on the screen.	
<b>Permitted Values</b>	Ring1.wav, Ring2.wav, Ring3.wav, Ring4.wav, Ring5.wav, Ring6.wav, Ring7.wav, Ring8.wav, Ring9.wav, Ring10.wav, Ring11.wav, Ring12.wav, Ring13.wav, Silent.wav or Splash.wav <u>For T3 phones:</u> Ring1.wav, Ring2.wav, Ring3.wav, Ring4.wav, Silent.wav, Splash.wav	
<b>Default</b>	Ring1.wav	

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

[2]X is the PSTN account ID. X=1-2.

## Distinctive Ring Tones

The feature of distinctive ring tones allows certain incoming calls to trigger the phones to play distinctive ring tones. The IP phone inspects the INVITE request for an "Alert-Info" header when receiving an incoming call. If the INVITE request contains an "Alert-Info" header, the phone strips out the URL or keyword parameter and maps it to the appropriate ring tone.

**Note:** If the caller already exists in the local directory, the ring tone assigned to the caller should be preferentially played.

### Topics

[Supported Alert-Info Headers Format](#)  
[Distinctive Ring Tones Configuration](#)

## Supported Alert-Info Headers Format

Yealink phones support Alert-Info headers in four formats: Bellcore-drN, ringtone-N (or MyMelodyN), <URL> and info=info text;x-line-id=0.

**Note:** If the Alert-Info header contains multiple types of keywords, the phone will process the keywords in the following order: AutoAnswer > URL > info text/Bellcore-drN/ringtone-N (ringtone-RingN) > MyMelodyN (MyMelodyRingN).

**Topics**

[Alert-Info: Bellcore-drN](#)

[Alert-Info: ringtone-N/Alert-Info: ringtone-RingN.wav \(or Alert-Info: MyMelodyN/Alert-Info: MyMelodyRingN.wav\)](#)

[Alert-Info: <URL>](#)

[Alert-Info: info=info text;x-line-id=0](#)

**Alert-Info: Bellcore-drN**

When the Alter-Info header contains the keyword “Bellcore-drN”, the phone will play the desired ring tone.

The following table identifies the corresponding ring tones:

<b>Value of N</b>	<b>Ring Tone</b> (features.alert_info_tone = 1)	<b>Ring Tone</b> (features.alert_info_tone = 0)
1	Bellcore-dr1	Ring1.wav
2	Bellcore-dr2	Ring2.wav
3	Bellcore-dr3	Ring3.wav
4	Bellcore-dr4	Ring4.wav
5	Bellcore-dr5	Ring5.wav
6	Ring6.wav	
7	Ring7.wav	
8	Ring8.wav	
9	Ring9.wav	
10	Ring10.wav	
11	Ring11.wav	
12	Ring12.wav	
13	Ring13.wav	
14	Silent.wav	
15	Splash.wav	
N<1 or N>15	Ring1.wav	

For T3 phones:

<b>Value of N</b>	<b>Ring Tone</b> (features.alert_info_tone = 1)	<b>Ring Tone</b> (features.alert_info_tone = 0)
1	Bellcore-dr1	Ring1.wav
2	Bellcore-dr2	Ring2.wav
3	Bellcore-dr3	Ring3.wav
4	Bellcore-dr4	Ring4.wav
5	Silent.wav	

Value of N	Ring Tone (features.alert_info_tone = 1)	Ring Tone (features.alert_info_tone = 0)
6	Splash.wav	
N<1 or N>6	Ring1.wav	

**Examples:**

Alert-Info: http://127.0.0.1/Bellcore-dr1  
 Alert-Info: test/Bellcore-dr1  
 Alert-Info: Bellcore-dr1  
 Alert-Info: Bellcore-dr1;x-line-id=1  
 Alert-Info: <http://10.1.0.31>;info=Bellcore-dr1

The following table identifies the different Bellcore ring tone patterns and cadences. These ring tones are designed for the BroadWorks server.

Bellcore Tone	Pattern ID	Pattern	Cadence	Minimum Duration (ms)	Nominal Duration (ms)	Maximum Duration (ms)
Bellcore-dr1 (standard)	1	Ringing	2s On	1800	2000	2200
		Silent	4s Off	3600	4000	4400
Bellcore-dr2	2	Ringing	Long	630	800	1025
		Silent		315	400	525
		Ringing	Long	630	800	1025
		Silent		3475	4000	4400
Bellcore-dr3	3	Ringing	Short	315	400	525
		Silent		145	200	525
		Ringing	Short	315	400	525
		Silent		145	200	525
		Ringing	Long	630	800	1025
		Silent		2975	4000	4400
Bellcore-dr4	4	Ringing	Short	200	300	525
		Silent		145	200	525
		Ringing	Long	800	1000	1100
		Silent		145	200	525
		Ringing	Short	200	300	525
		Silent		2975	4000	4400
Bellcore-dr5	5	Ringing		450	500	550

**Note:** If the user is waiting for a call, “Bellcore-dr5” is a splash ring tone reminding the user that the DND or Always Call Forward feature is enabled on the server side.

### Alert-Info: ringtone-N/Alert-Info: ringtone-RingN.wav (or Alert-Info: MyMelodyN/Alert-Info: MyMelodyRingN.wav)

When the Alert-Info header contains the keyword “ringtone-N/ringtone-RingN” or “MyMelodyN/MyMelodyRingN”, the phone will play the corresponding local ring tone (RingN.wav), or play the first local ring tone (Ring1.wav) for about 10 seconds if “N” is greater than 10 or less than 1.

#### Examples:

```
Alert-Info: ringtone-2
Alert-Info: ringtone-Ring2.wav
Alert-Info: ringtone-2;x-line-id=1
Alert-Info: <http://10.1.0.31>;info=ringtone-2
Alert-Info: <http://127.0.0.1/ringtone-2>
Alert-Info: MyMelody2
Alert-Info: MyMelodyRing2.wav
Alert-Info: MyMelody2;x-line-id=1
Alert-Info: <http://10.1.0.31>;x-line-id=0;info=MyMelody2
```

The following table identifies the corresponding local ring tones:

Value of N	Ring Tone
1 Ring1.wav	Ring1.wav
2 Ring2.wav	Ring2.wav
3 Ring3.wav	Ring3.wav
4 Ring4.wav	Ring4.wav
5 Ring5.wav	Ring5.wav
6 Ring6.wav	Ring6.wav
7 Ring7.wav	Ring7.wav
8 Ring8.wav	Ring8.wav
9 Ring9.wav	Ring9.wav
10 Ring10.wav	Ring10.wav
11 Ring11.wav	Ring11.wav



Value of N	Ring Tone
Ring11.wav	
12 Ring12.wav	Ring12.wav
13 Ring13.wav	Ring13.wav
9 Silent.wav	Silent.wav
10 Splash.wav	Splash.wav
N<1 or N>15	Ring1.wav

For T3 phones:

Value of N	Ring Tone
1 Ring1.wav	Ring1.wav
2 Ring2.wav	Ring2.wav
3 Ring3.wav	Ring3.wav
4 Ring4.wav	Ring4.wav
5 Silent.wav	Silent.wav
6 Splash.wav	Splash.wav
N<1 or N>6	Ring1.wav

### Alert-Info: <URL>

When the Alert-Info header contains a remote URL, the phone will try to download the WAV ring tone file from the URL and then play the remote ring tone if "account.X.alert\_info\_url\_enable" is set to 1 (or the item called "Distinctive Ring Tones" on the web user interface is Enabled), or play the preconfigured local ring tone in about 10 seconds if "account.X.alert\_info\_url\_enable" is set to 0 or if the IP phone fails to download the remote ring tone.

#### Example:

Alert-Info: http://192.168.0.12:8080/Custom.wav

### Alert-Info: info=info text;x-line-id=0

When the Alert-Info header contains an info text, the phone will map the text with the Internal Ringer Text pre-configured (or "distinctive\_ring\_tones.alert\_info.X.text" is configured) on the IP phone, and then play the ring tone associated with the Internal Ringer Text (the ring tone can be configured by the parameter "distinctive\_ring\_tones.alert\_info.X.ringer"). If no internal ringer text maps, the phone will play the preconfigured local ring tone for about 10 seconds.

#### Example:

```
Alert-Info: info=family;x-line-id=0
Alert-Info: <http://10.1.0.31>;info=family
Alert-Info: <http://10.1.0.31>;info=family;x-line-id=0
```

### Auto Answer

If the INVITE request contains the following string types, the phone will answer incoming calls automatically without playing the ring tone:

- Alert-Info: Auto Answer
- Alert-Info: info = alert-autoanswer
- Alert-Info: answer-after = 0 (or Alert-Info: Answer-After = 0)
- Alert-Info: Intercom

If the auto answer tone feature is enabled, the phone plays a warning tone to alert you before answering an incoming call.

### Related Topic

[Auto Answer](#)

## Distinctive Ring Tones Configuration

The following table lists the parameters you can use to configure distinctive ring tones.

<b>Parameter</b>	account.X.alert_info_url_enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the phone to download the ring tone from the URL contained in the Alert-Info header.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Web UI</b>	Account > Advanced > Distinctive Ring Tones	
<b>Parameter</b>	features.alert_info_tone	<y000000000xx>.cfg
<b>Description</b>	It enables and disables the phone to map the keywords in the Alert-Info header to the specified Bellcore ring tones.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	distinctive_ring_tones.alert_info.X.text <sup>[2]</sup>	<y000000000xx>.cfg
<b>Description</b>	It configures the internal ringer text to map the keywords contained in the Alert-Info header.	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	<p><u>T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/CP925/CP935W:</u>            Settings &gt; Ring &gt; Internal Ringer X<sup>[2]</sup> &gt; Text</p> <p><u>Other Phones:</u>            Settings &gt; Ring &gt; Internal Ringer Text</p>	

<b>Parameter</b>	distinctive_ring_tones.alert_info.X.ringer <sup>[2]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the desired ring tone for each internal ringer text.	
<b>Permitted Values</b>	<ul style="list-style-type: none"> <li>Integer from 1 to 15 (the digit stands for the appropriate ring tone) or ring tone name: <ul style="list-style-type: none"> <li>1 or <b>Ring1.wav</b></li> <li>2 or <b>Ring2.wav</b></li> <li>3 or <b>Ring3.wav</b></li> <li>4 or <b>Ring4.wav</b></li> <li>5 or <b>Ring5.wav</b></li> <li>6 or <b>Ring6.wav</b></li> <li>7 or <b>Ring7.wav</b></li> <li>8 or <b>Ring8.wav</b></li> <li>9 or <b>Ring9.wav</b></li> <li>10 or <b>Ring10.wav</b></li> <li>11 or <b>Ring11.wav</b></li> <li>12 or <b>Ring12.wav</b></li> <li>13 or <b>Ring13.wav</b></li> <li>14 or <b>Silent.wav</b></li> <li>15 or <b>Splash.wav</b></li> </ul> </li> <li>For T3 phones: <ul style="list-style-type: none"> <li>1 or <b>Ring1.wav</b></li> <li>2 or <b>Ring2.wav</b></li> <li>3 or <b>Ring3.wav</b></li> <li>4 or <b>Ring4.wav</b></li> <li>5 or <b>Silent.wav</b></li> <li>6 or <b>Splash.wav</b></li> </ul> </li> <li>Custom ring tone name (for example, Customring.wav)</li> </ul>	
<b>Default</b>	1	
<b>Web UI</b>	T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/CP925/CP935W: Settings > Ring > Internal Ringer X <sup>[2]</sup> > File Other Phones: Settings > Ring > Internal Ringer File	

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

[2]X is the ring tone ID. X=1-10.

## Ring Device

You can use either or both the speaker and the headset as the ringer devices. You can configure which ringer device to be used when receiving an incoming call. For example, if the ringer device is set to Headset, ring tone will be played through your headset.

If the ringer device is set to Headset or Headset&Speaker, the headset (either a wired headset, Bluetooth headset or USB headset) should be connected to the IP phone and the headset mode also should be activated in advance. The USB headset is only applicable to T57W/T54W/T53W/T53/T53C/T48U/T48S/T46U/T46S/T43U/T42S/T42U/T41S phones.

You can press the HEADSET key to activate the headset mode. For more information, refer to the [Yealink phone-specific user guide](#).

It is not applicable to CP920/CP925/CP935W phones.

## Topic

[Ringer Device Configuration](#)

## Ringer Device Configuration

The following table lists the parameters you can use to configure the ringer device.

<b>Parameter</b>	features.ringer_device.is_use_headset	<y0000000000xx>.cfg
<b>Description</b>	It configures the ringer device for the phone. <b>Note:</b> To use speaker, make sure “features.speaker_mode.enable” is set to 1 (Enabled). To use the headset, make sure “features.headset_mode.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Use Speaker 1-Use Headset 2-Use Headset & Speaker	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except CP920/CP925/CP935W	
<b>Web UI</b>	Features > Audio > Ringer Device for Headset	

## Audio Volume

You can configure the sending volume and ringer volume for the phone.

### Topics

[Ringer Volume Configuration](#)

[Sending Volume Configuration](#)

## Ringer Volume Configuration

You can configure the ringer volume as a fixed level, so the user cannot adjust the ringer volume on the phone. This feature is used to avoid missing calls when the user turns down the ringer volume.

The following table lists the parameters you can use to configure the ringer volume.

<b>Parameter</b>	force.voice.ring_vol	<y0000000000xx>.cfg
<b>Description</b>	It configures the ring tone as a fixed volume.	
<b>Permitted Values</b>	<b>Blank</b> -the user can adjust the ringer volume on the phone. <b>0 to 5</b> -the user cannot adjust the ringer volume on the phone, the ring tone is the configured volume.	
<b>Default</b>	Blank	
<b>Parameter</b>	phone_setting.voice.ring_vol_min	<y0000000000xx>.cfg
<b>Description</b>	It configures the adjustable minimum ringer volume on the phone. <b>Note:</b> It only takes effect on the ringer volume of the speaker on the phone. After the headset is connected, the ringer volume can only be controlled by the headset itself.	
<b>Permitted Values</b>	Integer from 0 to 15	
<b>Default</b>	0	

<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T48S, T46S, T42S, T41S, T33P, T33G, T31P, T31G, T31, T30P, T30, T27G, CP920, CP925, CP935W
--------------------------	---

## Sending Volume Configuration

You can configure the sending volume of currently engaged audio devices (handset, speakerphone or headset) when the phone is in use.

The following table lists the parameters you can use to configure the sending volume.

<b>Parameter</b>	voice.handfree_send <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the sending volume of the speaker. <b>Note:</b> We recommend that you modify this parameter cautiously. An unsuitable value may render the voice quality bad.	
<b>Permitted Values</b>	Integer from -50 to 50	
<b>Default</b>	0	
<b>Web UI</b>	Features > Audio > Handfree Send Volume (-50~50)	
<b>Parameter</b>	voice.handfree.autoreset_spk_vol	<y0000000000xx>.cfg
<b>Description</b>	It configures the speaker's volume level during a call.	
<b>Permitted Values</b>	<b>0</b> -The speakerphone volume at the end of a call persists between calls. <b>1 to 15</b> -The speakerphone volume does not persist between calls, and resets to this specified level each new call.	
<b>Default</b>	0	
<b>Parameter</b>	voice.handset_send <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the sending volume of the handset. <b>Note:</b> We recommend that you modify this parameter cautiously. An unsuitable value may render the voice quality bad.	
<b>Permitted Values</b>	Integer from -50 to 50	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except CP920/CP925/CP935W	
<b>Web UI</b>	Features > Audio > Handset Send Volume (-50~50)	
<b>Parameter</b>	voice.handset.autoreset_spk_vol	<y0000000000xx>.cfg
<b>Description</b>	It configures the handset's volume level during a call.	
<b>Permitted Values</b>	<b>0</b> -The handset volume at the end of a call persists between calls. <b>1 to 15</b> -The handset volume does not persist between calls, and resets to this specified level each new call.	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except CP920/CP925/CP935W	
<b>Parameter</b>	voice.headset_send <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the sending volume of the headset.	

	<b>Note:</b> We recommend that you modify this parameter cautiously. An unsuitable value may render the voice quality bad.	
<b>Permitted Values</b>	Integer from -50 to 50	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except CP920/CP925/CP935W	
<b>Web UI</b>	Features > Audio > Headset Send Volume (-50~50)	
<b>Parameter</b>	voice.headset.autoreset_spk_vol	<y0000000000xx>.cfg
<b>Description</b>	It configures the headset's volume level during a call.	
<b>Permitted Values</b>	<b>0</b> -The headset volume at the end of a call persists between calls. <b>1 to 15</b> -The headset volume does not persist between calls, and resets to this specified level each new call.	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except CP920/CP925/CP935W	
<b>Parameter</b>	voice.side_tone <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the volume of the sidetone.	
<b>Permitted Values</b>	Integer from -100 to 0	
<b>Default</b>	-25	
<b>Parameter</b>	voice.headset_side_tone	<y0000000000xx>.cfg
<b>Description</b>	It configures the sidetone volume of the headset.	
<b>Permitted Values</b>	Integer from -100 to 0	
<b>Default</b>	-25	
<b>Parameter</b>	voice.handset.tia4965.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the handset's volume level to be reset to level 11 after the call if the volume level for the current call exceeds the standards. <b>Note:</b> The value configured by the parameter "voice.handset.autoreset_spk_vol" takes precedence over that configured by this parameter.	
<b>Permitted Values</b>	<b>0</b> -Disabled <b>1</b> -Enabled, if the handset's volume level for the current call is adjusted to level 12/13/14/15, the volume level automatically resets to 11 after the call. That is, the initial volume level is 11 for the next call.	
<b>Default</b>	1	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P, T29G, CP920, CP925 and CP935W	
<b>Parameter</b>	voice.headset.tia4965.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the headset's volume level to be reset to level 11 after the call if the volume level for the current call exceeds the standards. <b>Note:</b> The value configured by the parameter "voice.headset.autoreset_spk_vol" takes precedence	

	over that configured by this parameter.
<b>Permitted Values</b>	<b>0</b> -Disabled <b>1</b> -Enabled, if the headset's volume level for the current call is adjusted to level 12/13/14/15, the volume level automatically resets to 11 after the call. That is, the initial volume level is 11 for the next call.
<b>Default</b>	1
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P, T29G, CP920, CP925 and CP935W

[1]If you change this parameter, the phone will reboot to make the change take effect.

## Tones

When receiving a message, the phone will play a warning tone. You can customize tones or select specialized tone sets (vary from country to country) to indicate different conditions of the IP phone.

### Topics

[Supported Tones](#)  
[Tones Configuration](#)

## Supported Tones

The default tones used on the phones are the US tone sets. Available tone sets for phones:

- Australia
- Austria
- Brazil
- Belgium
- China
- Czech
- Denmark
- Finland
- France
- Germany
- Great Britain
- Greece
- Hungary
- Lithuania
- India
- Italy
- Japan
- Mexico
- New Zealand
- Netherlands
- Norway
- Portugal
- Spain
- Switzerland
- Sweden
- Russia

- United States
- Chile
- Czech ETSI

Configured tones can be heard on the phones in the following conditions.

Condition	Description
Dial	When in the dialing interface
Secondary Dial	When adding a comma “,” to the digit map (For more information on digit map, refer to <a href="#">Dial Plan Defined by Digit Map (New Dial Plan Mechanism)</a> )
Ring Back	Ring-back tone
Busy	When the callee is busy
Congestion	When the network is congested or no available accounts (SIP account&IP call account) on the phone
Call Waiting	Call waiting tone (For more information on call waiting, refer to <a href="#">Call Waiting</a> )
Dial Recall	When receiving a callback
Info	When receiving a special message
Stutter	When receiving a voice mail (For more information on voice mail tone, refer to <a href="#">Alert Tone</a> )
Message	When receiving a text message (For more information on text message, refer to <a href="#">Alert Tone</a> )
Auto Answer	When automatically answering a call (For more information on the auto answer, refer to <a href="#">Auto Answer</a> )
Stutter Dial	When DND or call forward is activated or the phone has a new voice message

## Tones Configuration

The following table lists the parameters you can use to configure tones.

<b>Parameter</b>	voice.tone.country	<y0000000000xx>.cfg
<b>Description</b>	It configures the country tone for the phones.	
<b>Permitted Values</b>	Custom, Australia, Austria, Brazil, Belgium, Chile, China, Czech, Czech ETSI, Denmark, Finland, France, Germany, Great Britain, Greece, Hungary, Lithuania, India, Italy, Japan, Mexico, New Zealand, Netherlands, Norway, Portugal, Spain, Switzerland, Sweden, Russia, United States	
<b>Default</b>	Custom	
<b>Web UI</b>	Settings > Tones > Select Country	
<b>Parameter</b>	voice.tone.dial	<y0000000000xx>.cfg
<b>Description</b>	<p>It customizes the dial tone.</p> <p>tone list = element[,element] [,element]...</p> <p>Where</p> <p><b>element</b> = [!]<b>Freq</b>1[+<b>Freq</b>2][+<b>Freq</b>3][+<b>Freq</b>4]/<b>Duration</b></p> <p><b>Freq</b>: the frequency of the tone (ranges from 200 to 4000 Hz). If it is set to 0 Hz, it means the tone is not played.</p> <p><b>For T40P/T40G/T23P/T23G/T21(P) E2/T19(P) E2:</b></p> <p>A tone is comprised of at most two different frequencies.</p>	



	<p><b>For other phones:</b></p> <p>A tone is comprised of at most four different frequencies.</p> <p><b>Duration:</b> the duration (in milliseconds) of the dial tone, ranges from 0 to 30000ms.</p> <p>You can configure at most eight different tones for one condition, and separate them by commas. (for example, 250/200,0/1000,200+300/500,200+500+800+1500/1000).</p> <p>If you want the IP phone to play tones once, add an exclamation mark “!” before tones (for example, !250/200,0/1000, 200+300/500,200+500+800+1500/1000).</p> <p><b>Note:</b> It works only if “voice.tone.country” is set to Custom.</p>	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Web UI</b>	Settings > Tones > Dial	
<b>Parameter</b>	features.partition_tone <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	<p>It enables or disables the phone to play the different dial tones when there is no active account.</p> <p><b>Note:</b> It works only if “voice.tone.dial” is configured.</p>	
<b>Permitted Values</b>	<p>0-Disabled</p> <p>1-Enabled. If there is an active account, the phone will play the default dial tone. If there is no active account, the phone will play the dial tone configured by “voice.tone.dial”.</p>	
<b>Default</b>	0	
<b>Parameter</b>	voice.tone.secondary_dial	<y0000000000xx>.cfg
<b>Description</b>	<p>It customizes the secondary dial tone.</p> <p>The value format is Freq/Duration. For more information on the value format, refer to the parameter “voice.tone.dial”.</p> <p><b>Note:</b> It works only if “voice.tone.country” is set to Custom. If you want to disable this warning tone, set it to 0.</p>	
<b>Permitted Values</b>	String	
<b>Default</b>	350+440/3000	
<b>Web UI</b>	Settings > Tones > Secondary Dial	
<b>Parameter</b>	voice.tone.ring	<y0000000000xx>.cfg
<b>Description</b>	<p>It customizes the ringback tone.</p> <p>The value format is Freq/Duration. For more information on the value format, refer to the parameter “voice.tone.dial”.</p> <p><b>Note:</b> It works only if “voice.tone.country” is set to Custom. If you want to disable this warning tone, set it to 0.</p>	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Web UI</b>	Settings > Tones > Ring Back	
<b>Parameter</b>	voice.tone.busy	<y0000000000xx>.cfg

<b>Description</b>	<p>It customizes the tone when the callee is busy.</p> <p>The value format is Freq/Duration. For more information on the value format, refer to the parameter "voice.tone.dial".</p> <p><b>Note:</b> It works only if "voice.tone.country" is set to Custom. If you want to disable this warning tone, set it to 0.</p>	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Web UI</b>	Settings > Tones > Busy	
<b>Parameter</b>	voice.tone.congestion	<y0000000000xx>.cfg
<b>Description</b>	<p>It customizes the tone when the network is congested or no available accounts (SIP account&amp;IP call account) on the phone.</p> <p>The value format is Freq/Duration. For more information on the value format, refer to the parameter "voice.tone.dial".</p> <p><b>Note:</b> It works only if "voice.tone.country" is set to Custom. If you want to disable this warning tone, set it to 0.</p>	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Web UI</b>	Settings > Tones > Congestion	
<b>Parameter</b>	features.congestion_tone.codelist	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the return code to play the congestion tone.</p> <p>Multiple codes are separated by commas.</p> <p><b>Example:</b></p> <p>features.congestion_tone.codelist = 403,503,603</p> <p><b>Note:</b> The congestion tone can be customized by "voice.tone.congestion".</p>	
<b>Permitted Values</b>	any code that the server can return	
<b>Default</b>	Blank	
<b>Parameter</b>	voice.tone.callwaiting	<y0000000000xx>.cfg
<b>Description</b>	<p>It customizes the call waiting tone.</p> <p>The value format is Freq/Duration. For more information on the value format, refer to the parameter "voice.tone.dial".</p> <p><b>Note:</b> It works only if "voice.tone.country" is set to Custom. If you want to disable this warning tone, set it to 0.</p>	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Web UI</b>	Settings > Tones > Call Waiting	
<b>Parameter</b>	voice.tone.dialrecall	<y0000000000xx>.cfg
<b>Description</b>	It customizes the callback tone.	

	<p>The value format is Freq/Duration. For more information on the value format, refer to the parameter "voice.tone.dial".</p> <p><b>Note:</b> It works only if "voice.tone.country" is set to Custom. If you want to disable this warning tone, set it to 0.</p>	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Web UI</b>	Settings > Tones > Dial Recall	
<b>Parameter</b>	voice.tone.info	<y0000000000xx>.cfg
<b>Description</b>	<p>It customizes the info tone. The phone will play the info tone with the special information, for example, the number you are calling is not in service.</p> <p>The value format is Freq/Duration. For more information on the value format, refer to the parameter "voice.tone.dial".</p> <p><b>Note:</b> It works only if "voice.tone.country" is set to Custom. If you want to disable this warning tone, set it to 0.</p>	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Web UI</b>	Settings > Tones > Info	
<b>Parameter</b>	voice.tone.stutter	<y0000000000xx>.cfg
<b>Description</b>	<p>It customizes the tone when the IP phone receives a voice mail.</p> <p>The value format is Freq/Duration. For more information on the value format, refer to the parameter "voice.tone.dial".</p> <p><b>Note:</b> It works only if "voice.tone.country" is set to Custom. If you want to disable this warning tone, set it to 0.</p>	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Web UI</b>	Settings > Tones > Stutter	
<b>Parameter</b>	voice.tone.message	<y0000000000xx>.cfg
<b>Description</b>	<p>It customizes the tone when the phone receives a text message.</p> <p>The value format is Freq/Duration. For more information on the value format, refer to the parameter "voice.tone.dial".</p> <p><b>Note:</b> It works only if "voice.tone.country" is set to Custom. If you want to disable this warning tone, set it to 0.</p>	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except CP920/CP925/CP935W	
<b>Web UI</b>	Settings > Tones > Message	

<b>Parameter</b>	voice.tone.autoanswer	<y0000000000xx>.cfg
<b>Description</b>	<p>It customizes the warning tone for the auto answer.</p> <p>The value format is Freq/Duration. For more information on the value format, refer to the parameter "voice.tone.dial".</p> <p><b>Note:</b> It works only if "voice.tone.country" is set to Custom. If you want to disable this warning tone, set it to 0.</p>	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Web UI</b>	Settings > Tones > Auto Answer	
<b>Parameter</b>	voice.tone.stutterdial	<y0000000000xx>.cfg
<b>Description</b>	<p>It customizes the dial tone when DND or call forward is activated or the phone has a new voice message.</p> <p>The value format is Freq/Duration. For more information on the value format, refer to the parameter "voice.tone.dial".</p> <p><b>Note:</b> It works only if "voice.tone.country" is set to Custom and "voice.tone.stutter_dial_tone.apply_to_dnd.enable"/"voice.tone.stutter_dial_tone.apply_to_fwd.enable"/"voice.tone.stutter_dial_tone.apply_to_vm.enable" is set to 1 (Enabled). If you want to disable this warning tone, set it to 0.</p>	
<b>Permitted Values</b>	String within 512 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T33P, T33G, T31P, T31G, T31, T30P, T30, CP920, CP925, CP935W	
<b>Web UI</b>	Settings > Tones > Stutter Dial	
<b>Parameter</b>	voice.tone.stutter_dial_tone.apply_to_dnd.enable	<y0000000000xx>.cfg
<b>Description</b>	<p>It enables or disables the phone to play a specified dial tone when DND is activated on the phone.</p> <p>The dial tone is configured by "voice.tone.stutterdial".</p> <p><b>Note:</b> It works only if "voice.tone.country" is set to Custom.</p>	
<b>Permitted Values</b>	<p>0-Disabled</p> <p>1-Enabled</p>	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T33P, T33G, T31P, T31G, T31, T30P, T30, CP920, CP925, CP935W	
<b>Parameter</b>	voice.tone.stutter_dial_tone.apply_to_fwd.enable	<y0000000000xx>.cfg
<b>Description</b>	<p>It enables or disables the phone to play a specified dial tone when call forward is activated on the phone.</p> <p>The dial tone is configured by "voice.tone.stutterdial".</p> <p><b>Note:</b> It works only if "voice.tone.country" is set to Custom.</p>	
<b>Permitted Values</b>	<p>0-Disabled</p> <p>1-Enabled</p>	
<b>Default</b>	0	

<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T33P, T33G, T31P, T31G, T31, T30P, T30, CP920, CP925, CP935W	
<b>Parameter</b>	voice.tone.stutter_dial_tone.apply_to_vm.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to play a specified dial tone when the phone has a new voice message. The dial tone is configured by "voice.tone.stutterdial". <b>Note:</b> It works only if "voice.tone.country" is set to Custom.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T33P, T33G, T31P, T31G, T31, T30P, T30, CP920, CP925, CP935W	

## Audio Codecs

CODEC is an abbreviation of COmpress-DECompress, capable of coding or decoding a digital data stream or signal by implementing an algorithm. The object of the algorithm is to represent the high-fidelity audio signal with a minimum number of bits while retaining the quality. This can effectively reduce the frame size and the bandwidth required for audio transmission.

The audio codec that the phone uses to establish a call should be supported by the SIP server. When placing a call, the phone will offer the enabled audio codec list to the server and then use the audio codec negotiated with the called party according to the priority.

### Topics

[Supported Audio Codecs](#)

[Audio Codecs Configuration](#)

## Supported Audio Codecs

The following table summarizes the supported audio codecs on the phones:

Codec	Algorithm	Reference	Bit Rate	Sample Rate	Packetization Time
G.722.1c	G.722.1c	RFC 5577	48 Kbps	32 Ksps	20ms
G.722.1c		RFC 5577	32 Kbps	32 Ksps	20ms
G.722.1c		RFC 5577	24 Kbps	32 Ksps	20ms
G.722.1	G.722.1	RFC 5577	24 Kbps	16 Ksps	20ms
G722	G.722	RFC 3551	64 Kbps	16 Ksps	20ms
PCMA(G.711A)	G.711 a-law	RFC 3551	64 Kbps	8 Ksps	20ms
PCMU(G.711μ)	G.711 u-law	RFC 3551	64 Kbps	8 Ksps	20ms
G729(G729A)	G.729	RFC 3551	8 Kbps	8 Ksps	20ms

Codec	Algorithm	Reference	Bit Rate	Sample Rate	Packetization Time
G729AB(G729B)	G729AB	RFC 3551	8 Kbps	8 Ksps	20ms
G726(16 kbps)	G.726	RFC 3551	16 Kbps	8 Ksps	20ms
G726(24 kbps)	G.726	RFC 3551	24 Kbps	8 Ksps	20ms
G726(32 kbps)	G.726	RFC 3551	32 Kbps	8 Ksps	20ms
G726(40 kbps)	G.726	RFC 3551	40 Kbps	8 Ksps	20ms
G723(53 kbps)/ G723(63 kbps)	G.723.1	RFC 3551	5.3 Kbps 6.3 Kbps	8 Ksps	30ms
iLBC(15.2kbps)	iLBC	RFC 3952	15.2 Kbps	8 Ksps	20ms
iLBC(13.33kbps)	iLBC	RFC 3952	13.33 Kbps	8 Ksps	30ms

**Note:** The network bandwidth necessary to send the encoded audio is typically 5~10% higher than the bit rate due to packetization overhead. For example, a two-way G.722 audio call at 64 Kbps consumes about 135 Kbps of network bandwidth.

The codec supports various audio bandwidths, defined as follows:

Abbreviation	Audio Bandwidth	Sample Rate (Effective)
NB (narrowband)	4 kHz	8 kHz
MB (medium-band)	6 kHz	12 kHz
WB (wideband)	8 kHz	16 kHz
SWB (super-wideband)	12 kHz	24 kHz
FB (fullband)	20 kHz	48 kHz

**Note:** The T40P/T40G/T23P/T23G/T21(P) E2/T19(P) E2 phones support using WB for encoding, and using NB, MB, WB, SWB and FB for decoding.

The T57W/T54W/T53W/T53/T53C/T48U/T48S/T46U/T46S/T43U/T42U/T42S/T41S/T27G phones support using WB (default) or NB for encoding, and using NB, MB, WB, SWB and FB for decoding.

The CP920/CP925/CP935W phones support using anyone from NB to WB for encoding, and using NB, MB, WB, SWB and FB for decoding.

The phones support up to two calls or a three-way conference.

The following table lists the audio codecs supported by each phone model:

Phone Model	Supported Audio Codecs	Default Audio Codecs
T48G/T46G/T42G/T41P/T29G	G722, PCMA, PCMU, G729, G726-16, G726-24, G726-32, G726-40, G723_53, G723_63, iLBC_15_2kpbs, iLBC_13_33kpbs	G722, PCMA, PCMU, G729
T40P/T40G/T23P/T23G/T21(P) E2/ T19(P) E2	G722, PCMA, PCMU, G729, G726-16, G726-24, G726-32, G726-40, iLBC_15_2kpbs, iLBC_13_33kpbs	G722, PCMA, PCMU, G729
T57W/T54W/T53W/T53/T53C/T48U/T48S/T46U/ T46S/T43U/T42S/T42U/T41S/T33P/T33G/T31P/ T31G/T31/T30P/T30/T27G	G722, PCMA(G.711A), PCMU(G.711μ), G729(G729A), G726(16 kbps), G726(24 kbps), G726(32 kbps), G726(40 kbps), G723(53 kbps), G723(63 kbps), iLBC(15.2k-bps), iLBC(13.33kpbs), G729AB(G729B)	G722, PCMA (G.711A), PCMU (G.711μ), G729 (G729A)
CP920	G.722.1c (48kb/s), G.722.1c (32kb/s), G.722.1c (24kb/s), G.722, PCMU, PCMA, G729, G726(16 kbps), G726 (24 kbps), G726(32 kbps), G726(40 kbps), G723(53 kbps), G723(63 kbps), iLBC (15.2kpbs), iLBC(13.33kpbs), G729AB	G.722.1c(48kb/s), G.722.1c(32kb/s), G.722.1c(24kb/s), G.722.1(24kb/s), G722, PCMU, PCMA, G729
CP925/CP935W	G.722.1c (48kb/s), G.722.1c (32kb/s), G.722.1c (24kb/s), G.722, PCMU, PCMA, G729, G726-16, G726-24, G726-32, G726-40, G723-53, G723-63, iLBC(15.2kpbs), iLBC(13.33kpbs)	G.722.1c(48kb/s), G.722.1c(32kb/s), G.722.1c(24kb/s), G.722.1(24kb/s), G722, PCMU, PCMA, G729

## Audio Codecs Configuration

The following table lists the parameters you can use to configure the audio codecs.

Parameter	account.X.codec.<payload_type>.enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	<p>It enables or disables the specified audio codec.</p> <p>The name (payload_type) of the audio codec:</p> <p><b>g722_1c_48kpbs</b>-G.722.1c(48kb/s) (only for CP920/CP925/CP935W)</p> <p><b>g722_1c_32kpbs</b>-G.722.1c(32kb/s) (only for CP920/CP925/CP935W)</p> <p><b>g722_1c_24kpbs</b>-G.722.1c(24kb/s) (only for CP920/CP925/CP935W)</p> <p><b>g722_1_24kpbs</b>-G.722.1(24kb/s) (only for CP920/CP925/CP935W)</p> <p><b>g722</b>-G722</p> <p><b>pcmu</b>-PCMU(G.711μ)</p> <p><b>pcma</b>-PCMA(G.711A)</p> <p><b>g729</b>-G729(G729A)</p> <p><b>g726_16</b>-G726(16 kbps)</p> <p><b>g726_24</b>-G726(24 kbps)</p> <p><b>g726_32</b>-G726(32 kbps)</p> <p><b>g726_40</b>-G726(40 kbps)</p> <p><b>g723_53</b>-G723(53 kbps)</p>	

	<p><b>g723_63</b>-G723(63 kbps)</p> <p><b>ilbc_15_2kpbs</b>- iLBC(15.2kbps)</p> <p><b>ilbc_13_33kpbs</b>-iLBC(13.33kbps)</p> <p><b>g729ab</b>-G729AB(G729B)</p> <p><b>Example:</b></p> <p>account.1.codec.g722.enable = 1</p> <p><b>Note:</b> The name of the audio codec in this parameter should be the correct one as listed in the above example, otherwise the corresponding configuration will not take effect.</p>	
<b>Permitted Values</b>	<p>0-Disabled</p> <p>1-Enabled</p>	
<b>Default</b>	<p><b>Default:</b></p> <p>When the audio codec is G.722.1c(48kb/s), the default value is 1;</p> <p>When the audio codec is G.722.1c(32kb/s), the default value is 1;</p> <p>When the audio codec is G.722.1c(24kb/s), the default value is 1;</p> <p>When the audio codec is G.722.1(24kb/s), the default value is 1;</p> <p>When the audio codec is G722, the default value is 1;</p> <p>When the audio codec is PCMU(G.711<math>\mu</math>), the default value is 1;</p> <p>When the audio codec is PCMA(G.711A), the default value is 1;</p> <p>When the audio codec is G729(G729A), the default value is 1;</p> <p>When the audio codec is G726(16 kbps), the default value is 0;</p> <p>When the audio codec is G726(24 kbps), the default value is 0;</p> <p>When the audio codec is G726(32 kbps), the default value is 0;</p> <p>When the audio codec is G726(40 kbps), the default value is 0;</p> <p>When the audio codec is G723(53 kbps), the default value is 0;</p> <p>When the audio codec is G723(63 kbps), the default value is 0;</p> <p>When the audio codec is iLBC(15.2kbps), the default value is 0;</p> <p>When the audio codec is iLBC(13.33kbps), the default value is 0;</p> <p>When the audio codec is G729AB(G729B), the default value is 0;</p>	
<b>Web UI</b>	Account > Codec > Audio Codec	
<b>Parameter</b>	account.X.codec.<payload_type>.priority <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	<p>It configures the priority of the enabled audio codec.</p> <p>The name of the audio codec:</p> <p><b>g722_1c_48kpbs</b>-G.722.1c(48kb/s) (only for CP920/CP925/CP935W)</p> <p><b>g722_1c_32kpbs</b>-G.722.1c(32kb/s) (only for CP920/CP925/CP935W)</p>	



	<p><b>g722_1c_24kpbs</b>-G.722.1c(24kb/s) (only for CP920/CP925/CP935W)</p> <p><b>g722_1_24kpbs</b>-G.722.1(24kb/s) (only for CP920/CP925/CP935W)</p> <p><b>g722</b>-G722</p> <p><b>pcmu</b>-PCMU(G.711μ)</p> <p><b>pcma</b>-PCMA(G.711A)</p> <p><b>g729</b>-G729(G729A)</p> <p><b>g726_16</b>-G726(16 kbps)</p> <p><b>g726_24</b>-G726(24 kbps)</p> <p><b>g726_32</b>-G726(32 kbps)</p> <p><b>g726_40</b>-G726(40 kbps)</p> <p><b>g723_53</b>-G723(53 kbps)</p> <p><b>g723_63</b>-G723(63 kbps)</p> <p><b>ilbc_15_2kpbs</b>- iLBC(15.2kbps)</p> <p><b>ilbc_13_33kpbs</b>-iLBC(13.33kbps)</p> <p><b>g729ab</b>-G729AB</p> <p><b>Example:</b></p> <p>account.1.codec.g722.priority = 1</p> <p><b>Note:</b> The priority of the codec in the disable codec list is not specified, and numerical value 1 is defined as the highest priority in the enable codec list. The name of the audio codec in this parameter should be the correct one as listed in the above example, otherwise, the corresponding configuration will not take effect.</p>
<b>Permitted Values</b>	Integer from 0 to 13 (18 for CP920 phones; 17 for CP925/CP935W phones)
<b>Default</b>	<p>When the audio codec is G722.1c(48kb/s), the default value is 1;</p> <p>When the audio codec is G722.1c(32kb/s), the default value is 2;</p> <p>When the audio codec is G722.1c(24kb/s), the default value is 3;</p> <p>When the audio codec is G722.1(24kb/s), the default value is 4;</p> <p>When the audio codec is G722, the default value is 1 (5 for CP920/CP925/CP935W phones);</p> <p>When the audio codec is PCMU(G.711μ), the default value is 2 (6 for CP920/CP925/CP935W phones);</p> <p>When the audio codec is PCMA(G.711A), the default value is 3 (7 for CP920/CP925/CP935W phones);</p> <p>When the audio codec is G729(G729A), the default value is 4 (8 for CP920/CP925/CP935W phones);</p> <p>When the audio codec is G726(16 kbps), the default value is 0;</p> <p>When the audio codec is G726(24 kbps), the default value is 0;</p> <p>When the audio codec is G726(32 kbps), the default value is 0;</p> <p>When the audio codec is G726(40 kbps), the default value is 0;</p>

	<p>When the audio codec is G723(53 kbps), the default value is 0;</p> <p>When the audio codec is G723(63 kbps), the default value is 0;</p> <p>When the audio codec is iLBC(15.2kbps), the default value is 0;</p> <p>When the audio codec is iLBC(13.33kbps), the default value is 0;</p> <p>When the audio codec is G729AB, the default value is 0;</p>	
<b>Web UI</b>	Account > Codec > Audio Codec	
<b>Parameter</b>	account.X.codec.ara <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the sample rate of the audio codec.	
<b>Permitted Values</b>		
<b>Default</b>		
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T46U, T46S, T43U, T42U, T42S, T41S, T27G, CP920, CP925, CP935W	
<b>Web UI</b>	Account > Codec	
<b>Parameter</b>	voice.g726.aal2.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to use the AAL2-G726-16, 24, 32 and 40 MIME type.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	phone_setting.talking_codec_display	<y0000000000xx>.cfg
<b>Description</b>		
<b>Permitted Values</b>	amr	

<b>Default</b>	amr
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## Packetization Time (PTime)

PTime is a measurement of the duration (in milliseconds) that how long the audio data in each RTP packet is sent to the destination, and defines how much the network bandwidth is used for the RTP stream transfer. Before establishing a conversation, codec and ptime are negotiated through SIP signaling. The valid values of ptime range from 10 to 60, in increments of 10 milliseconds. The default ptime is 20ms. You can also disable the ptime negotiation.

### Topics

[Supported PTime of Audio Codec](#)

[PTime Configuration](#)

## Supported PTime of Audio Codec

The following table summarizes the valid values of ptime for each audio codec:

Codec	Packetization Time (Minimum)	Packetization Time (Maximum)
G722	10ms	40ms
PCMA	10ms	40ms
PCMU	10ms	40ms
G729	10ms	80ms
G726-16	10ms	30ms
G726-24	10ms	30ms
G726-32	10ms	30ms (40ms for T40P/T40G/T23P/T23G/T21(P) E2/T19(P) E2)
G726-40	10ms	30ms
G723(53 kbps)/ G723(63 kbps)	30ms	60ms
iLBC	20ms	30ms
iLBC(15.2kbps)		20ms, 40ms, 60ms
iLBC(13.33kbps)		30ms, 60ms

## PTime Configuration

The following table lists the parameter you can use to configure the PTime.

<b>Parameter</b>	account.X.ptime <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the ptime (in milliseconds) for the codec.	
<b>Permitted Values</b>	<b>0</b> -Disabled <b>10</b> -10 <b>20</b> -20 <b>30</b> -30 <b>40</b> -40 <b>50</b> -50 <b>60</b> -60	
<b>Default</b>	20	
<b>Web UI</b>	Account > Advanced > PTime (ms)	

<sup>[1]</sup>X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## Early Media

The early media refers to the media (for example, audio and video) played to the caller before a SIP call is actually established.

Current implementation supports early media through the 183 message. When the caller receives a 183 message with SDP before the call is established, a media channel is established. This channel is used to provide the early media stream for the caller.

You can also configure 180 ring workaround which defines whether to deal with the 180 message received after the 183 message. When the caller receives a 183 message, it suppresses any local ringback tone and begins to play the media received. 180 ring workaround allows the phones to resume and play the local ringback tone upon a subsequent 180 message received.

### Topic

[Early Media Configuration](#)

## Early Media Configuration

The following table lists the parameters you can use to configure the early media.

<b>Parameter</b>	phone_setting.early_media.rtp_sniffer.timeout	<y0000000000xx>.cfg
<b>Description</b>	It configures the time to wait for the phone to play the local ringback tone when the early media cannot be played.	
<b>Permitted Values</b>	<b>-1</b> -Do not play the local ringback tone <b>0</b> -Play the local ringback tone immediately <b>1-100</b> -Wait for a specified time to play the local ringback tone	
<b>Default</b>	1	

<b>Parameter</b>	phone_setting.is_deal180	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to deal with the 180 SIP message received after the 183 SIP message.	
<b>Permitted Values</b>	0-Disabled 1-Enabled, the phone will resume and play the local ringback tone upon a subsequent 180 message received.	
<b>Default</b>	1	
<b>Web UI</b>	Features > General Information > 180 Ring Workaround	
<b>Parameter</b>	phone_setting.change_183_to_180	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to handle the received second 183 message as the 180 message.	
<b>Permitted Values</b>	0-Disabled 1-Enabled, the phone will play the early media first and play the local ringback tone when receiving the second 183 message.	
<b>Default</b>	0	

## Headset Prior

Headset prior allows users to use headset preferentially if a headset is physically connected to the IP phone. This feature is especially useful for permanent or full-time headset users.

It is not applicable to CP920/CP925/CP935W phones.

**Note:** It is not applicable to the Bluetooth headset and USB headset.

### Topic

[Headset Prior Configuration](#)

## Headset Prior Configuration

The following table lists the parameters you can use to configure the headset prior.

<b>Parameter</b>	features.headset_prior	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables to preferentially use the headset mode for all incoming and outgoing calls. <b>Note:</b> It works only if "features.headset_mode.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled, the headset mode will be deactivated after the call, if you switch the headset mode to speakerphone/headset mode. 1-Enabled, the headset mode will not be deactivated after the call, even if you switch the headset mode to speakerphone/headset mode.	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except CP920/CP925/CP935W	
<b>Web UI</b>	Features > General Information > Headset Prior	
<b>Parameter</b>	features.headset.ctrl_call.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the user to initiate or end a call by pressing the HEADSET key. <b>Note:</b> It works only if "features.headset_mode.enable" is set to 1 (Enabled).	
<b>Permitted</b>	0-Disabled	

<b>Values</b>	1-Enabled
<b>Default</b>	0
<b>Supported Devices</b>	All phones except CP920/CP925/CP935W

## Dual Headset

The dual headset allows you to use two headsets on one IP phone. To use this feature, you need to physically connect two headsets to the headset and handset jacks respectively. Once the IP phone connects to a call, the headset connected to the headset jack has the full-duplex capability, with the headset connected to the handset jack is only used for listening.

**Note:** The dual headset is not applicable to the Bluetooth headset and USB headset. It is not applicable to CP920/CP925/CP935W phones.

### Topic

[Dual Headset Configuration](#)

## Dual Headset Configuration

The following table lists the parameter you can use to configure dual headset.

<b>Parameter</b>	features.headset_training	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the dual headset feature. <b>Note:</b> It works only if "features.headset_mode.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled, users can use two headsets on one phone. When the IP phone joins a call, the headset connected to the headset jack has the full-duplex capability, with the headset connected to the handset jack is only used for listening.	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except CP920/CP925/CP935W	
<b>Web UI</b>	Features > General Information > Dual Headset	

## Acoustic Clarity Technology

To optimize the audio quality in your network, Yealink phones support the acoustic clarity technology: Acoustic Echo Cancellation (AEC), Background Noise Suppression (BNS), Automatic Gain Control (AGC), Voice Activity Detection (VAD), Comfort Noise Generation (CNG) and jitter buffer.

### Topics

[Acoustic Echo Cancellation \(AEC\)](#)  
[Noise Suppression](#)  
[Background Noise Suppression \(BNS\)](#)  
[Automatic Gain Control \(AGC\)](#)  
[Voice Activity Detection \(VAD\)](#)  
[Comfort Noise Generation \(CNG\)](#)  
[Jitter Buffer](#)  
[Smart Noise Block](#)  
[Acoustic Shield](#)  
[Smart Noise Filtering](#)

## Acoustic Echo Cancellation (AEC)

Yealink phones employ advanced AEC for hands-free operation. You can configure the AEC feature to remove the echo of the local loudspeaker from the local microphone without removing the near-end speech.

AEC is not normally required for calls via the handset. In some cases, where echo is experienced by the remote party, AEC may be used to reduce/avoid echo when you use the handset.

**Note:** Utilizing acoustic echo cancellation will introduce a small increase of delay into an audio path which might cause a lower voice quality.

### Topic

#### [AEC Configuration](#)

## AEC Configuration

The following table lists the parameter you can use to configure AEC.

<b>Parameter</b>	voice.echo_cancellation	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the AEC (Acoustic Echo Canceller) feature.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Web UI</b>	Settings > Voice > Echo Cancellation > ECHO	

## Noise Suppression

The impact noise in the room is picked-up, including paper rustling, coffee mugs, coughing, typing, and silverware striking plates. These noises, when transmitted to remote participants, can be very distracting.

You can enable the Noise Suppression feature to suppress these noises.

### Topic

#### [Noise Suppression Configuration](#)

## Noise Suppression Configuration

The following table lists the parameter you can use to configure noise suppression.

<b>Parameter</b>	voice.tns.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the Noise Suppression feature.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30, CP920, CP925, CP935W	
<b>Web UI</b>	Settings > Voice > Noise Proof > Noise Suppression	

## Background Noise Suppression (BNS)

Background noise suppression (BNS) is designed primarily for hands-free operation and reduces background noise to enhance communication in noisy environments.

## Automatic Gain Control (AGC)

Automatic Gain Control (AGC) is applicable to the hands-free operation and is used to keep audio output at nearly a constant level by adjusting the gain of signals in some circumstances. This increases the effective user-phone radius and helps with the intelligibility of soft-talkers.

## Voice Activity Detection (VAD)

VAD can avoid unnecessary coding or transmission of silence packets in VoIP applications, saving on computation and network bandwidth.

### Topic

[VAD Configuration](#)

## VAD Configuration

The following table lists the parameter you can use to configure VAD.

<b>Parameter</b>	voice.vad	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the VAD (Voice Activity Detection) feature.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Settings > Voice > Echo Cancellation > VAD	

## Comfort Noise Generation (CNG)

Comfort Noise Generation (CNG) is used to generate background noise for voice communications during periods of silence in a conversation.

**Note:** VAD is used to send CN packets when the phone detects a “silence” period; CNG is used to generate comfortable noise when the phone receives CN packets from the other side.

### Topic

[CNG Configuration](#)

## CNG Configuration

The following table lists the parameter you can use to configure CNG.

<b>Parameter</b>	voice.cng	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the CNG (Comfortable Noise Generation) feature.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Web UI</b>	Settings > Voice > Echo Cancellation > CNG	

## Jitter Buffer

Yealink phones support two types of jitter buffers: fixed and adaptive. A fixed jitter buffer adds the fixed delay to voice packets. You can configure the delay time for the static jitter buffer on the phones. An adaptive jitter buffer is capable of adapting the changes in the network's delay. The range of the delay time for the dynamic jitter buffer added to packets can be also configured on the phones.

### Topic



## Jitter Buffer Configuration

## Jitter Buffer Configuration

You can configure the mode of jitter buffer and the delay time for jitter buffer in the wired network or wireless network.

The following table lists the parameters you can use to configure the jitter buffer.

<b>Parameter</b>	voice.jib.adaptive	<y0000000000xx>.cfg
<b>Description</b>	It configures the type of jitter buffer in the wired network.	
<b>Permitted Values</b>	0-Fixed 1-Adaptive	
<b>Default</b>	1	
<b>Web UI</b>	Settings > Voice > Jitter Buffer > Type	
<b>Parameter</b>	voice.jib.min	<y0000000000xx>.cfg
<b>Description</b>	It configures the minimum delay time (in milliseconds) of the jitter buffer in the wired network. <b>Note:</b> It works only if "voice.jib.adaptive" is set to 1 (Adaptive). The value of this parameter should be less than or equal to that of "voice.jib.normal".	
<b>Permitted Values</b>	Integer from 0 to 400	
<b>Default</b>	60	
<b>Web UI</b>	Settings > Voice > Jitter Buffer > Min Delay	
<b>Parameter</b>	voice.jib.max	<y0000000000xx>.cfg
<b>Description</b>	It configures the maximum delay time (in milliseconds) of the jitter buffer in the wired network. <b>Note:</b> It works only if "voice.jib.adaptive" is set to 1 (Adaptive). The value of this parameter should be greater than or equal to that of "voice.jib.normal".	
<b>Permitted Values</b>	Integer from 0 to 400	
<b>Default</b>	240	
<b>Web UI</b>	Settings > Voice > Jitter Buffer > Max Delay	
<b>Parameter</b>	voice.jib.normal	<y0000000000xx>.cfg
<b>Description</b>	It configures the normal delay time (in milliseconds) of the jitter buffer in the wired network. <b>Note:</b> It works only if "voice.jib.adaptive" is set to 0 (Fixed). The value of this parameter should be greater than or equal to that of "voice.jib.min" and less than or equal to that of "voice.jib.max".	
<b>Permitted Values</b>	Integer from 0 to 400	
<b>Default</b>	120	
<b>Web UI</b>	Settings > Voice > Jitter Buffer > Normal	
<b>Parameter</b>	voice.jib.wifi.adaptive	<y0000000000xx>.cfg
<b>Description</b>	It configures the type of jitter buffer in the wireless network.	
<b>Permitted Values</b>	0-Fixed 1-Adaptive	

<b>Default</b>	1	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T48G, T46U, T46S, T46G, T43U, T42U, T42S, T41S, T29G, T27G, CP920, CP925, CP935W	
<b>Parameter</b>	voice.jib.wifi.min	<y0000000000xx>.cfg
<b>Description</b>	It configures the minimum delay time (in milliseconds) of the jitter buffer in the wireless network. <b>Note:</b> It works only if “voice.jib.wifi.adaptive” is set to 1 (Adaptive). The value of this parameter should be less than or equal to that of “voice.jib.wifi.normal”.	
<b>Permitted Values</b>	Integer from 0 to 500	
<b>Default</b>	60	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T48G, T46U, T46S, T46G, T43U, T42U, T42S, T41S, T29G, T27G, CP920, CP925, CP935W	
<b>Parameter</b>	voice.jib.wifi.max	<y0000000000xx>.cfg
<b>Description</b>	It configures the maximum delay time (in milliseconds) of the jitter buffer in the wireless network. <b>Note:</b> It works only if “voice.jib.wifi.adaptive” is set to 1 (Adaptive). The value of this parameter should be greater than or equal to that of “voice.jib.wifi.normal”.	
<b>Permitted Values</b>	Integer from 0 to 500	
<b>Default</b>	500	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T48G, T46U, T46S, T46G, T43U, T42U, T42S, T41S, T29G, T27G, CP920, CP925, CP935W	
<b>Parameter</b>	voice.jib.wifi.normal	<y0000000000xx>.cfg
<b>Description</b>	It configures the normal delay time (in milliseconds) of the jitter buffer in the wireless network. <b>Note:</b> It works only if “voice.jib.wifi.adaptive” is set to 0 (Fixed). The value of this parameter should be greater than or equal to that of “voice.jib.wifi.min” and less than or equal to that of “voice.jib.wifi.min”.	
<b>Permitted Values</b>	Integer from 0 to 500	
<b>Default</b>	240	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T48G, T46U, T46S, T46G, T43U, T42U, T42S, T41S, T29G, T27G, CP920, CP925, CP935W	

## Smart Noise Block

You can use the Smart Noise Block feature to block out the local noises when there is no speech in a call.

It is only applicable to CP920/CP925/CP935W phones.

### Topic

[Smart Noise Block Configuration](#)

## Smart Noise Block Configuration

The following table lists the parameter you can use to configure smart noise block.

<b>Parameter</b>	voice.ans_nb.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the Smart Noise Block feature. <b>Note:</b> It works only if “voice.tns.enable” is set to 1 (Enabled).	
<b>Permitted</b>	0-Disabled	

<b>Values</b>	1-Enabled
<b>Default</b>	0
<b>Supported Devices</b>	CP920, CP925, CP935W
<b>Web UI</b>	Settings > Voice > Noise Proof > Smart Noise Block

## Acoustic Shield

The acoustic shield feature is designed for background noise suppression when you are using the phone handset or a connected headset.

It is particularly used in the open office environment, such as the call center, where background noise can impact far-end audio quality.

It is only applicable to T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U phones.

### Topic

[Acoustic Shield Configuration](#)

## Acoustic Shield Configuration

The following table lists the parameter you can use to configure the acoustic shield.

<b>Parameter</b>	features.acoustic_shield.mode	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the acoustic shield feature during the call.	
<b>Permitted Values</b>	<p>0-Disabled</p> <p>1-Enabled, you need to manually enable acoustic shield by pressing the <b>Acous.S On</b> soft key during the call.</p> <p>2-Auto, the acoustic shield is automatically enabled when the call is set up. You can press the <b>Acous.S Off</b> soft key during the call to disable it.</p>	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U	
<b>Web UI</b>	Settings > Voice > Acoustic Shield > Acoustic Shield Mode	
<b>Parameter</b>	features.acoustic_shield.level	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the noise suppression level for handsets and headsets.</p> <p>The higher value represents the better noise suppression effect.</p> <p>If it is set to 3, the phone automatically shields the noise out of 20 centimeters (7.9 inches) when you are using the phone handset or a headset.</p>	
<b>Permitted Values</b>	Integer from 1 to 3	
<b>Default</b>	2	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U	
<b>Web UI</b>	Settings > Voice > Acoustic Shield > Acoustic Shield Level	
	<b>Note:</b> It is only applicable to T53C/T53/T53W/T54W/T57W phones.	

## Smart Noise Filtering

The phones can block out the slight noise from the far party when there is no speech in a call, and at the same time filter out the common transient noise (door closing, table knocking, and so on).

### Topic

[Smart Noise Filtering Configuration](#)

## Smart Noise Filtering Configuration

The following table lists the parameter you can use to configure smart noise filtering.

<b>Parameter</b>	features.noise_filtering_rev.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to block out the slight noise from the far end when there is no speech in a call. <b>Note:</b> After smart noise filtering is enabled, if the far end is playing music or calling a voice service, the background music will also be eliminated when there is no speech in a call.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30, CP920, CP925, CP935W	
<b>Web UI</b>	Settings > Voice > Smart Noise Filtering > Smart Noise Filtering	

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## DTMF

DTMF (Dual Tone Multi-frequency) tone, better known as touch tone. DTMF is the signal sent from the IP phone to the network, which is generated when pressing the IP phone's keypad during a call. Each key pressed on the IP phone generates one sinusoidal tone of two frequencies. One is generated from a high-frequency group and the other from a low-frequency group.

### Topics

[DTMF Keypad](#)  
[Transmitting DTMF Digit](#)  
[Suppress DTMF Display](#)  
[Transfer via DTMF](#)  
[Local DTMF Tone](#)

## DTMF Keypad

The DTMF keypad is laid out in a 4×4 matrix, with each row representing a low frequency, and each column representing a high frequency. Pressing a digit key (such as '1') will generate a sinusoidal tone for each of two frequencies (697 and 1209 hertz (Hz)).

### DTMF Keypad Frequencies:

	1209 Hz	1336 Hz	1477 Hz	1633 Hz
697 Hz	1	2	3	A

	1209 Hz	1336 Hz	1477 Hz	1633 Hz
770 Hz	4	5	6	B
852 Hz	7	8	9	C
941 Hz	*	0	#	D

**Note:** The phones will not send the DTMF sequence when the call is placed on hold or is held.

## Transmitting DTMF Digit

Three methods of transmitting DTMF digits on SIP calls:

- **RFC 2833** -- DTMF digits are transmitted by RTP Events compliant with RFC 2833. You can configure the payload type and sending times of the end RTP Event packet. The RTP Event packet contains 4 bytes. The 4 bytes are distributed over several fields denoted as Event, End bit, R-bit, Volume, and Duration. If the End bit is set to 1, the packet contains the end of the DTMF event. You can configure the sending times of the end RTP Event packet.
- **INBAND** -- DTMF digits are transmitted in the voice band. It uses the same codec as your voice and is audible to conversation partners.
- **SIP INFO** -- DTMF digits are transmitted by SIP INFO messages. DTMF digits are transmitted by the SIP INFO messages when the voice stream is established after a successful SIP 200 OK-ACK message sequence. The SIP INFO message can transmit DTMF digits in three ways: DTMF, DTMF-Relay, and Telephone-Event.

### Topic

[Transmitting DTMF Digit Configuration](#)

## Transmitting DTMF Digit Configuration

The following table lists the parameters you can use to configure the transmitting DTMF digit.

<b>Parameter</b>	account.X.dtmf.type <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the DTMF type.	
<b>Permitted Values</b>	<p>0-INBAND, DTMF digits are transmitted in the voice band.</p> <p>1-RFC2833, DTMF digits are transmitted by RTP Events compliant to RFC 2833.</p> <p>2-SIP INFO, DTMF digits are transmitted by the SIP INFO messages.</p> <p>3-RFC2833 + SIP INFO, DTMF digits are transmitted by RTP Events compliant to RFC 2833 and the SIP INFO messages.</p>	
<b>Default</b>	1	
<b>Web UI</b>	Account > Advanced > DTMF Type	
<b>Parameter</b>	account.X.dtmf.dtmf_payload <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	<p>It configures the value of DTMF payload.</p> <p><b>Note:</b> It works only if "account.X.dtmf.type" is set to 1 (RFC2833) or 3 (RFC2833 + SIP INFO).</p>	
<b>Permitted Values</b>	Integer from 96 to 127	
<b>Default</b>	101	

<b>Web UI</b>	Account > Advanced > DTMF Payload Type(96~127)	
<b>Parameter</b>	account.X.dtmf.info_type <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the DTMF info type. <b>Note:</b> It works only if “account.X.dtmf.type” is set to 2 (SIP INFO) or 3 (RFC2833 + SIP INFO).	
<b>Permitted Values</b>	1-DTMF-Relay 2-DTMF 3-Telephone-Event	
<b>Default</b>	1	
<b>Web UI</b>	Account > Advanced > DTMF Info Type	
<b>Parameter</b>	features.dtmf.repetition	<y0000000000xx>.cfg
<b>Description</b>	It configures the repetition times for the phone to send the end RTP Event packet during an active call.	
<b>Permitted Values</b>	1, 2 or 3	
<b>Default</b>	3	
<b>Web UI</b>	Features > General Information > DTMF Repetition	
<b>Parameter</b>	features.dtmf.duration	<y0000000000xx>.cfg
<b>Description</b>	It configures the duration time (in milliseconds) for each digit when a sequence of DTMF tones is played out automatically. <b>Note:</b> If the time interval between two DTMF digits is less than this value, two or more same DTMF digits could be identified as one DTMF digit. This may cause the loss of one or more DTMF digits. For example, 2662 may be identified as 262. If so, you can modify the value of this parameter to a little lower than the default value.	
<b>Permitted Values</b>	Integer from 0 to 700	
<b>Default</b>	100	
<b>Parameter</b>	features.dtmf.volume	<y0000000000xx>.cfg
<b>Description</b>	It configures the volume of the DTMF tone (in dB).	
<b>Permitted Values</b>	Integer from -33 to 0	
<b>Default</b>	-10	
<b>Parameter</b>	features.dtmf.min_interval	<y0000000000xx>.cfg
<b>Description</b>	It configures the minimum inter-digit time (in milliseconds) between digits when a sequence of DTMF tones is played out automatically.	
<b>Permitted Values</b>	Integer from 0 to 300	
<b>Default</b>	50	

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## Suppress DTMF Display

Suppress DTMF display allows the phones to suppress the display of DTMF digits during an active call. DTMF digits are displayed as "\*" on the phone screen. Suppress DTMF display delay defines whether to display the DTMF digits for a short period of time before displaying as "\*".

### Topic

[Suppress DTMF Display Configuration](#)

## Suppress DTMF Display Configuration

The following table lists the parameters you can use to configure the suppress DTMF display.

<b>Parameter</b>	features.dtmf.hide	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to suppress the display of DTMF digits during an active call.	
<b>Permitted Values</b>	0-Disabled 1-Enabled, the DTMF digits are displayed as asterisks.	
<b>Default</b>	0	
<b>Web UI</b>	Features > General Information > Suppress DTMF Display	
<b>Parameter</b>	features.dtmf.hide_delay	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to display the DTMF digits for a short period before displaying asterisks during an active call. <b>Note:</b> It works only if "features.dtmf.hide" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Features > General Information > Suppress DTMF Display Delay	

## Transfer via DTMF

Call transfer is implemented via DTMF on some servers. The IP phone sends specified DTMF digits to the server for transferring calls to third parties.

### Topic

[Transfer via DTMF Configuration](#)

## Transfer via DTMF Configuration

The following table lists the parameters you can use to configure the transfer via DTMF.

<b>Parameter</b>	features.dtmf.replace_tran	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to send designated DTMF sequences for transfer function when pressing the <b>Tran/Transfer</b> soft key or TRAN/TRANSFER key.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	

<b>Default</b>	0	
<b>Web UI</b>	Features > General Information > DTMF Replace Tran	
<b>Parameter</b>	features.dtmf.transfer	<y0000000000xx>.cfg
<b>Description</b>	It configures the DTMF sequences to be transmitted to perform call transfer. Valid values are: 0-9, *, # and A-E. <b>Note:</b> It works only if “features.dtmf.replace_tran” is set to 1 (Enabled).	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > General Information > Tran Send DTMF	

## Local DTMF Tone

Local DTMF tone allows the phones to play a local DTMF tone during an active call. If this feature is enabled, you can hear the DTMF tone when pressing the IP phone’s keypad during a call.

### Topic

[Local DTMF Tone Configuration](#)

## Local DTMF Tone Configuration

The following table lists the parameter you can use to configure the local DTMF tone.

<b>Parameter</b>	features.play_local_dtmf_tone_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to play a local DTMF tone.	
<b>Permitted Values</b>	<b>0</b> -Disabled <b>1</b> -Enabled, you can hear the DTMF tone when pressing the phone’s keypad during a call.	
<b>Default</b>	1	
<b>Web UI</b>	Features > General Information > Play Local DTMF Tone	

## Voice Quality Monitoring (VQM)

Voice quality monitoring feature allows the phones to generate various quality metrics for listening quality and conversational quality. These metrics can be sent between the phones in RTCP-XR packets. These metrics can also be sent in SIP PUBLISH messages to a central voice quality report collector. Yealink phones support two mechanisms for voice quality monitoring: RTCP-XR and VQ-RTCPXR.

### Topics

[RTCP-XR](#)

[VQ-RTCPXR](#)

## RTCP-XR

The RTCP-XR mechanism, compliant with [RFC 3611-RTP Control Extended Reports \(RTCP XR\)](#), provides the metrics contained in RTCP-XR packets for monitoring the quality of calls. These metrics include network packet loss, delay metrics, analog metrics, and voice quality metrics.

### Topic

[RTCP-XR Configuration](#)



## RTCP-XR Configuration

The following table lists the parameters you can use to configure the RTCP-XR.

<b>Parameter</b>	voice.rtcp_xr.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to send RTCP-XR packets.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Settings > Voice Monitoring > Voice RTCP-XR Report	
<b>Parameter</b>	voice.rtcp.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to send RTCP packets.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Parameter</b>	voice.rtcp_cname	<y0000000000xx>.cfg
<b>Description</b>	It configures the cname of the RTCP packets.	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	

## VQ-RTCPXR

The VQ-RTCPXR mechanism, compliant with [RFC 6035](#), sends the service quality metric reports contained in SIP PUBLISH messages to the central report collector.

A wide range of performance metrics are generated in the following three ways:

- Based on current values, such as jitter, jitter buffer max, and round trip delay.
- Covers the time period from the beginning of the call until the report is sent, such as network packet loss.
- Computed using other metrics as input, such as listening Mean Opinion Score (MOS-LQ) and conversational Mean Opinion Score (MOS-CQ).

### Topics

[Voice Quality Reports](#)  
[VQ-RTCPXR Display](#)  
[Central Report Collector](#)

## Voice Quality Reports

Three types of quality reports can be enabled:

- **Session:** Generated at the end of a call.
- **Interval:** Generated during a call at a configurable period.
- **Alert:** Generated when the call quality degrades below a configurable threshold.

### Topic

[Voice Quality Reports Configuration](#)

## Voice Quality Reports Configuration

The following table lists the parameters you can use to configure the service quality reports.

<b>Parameter</b>	phone_setting.vq_rtcpxr.session_report.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to send a session quality report to the central report collector at the end of each call.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Settings > Voice Monitoring > VQ RTCP-XR Session Report	
<b>Parameter</b>	phone_setting.vq_rtcpxr.interval_report.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to send an interval quality report to the central report collector periodically throughout a call.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Settings > Voice Monitoring > VQ RTCP-XR Interval Report	
<b>Parameter</b>	phone_setting.vq_rtcpxr_interval_period	<y0000000000xx>.cfg
<b>Description</b>	It configures the interval (in seconds) for the phone to send an interval quality report to the central report collector periodically throughout a call. <b>Note:</b> It works only if "phone_setting.vq_rtcpxr.interval_report.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	Integer from 5 to 20	
<b>Default</b>	20	
<b>Web UI</b>	Settings > Voice Monitoring > Period for Interval Report	
<b>Parameter</b>	phone_setting.vq_rtcpxr_moslq_threshold_warning	<y0000000000xx>.cfg
<b>Description</b>	It configures the threshold value of listening MOS score (MOS-LQ) multiplied by 10. The threshold value of MOS-LQ causes the phone to send a warning alert quality report to the central report collector. For example, a configured value of 35 corresponds to the MOS score 3.5. When the MOS-LQ value computed by the phone is less than or equal to 3.5, the phone will send a warning alert quality report to the central report collector. When the MOS-LQ value computed by the phone is greater than 3.5, the phone will not send a warning alert quality report to the central report collector. If it is set to blank, warning alerts are not generated due to MOS-LQ.	
<b>Permitted Values</b>	Integer from 15 to 40	
<b>Default</b>	Blank	
<b>Web UI</b>	Settings > Voice Monitoring > Warning Threshold for Moslq	
<b>Parameter</b>	phone_setting.vq_rtcpxr_moslq_threshold_critical	<y0000000000xx>.cfg
<b>Description</b>	It configures the threshold value of listening MOS score (MOS-LQ) multiplied by 10. The threshold value of MOS-LQ causes the phone to send a critical alert quality report to the central report collector. For example, a configured value of 28 corresponds to the MOS score 2.8. When the MOS-LQ value computed by the phone is less than or equal to 2.8, the phone will send a critical alert quality report to the central report collector. When the MOS-LQ value computed by the phone is greater than 2.8, the phone will not send a critical alert quality report to the central report collector. If it is set to blank, critical alerts are not generated due to MOS-LQ.	

<b>Permitted Values</b>	Integer from 15 to 40	
<b>Default</b>	Blank	
<b>Web UI</b>	Settings > Voice Monitoring > Critical Threshold for Moslq	
<b>Parameter</b>	phone_setting.vq_rtcpxr_delay_threshold_warning	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the threshold value of one-way delay (in milliseconds) that causes the phone to send a warning alert quality report to the central report collector.</p> <p>For example, if it is set to 500, when the value of one way delay computed by the phone is greater than or equal to 500, the phone will send a warning alert quality report to the central report collector; when the value of one way delay computed by the phone is less than 500, the phone will not send a warning alert quality report to the central report collector.</p> <p>If it is set to blank, warning alerts are not generated due to one-way delay. The one-way delay includes both network delay and end system delay.</p>	
<b>Permitted Values</b>	10 to 2000	
<b>Default</b>	Blank	
<b>Web UI</b>	Settings > Voice Monitoring > Warning Threshold for Delay	
<b>Parameter</b>	phone_setting.vq_rtcpxr_delay_threshold_critical	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the threshold value of one-way delay (in milliseconds) that causes the phone to send a critical alert quality report to the central report collector.</p> <p>For example, if it is set to 500, when the value of one-way delay computed by the phone is greater than or equal to 500, the phone will send a critical alert quality report to the central report collector; when the value of one way delay computed by the phone is less than 500, the phone will not send a critical alert quality report to the central report collector.</p> <p>If it is set to blank, critical alerts are not generated due to one-way delay. The one-way delay includes both network delay and end system delay.</p>	
<b>Permitted Values</b>	10 to 2000	
<b>Default</b>	Blank	
<b>Web UI</b>	Settings > Voice Monitoring > Critical Threshold for Delay	
<b>Parameter</b>	phone_setting.vq_rtcpxr.min_callduration	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the minimum call duration time (in seconds) that causes the phone to send a session quality report to the central report collector.</p> <p>If it is set to 0, the phone will send a session quality report to the central report collector at the end of each call.</p> <p><b>Note:</b> It works only if "phone_setting.vq_rtcpxr.session_report.enable" is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	Integer from 0 to 60	
<b>Default</b>	0	

## VQ-RTCPXR Display

You can check the voice quality data of the last call via the web user interface or phone user interface. You can also specify the options of the RTP status to be displayed on the phone user interface. Options of the RTP status displayed on the web user interface cannot be specified.

**Note:** You can configure the softkey layout feature to display the **RTP Status** soft key during the conference. Then you can press the **RTP Status** soft key to check the voice quality data with different parties. For more information, refer to [Softkey Layout](#).

## Topic

### VQ-RTCPXR Display Configuration

#### VQ-RTCPXR Display Configuration

The following table lists the parameters you can use to configure VQ-RTCPXR display.

<b>Parameter</b>	phone_setting.vq_rtcpxr.states_show_on_web.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the voice quality data of the last call to be displayed on the web interface at the path <b>Status &gt; RTP Status</b> .	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Settings > Voice Monitoring > Display Report Options on Web	
<b>Parameter</b>	phone_setting.vq_rtcpxr.states_show_on_gui.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the voice quality data of the last call or current call to be displayed on the phone screen. You can view the voice quality data of the last call on the phone at the path <b>Menu &gt; Status &gt; More &gt; RTP (RTP Status)</b> . You can view the voice quality data of the current call by pressing <b>RTP/RTP Status</b> soft key during a call.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Settings > Voice Monitoring > Display Report Options on Phone	
<b>Parameter</b>	phone_setting.vq_rtcpxr_display_start_time.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to display Start Time on the phone screen. <b>Note:</b> It works only if “phone_setting.vq_rtcpxr.states_show_on_gui.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Web UI</b>	Settings > Voice Monitoring > Report Options on Phone > Start Time	
<b>Parameter</b>	phone_setting.vq_rtcpxr_display_stop_time.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to display Current Time or Stop Time on the phone screen. <b>Note:</b> It works only if “phone_setting.vq_rtcpxr.states_show_on_gui.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Web UI</b>	Settings > Voice Monitoring > Report Options on Phone > Current Time	
<b>Parameter</b>	phone_setting.vq_rtcpxr_display_local_call_id.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to display Local User on the phone screen.	

	<b>Note:</b> It works only if “phone_setting.vq_rtcpvr.states_show_on_gui.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Web UI</b>	Settings > Voice Monitoring > Report Options on Phone > Local User	
<b>Parameter</b>	phone_setting.vq_rtcpvr_display_remote_call_id.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to display Remote User on the phone screen. <b>Note:</b> It works only if “phone_setting.vq_rtcpvr.states_show_on_gui.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Web UI</b>	Settings > Voice Monitoring > Report Options on Phone > Remote User	
<b>Parameter</b>	phone_setting.vq_rtcpvr_display_local_codec.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to display Local Codec on the phone screen. <b>Note:</b> It works only if “phone_setting.vq_rtcpvr.states_show_on_gui.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Web UI</b>	Settings > Voice Monitoring > Report Options on Phone > Local Codec	
<b>Parameter</b>	phone_setting.vq_rtcpvr_display_remote_codec.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to display Remote Codec on the phone screen. <b>Note:</b> It works only if “phone_setting.vq_rtcpvr.states_show_on_gui.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Web UI</b>	Settings > Voice Monitoring > Report Options on Phone > Remote Codec	
<b>Parameter</b>	phone_setting.vq_rtcpvr_display_jitter.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to display Jitter on the phone screen. <b>Note:</b> It works only if “phone_setting.vq_rtcpvr.states_show_on_gui.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Web UI</b>	Settings > Voice Monitoring > Report Options on Phone > Jitter	
<b>Parameter</b>	phone_setting.vq_rtcpvr_display_jitter_buffer_max.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to display Jitter Buffer Max on the phone screen. <b>Note:</b> It works only if “phone_setting.vq_rtcpvr.states_show_on_gui.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	

<b>Default</b>	1	
<b>Web UI</b>	Settings > Voice Monitoring > Report Options on Phone > Jitter Buffer Max	
<b>Parameter</b>	phone_setting.vq_rtcp_r_display_packets_lost.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to display Packets lost on the phone screen. <b>Note:</b> It works only if “phone_setting.vq_rtcp_r.states_show_on_gui.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Web UI</b>	Settings > Voice Monitoring > Report Options on Phone > Packets Lost	
<b>Parameter</b>	phone_setting.vq_rtcp_r_display_symm_oneway_delay.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to display SymmOneWayDelay on the phone screen. <b>Note:</b> It works only if “phone_setting.vq_rtcp_r.states_show_on_gui.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Settings > Voice Monitoring > Report Options on Phone > SymmOneWayDelay	
<b>Parameter</b>	phone_setting.vq_rtcp_r_display_round_trip_delay.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to display RoundTripDelay on the phone screen. <b>Note:</b> It works only if “phone_setting.vq_rtcp_r.states_show_on_gui.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Settings > Voice Monitoring > Report Options on Phone > RoundTripDelay	
<b>Parameter</b>	phone_setting.vq_rtcp_r_display_moslq.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to display MOS-LQ on the phone screen. <b>Note:</b> It works only if “phone_setting.vq_rtcp_r.states_show_on_gui.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Web UI</b>	Settings > Voice Monitoring > Report Options on Phone > MOS-LQ	
<b>Parameter</b>	phone_setting.vq_rtcp_r_display_moscq.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to display MOS-CQ on the phone screen. <b>Note:</b> It works only if “phone_setting.vq_rtcp_r.states_show_on_gui.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Web UI</b>	Settings > Voice Monitoring > Report Options on Phone > MOS-CQ	

## Central Report Collector

To operate with the central report collector, the phones must be configured to forward their voice quality reports to the specified report collector. You can specify the report collector on a per-line basis.

### Topic

[Central Report Collector Configuration](#)

### Central Report Collector Configuration

The following table lists the parameters you can use to configure the central report collector.

<b>Parameter</b>	account.X.vq_rtcpxr.collector_name <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the hostname of the central report collector that accepts voice quality reports contained in SIP PUBLISH messages.	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Account > Advanced > VQ RTCP-XR Collector Name	
<b>Parameter</b>	account.X.vq_rtcpxr.collector_server_host <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the IP address of the central report collector that accepts voice quality reports contained in SIP PUBLISH messages.	
<b>Permitted Values</b>	IPv4 Address/FQDN	
<b>Default</b>	Blank	
<b>Web UI</b>	Account > Advanced > VQ RTCP-XR Collector Address	
<b>Parameter</b>	account.X.vq_rtcpxr.collector_server_port <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the port of the central report collector that accepts voice quality reports contained in SIP PUBLISH messages.	
<b>Permitted Values</b>	Integer from 0 to 65535	
<b>Default</b>	5060	
<b>Web UI</b>	Account > Advanced > VQ RTCP-XR Collector Port	

<sup>[1]</sup>X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## Ultrasonic Configuration

The following table lists the parameter you can use to configure the ultrasonic.

<b>Parameter</b>	voice.ultrasonic.enable	<y000000000xx>.cfg
<b>Description</b>	It enables or disables the ultrasonic. <b>Note:</b> When the user uses a common RJ headset to connect to the phone, the ultrasonic is automatically turned off, and the ultrasonic is automatically turned on after disconnection.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	

---

<b>Default</b>	1
<b>Supported Devices</b>	T33P, T33G, T31P, T31G, T31, T30P, T30



---

## Phone Customization

You can make the IP phone more personalized by customizing various settings.

### Topics

- Language
- Contrast
- Wallpaper
- Transparency
- Screen Saver
- Backlight
- Label Length for Line Key Display
- Label Alignment for Line/Ext Key Display
- Page Switch Key
- Page Tips
- Time and Date
- Idle Clock Display
- Logo Customization
- Call Display
- Display Method on Dialing
- Key As Send
- Softkey Layout
- Input Method
- Notification Popups
- Power LED Indicator
- Bluetooth
- Handset/Headset/Speakerphone Mode
- DSS Keys
- Enhanced DSS Keys
- Power Saving
- Search Source List in Dialing
- Recent Call Display in Dialing
- Icon Customization
- Warnings Display
- Out of Service
- Phone Mode

## Language

Yealink phones support multiple languages. Languages used on the phone user interface and web user interface can be specified respectively as required.

### Topics

- Supported Languages
- Language Display Configuration
- Language for Phone Display Customization
- Language for Web Display Customization

## Supported Languages

You can ask the distributor or Yealink FAE for language packs. You can also obtain the language packs online: <http://support.yealink.com/documentFront/forwardToDocumentFrontDisplayPage>.

The following table lists available languages and associated language packs supported by the phone user interface and the web user interface.

Phone User Interface		Web User Interface		
Language	Language Pack	Language	Language Pack	Note Language Pack
English	000.GUI.English.lang	English	1.English.js	1.English_note.xml
Chinese Simplified	001.GUI.Chinese_S.lang	Chinese Simplified	2.Chinese_S.js	2.Chinese_S_note.xml
Chinese Traditional	002.GUI.Chinese_T.lang	Chinese Traditional	3.Chinese_T.js	3.Chinese_T_note.xml
French (Canada)	003.GUI.French_CA.lang	French	4.French.js	4.French_note.xml
French (EU)	004.GUI.French.lang	German	5.German.js	5.German_note.xml
German	005.GUI.German.lang	Italian	6.Italian.js	6.Italian_note.xml
Italian	006.GUI.Italian.lang	Polish	7.Polish.js	7.Polish_note.xml
Polish	007.GUI.Polish.lang	Portuguese	8.Portuguese.js	8.Portuguese_note.xml
Portuguese (EU)	008.GUI.Portuguese.lang	Spanish	9.Spanish.js	9.Spanish_note.xml
Portuguese (Latin)	009.GUI.Portuguese_LA.lang	Turkish	10.Turkish.js	10.Turkish_note.xml
Spanish (EU)	010.GUI.Spanish.lang	Russian	11.Russian.js	11.Russian_note.xml
Spanish (Latin)	011.GUI.Spanish_LA.lang	Czech	12.Czechlang.js	12.Czechlang_note.xml
Turkish	012.GUI.Turkish.lang	Arabic	13.Arabic.js	13.Arabic_note.xml
Russian	013.GUI.Russian.lang			
Czech	014.GUI.Czechlang.lang			
Hebrew	015.GUI.Hebrew.lang			
Arabic	016.GUI.Arabic.lang			

**Note:** The T48G/T46G/T42G/T41P phones do not support French (Canada), Portuguese (Latin) and Spanish (Latin).

## Language Display Configuration

The default language displayed on the phone user interface is English. If your web browser displays a language not supported by the IP phone, the web user interface will display English by default. You can specify the languages for the phone user interface and web user interface respectively.

The following table lists the parameters you can use to configure the language display.

<b>Parameter</b>	lang.gui	<y0000000000xx>.cfg
<b>Description</b>	It configures the language used on the phone user interface.	
<b>Permitted Values</b>	T48G/T46G/T42G/T41P: English, Chinese_S, Chinese_T, French, German, Italian, Polish, Portuguese, Spanish, Turkish, Russian, or the custom language name. T40P/T40G/T29G/T23P/T23G/T21(P) E2/T19(P) E2:	

	English, Chinese_S, Chinese_T, French_CA, French, German, Italian, Polish, Portuguese, Portuguese_LA, Spanish, Spanish_LA, Turkish, Russian or the custom language name. <u>CP925/CP935W:</u> English, Chinese_S, Chinese_T, French_EU, German, Italian, Polish, Portuguese_EU, Spanish_EU, Turkish, Russian, Czech, Arabic, Hebrew, Slovak or the custom language name. <u>Other Phones:</u> English, Chinese_S, Chinese_T, French_CA, French, German, Italian, Polish, Portuguese, Portuguese_LA, Spanish, Spanish_LA, Turkish, Russian, Czech, Arabic, Hebrew, or the custom language name.	
<b>Default</b>	English	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Basic > Language <u>CP925/CP935W:</u> More > Basic > Language <u>Black-and-white Screen Phones:</u> Menu > Settings > Basic Settings > Language	
<b>Parameter</b>	lang.wui	<y000000000xx>.cfg
<b>Description</b>	It configures the language used on the web user interface.	
<b>Permitted Values</b>	English, Chinese_S, Chinese_T, French, German, Italian, Polish, Portuguese, Spanish, Turkish, Russian, Czech, Arabic, or the custom language name.	
<b>Default</b>	English	
<b>Web UI</b>	On the top-right corner of the web user interface	

## Language for Phone Display Customization

You can customize the translation of the existing language on the phone user interface. Languages available for selection depend on language packs currently loaded to the IP phone. You can also add new languages (not included in the available language list) available for phone display by loading language packs to the IP phone.

**Note:** The newly added language must be supported by the font library on the IP phone. If the characters in the custom language file are not supported by the phone, the phone will display “?” instead.

### Topics

[Customizing a Language Pack for Phone Display](#)  
[Custom Language for Phone Display Configuration](#)  
[Example: Setting a Custom Language for Phone Display](#)

## Customizing a Language Pack for Phone Display

When you add a new language pack for the phone user interface, the language pack must be formatted as “X.GUI-name.lang” (X starts from 017, “name” is replaced with the language name). If the language name is the same as the existing one, the existing language pack will be overridden by the newly uploaded one. We recommend that the filename of the new language pack should not be the same as the existing one.

**Note:** To modify the translation of an existing language, do not rename the language pack.

### Procedure

Open the desired language template file (for example, 000.GUI.English.lang).

Modify the characters within the double quotation marks on the right of the equal sign. Do not modify the item on the left of the equal sign.

The following shows a portion of the language pack “000.GUI.English.lang” for the phone user interface:

```

000.GUI.English.lang x
1 [ Lang ]
2
3 "*" or '#' as send="Key as send"
4 "(Empty)"="(Empty)"
5 "10min"="10min"
6 "12 Hour"="12 Hour"
7 "120s"="120s"
8 "15s"="15s"
9 "1min"="1min"
10 "24 Hour"="24 Hour"
11 "2min"="2min"
12 "30min"="30min"
13 "30s"="30s"
14 "5min"="5min"
15 "60s"="60s"
16 "802.1x Mode"="802.1x Mode"
17 "802.1x"="802.1x"
18 "ACD Login"="ACD Login"
19 "ACD State"="ACD State"
20 "ACD Trace"="Trace"
21 "ACD"="ACD"
22 "AES"="AES"
23 "ALERT"="ALERT"
24 "AP Mac Address"="AP Mac Address"
25 "Account ID"="Account ID"
26 "Account Status"="Account Status"
    
```

Save the language pack and place it to the provisioning server.

### Custom Language for Phone Display Configuration

The following table lists the parameters you can use to configure a custom language for the phone display.

<b>Parameter</b>	gui_lang.url	<y0000000000xx>.cfg
<b>Description</b>	It configures the access URL of the custom LCD language pack for the phone user interface. <b>Note:</b> You can also download multiple language packs to the phone simultaneously.	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Parameter</b>	gui_lang.delete	<y0000000000xx>.cfg
<b>Description</b>	It deletes the specified or all custom LCD language packs of the phone user interface.	
<b>Permitted Values</b>	For example http://localhost/all or http://localhost/X.GUI.name.lang X starts from 017, “name” is replaced with the language name.	
<b>Default</b>	Blank	

### Example: Setting a Custom Language for Phone Display

The following example shows the configuration for uploading custom language files “017.GUI.English\_17.lang” and “018.GUI.English\_18.lang”, and then specify “017.GUI.English\_17.lang” to display on the phone user interface. These language files are customized and placed on the provisioning server “192.168.10.25”.

**Example**

*gui\_lang.url= http://192.168.10.25/017.GUI.English\_17.lang*

*gui\_lang.url= http://192.168.10.25/018.GUI.English\_18.lang*

`lang.gui=English_17`

After provisioning, text displayed on the phone user interface will change to the custom language you defined in “017.GUI.English\_17.lang”. You can also find a new language selection “English\_17” and “English\_18” on the IP phone user interface: **Menu > Basic > Language** or **Menu > Settings > Basic Settings > Language**.

## Language for Web Display Customization

You can customize the translation of the existing language on the web user interface. You can modify translation of an existing language or add a new language for web display. You can also customize the translation of the note language pack. The note information is displayed in the question mark “?” of the web user interface.

You can ask the distributor or Yealink FAE for language packs. You can also obtain the language packs online: <http://support.yealink.com/documentFront/forwardToDocumentFrontDisplayPage>.

### Topics

- [Customizing a Language Pack for Web Display](#)
- [Customizing a Language Pack for Note Display](#)
- [Custom Language for Web and Note Display Configuration](#)

## Customizing a Language Pack for Web Display

When you add a new language pack for the web user interface, the language pack must be formatted as “X.name.js” (X starts from 14, “name” is replaced with the language name). If the language name is the same as the existing one, the newly uploaded language file will override the existing one. We recommend that the file name of the new language pack should not be the same as the existing one.

**Note:** To modify the translation of an existing language, do not rename the language pack.

### Procedure

Open the desired language template pack (for example, 1.English.js) using an ASCII editor.

Modify the characters within the double quotation marks on the right of the colon. Do not modify the translation item on the left of the colon.

The following shows a portion of the language pack “1.English.js” for the web user interface:

```

1  var _objTrans =
2  {
3  //login.htm
4  "The username can not be empty.":"The username can
5  "Failed to connect to the server. Please check net
6  "Login":"Login",
7  "Username":"Username",
8  "Password":"Password",
9  "Confirm":"Confirm",
10 "admin":"admin",
11 "user":"user",
12 "var":"var",
13
14
15 //header.htm
16 "Log_Out":"Log Out",
17 "Status":"Status",
18 "Network":"Network",
19 "Dsskey":"Dsskey",
20 "Features":"Features",
21 "Settings":"Settings",
22 "Directory":"Directory",
23 "Security":"Security",
24 "Applications":"Applications",

```

Save the language pack and place it to the provisioning server.

## Customizing a Language Pack for Note Display

When you add a new language pack for the note, the note language pack must be formatted as "X.name\_note.xml" (X starts from 14, "name" is replaced with the language name). If the note language name is the same as the existing one, the new uploaded note language pack will override the existing one. We recommend that the filename of the new note language pack should not be the same as the existing one.

### Procedure

Open the desired note language template pack (for example, 1.English\_note.xml) using an XML editor.

Modify the text of the note field. Do not modify the note name.

The following shows a portion of the note language pack "1.English\_note.xml" for the web user interface:

```

1.English_note.xml x
<?xml version="1.0" encoding="utf-8"?>
<notedata>
<status>
  <note name = "version">
    <head>Description:</head>
    <text>It shows the current firmware version and hardware version of the device.</text>
  </note>
  <note name = "DeviceCertificate">
    <head>Description:</head>
    <text>It shows the Device Certificate of the device.</text>
  </note>
  <note name = "network">
    <head>Description:</head>
    <text>It shows the IP address mode of the device.</text>
  </note>
  <note name = "network-ipv4">
    <head>Description:</head>
    <text>It shows the basic IPv4 network configurations.</text>
  </note>
  <note name = "network-ipv6">
    <head>Description:</head>
    <text>It shows the basic IPv6 network configurations.</text>
  </note>
</status>
</notedata>
    
```

Save the note language pack and place it to the provisioning server.

## Custom Language for Web and Note Display Configuration

If you want to add a new language (for example, Wuilan) to phones, prepare the language file named as "14.Wuilan.js" and "14.Wuilan\_note.xml" for downloading. After the update, you will find a new language selection "Wuilan" at the top-right corner of the web user interface, and new note information is displayed in the icon when the new language is selected.

The following table lists the parameters you can use to configure a custom language for web and note display.

<b>Parameter</b>	wui_lang.url	<y0000000000xx>.cfg
<b>Description</b>	It configures the access URL of the custom language pack for the web user interface.	
<b>Permitted Values</b>	URL within 511 characters For example http://localhost/X.GUI.name.lang X starts from 014, "name" is replaced with the language name	
<b>Default</b>	Blank	
<b>Parameter</b>	wui_lang_note.url	<y0000000000xx>.cfg
<b>Description</b>	It configures the access URL of the custom note language pack for the web user interface.	
<b>Permitted Values</b>	URL within 511 characters For example http://localhost/X.name_note.xml	

	X starts from 14, "name" is replaced with the language name	
<b>Default</b>	Blank	
<b>Parameter</b>	wui_lang.delete	<y0000000000xx>.cfg
<b>Description</b>	It deletes the specified or all custom web language packs and note language packs of the web user interface.	
<b>Permitted Values</b>	http://localhost/all or http://localhost/Y.name.js Y starts from 014, "name" is replaced with the language name	
<b>Default</b>	Blank	

## Contrast

Contrast determines the readability of the texts displayed on the LCD screen. Adjusting the contrast to a comfortable level can optimize the screen viewing experience.

You can adjust the contrast for T53W/T53/T43U/T40P/T40G/T31P/T31G/T31/T30P/T30/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP920 phones, or for expansion module EXP20 (connected to T29G/T27G phones), EXP40 (connected to T48S/T48G/T46S/T46G phones).

### Topic

[Contrast Configuration](#)

## Contrast Configuration

The following table lists the parameters you can use to adjust contrast for the phone.

<b>Parameter</b>	phone_setting.contrast	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the contrast of the LCD screen.</p> <p>For T53W/T53/T43U/T31P/T31G/T31/T30P/T30/T40P/T40G/T23P/T23G/T21(P) E2/T19(P) E2 phones, it configures the LCD's contrast of the IP phone.</p> <p>For T48S/T48G/T46S/T46G phones, it configures the LCD's contrast of the connected EXP40 only.</p> <p>For T29G phones, it configures the LCD's contrast of the connected EXP20 only.</p> <p>For T27G phones, it configures the LCD's contrast of the IP phone and the connected EXP20.</p> <p><b>Note:</b> We recommend that you set the contrast of the LCD screen to 6 as a more comfortable level.</p>	
<b>Permitted Values</b>	Integer from 1 to 10	
<b>Default</b>	6	
<b>Supported Devices</b>	All phones except T57W, T54W, T53C, T48U, T46U, T42G, T42S, T42U, T41P, T41S, T33P, T33G, CP925 and CP935W	
<b>Web UI</b>	<p><u>Black-and-white Screen Phones:</u></p> <p>Settings &gt; Preference &gt; Contrast</p>	
<b>Phone UI</b>	<p><u>Color Screen Phones:</u></p> <p>Menu &gt; Basic &gt; Display &gt; Contrast</p> <p><u>Black-and-white Screen Phones:</u></p> <p>Menu &gt; Settings &gt; Basic Settings &gt; Display &gt; Contrast</p>	

## Wallpaper

Wallpaper is a picture used as the background of the phone. The phone comes with a default picture. You can change it to a built-in picture or custom wallpaper from personal pictures.

The wallpaper is only applicable to color screen phones and expansion module EXP50 (connected to the T57W/T54W/T53W/T53/T53C phones)/expansion module EXP43 (connected to the T48U/T46U/T43U phones).

### Topics


- [Wallpaper Configuration](#)
- [Wallpaper Customization](#)
- [Adding a Wallpaper from a USB Flash Drive](#)
- [Example: Setting a Custom Picture as Wallpaper](#)

## Wallpaper Configuration

You can change the wallpaper to any built-in picture or custom picture.

On T57W/T48U/T48S/T48G phones, you can also separately set the wallpaper when the DSS key list is unfolded, avoiding the display of the line key labels to be blocked by the background picture.

The following show wallpaper set on T48S phones:

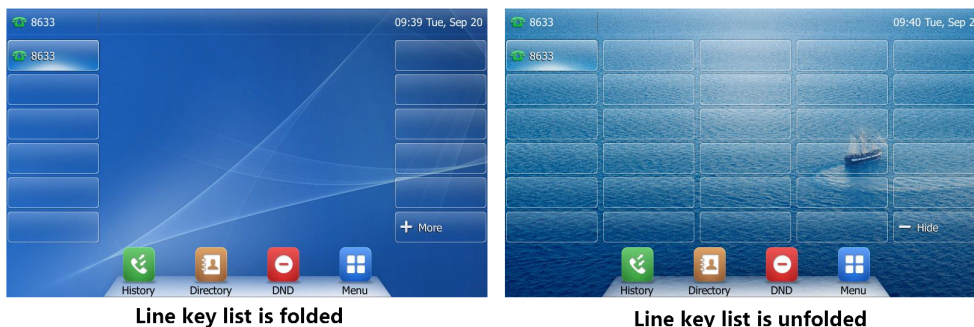

The following table lists the parameters you can use to change the wallpaper.

<b>Parameter</b>	phone_setting.backgrounds	<y0000000000xx>.cfg
<b>Description</b>	It configures the wallpaper displayed on the phone idle screen.	
<b>Permitted Values</b>	<p><u>T57W/T54W/T53C/T48U:</u> Default.jpg, 01.png, 02.png, 03.png, 04.png, 05.png or uploaded custom wallpaper name (for example, wallpaper.jpg)</p> <p><u>T46U:</u> Default.png, 01.png, 02.png, 03.png, 04.png, 05.png or uploaded custom wallpaper name (for example, wallpaper.png)</p> <p><u>T33P/T33G:</u> Default.jpg, 1.jpg, 2.jpg, 3.jpg, 4.jpg, 5.jpg or uploaded custom wallpaper name (for example, wallpaper.jpg)</p> <p><u>CP925/CP935W:</u> Default.jpg, 1.png, 2.png, 3.png, 4.png or uploaded custom wallpaper name (for example, wallpaper.png)</p> <p><u>Other Phones:</u> Default.jpg, 01.jpg, 02.jpg, 03.jpg, 04.jpg, 05.jpg, 06.jpg, 07.jpg, 08.jpg, 09.jpg or 10.jpg or uploaded</p>	



	custom wallpaper name (for example, wallpaper.jpg)	
<b>Default</b>	Default.jpg (Default.png for T46U)	
<b>Supported Devices</b>	All color screen phones	
<b>Web UI</b>	<u>T57W/T54W/T53C/T48U/T46U/CP925/CP935W:</u> Settings > Preference > Upload Wallpaper > System Wallpaper Other Phones: Settings > Preference > Wallpaper	
<b>Phone UI</b>	Menu > Basic > Display > Wallpaper <u>CP925/CP935W:</u> More > Basic > Display > Wallpaper	
<b>Parameter</b>	expansion_module.backgrounds	<y0000000000xx>.cfg
<b>Description</b>	It configures the wallpaper displayed on the connected EXP50 expansion module of the phone.	
<b>Permitted Values</b>	<u>T57W/T54W/T53W/T53/T53C:</u> Default-exp50.jpg, 01-exp50.jpg, 02-exp50.jpg, 03-exp50.jpg, 04-exp50.jpg, 05-exp50.jpg, 06-exp50.jpg, 07-exp50.jpg, 08-exp50.jpg, 09-exp50.jpg or 10-exp50.jpg or custom wallpaper name (for example, wallpaper.jpg) <u>T48U/T46U/T43U:</u> Default-exp.jpg, 01-exp.jpg, 02-exp.jpg, 03-exp.jpg, 04-exp.jpg, 05-exp.jpg or custom wallpaper name (for example, wallpaper.jpg)	
<b>Default</b>	<u>T57W/T54W/T53W/T53/T53C:</u> Default-exp50.jpg <u>T48U/T46U/T43U:</u> Default-exp.jpg	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U	
<b>Web UI</b>	Settings > Preference > Upload Wallpaper > System Expansion Wallpaper	
<b>Phone UI</b>	<u>T57W/T54W/T53C/T48U/T46U:</u> Menu > Basic > Display > EXP Wallpaper > Wallpaper	
<b>Parameter</b>	phone_setting.backgrounds_with_dsskey_unfold	<y0000000000xx>.cfg
<b>Description</b>	It configures the wallpaper displayed on the phone when the DSS key list is unfolded.	
<b>Permitted Values</b>	<u>T57W/T48S/T48G:</u> Auto, Default.jpg, 01.jpg, 02.jpg, 03.jpg, 04.jpg, 05.jpg, 06.jpg, 07.jpg, 08.jpg, 09.jpg or 10.jpg or uploaded custom wallpaper name (for example, wallpaper.jpg) <u>T48U:</u> Auto, Default.jpg, 01.jpg, 02.jpg, 03.jpg, 04.jpg, 05.jpg or uploaded custom wallpaper name (for example, wallpaper.jpg)	
<b>Default</b>	Auto (use the wallpaper configured by the parameter “phone_setting.backgrounds”)	
<b>Supported</b>	T57W, T48U, T48S, T48G	

<b>Devices</b>	
<b>Web UI</b>	Settings > Preference > Wallpaper with Dsskey Unfold
<b>Phone UI</b>	Menu > Basic > Display > Dsskey Wallpaper

## Wallpaper Customization

You can configure a custom picture, such as company logo, and then upload the custom picture to the IP phone that users can choose from when changing the wallpaper for the phone idle screen, expansion module or Dsskey screen.

### Topics

[Custom Wallpaper Picture Limit](#)

[Custom Wallpaper Configuration](#)

[Deleting a Custom Picture](#)

### Custom Wallpaper Picture Limit

Either the smaller or the larger picture will be scaled proportionally to fit the screen. The wallpaper picture format must meet the following:

Phone Model	Format	Resolution	Single File Size	Note
EXP50/EXP43	*.jpg/*.png/*.bmp/*.jpeg	<=4.2 megapixels	<=5MB	2MB of space should be reserved for the phone
T57W/T54W/T53C/T48U/T48S/T48G/CP925/CP935W		<=2.0 megapixels	<=5MB	
T46U/T46S/T46G/T33P/ T33G/T29G		<=1.8 megapixels	<=5MB	

### Custom Wallpaper Configuration

The following table lists the parameter you can use to upload a custom picture.

<b>Parameter</b>	wallpaper_upload.url	<y0000000000xx>.cfg
<b>Description</b>	It configures the access URL of the custom wallpaper picture.	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T48G, T46U, T46S, T46G, T43U, T33P, T33G, T29G, CP925, CP935W	
<b>Web UI</b>	<u>T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/CP925/CP935W:</u> Settings > Preference > Upload Wallpaper > Custom Wallpaper > Upload Wallpaper <u>Other Phones:</u> Settings > Preference > Upload Wallpaper	

### Deleting a Custom Picture

You can delete the uploaded custom pictures for a specific IP phone via the web user interface at the path: **Settings > Preference > Wallpaper (Settings > Preference > Wallpaper > Upload Wallpaper > Custom Wallpaper)**, select

the desired custom picture and click **Del (Delete)**. You can also delete the custom pictures via the phone user interface at the path: **Menu > Basic > Display > Wallpaper**. You can only delete the custom pictures.

## Adding a Wallpaper from a USB Flash Drive

The T57W/T54W/T53C/T48U/T48S/T48G/T46U/T46S/T46G/T29G IP phone enables you to add wallpaper from a USB flash drive on their phones. You can go to **Menu > USB > Browse Photo**, preview pictures, and then set the desired picture as the idle screen/Dsskey screen or EXP wallpaper. After you set a picture in USB flash drive as the idle screen/Dsskey screen or EXP wallpaper, the picture is added to the Wallpaper list.

Note: Yealink phones support USB flash drive in FAT32 or NTFS format.

### Related Topic

[Custom Wallpaper Picture Limit](#)

## Example: Setting a Custom Picture as Wallpaper

The following example shows the configuration for uploading custom picture named “wallpaper.jpg” and set it as idle screen wallpaper. The custom picture is placed on the provisioning server “192.168.10.25”.

### Example

```
wallpaper_upload.url = http://192.168.10.25/wallpaper.jpg
```


```
phone_setting.backgrounds = wallpaper.jpg
```

After provisioning, the phone idle screen wallpaper changes to custom picture “wallpaper.jpg”.

## Transparency

The T57W/T54W/T53C/T48U/T48S/T48G/T33P/T33G phones display line keys and status bar transparently. If you use a custom picture with a color or complex background, it may affect the user’s experience. You can choose the appropriate transparency for DSS key labels and status bar on the idle screen as required.

The following show line keys and status bar transparency set on T48S phones:

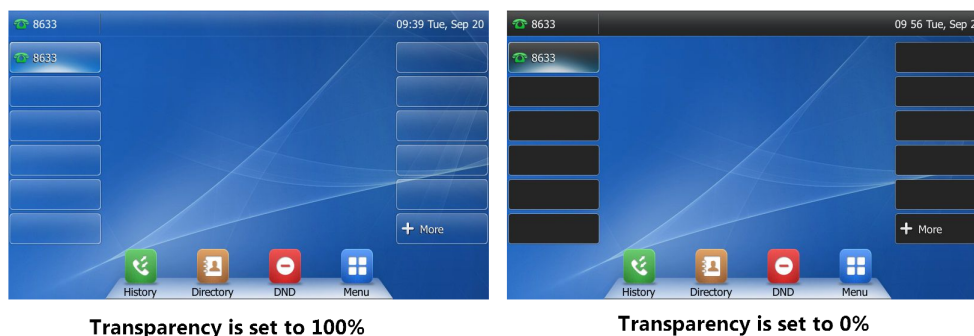

### Topic

[Transparency Configuration](#)

## Transparency Configuration

The following table lists the parameter you can use to adjust transparency.

<b>Parameter</b>	phone_setting.idle_dsskey_and_title.transparency	<y0000000000xx>.cfg
<b>Description</b>	It configures the transparency of the DSS key labels and status bar on the idle screen for the IP phone. <b>Note:</b> It is also applicable when the DSS key list is unfolded on the T57W/T48U/T48S/T48G phones.	
<b>Permitted</b>	0%, the DSS key labels and status bar are non-transparent.	


<b>Values</b>	20%, 40%, 60%, 80% or 100%
<b>Default</b>	100%
<b>Supported Devices</b>	T57W, T54W, T53C, T48U, T48S, T48G, T33P, T33G
<b>Web UI</b>	Settings > Preference > Transparency
<b>Phone UI</b>	Menu > Basic > Display > Transparency

## Screen Saver

The screen saver will automatically start when the IP phone is idle for the preset waiting time. You can stop the screen saver at any time by pressing any key or touching the screen. When your phone is idle again for a preset waiting time, the screen saver starts again.

By default, the phone screen displays a built-in picture when the screen saver starts.

The following shows that the built-in screen saver is displaying on T46S phones:

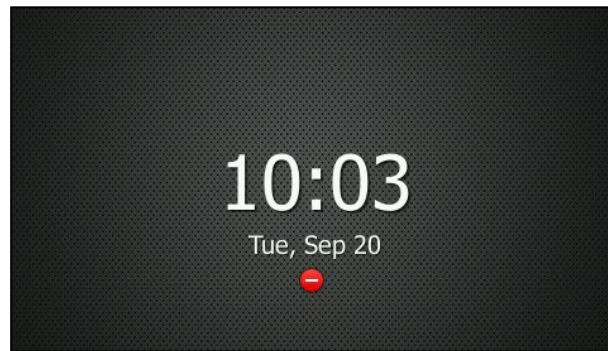

You can set custom pictures as the screen saver. You can also add personal pictures on your phone using a USB flash drive.

The time & date, certain status icons (for example, auto answer, DND, a new text message), or custom information (for example, notifications or company logo) is also configurable to display on the screen saver.

The black-and-white screen IP phone only displays custom information as the screen saver.

### Topics

[Screensaver Display Customization](#)

[Custom Screensaver Picture Limit](#)

[Screensaver Configuration](#)

[Adding a Screensaver Picture from a USB Flash Drive](#)


[Deleting a Screensaver Picture](#)

## Screensaver Display Customization


You can customize the screen saver file to configure the IP phone whether to display custom information (for example, notifications or company logo) on the screen saver.

For color screen phones, the custom information is displayed on the built-in picture or custom pictures (if uploaded).

The following show examples on T27G and T46S/G phones:

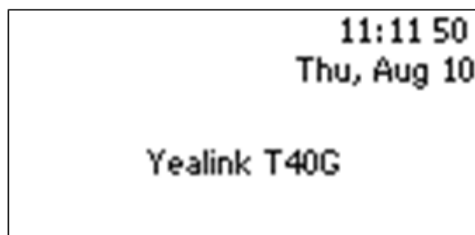

T27G

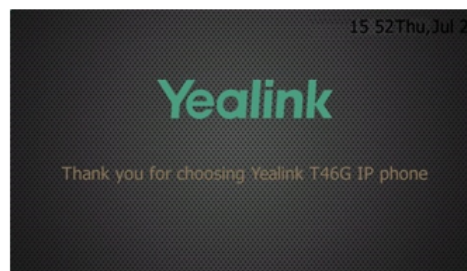

T465/G

## Topics

[Screensaver File Elements and Attributes](#)  
[Customizing the Screen Saver File](#)

## Screensaver File Elements and Attributes

The following table lists the elements and attributes you can use to add custom information in the screensaver file. We recommend that you do not edit these elements and attributes.

Elements	Attributes	Description
YealinkIPPhoneCustomScreenSaver	LineSpacing	The vertical distance between different lines.
	InsertImageLineNum	Specify which line to insert the image (configured by the <b>Image</b> element). <b>Note:</b> It is only applicable to color screen phones.
SystemTime	Size	Specify “show” or “hide” between <SystemTime> and </SystemTime> to decide whether to display the time and date.
	horizontalAlign	Edit the attributes to decide how to display the time and date, including the size, position, and color. <b>Note:</b> Color is only applicable to color screen phones.
	verticalAlign	
	Color	
StatusIcons	horizontalAlign	Specify “show” or “hide” between <StatusIcons> and </StatusIcons> to decide whether to display the status icons.
	verticalAlign	Edit the attributes to decide the icons displayed position.
Line	Size	Specify the display text between <Line> and </Line>.
	Align	Edit the attributes to decide how to display the text, including text size, position, and color.
	Color	<b>Note:</b> Color is only applicable to color screen phones.
Image	horizontalAlign	Specify the display image source between <Image> and </Image>.
	verticalAlign	Edit the attributes to decide how to display the image, including position and size. <b>Note:</b> It is only applicable to color screen phones. VerticalAlign works only if you do not configure <b>InsertImageLineNum</b> or set the <b>InsertImageLineNum</b> to 0.
	height	
	width	

## Customizing the Screen Saver File

1. Open the screen saver file.
2. Modify settings as you want.

```
CustomScreenSaver.xml x
<?xml version="1.0" encoding="ISO-8859-1"?>
<YealinkIPPhoneCustomScreenSaver LineSpacing = "9" InsertImageLineNum = "1" >

<SystemTime Size="Large" horizontalAlign="right" verticalAlign="top" Color="black">show</SystemTime>
<StatusIcons horizontalAlign="middle" verticalAlign="top">show</StatusIcons>
<Line Size="large" Align="center" Color="blue">Yealink</Line>
<Line Size="large" Align="center" Color="RGB" >SIP Phone</Line>
<Line Size="large" Align="center" Color="RGB">Test</Line>
<Image horizontalAlign="middle" verticalAlign="bottom" height="30" width="30">http://192.168.1.1/Yealink.jpeg</Image>
</YealinkIPPhoneCustomScreenSaver>
```

3. Save this file and place it to the provisioning server.
4. Specify the access URL of the screen saver file in the configuration file.

## Custom Screensaver Picture Limit

Either the smaller or the larger picture will be scaled proportionally to fit the screen. The screensaver picture format must meet the following:

Phone Model	Format	Resolution	Single File Size	Note
EXP50/EXP43	*.jpg/*.png/*.bmp/*.jpeg	<=4.2 megapixels	<=5MB	2MB of space should be reserved for the phone
T57W/T54W/T53C/T48U/T48S/T48G/CP925/CP935W		<=2.0 megapixels	<=5MB	
T46U/T46S/T46G/T33P/ T33G/T29G		<=1.8 megapixels	<=5MB	

## Screensaver Configuration

The following table lists the parameters you can use to configure screensaver.

Parameter	screensaver.wait_time	<y0000000000xx>.cfg
Description	It configures the time (in seconds) to wait in the idle state before the screen saver starts.	
Permitted Values	15-15s 30-30s 60-1min 120-2min 300-5min 600-10min 1800-30min 3600-1h 7200-2h 10800-3h	

	<p>14400-4h</p> <p>21600-6h</p> <p>28800-8h</p> <p>43200-12h</p> <p><b>Note:</b> The permitted values for web/phone UI are Off, 30min, 1h, 2h, 4h, 6h (default), 8h, 12h.</p> <p>15-15s</p> <p>30-30s</p> <p>60-1min</p> <p>120-2min</p> <p>300-5min</p> <p>600-10min</p> <p>900-15min</p> <p>1200-20min</p> <p>1800-30min</p> <p>2700-45min</p> <p>3600-1h</p> <p>7200-2h</p> <p><b>Note:</b> The permitted values for web/phone UI are 5min, 10min, 30min, 1h, 2h (default)).</p>
<b>Default</b>	21600 (7200 for CP925/CP935W)
<b>Web UI</b>	Settings > Preference > Screensaver Wait Time
<b>Phone UI</b>	<p><u>Color Screen Phones:</u></p> <p>Menu &gt; Basic &gt; Display &gt; Screensaver &gt; Wait Time</p> <p><u>CP925/CP935W:</u></p> <p>More &gt; Basic &gt; Display &gt; Screensaver &gt; Wait Time</p> <p><u>Black-and-white Screen Phones:</u></p> <p>Menu &gt; Settings &gt; Basic Settings &gt; Display &gt; Screensaver &gt; Wait Time(s)</p>
<b>Parameter</b>	screensaver.display_clock.enable <y0000000000xx>.cfg
<b>Description</b>	<p>It enables or disables the phone to display the clock and icons when the screen saver starts.</p> <p><b>Note:</b> It works only if "screensaver.type" is set to 0 (System) or 1 (Custom).</p>
<b>Permitted Values</b>	<p>0-Disabled</p> <p>1-Enabled</p>
<b>Default</b>	1
<b>Supported Devices</b>	All color screen phones
<b>Web UI</b>	Settings > Preference > Screensaver Display Clock (not configurable when the Screensaver Type is set to Server XML)
<b>Phone UI</b>	Menu > Basic > Display > Screensaver > Display Clock (not configurable when the Screensaver Type is set to Server XML)

	<p>CP925/CP935W:                  More &gt; Basic &gt; Display &gt; Screensaver &gt; Display Clock (not configurable when the Screensaver Type is set to Server XML)</p>	
<b>Parameter</b>	screensaver.type	<y0000000000xx>.cfg
<b>Description</b>	It configures the type of screen saver to display.	
<b>Permitted Values</b>	<p><b>0</b>-System, the LCD screen will display the built-in picture.</p> <p><b>1</b>-Custom, the LCD screen will display the custom screen saver images (configured by the parameter "screensaver.upload_url"). If multiple images are uploaded, the phone will display all images alternately. The time interval is configured by the parameter "screensaver.picture_change_interval".</p> <p><b>2</b>-Server XML, the LCD screen will display XML items (configured by the parameter "screensaver.xml_browser.url") when the screen saver starts.</p>	
<b>Default</b>	0	
<b>Supported Devices</b>	All color screen phones	
<b>Web UI</b>	Settings > Preference > Screensaver Type	
<b>Phone UI</b>	<p>Menu &gt; Basic &gt; Display &gt; Screensaver &gt; Screensaver Type</p> <p>CP925/CP935W:                  More &gt; Basic &gt; Display &gt; Screensaver &gt; Screensaver Type</p> <p><b>Note:</b> It is configurable only if you have uploaded custom image files to the phone.</p>	
<b>Parameter</b>	screensaver.upload_url	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the access URL of the custom screen saver image.</p> <p><b>Example:</b></p> <p>screensaver.upload_url = http://192.168.10.25/Screencapture.jpg</p> <p>During auto provisioning, the phone connects to the HTTP provisioning server "192.168.10.25", and downloads the screen saver image "Screencapture.jpg".</p> <p>If you want to upload multiple screen saver images to the phone simultaneously, you can configure as follows:</p> <p>screensaver.upload_url = http://192.168.10.25/Screencapture.jpg</p> <p>screensaver.upload_url = http://192.168.10.25/Screensaver.jpg</p>	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All color screen phones	
<b>Web UI</b>	Settings > Preference > Screensaver Type (Custom)/Screensaver Type (Server XML) > Upload Screensaver	
<b>Parameter</b>	screensaver.delete	<y0000000000xx>.cfg
<b>Description</b>	<p>It deletes the specified or all custom screen saver images.</p> <p><b>Example:</b></p> <p>Delete all custom screen saver images:</p>	



	screensaver.delete = http://localhost/all Delete a custom screen saver image (for example, Screenshot.jpg): screensaver.delete = http://localhost/Screenshot.jpg	
<b>Permitted Values</b>	http://localhost/all or http://localhost/name.(jpg/png/bmp/jpeg)	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All color screen phones	
<b>Parameter</b>	screensaver.xml_browser.url	<y0000000000xx>.cfg
<b>Description</b>	It configures the access URL of the screen saver XML file. <b>Example:</b> screensaver.xml_browser.url = http://192.168.10.25/ScreenSaver.xml During the auto provisioning, the phone connects to the HTTP provisioning server "192.168.10.25", and downloads the screen saver XML file "ScreenSaver.xml". <b>Note:</b> For color screen phones, it works only if "screensaver.type" is set to 2 (Server XML).	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/T31P/T31G/T31/T30P/T30/CP920/CP925/CP93-5W: Settings > Preference > XML Browser URL <u>Other Phones:</u> Settings > Preference > Screensaver Type (Server XML) > XML Browser URL	
<b>Parameter</b>	screensaver.clock_move_interval	<y0000000000xx>.cfg
<b>Description</b>	It configures the interval (in seconds) for the phone to move the clock and icons when the screen saver starts. <b>Note:</b> It works only if "screensaver.display_clock.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	Integer from 5 to 1200	
<b>Default</b>	600	
<b>Supported Devices</b>	All color screen phones	
<b>Parameter</b>	screensaver.picture_change_interval	<y0000000000xx>.cfg
<b>Description</b>	It configures the interval (in seconds) for the phone to change the picture when the screen saver starts. <b>Note:</b> It works only if "screensaver.type" is set to 1 (Custom) and the parameter "screensaver.upload_url" should be configured in advance.	
<b>Permitted Values</b>	Integer from 5 to 1200	
<b>Default</b>	60	
<b>Supported Devices</b>	All color screen phones	

<b>Parameter</b>	features.blf_active_backlight.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to turn on the backlight or stop the screen saver when the BLF/BLF list status changes.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	

## Adding a Screensaver Picture from a USB Flash Drive

The T57W/T54W/T53C/T48U/T48S/T48G/T46U/T46S/T46G/T29G IP phone enables you to add a screensaver picture from a USB flash drive on their phones. You can go to **Menu > USB > Browse Photo**, preview pictures, and then set the desired picture as a screensaver. After you set a picture in USB flash drive as a screensaver, the picture is added to the Screensaver list.

Note: Yealink phones support USB flash drive in FAT32 or NTFS format.

### Related Topic

[Custom Screensaver Picture Limit](#)

## Deleting a Screensaver Picture

You can delete the uploaded custom pictures for a specific IP phone via the web user interface at the path: **Settings > Preference**, select **Custom** from the **Screensaver Type** field, and then select a desired custom picture from the **Screensaver** field, click **Del (Delete)**. You can only delete the custom pictures.

## Backlight

You can change the backlight brightness of the phone screen during phone activity and inactivity. The backlight brightness automatically changes when the phone is idle for a specified time. It is not available on T30P/T30/T19(P) E2 phones.

You can change the screen backlight brightness and time in the following settings:

**Active Level:** The brightness level of the LCD screen when the phone is active. Digits (1-10) represent different brightness levels. 10 is the brightest level.

**Inactive Level:** The brightness of the LCD screen when the phone is inactive. You can select a low brightness or turn off the backlight.

**Backlight Time:** The delay time to change the brightness of the LCD screen when the phone is inactive. Backlight time includes the following settings you can choose from:

- **Always On:** Backlight is on permanently.
- **Always Off:** Backlight is off permanently. It is not available for the T57W/T54W/T53C/T48U/T48S/T48G/T46U/T46S/T46G/T29G/T33P/T33G IP phone.
- **15s, 30s, 1min, 2min, 5min, 10min, 30min, 1h, 2h, 4h, 6h, 8h, 12h,** Backlight is changed when the phone is inactive after the designated time (in seconds).

### Topics

[Supported Backlight Options](#)  
[Backlight and Time Configuration](#)

## Supported Backlight Options

The following table lists available configuration options to configure the backlight of phone models/expansion modules:

Phone Model (and the connected expansion module)	Configuration Options
T57W(EXP50) T54W(EXP50) T53C(EXP50) T48U(EXP43) T48S/G(EXP40) T46U(EXP43) T46S/G(EXP40) T33P/T33G T29G(EXP20) CP925 CP935W	Inactive Level (not applicable to EXP50/EXP43) Active Level Backlight Time (not applicable to EXP50/EXP43)
T53W/T53(EXP50) T43U(EXP43) T31P/T31G/T31 T27G(EXP20) T42U	Active Level Backlight Time (not applicable to EXP50/EXP43)
T42S/G T41P/S T40P/G T23P/G T21(P) E2 CP920	Backlight Time

## Backlight and Time Configuration

The following table lists the parameters you can use to configure screen backlight and time.

Parameter	phone_setting.active_backlight_level	<y0000000000xx>.cfg
<b>Description</b>	It configures the intensity of the LCD screen when the phone is active. <b>Note:</b> If the expansion module is connected, the backlight on the expansion module automatically changes to match this setting.	
<b>Permitted Values</b>	Integer from 1 to 10	
<b>Default</b>	8	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T48G, T46U, T46S, T46G, T43U, T42U, T33P, T33G, T31P, T31G, T31, T29G, T27G, CP925, CP935W	


<b>Web UI</b>	<p>T48S/T48G/T46S/T46G/T29G/T27G: Settings &gt; Preference &gt; Active Backlight Level</p> <p>T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/T33P/T33G/T31P/T31G/T31/CP925/CP935W: Settings &gt; Preference &gt; Active Level</p>	
<b>Phone UI</b>	<p>Color Screen Phones: Menu &gt; Basic &gt; Display &gt; Backlight &gt; Active Level</p> <p>CP925/CP935W: More &gt; Basic &gt; Display &gt; Backlight &gt; Active Level</p> <p>Black-and-white Screen Phones: Menu &gt; Settings &gt; Basic Settings &gt; Display &gt; Backlight &gt; Active Level</p>	
<b>Parameter</b>	phone_setting.inactive_backlight_level	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the intensity of the LCD screen when the phone is inactive.</p> <p><b>Note:</b> If expansion module EXP20 or EXP40 is connected, the backlight on the expansion module automatically changes to match this setting.</p>	
<b>Permitted Values</b>	<p>0-Off, it works only if "phone_setting.backlight_time" is not set to 1 (Always On).</p> <p>1-Low</p>	
<b>Default</b>	1	
<b>Supported Devices</b>	All color screen phones	
<b>Web UI</b>	Settings > Preference > Inactive Level	
<b>Phone UI</b>	<p>Menu &gt; Basic &gt; Display &gt; Backlight &gt; Inactive Level</p> <p>CP925/CP935W: More &gt; Basic &gt; Display &gt; Backlight &gt; Inactive Level</p>	
<b>Parameter</b>	phone_setting.backlight_time	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the delay time (in seconds) to change the intensity of the LCD screen when the phone is inactive.</p>	
<b>Permitted Values</b>	<p>0-Always On</p> <p>1-Always Off (not applicable to color screen phones)</p> <p>15-15s</p> <p>30-30s</p> <p>60-1min</p> <p>120-2min</p> <p>300-5min</p> <p>600-10min</p> <p>1800-30min</p> <p>3600-1h</p> <p>7200-2h</p> <p>14400-4h</p>	

	<b>21600-6h</b> <b>28800-8h</b> <b>43200-12h</b> <b>Note:</b> The permitted values for web/phone UI are Always On (default), 30min, 1h, 2h, 4h, 6h, 8h, 12h.
<b>Default</b>	T57W/T54W/T53W/T53/T53C/T48U/T48S/T48G/T46U/T46S/T46G/T43U/T33P/T33G/T29G/CP925/CP935W: 0 T42G/T42S/T42U/T41P/T41S/T40P/T40G/T31P/T31G/T31/T27G/T23P/T23G/T21(P) E2/CP920: 30
<b>Supported Devices</b>	All phones except T30P/T30/T19(P) E2
<b>Web UI</b>	Settings > Preference > Backlight Time(seconds)
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Basic > Display > Backlight > Backlight Time <u>CP925/CP935W:</u> More > Basic > Display > Backlight > Backlight Time <u>Black-and-white Screen Phones:</u> Menu > Settings > Basic Settings > Display > Backlight > Backlight Time
<b>Permitted Values</b>	<b>0-</b> When talking for about 2 minutes without any operation on the phone, the backlight is reduced to 10% brightness when the "phone_setting.inactive_backlight_level" is set to 1. <b>1-</b> The backlight always maintains the intensity set by " phone_setting.active_backlight_level" during a call.
<b>Default</b>	0
<b>Supported Devices</b>	CP935W

## Label Length for Line Key Display

By default, the line key label only displays the first few characters when the length of the label exceeds the maximum length. You can specify the line key label length as needed. It is only applicable to color screen phones (except CP925/CP935W).

When label length feature is set to **Default**:

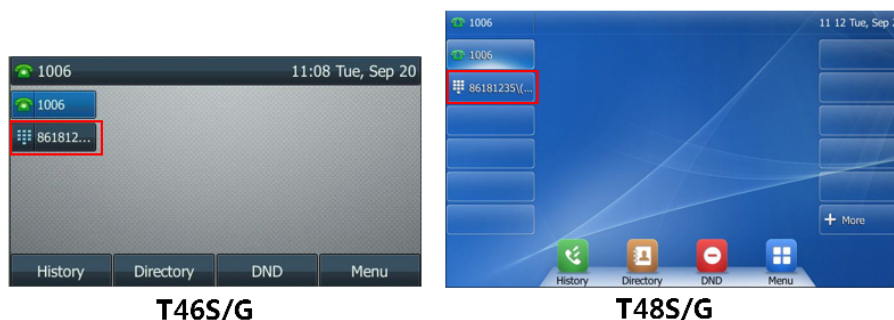


**T46S/G**

**T48S/G**

When label length feature is set to **Extended**:

- For T54W/T53C/T46U/T46S/T46G/T33P/T33G/T29G phones, the display length of the line key label is extended and the characters are displayed in one line.
- For T57W/T48U/T48S/T48G phones, the characters are displayed in two lines.

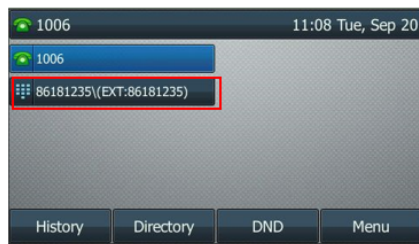

**T46S/G**



**T48S/G**

When label length feature is set to **Mid Range** (not applicable to T57W/T48U/T48S/T48G/T33P/T33G phones):



**T46S/G**

**Topic**

[Label Length Display Configuration](#)

## Label Length Display Configuration

The following table lists the parameters you can use to configure the label length display.

<b>Parameter</b>	features.config_dsskey_length	<y000000000xx>.cfg
<b>Description</b>	It configures the label length displayed on the idle LCD screen for the line key.	
<b>Permitted Values</b>	0-Default 1-Extended 2-Mid-Range (only applicable to T54W/T46U/T46S/T46G/T29G phones)	
<b>Default</b>	0	
<b>Supported Devices</b>	All color screen phones except CP925/CP935W	
<b>Web UI</b>	Dsskey > Line Key > Label Length	
<b>Parameter</b>	features.shorten_linekey_label.enable	<y000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to display the length of the line key label with 9 digits. <b>Note:</b> It works only if "features.config_dsskey_length" is set to 0 (Default).	
<b>Permitted Values</b>	0-Disabled, the line key label can display at most 8 digits. 1-Enabled, the line key label can display at least 9 digits.	


<b>Default</b>	0
<b>Supported Devices</b>	T54W, T46U, T46S, T46G, T29G

## Label Alignment for Line/Ext Key Display

You can customize the line/Ext key label alignment.

This feature is only applicable to T54W/T53C/T46U/T46S/T46G/T33P/T33G/T29G phones and expansion module EXP50 (connected to the T57W/T54W/T53W/T53/T53C phones)/EXP43 (connected to the T48U/T46U/T43U phones).

The following figures show the line key label alignment on T46S/G phones:

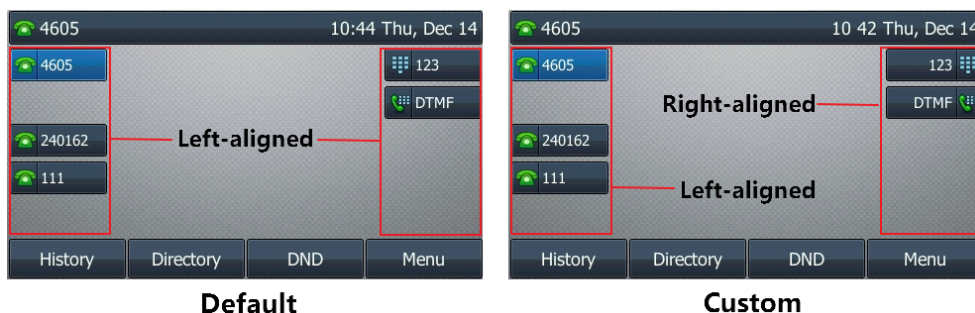

### Topic

[Label Alignment Display Configuration](#)

## Label Alignment Display Configuration

The following table lists the parameter you can use to configure the label alignment display.

<b>Parameter</b>	phone_setting.dsskey_label.display_method	<y000000000xx>.cfg
<b>Description</b>	It configures the alignment mode of the line key/Ext key label. <b>Note:</b> If some Ext keys already exist before configuration, you need to refresh the page (press the page keys, or try re-connecting the expansion module) to make the change take effect.	
<b>Permitted Values</b>	0-the label and icon align left 1-when the line key/Ext key is on the left side of the screen, the label and icon align left; when the line key/Ext key is on the right side of the screen, the label and icon align right	
<b>Default</b>	0	
<b>Supported Devices</b>	T54W, T53C, T46U, T46S, T46G, T33P, T33G, T29G, EXP50 connected to the T57W/T54W/T53W/T53/T53C phones, and EXP43 connected to the T48U/T46U/T43U phones	

## Page Switch Key

By default, the page switch key is available only if a line key not located on the first page is assigned functionality. If you want to configure line keys on more pages from the idle screen quickly, you can configure the line key in the right bottom to be a page switch key.

It is only applicable to T54W/T53W/T53/T53C/T46U/T46S/T46G/T43U/T42U/T42S/T42G/T41P/T41S/T33P/T33G/T29G/T27G phones.

### Topic

[Page Switch Key Configuration](#)

## Page Switch Key Configuration

The following table lists the parameter you can use to configure the page switch key.

<b>Parameter</b>	features.keep_switch_page_key.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the line key in the bottom right of the phone to be fixed as a page switch key.	
<b>Permitted Values</b>	0-Disabled, the page icons appear only if a line key not located on the first page is assigned functionality. Then you can use the hard line key in the right bottom to switch pages. 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	T54W, T53W, T53, T53C, T46U, T46S, T46G, T43U, T42S, T42G, T42U, T41S, T41P, T33P, T33G, T29G, T27G	

## Page Tips

Page tips feature allows the page switch key to indicate different key status on the non-current page. It is mainly used when multi-page line keys are configured.

Yealink

T54W/T53W/T53/T53C/T46U/T46S/T46G/T43U/T42U/T42S/T42G/T41P/T41S/T33P/T33G/T29G/T27G/CP925/CP93-5W phones and expansion module EXP50/EXP43 support page switch key.

### Topics

[Phone Page Tips](#)

[Expansion Module Page Tips](#)

## Phone Page Tips

On

T54W/T53W/T53/T53C/T46U/T46S/T46G/T43U/T42U/T42S/T42G/T41P/T41S/T33P/T33G/T29G/T27G/CP925/CP93-5W phones, the page tips feature supports the page icon and page switch key LED to indicate different line key status.


### Topics

[Phone Page Tips Indicator](#)

[Phone Page Tips Configuration](#)





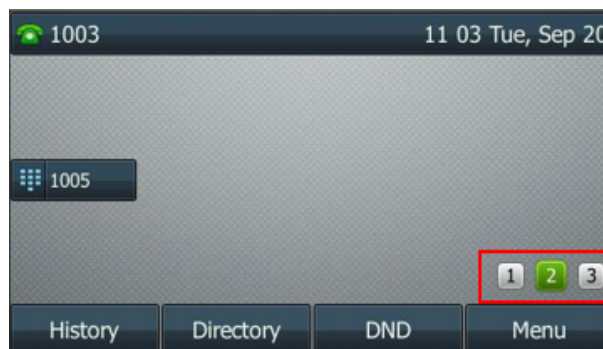


## Phone Page Tips Indicator

The following shows the page icons on T46S/G phones:



The following table lists the status of page icons and page switch key LED displayed on the phones:



Phone Models	LED Status	Icons	Description
CP925/CP935W	Fast-flashing red		Fast-flashing: the BLF monitored user receives an incoming call on the non-current page.
	Solid red		Solid: there is a parked call to the line on the non-current page.
	Fast-flashing green		Fast-flashing: the line receives an incoming call on the non-current page.
T54W/T53C/T46U/T46S/T46G/T29G	Fast-flashing red		Fast-flashing: the BLF monitored user receives an incoming call on the non-current page.
	Solid red		Solid: there is a parked call to the line on the non-current page.
	Fast-flashing green		Fast-flashing: the line receives an incoming call on the non-current page.
T33P/T33G	Fast-flashing red		Fast-flashing: the BLF monitored user receives an incoming call on the non-current page.
	Solid red		Solid: there is a parked call to the line on the non-current page.
	Fast-flashing green		Fast-flashing: the line receives an incoming call on the non-current page.
T53W/T53/T43U/T42G/T42S/T42U/T41P/T41S/T27G	Fast-flashing		Fast-flashing: The BLF monitored user receives an incoming call on the non-current page.
	Fast-flashing		Fast-flashing: The line receives an incoming call on the non-current page.
	Solid		Solid: There is a parked call on the non-current page.

## Phone Page Tips Configuration

The following table lists the parameter you can use to configure phone page tips.

<b>Parameter</b>	phone_setting.page_tip	<y000000000xx>.cfg
<b>Description</b>	It enables or disables the page icon and page switch key LED to indicate the different status of line keys on the non-current page.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	T54W, T53W, T53, T53C, T46U, T46S, T46G, T43U, T42S, T42G, T42U, T41S, T41P, T33P, T33G, T29G, T27G, CP925, CP935W	
<b>Web UI</b>	Dsskey > Line Key > Enable Page Tips	

## Expansion Module Page Tips

On expansion module EXP50/EXP43, the page tips feature allows the page switch key LED to indicate that BLF monitored user receives an incoming call on the non-current page.

### Topics

[Expansion Module Page Tips Indicator](#)

[Expansion Module Page Tips Configuration](#)

### Expansion Module Page Tips Indicator

The following table lists the status of the page switch key LED displayed on the expansion module:

Models	LED Status	Icons	Description
EXP50/EXP43	Flashing red	/	The BLF monitored user receives an incoming call on the non-current pages.

### Expansion Module Page Tips Configuration

The following table lists the parameters you can use to configure expansion module page tips.

<b>Parameter</b>	expansion_module.page_tip.blf_call_in.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the page switch key LED on the EXP50/EXP43 expansion module to indicate when BLF monitored user receives an incoming call on the non-current pages.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U	
<b>Parameter</b>	expansion_module.page_tip.blf_call_in.led	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the page switch key LED status on the EXP50/EXP43 expansion module when BLF monitored user receives an incoming call on the non-current pages.</p> <p>This value uses the same macro action string syntax as an Enhanced DSS key.</p> <p>If it is left blank, the default value takes effect.</p> <p><b>Example:</b></p> <pre>expansion_module.page_tip.blf_call_in.led = \$LEDr300o300\$</pre> <p>It means an infinite loop for page switch key LED status: glow red for 300ms and then be in the off state for 300ms.</p> <p><b>Note:</b> It works only if "expansion_module.page_tip.blf_call_in.enable" is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	String	
<b>Default</b>	\$LEDr300o300\$	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U	

## Time and Date

Yealink phones maintain a local clock. You can choose to get the time and date from SNTP (Simple Network Time Protocol) time server to have the most accurate time and set DST (Daylight Saving Time) to make better use of

daylight and to conserve energy, or you can set the time and date manually. The time and date can be displayed in several formats on the idle screen.

## Topics

[Time Zone](#)

[NTP Settings](#)

[DST Settings](#)

[Time and Date Manually Configuration](#)

[Time and Date Format Configuration](#)

[Date Customization Rule](#)

## Time Zone

The following table lists the values you can use to set the time zone location.

Time Zone	Time Zone Name	Time Zone	Time Zone Name
-12	Eniwetok,Kwajalein	+2	Estonia(Tallinn)
-11	Midway Island	+2	Finland(Helsinki)
-10	United States-Hawaii-Aleutian	+2	Gaza Strip(Gaza)
-10	United States-Alaska-Aleutian	+2	Greece(Athens)
-9:30	French Polynesia	+2	Harare
-9	United States-Alaska Time	+2	Israel(Tel Aviv)
-8	Canada(Vancouver,Whitehorse)	+2	Jordan(Amman)
-8	Mexico(Tijuana,Mexicali)	+2	Latvia(Riga)
-8	United States-Pacific Time	+2	Lebanon(Beirut)
-8	Baja California	+2	Moldova(Kishinev)
-7	Canada(Edmonton,Calgary)	+2	Pretoria
-7	Mexico(Mazatlan,Chihuahua)	+2	Jerusalem
-7	United States-Mountain Time	+2	Russia(Kaliningrad)
-7	United States-MST no DST	+2	Bulgaria(Sofia)
-7	Chihuahua,La Paz	+2	Lithuania(Vilnius)
-7	Arizona	+2	Cairo
-6	Guatemala	+2	Istanbul
-6	El Salvador	+2	E.Europe
-6	Honduras	+2	Tripoli
-6	Nicaragua	+2	Romania(Bucharest)
-6	Costa Rica	+2	Syria(Damascus)
-6	Belize	+2	Turkey(Ankara)
-6	Canada-Manitoba(Winnipeg)	+2	Ukraine(Kyiv, Odessa)

Time Zone	Time Zone Name	Time Zone	Time Zone Name
-6	Chile(Easter Islands)	+3	East Africa Time
-6	Guadalajara	+3	Iraq(Baghdad)
-6	Monterrey	+3	Russia(Moscow)
-6	Mexico(Mexico City,Acapulco)	+3	St.Petersburg
-6	Saskatchewan	+3	Kuwait,Riyadh
-6	United States-Central Time	+3	Nairobi
-5	Bahamas(Nassau)	+3	Minsk
-5	Bogota,Lima	+3	Volgograd (RTZ 2)
-5	Canada(Montreal,Ottawa,Quebec)	+3:30	Iran(Teheran)
-5	Cuba(Havana)	+4	Armenia(Yerevan)
-5	Indiana (East)	+4	Azerbaijan(Baku)
-5	Peru	+4	Georgia(Tbilisi)
-5	Quito	+4	Russia(Samara)
-5	United States-Eastern Time	+4	Abu Dhabi,Muscat
-4:30	Venezuela(Caracas)	+4	Izhevsk,Samara (RTZ 3)
-4	Canada(Halifax,Saint John)	+4	Port Louis
-4	Atlantic Time (Canada)	+4:30	Afghanistan(Kabul)
-4	San Juan	+5	Kazakhstan(Aktau)
-4	Manaus,Cuiaba	+5	Kazakhstan(Aqtobe)
-4	Georgetown	+5	Ekaterinburg (RTZ 4)
-4	Chile(Santiago)	+5	Karachi
-4	Paraguay(Asuncion)	+5	Tashkent
-4	United Kingdom-Bermuda(Bermuda)	+5	Pakistan(Islamabad)
-4	United Kingdom(Falkland Islands)	+5	Russia(Chelyabinsk)
-4	Trinidad&Tobago	+5:30	India(Calcutta)
-3:30	Canada-New Foundland(St.Johns)	+5:30	Mumbai,Chennai
-3	Greenland(Nuuk)	+5:30	Kolkata,New Delhi
-3	Argentina(Buenos Aires)	+5:30	Sri Jayawardenepura
-3	Brazil(no DST)	+5:45	Nepal(Katmandu)
-3	Brasilia	+6	Kyrgyzstan(Bishkek)
-3	Cayenne,Fortaleza	+6	Kazakhstan(Astana, Almaty)

Time Zone	Time Zone Name	Time Zone	Time Zone Name
-3	Montevideo	+6	Russia(Novosibirsk,Omsk)
-3	Salvador	+6	Bangladesh(Dhaka)
-3	Brazil(DST)	+6:30	Myanmar(Naypyitaw)
-2:30	Newfoundland and Labrador	+6:30	Yangon (Rangoon)
-2	Brazil(no DST)	+7	Russia(Krasnoyarsk)
-2	Mid-Atlantic	+7	Thailand(Bangkok)
-1	Portugal(Azores)	+7	Vietnam(Hanoi)
-1	Cape Verde Islands	+7	Jakarta
0	GMT	+8	China(Beijing)
0	Greenland	+8	Singapore(Singapore)
0	Western Europe Time	+8	Hong Kong,Urumqi
0	Monrovia	+8	Taipei
0	Reykjavik	+8	Kuala Lumpur
0	Casablanca	+8	Australia(Perth)
0	Denmark-Faroe Islands(Torshavn)	+8	Russia(Irkutsk, Ulan-Ude)
0	Ireland(Dublin)	+8	Ulaanbaatar
0	Edinburgh	+8:45	Eucla
0	Portugal(Lisboa,Porto,Funchal)	+9	Korea(Seoul)
0	Spain-Canary Islands(Las Palmas)	+9	Japan(Tokyo)
0	United Kingdom(London)	+9	Russia(Yakutsk,Chita)
0	Lisbon	+9:30	Australia(Adelaide)
0	Morocco	+9:30	Australia(Darwin)
+1	Albania(Tirane)	+10	Australia(Sydney,Melbourne,Canberra)
+1	Austria(Vienna)	+10	Australia(Brisbane)
+1	Belgium(Brussels)	+10	Australia(Hobart)
+1	Caicos	+10	Russia(Vladivostok)
+1	Belgrade	+10	Magadan (RTZ 9)
+1	Bratislava	+10	Guam,Port Moresby
+1	Ljubljana	+10	Solomon Islands
+1	Chad	+10:30	Australia(Lord Howe Islands)
+1	Copenhagen	+11	New Caledonia(Noumea)

Time Zone	Time Zone Name	Time Zone	Time Zone Name
+1	West Central Africa	+11	Chokurdakh (RTZ 10)
+1	Poland(Warsaw)	+11	Russia(Srednekolymsk Time)
+1	Spain(Madrid)	+11:30	Norfolk Island
+1	Croatia(Zagreb)	+12	New Zealand(Wellington,Auckland)
+1	Czech Republic(Prague)	+12	Fiji Islands
+1	Denmark(Kopenhagen)	+12	Russia(Kamchatka Time)
+1	France(Paris)	+12	Anadyr
+1	Germany(Berlin)	+12	Petropavlovsk-Kamchatsky (RTZ 11)
+1	Hungary(Budapest)	+12	Marshall Islands
+1	Italy(Rome)	+12:45	New Zealand(Chatham Islands)
+1	Switzerland(Bern)	+13	Nuku'alofa
+1	Sweden(Stockholm)	+13	Tonga(Nukualofa)
+1	Luxembourg(Luxembourg)	+13	Samoa
+1	Macedonia(Skopje)	+13:30	Chatham Islands
+1	Netherlands(Amsterdam)	+14	Kiribati
+1	Namibia(Windhoek)		

## NTP Settings

You can set an NTP time server for the desired area as required. The NTP time server address can be offered by the DHCP server or configured manually.

### Topic

[NTP Configuration](#)

## NTP Configuration

The following table lists the parameters you can use to configure the NTP.

<b>Parameter</b>	local_time.manual_ntp_srv_prior	<y0000000000xx>.cfg
<b>Description</b>	It configures the priority for the phone to use the NTP server address offered by the DHCP server.	
<b>Permitted Values</b>	0- High (use the NTP server address offered by the DHCP server preferentially) 1- Low (use the NTP server address configured manually preferentially)	
<b>Default Value</b>	0	
<b>Web UI</b>	Settings > Time & Date > NTP by DHCP Priority	
<b>Parameter</b>	local_time.dhcp_time	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to update time with the offset time offered by the DHCP server. <b>Note:</b> It is only available to offset from Greenwich Mean Time GMT 0.	
<b>Permitted</b>	0-Disabled	

<b>Values</b>	1-Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Settings > Time & Date > DHCP Time	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Basic > Time & Date > DHCP Time <u>CP925/CP935W:</u> More > Basic > Time & Date > DHCP Time <u>Black-and-white Screen Phones:</u> Menu > Settings > Basic Settings > Time&Date > DHCP Time	
<b>Parameter</b>	local_time.ntp_server1	<y0000000000xx>.cfg
<b>Description</b>	It configures the IP address or the domain name of the primary NTP server.	
<b>Permitted Values</b>	String within 99 characters	
<b>Default</b>	cn.pool.ntp.org	
<b>Web UI</b>	Settings > Time & Date > Primary Server	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Basic > Time & Date > General > SNTP Settings > NTP Server1 <u>CP925/CP935W:</u> More > Basic > Time & Date > General > SNTP Setting > NTP Server1 <u>Black-and-white Screen Phones:</u> Menu > Settings > Basic Settings > Time&Date > SNTP Settings > NTP Server1	
<b>Parameter</b>	local_time.ntp_server2	<y0000000000xx>.cfg
<b>Description</b>	It configures the IP address or the domain name of the secondary NTP server. If the primary NTP server is not configured by the parameter "local_time.ntp_server1", or cannot be accessed, the phone will request the time and date from the secondary NTP server.	
<b>Permitted Values</b>	String within 99 characters	
<b>Default</b>	pool.ntp.org	
<b>Web UI</b>	Settings > Time & Date > Secondary Server	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Basic > Time & Date > General > SNTP Settings > NTP Server2 <u>CP925/CP935W:</u> More > Basic > Time & Date > General > SNTP Setting > NTP Server2 <u>Black-and-white Screen Phones:</u> Menu > Settings > Basic Settings > Time&Date > SNTP Settings > NTP Server2	
<b>Parameter</b>	local_time.interval	<y0000000000xx>.cfg
<b>Description</b>	It configures the interval (in seconds) at which the phone updates time and date from the NTP server.	

<b>Permitted Values</b>	Integer from 15 to 86400	
<b>Default</b>	1000	
<b>Web UI</b>	Settings > Time & Date > Update Interval (15~86400s)	
<b>Parameter</b>	local_time.time_zone	<y0000000000xx>.cfg
<b>Description</b>	It configures the time zone.	
<b>Permitted Values</b>	-12 to +14 For available time zones, refer to <a href="#">Time Zone</a> .	
<b>Default</b>	+8	
<b>Web UI</b>	Settings > Time & Date > Time Zone	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Basic > Time & Date > General > SNTP Settings > Time Zone <u>CP925/CP935W:</u> More > Basic > Time & Date > General > SNTP Settings > Time Zone <u>Black-and-white Screen Phones:</u> Menu > Settings > Basic Settings > Time&Date > SNTP Settings > Time Zone	
<b>Parameter</b>	local_time.time_zone_name	<y0000000000xx>.cfg
<b>Description</b>	It configures the time zone name. <b>Note:</b> It works only if "local_time.summer_time" is set to 2 (Automatic) and the parameter "local_time.time_zone" should be configured in advance.	
<b>Permitted Values</b>	String within 32 characters The available time zone names depend on the time zone configured by the parameter "local_time.time_zone". For available time zone names, refer to <a href="#">Time Zone</a> .	
<b>Default</b>	China(Beijing)	
<b>Web UI</b>	Settings > Time & Date > Location	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Basic > Time & Date > General > SNTP Settings > Location <u>CP925/CP935W:</u> More > Basic > Time & Date > General > SNTP Settings > Location <u>Black-and-white Screen Phones:</u> Menu > Settings > Basic Settings > Time&Date > SNTP Settings > Location	

## DST Settings

You can set DST for the desired area as required. By default, the DST is set to Automatic, so it can be adjusted automatically from the current time zone configuration.

The time zone and corresponding DST pre-configurations exist in the AutoDST file. If the DST is set to Automatic, the phone obtains the DST configuration from the AutoDST file.

You can customize the AutoDST file if required. The AutoDST file allows you to add or modify time zone and DST settings for your area each year.



## Topics

[Auto DST File Attributes](#)  
[Customizing Auto DST File](#)  
[DST Configuration](#)

### Auto DST File Attributes

The following table lists the description of each attribute in the template file:

Attributes	Type	Values	Description
szTime	required	[+/-][X]:[Y], X=0~14, Y=0~59	Time Zone
szZone	required	String (if the content is more than one city, it is the best to keep their daylight saving time the same)	Time Zone name
iType	optional	0/1 0: DST by Date 1: DST by Week	DST time type (This item is needed if you want to configure DST.)
szStart	optional	Month/Day/Hour/Minute (for iType=0) Month: 1~12 Day: 1~31 Hour: 0 (midnight)~23 Minute: 0~59 ----- Month/Week of Month/Day of Week/Hour of Day/Offset Days (for iType=1) Month: 1~12 Week of Month: 1~5 (the last week) Day of Week: 1~7 Hour of Day: 0:0 (midnight)~23:59 Offset Days: -1~-6	Starting time of the DST
szEnd	optional	Same as szStart	Ending time of the DST
szOffset	optional	Integer from -300 to 300	The offset time (in minutes) of DST

### Customizing Auto DST File

Before customizing, you need to obtain the AutoDST file. You can ask the distributor or Yealink FAE for DST template. You can also obtain the DST template online: <http://support.yealink.com/documentFront/forwardToDocumentFrontDisplayPage>.

1. Open the AutoDST file.
2. To add a new time zone, add `<DST szTime="" szZone="" iType="" szStart="" szEnd="" szOffset=""/>` between `<DSTData >` and `</DSTData >`.
3. Specify the DST attribute values within double quotes.

For example:

Add a new time zone (+6 Paradise) with daylight saving time 30 minutes:

```
<DST szTime="+6" szZone="Paradise" iType="1" szStart="3/5/7/2" szEnd="10/5/7/3" szOffset="30"/ >
```

```

AutoDST.xml x
<DST szTime="+4:30" szZone="Afghanistan (Kabul)" />
<DST szTime="+5" szZone="Kazakhstan (Aqtobe)" />
<DST szTime="+5" szZone="Kyrgyzstan (Bishkek)" />
<DST szTime="+5" szZone="Pakistan (Islamabad)" iType="0" szStart="4/15/0" szEnd="11/1/0" />
<DST szTime="+5" szZone="Russia (Chelyabinsk)" />
<DST szTime="+5:30" szZone="India (Calcutta)" />
<DST szTime="+5:45" szZone="Nepal (Katmandu)" />
<DST szTime="+6" szZone="Paradise" iType="1" szStart="3/5/7/2" szEnd="10/5/7/3" szOffset="30" />
<DST szTime="+6" szZone="Kazakhstan (Astana, Almaty)" />
<DST szTime="+6" szZone="Russia (Novosibirsk, Omsk)" />
    
```

Modify the DST settings for the existing time zone “+5 Pakistan (Islamabad)” and add DST settings for the existing time zone “+5:30 India (Calcutta)”.

```

AutoDST.xml* x
<DST szTime="+3:30" szZone="Iran (Teheran)" iType="0" szStart="3/22/0" szEnd="9/22/0" szOffset="60" />
<DST szTime="+4" szZone="Armenia (Yerevan)" iType="1" szStart="3/5/7/2" szEnd="10/5/7/3" szOffset="60" />
<DST szTime="+4" szZone="Azerbaijan (Baku)" iType="1" szStart="3/5/7/4" szEnd="10/5/7/5" szOffset="60" />
<DST szTime="+4" szZone="Georgia (Tbilisi)" />
<DST szTime="+4" szZone="Kazakhstan (Aktau)" />
<DST szTime="+4" szZone="Russia (Samara)" />
<DST szTime="+4:30" szZone="Afghanistan (Kabul)" />
<DST szTime="+5" szZone="Kazakhstan (Aqtobe)" />
<DST szTime="+5" szZone="Kyrgyzstan (Bishkek)" />
<DST szTime="+5" szZone="Pakistan (Islamabad)" iType="0" szStart="4/15/0" szEnd="11/1/0" szOffset="60" />
<DST szTime="+5:30" szZone="India (Calcutta)" iType="1" szStart="9/5/7/3" szEnd="4/1/7/2" szOffset="60" />
<DST szTime="+5:45" szZone="Nepal (Katmandu)" />
<DST szTime="+6" szZone="Kazakhstan (Astana, Almaty)" />
<DST szTime="+6" szZone="Russia (Novosibirsk, Omsk)" />
<DST szTime="+6:30" szZone="Myanmar (Naypyitaw)" />
<DST szTime="+7" szZone="Russia (Krasnoyarsk)" />
<DST szTime="+7" szZone="Thailand (Bangkok)" />
<DST szTime="+8" szZone="China (Beijing)" />
<DST szTime="+8" szZone="Singapore (Singapore)" />
    
```

4. Save this file and place it to the provisioning server.

**Related Topic**

[Time Zone](#)

**DST Configuration**

The following table lists the parameters you can use to configure DST.

<b>Parameter</b>	local_time.summer_time	<y0000000000xx>.cfg
<b>Description</b>	It configures the Daylight Saving Time (DST) feature.	
<b>Permitted Values</b>	0-Disabled 1-Enabled 2-Automatic	
<b>Default</b>	2	
<b>Web UI</b>	Settings > Time & Date > Daylight Saving Time	
<b>Phone UI</b>	Color Screen Phones: Menu > Basic > Time & Date > General > SNTP Settings > Daylight Saving CP925/CP935W: More > Basic > Time & Date > General > SNTP Setting > Daylight Saving Black-and-white Screen Phones: Menu > Settings > Basic Settings > Time&Date > SNTP Settings > Daylight Saving	
<b>Parameter</b>	local_time.dst_time_type	<y0000000000xx>.cfg
<b>Description</b>	It configures the Daylight Saving Time (DST) type. <b>Note:</b> It works only if “local_time.summer_time” is set to 1 (Enabled).	

<b>Permitted Values</b>	0-DST by Date 1-DST by Week	
<b>Default</b>	0	
<b>Web UI</b>	Settings > Time & Date > Fixed Type	
<b>Parameter</b>	local_time.start_time	<y0000000000xx>.cfg
<b>Description</b>	It configures the start time of the Daylight Saving Time (DST). <b>Note:</b> It works only if "local_time.summer_time" is set to 1 (Enabled).	
<b>Permitted Values</b>	<p>Month/Day/Hour:Minute-DST by Date, use the following mapping:</p> <p><b>Month:</b> 1=January, 2=February,..., 12=December</p> <p><b>Day:</b> 1=the first day in a month,..., 31= the last day in a month</p> <p><b>Hour:Minute:</b> 0:0=0:0am, 1:45=1:45am,..., 23:59=11:59pm</p> <p>-----</p> <p>Month/Week of Month/Day of Week/Hour of Day, Offset Days Forward-DST by Week, use the following mapping:</p> <p><b>Month:</b> 1=January, 2=February,..., 12=December</p> <p><b>Week of Month:</b> 1=the first week in a month,..., 5=the last week in a month</p> <p><b>Day of Week:</b> 1=Monday, 2=Tuesday,..., 7=Sunday</p> <p><b>Hour of Day:</b> 0:0=0:0am, 1:45=1:45am,..., 23:59=11:59pm</p> <p><b>Offset Days (Optional.):</b> -1=one day offset forward, -2=two days offset forward,..., -6=six days offset forward</p>	
<b>Default</b>	1/1/0	
<b>Web UI</b>	Settings > Time & Date > Start Date	
<b>Parameter</b>	local_time.end_time	<y0000000000xx>.cfg
<b>Description</b>	It configures the end time of the Daylight Saving Time (DST). <b>Note:</b> It works only if "local_time.summer_time" is set to 1 (Enabled).	
<b>Permitted Values</b>	<p>Month/Day/Hour:Minute-DST by Date, use the following mapping:</p> <p><b>Month:</b> 1=January, 2=February,..., 12=December</p> <p><b>Day:</b> 1=the first day in a month,..., 31= the last day in a month</p> <p><b>Hour:Minute:</b> 0:0=0:0am, 1:45=1:45am,..., 23:59=11:59pm</p> <p>-----</p> <p>Month/Week of Month/Day of Week/Hour of Day, Offset Days Forward-DST by Week, use the following mapping:</p> <p><b>Month:</b> 1=January, 2=February,..., 12=December</p> <p><b>Week of Month:</b> 1=the first week in a month,..., 5=the last week in a month</p> <p><b>Day of Week:</b> 1=Monday, 2=Tuesday,..., 7=Sunday</p> <p><b>Hour of Day:</b> 0:0=0:0am, 1:45=1:45am,..., 23:59=11:59pm</p> <p><b>Offset Days (Optional.):</b> -1=one day offset forward, -2=two days offset forward,..., -6=six days offset forward</p>	

	ward	
<b>Default</b>	12/31/23	
<b>Web UI</b>	Settings > Time & Date > End Date	
<b>Parameter</b>	local_time.offset_time	<y0000000000xx>.cfg
<b>Description</b>	It configures the offset time (in minutes) of Daylight Saving Time (DST). <b>Note:</b> It works only if "local_time.summer_time" is set to 1 (Enabled).	
<b>Permitted Values</b>	Integer from -300 to 300	
<b>Default</b>	60	
<b>Web UI</b>	Settings > Time & Date > Offset (minutes)	
<b>Parameter</b>	auto_dst.url	<y0000000000xx>.cfg
<b>Description</b>	It configures the access URL of the DST file (AutoDST.xml). <b>Note:</b> It works only if "local_time.summer_time" is set to 2 (Automatic).	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	

## Time and Date Manually Configuration

You can set the time and date manually when the phones cannot obtain the time and date from the NTP time server.

The following table lists the parameter you can use to configure time and date manually.

<b>Parameter</b>	local_time.manual_time_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to obtain time and date from manual settings.	
<b>Permitted Values</b>	0-Disabled, the phone obtains time and date from the NTP server. 1-Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Settings > Time & Date > Manual Time	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Basic > Time & Date > General > Manual Settings <u>CP925/CP935W:</u> More > Basic > Time & Date > General > Manual Setting <u>Black-and-white Screen Phones:</u> Menu > Settings > Basic Settings > Time & Date > Manual Settings	

**Note:** After the device reboots, it will be forcibly switched to obtain the time and date from the NTP server.

## Time and Date Format Configuration

You can customize the time and date by choosing between a variety of time and date formats, including options to date format with the day, month, or year, and time format in 12 hours or 24 hours, or you can also custom the date

format as required.

The following table lists the parameters you can use to configure time and date format.

<b>Parameter</b>	local_time.time_format	<y0000000000xx>.cfg
<b>Description</b>	It configures the time format.	
<b>Permitted Values</b>	<b>0</b> -Hour 12, the time will be displayed in 12-hour format with AM or PM specified. <b>1</b> -Hour 24, the time will be displayed in 24-hour format (for example, 2:00 PM displays as 14:00).	
<b>Default</b>	1	
<b>Web UI</b>	Settings > Time & Date > Time Format	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Basic > Time & Date > Time & Date Format > Time Format <u>CP925/CP935W:</u> More > Basic > Time & Date > Time & Date Format > Time Format <u>Black-and-white Screen Phones:</u> Menu > Settings > Basic Settings > Time&Date > Time & Date Format > Time Format	
<b>Parameter</b>	local_time.date_format	<y0000000000xx>.cfg
<b>Description</b>	It configures the date format. <b>Note:</b> The value configured by the parameter "lcl.datetime.date.format" takes precedence over that configured by this parameter.	
<b>Permitted Values</b>	<b>0</b> -WWW MMM DD (for Chinese display: MM DD WWW) <b>1</b> -DD-MMM-YY (for Chinese display: YY-MMM-DD) <b>2</b> -YYYY-MM-DD <b>3</b> -DD/MM/YYYY (for Chinese display: YYYY/MM/DD) <b>4</b> -MM/DD/YY (for Chinese display: YY/MM/DD) <b>5</b> -DD MMM YYYY (for Chinese display: YYYY MMM DD) <b>6</b> -WWW DD MMM (for Chinese display: MM DD WWW) <b>20</b> -Custom format configured by "lcl.datetime.date.format", for example, <b>DD.MM.YYYY</b> Use the following mapping: "WWW" represents the abbreviation of the week; "DD" represents a two-digit day; "MMM" represents the first three letters of the month; "YYYY" represents a four-digit year, and "YY" represents a two-digit year.	
<b>Default</b>	0	
<b>Web UI</b>	Settings > Time & Date > Date Format	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Basic > Time & Date > Time & Date Format > Date Format <u>CP925/CP935W:</u> More > Basic > Time & Date > Time & Date Format > Date Format	

	<p>Black-and-white Screen Phones: Menu &gt; Settings &gt; Basic Settings &gt; Time&amp;Date &gt; Time &amp; Date Format &gt; Date Format</p>	
<b>Parameter</b>	lcl.datetime.date.format	<y0000000000xx>.cfg
<b>Description</b>	It configures the display format of the date.	
<b>Permitted Values</b>	<p>Any combination of Y, M, D, W and the separator (for example, space, dash, slash). Use the following mapping: <b>Y</b> = year, <b>M</b> = month, <b>D</b> = day, <b>W</b> = day of week "Y"/"YY" represents a two-digit year, more than two "Y" letters (for example, YYYY) represent a four-digit year; "M"/"MM" represents a two-digit month, "MMM" represents the abbreviation of the month, three or more than three "M" letters (for example, MMM) represent the long format of the month; One or more than one "D" (for example, DDD) represents a two-digit day; "W"/"WW" represents the abbreviation of the day of the week, three or more three "W" letters (for example, WWW) represent the long format of the day of the week. For the more rules, refer to <a href="#">Date Customization Rule</a>.</p>	
<b>Default</b>	Blank	
<b>Case Scenario</b>	<p>Set the following: lcl.datetime.date.format = DD.MM.YYYY Then a new date format is added on the phone. To make the newly added date format take effect, you also need to set the following: local_time.date_format = 20 You can also manually select this new date format via the web/phone user interface.</p>	

## Date Customization Rule

You need to know the following rules when customizing date formats:

Format	Description
Y/YY	It represents a two-digit year. For example, 16, 17, 18...
Y is used more than twice (for example, YYY, YYYY)	It represents a four-digit year. For example, 2016, 2017, 2018...
M/MM	It represents a two-digit month. For example, 01, 02,..., 12
MMM	It represents the abbreviation of the month. For example, Jan, Feb,..., Dec
M is used more than three times (for example, MMMM)	It represents the long format of the month. For example, January, February,..., December
D is used once or more than once (for example, DD)	It represents a two-digit day. For example, 01, 02,..., 31
W/WW	It represents the abbreviation of the day of week. For example, Mon, Tue,..., Sun

Format	Description
W is used more than twice (for example, WWW, WWWW)	It represents the long format of the day of week. For example, Monday, Tuesday,..., Sunday

## Idle Clock Display

Idle clock is displayed on the center of the idle screen by default. You can hide the idle clock, and then the time and date are displayed in the right of the status bar.

It is only applicable to T54W/T53C phones.

### Topic

[Idle Clock Display Configuration](#)

## Idle Clock Display Configuration

The following table lists the parameter you can use to configure the idle clock display.

<b>Parameter</b>	phone_setting.idle_clock_display.enable	<y000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to display the idle clock.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Supported Devices</b>	T54W, T53C	
<b>Phone UI</b>	Menu > Basic > Display > Idle Clock > Idle Clock Display	

## Logo Customization

Since a logo is a visual entity signifying an organization or company, you can upload a custom logo or specify the logo text shown on the LCD screen. The logo screen and the idle screen display alternately.

The following shows a system logo (Yealink logo) displayed on T27G:



It is not applicable to color screen phones.

The phone will not display the logo if one of the following issues occurs:

- You have configured "screensaver.xml\_browser.url".
- The phone has a pop-up box.
- The phone has a missed call.
- The phone has an unread voice mail.

### Topics

[Custom Logo Picture Limit](#)

Customizing a Logo Picture  
 Custom Logo Configuration  
 Example: Setting a Custom Logo Display

## Custom Logo Picture Limit

The following table lists the supported logo picture format and resolution for each phone model.

Phone Model	Logo File Format	Resolution
T42U/T42S/T42G/T41P/T41S/T31P/T31G/T31/T30P/T30	.dob	<=192*64 2 gray scale
T53W/T53/T43U		<=360*160 2 gray scale
T27G		<=240*120 2 gray scale
T40P/T40G/T23P/T23G/T21(P) E2/T19(P) E2		<=132*64 2 gray scale
CP920		<=248*120 2 gray scale


**Note:** Before uploading your custom logo to phones, ensure your logo file is correctly formatted.

## Customizing a Logo Picture

Yealink phones only support the \*.dob format logo picture. Yealink provides PictureExDemo tool to convert \*.bmp format to \*.dob format. You can ask the distributor or Yealink FAE for the PictureExDemo tool.


### Procedure

1. Double click the PictureExDemo.exe.
2. Click **Add** button to open a \*.bmp file.  
 You can repeat step 2 to add multiple original picture files.

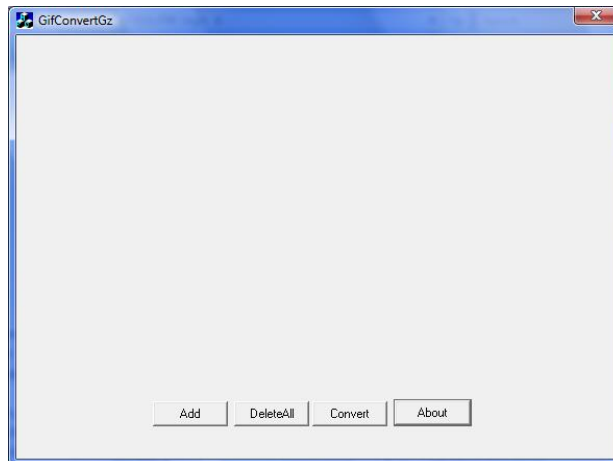

3. Click the **Convert** button.



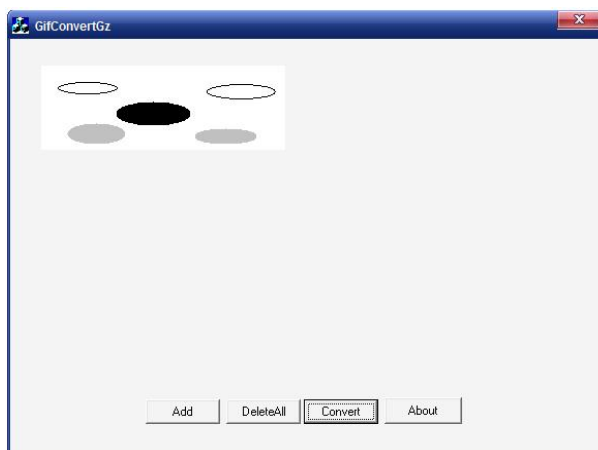

Then you can find the **DOB** logo files in the **adv** directory.

## Custom Logo Configuration

The following table lists the parameters you can use to configure the custom logo.

<b>Parameter</b>	phone_setting.lcd_logo.mode	<y0000000000xx>.cfg
<b>Description</b>	It configures the logo shown on the LCD screen.	
<b>Permitted Values</b>	<b>0</b> -Off, the phone is not allowed to display a logo. <b>1</b> -System Logo, the LCD screen will display the system logo. <b>2</b> -Custom Logo, the LCD screen will display the custom logo (you need to upload a custom logo file to the IP phone).	
<b>Default</b>	0	
<b>Supported Devices</b>	All black-and-white screen phones	
<b>Web UI</b>	Features > General Information > Use Logo	
<b>Parameter</b>	phone_setting.lcd_logo.text	<y0000000000xx>.cfg
<b>Description</b>	It configures the text displayed on the system logo. <b>Note:</b> It works only if "phone_setting.lcd_logo.mode" is set to 1 (System Logo).	
<b>Permitted Values</b>	Combination of up to 7 letters	
<b>Default</b>	Yealink	
<b>Supported Devices</b>	T31P, T31G, T31, T30P, T30	
<b>Web UI</b>	Features > General Information > Logo Text	
<b>Parameter</b>	lcd_logo.url	<y0000000000xx>.cfg
<b>Description</b>	It configures the access URL of the custom logo file. <b>Note:</b> It works only if "phone_setting.lcd_logo.mode" is set to 2 (Custom Logo).	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Supported</b>	All black-and-white screen phones	

<b>Devices</b>		
<b>Web UI</b>	Features > General Information > Upload Logo	
<b>Parameter</b>	phone_setting.lcd_logo.show_time	<y0000000000xx>.cfg
<b>Description</b>	It configures the time (in seconds) the logo is displayed. If it is set to 0 and the logo is loaded, the device will not exit the logo display page until you wake up the device. <b>Note:</b> It works only if "phone_setting.lcd_logo.mode" is not set to 0 (Off).	
<b>Permitted Values</b>	Integer from 0 to 21600	
<b>Default</b>	3	
<b>Supported Devices</b>	T27G, T41S, T42S, T42U, T43U, T53, T53W, CP920, T31P, T31G, T31, T30P, T30	
<b>Parameter</b>	lcd_logo.delete	<y0000000000xx>.cfg
<b>Description</b>	It deletes all custom logo files.	
<b>Permitted Values</b>	http://localhost/all	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All black-and-white screen phones	

## Example: Setting a Custom Logo Display

The following example shows the configuration for uploading a custom logo picture "logo.dob", and then setting it to display on the phone idle screen. The logo picture is customized and placed on the provisioning server "192.168.10.25".

### Example


```
lcd_logo.url =http://192.168.10.25/logo.dob
```

```
phone_setting.lcd_logo.mode =2
```

After provisioning, the phone displays the custom logo screen and the idle screen alternately.

## Call Display

By default, the phones present the contact information (including avatar and identity) when receiving an incoming call, dialing an outgoing call or engaging in a call.

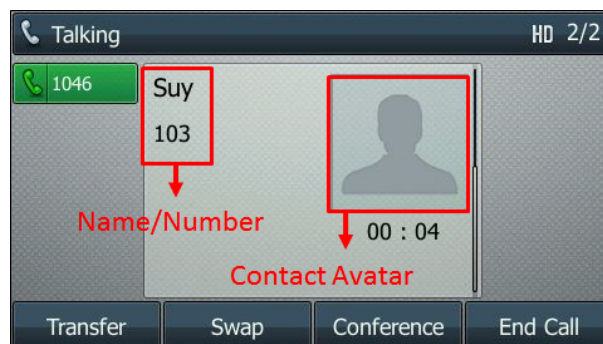

You can configure what contact information presents and how to display the contact information. If the contact exists in the phone directory, the phone displays the saved contact name and number. If not, it will use the Calling Line Identification Presentation (CLIP) or Connected Line Identification Presentation (COLP) to display the contact's identity.

## Topic

### Call Display Configuration

## Call Display Configuration

The following table lists the parameters you can use to configure the call display.

<b>Parameter</b>	phone_setting.contact_photo_display.enable	<y0000000000xx>.cfg
<b>Description</b>	It configures whether to display contact avatar when it receives an incoming call, dials an outgoing call or engages in a call.	
<b>Permitted Values</b>	<b>0</b> -Never, do not display contact avatar no matter whether the contact avatar exists or not <b>1</b> -Always, display the customized contact avatar if it exists; display the built-in avatar if the customized contact avatar does not exist <b>2</b> -Adaptive, display the customized contact avatar if it exists; otherwise, do not display	
<b>Default</b>	1	
<b>Supported Devices</b>	All color screen phones	
<b>Web UI</b>	Settings > Call Display > Contact Photo Display Mode	
<b>Parameter</b>	phone_setting.little_contact_photo_display.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to display the little contact photo when it receives an incoming call, dials a call or is in a call. <b>Note:</b> It works only if "phone_setting.contact_photo_display.enable" is set to 1 (Always) or 2 (Adaptive).	
<b>Permitted Values</b>	<b>0</b> -Disabled <b>1</b> -Enabled, the phone can display the full 16-digit number.	
<b>Default</b>	1	
<b>Supported Devices</b>	T46U, T46S	
<b>Parameter</b>	account.X.picture_info_enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the phone to download the picture from the URL contained in the Call-Info header of the INVITE message. Format of call info: Call-Info: <Image URL>;purpose=wallpaper Call-Info: <Image URL>;purpose=icon <b>Note:</b> If the phone receives both the call info information of "purpose = wallpaper" (wallpaper) and "purpose = icon" (avatar) at the same time, only the wallpaper is displayed, the avatar is not displayed.	
<b>Permitted Values</b>	<b>0</b> -Disabled <b>1</b> -Enabled	
<b>Default</b>	0	

<b>Supported Devices</b>	T46S, T48S, T46U, T48U, T53C, T54W, T57W, T33P, T33G	
<b>Case Scenario</b>	<p><b>Get the picture from call-info and display it on the phone as the wallpaper while receiving/dialing a call, or during a call:</b></p> <p>Configure the call-info:  Call-Info: &lt;http://192.168.0.1/wallpaper.jpg&gt;;purpose=wallpaper</p> <p>Set the following:  account.1.picture_info_enable = 1</p>	
<b>Parameter</b>	phone_setting.called_party_info_display.enable	<y0000000000xx>.cfg
<b>Description</b>	<p>It enables or disables the phone to display the local identity when it receives an incoming call or during a call.</p> <p><b>Note:</b> The information display method is configured by the parameter "phone_setting.call_info_display_method". To display the local identity during a call is not applicable to T48G/T46G/T42G/T41P/T31P/T31G/T31/T30P/T30/T29G/T23P/T23G/T21(P) E2/T19(P) E2 phones.</p>	
<b>Permitted Values</b>	<b>0</b> -Disabled <b>1</b> -Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Settings > Call Display > Display Called Party Information	
<b>Parameter</b>	phone_setting.call_info_display_method	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the remote information display method when the phone receives an incoming call, dials an outgoing call or is during a call.</p>	
<b>Permitted Values</b>	<b>0</b> -Name+Number <b>1</b> -Number+Name <b>2</b> -Name <b>3</b> -Number <b>4</b> -Full Contact Info (display name<sip:xxx@domain.com>) <b>5</b> -Null <b>Note:</b> Name refers to the Label; Number refers to the User Name.	
<b>Default</b>	0	
<b>Web UI</b>	Settings > Call Display > Call Information Display Method	
<b>Parameter</b>	phone_setting.called_party_info_display_method	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the local party information display method when the phone receives an incoming call or is during a call.</p> <p><b>Note:</b> It works only if "phone_setting.called_party_info_display.enable" is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	<b>0</b> -Name+Number <b>1</b> -Number+Name <b>2</b> -Name <b>3</b> -Number	


	4-Full Contact Info (display name<sip:xxx@domain.com>) <b>Note:</b> Name refers to the Label, Display Name (Label > Display Name > User Name); Number refers to the User Name.	
<b>Default</b>	0	
<b>Parameter</b>	features.caller_name_type_on_call	<y0000000000xx>.cfg
<b>Description</b>	It configures the local identity displayed when the phone receives an incoming call or is during a call.	
<b>Permitted Values</b>	0-Label, configured by the parameter "account.X.label". 1-Display Name, configured by the parameter "account.X.display_name". 2-User Name, configured by the parameter "account.X.user_name".	
<b>Default</b>	0	
<b>Parameter</b>	phone_setting.call_display_name.mode	<y0000000000xx>.cfg
<b>Description</b>	It specifies which display names to be used as the caller ID/callee ID for calls from/to contacts in the phone directory. <b>Note:</b> This parameter also affects the history records display.	
<b>Permitted Values</b>	0-Names matched to the entries in the following phone directories are displayed preferentially, the priority is as follows: Local Directory > Remote Phone Book > Broadsoft Network Directory > BroadCloud Buddies > LDAP Directory > Network signaling. 1-Names provided through network signaling are displayed preferentially.	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P and T29G	
<b>Parameter</b>	phone_setting.call_number_display.replace.pattern	<y0000000000xx>.cfg
<b>Description</b>	It configures the regular expression to match the number displayed on the LCD screen when there is an incoming call, outgoing call, being forwarded if the other party's phone number is 10 digits.	
<b>Permitted Values</b>	<b>Blank</b> -The number displayed on the LCD screen will not be matched. <b>String within 512 characters</b> -The number displayed on the LCD screen will be matched according to regular expressions.	
<b>Default</b>	0	
<b>Related Parameters</b>	phone_setting.call_number_display.replace.with	
<b>Supported Device</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Parameter</b>	phone_setting.call_number_display.replace.with	<y0000000000xx>.cfg
<b>Description</b>	It replaces the numbers which match the string configured by the "phone_setting.call_number_display.replace.pattern". <b>Note:</b> It works when the "phone_setting.call_number_display.replace.pattern" is not blank.	
<b>Permitted Values</b>	<b>Blank</b> -The number displayed on the LCD screen will not be replaced. <b>String within 512 characters</b> -The number displayed on the LCD screen will be replaced by the according to regular expressions.	
<b>Default</b>	Blank	
<b>Supported Device</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Case Scen-</b>	1. Configure the following parameters:	

<b>ario</b>	phone_setting.call_number_display.replace.pattern = ^(\d{3})(\d{3})(\d{4})\$ phone_setting.call_number_display.replace.with = \$1-\$2-\$3 <b>Result:</b> When the phone receives a call from number 1234567890, it will display the replaced number 123-456-7890 on the ringing screen and talking screen. However, the phone still displays the call log entry 1234567890.	
<b>Parameter</b>	phone_setting.incoming_call.horizontal_roll_interval	<y0000000000xx>.cfg
<b>Description</b>	It configures the interval (in milliseconds) for the phone to horizontally scroll the caller information when the phone is ringing.	
<b>Permitted Values</b>	Integer from 100 to 2000	
<b>Default</b>	500	
<b>Supported Devices</b>	All phones except CP920/CP925/CP935W	
<b>Parameter</b>	account.X.update_ack_while_dialing <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the phone to update the display of call ID according to the ACK message.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	account.X.refresh_remote_id.enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the phone to update the identity of the caller according to the request message from the remote party.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Parameter</b>	sip.disp_incall_to_info	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to display the identity contained in the To field of the INVITE message when it receives an incoming call.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	

<sup>[1]</sup>X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## Display Method on Dialing

When the phone is on the pre-dialing or dialing screen, the account information will be displayed on the phone screen.

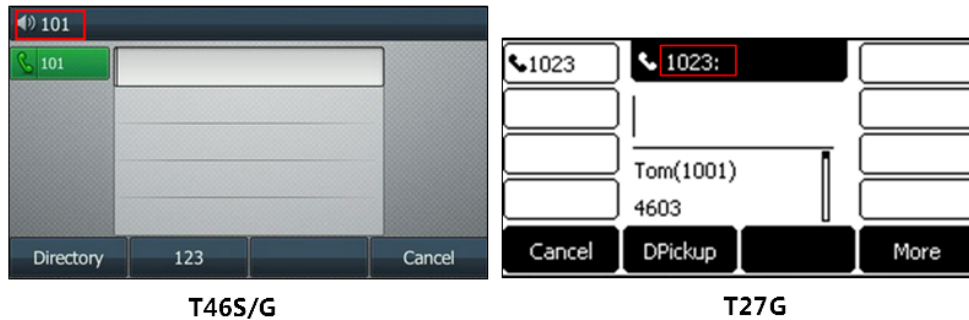

Yealink phones support three display methods: Label, Display Name, and User Name. You can customize the account information to be displayed on the IP phone as required.

#### Topic

[Display Method on Dialing Configuration](#)

### Display Method on Dialing Configuration

<b>Parameter</b>	features.caller_name_type_on_dialing	<y0000000000xx>.cfg
<b>Description</b>	It configures the selected account information displayed on the pre-dialing or dialing screen. <b>Note:</b> It works only if “features.station_name.value” is left blank.	
<b>Permitted Values</b>	<b>1</b> -Label, configured by the parameter “account.X.label”. <b>2</b> -Display Name, configured by the parameter “account.X.display_name”. <b>3</b> -User Name, configured by the parameter “account.X.user_name”.	
<b>Default</b>	3	
<b>Web UI</b>	Features > General Information > Display Method on Dialing	

### Key As Send

Key as send allows you to assign the pound key (“#”) or asterisk key (“\*”) as the send key.

#### Topic

[Key As Send Configuration](#)

### Key As Send Configuration

The following table lists the parameters you can use to configure the key as send.

<b>Parameter</b>	features.key_as_send	<y0000000000xx>.cfg
<b>Description</b>	It configures the “#” or “*” key as the send key.	
<b>Permitted Values</b>	<b>0</b> -Disabled, neither “#” nor “*” can be used as the send key. <b>1</b> -# key <b>2</b> -* key	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except CP925/CP935W	
<b>Web UI</b>	Features > General Information > Key As Send	

<b>Phone UI</b>	T54W/T53C/T46U/T46S/T46G/T33P/T33G/T29G: Menu > Features > Others > General > Key As Send	
	T57W/T48U/T48S/T48G: Menu > Features > General > Key As Send	
	Black-and-white Screen Phones: Menu > Features > Key As Send	
<b>Parameter</b>	features.send_pound_key	<y0000000000xx>.cfg
<b>Description</b>	It configures the behavior when the user presses the # key twice on the dialing screen. <b>Note:</b> It works only if “features.key_as_send” is set to 1 (# key).	
<b>Permitted Values</b>	0-The phone will dial out “#”. 1-The phone will not dial out “#”. After the user presses the # key again, the phone will dial out “##”.	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except CP925/CP935W	
<b>Web UI</b>	Features > General Information > Send Pound Key	

## Softkey Layout

Softkey layout is used to customize the soft keys at the bottom of the phone screen for best meet users' requirements. In addition to specifying which soft keys to display, you can determine their display order. The configurations for softkey layout are based on call states.

The following shows the soft keys displaying on the phone in the dialing state:



**Note:** You can configure the EDK soft keys in different call states. Configuring the EDK soft keys may affect the softkey layout in different call states. For more information on EDK soft keys, refer to [EDK Soft Keys Configuration](#).

### Topics

- [Softkey Layout File Customization](#)
- [Softkey Layout Configuration](#)
- [Example: Setting the Soft Keys Layout in Talking State](#)

## Softkey Layout File Customization

You can also configure the softkey layout using the softkey layout templates for different call states.

You can ask the distributor or Yealink FAE for softkey layout template. You can also obtain the softkey layout template online: <http://support.yealink.com/documentFront/forwardToDocumentFrontDisplayPage>.

### Topics



## Softkey Layout File Elements and Attributes Customizing Softkey Layout File

### Softkey Layout File Elements and Attributes

The following table lists the elements and attributes you need to understand in the softkey layout file. We recommend that you do not edit these elements and attributes.

Elements & Attributes	Description
<Disable>	Specify the disabled soft key list.
</Disable>	The phone screen will not display the disabled soft keys.
<Enable>	Specify the enabled soft key list.
</Enable>	The phone screen will display the enabled soft keys.
<Default>	Specify the default soft key list.
</Default>	The phone screen displays these soft keys by default.
<Key Type=" "/>	Specify the soft key type.

### Customizing Softkey Layout File

1. Open the template file.
2. For each soft key that you want to enable, move the string from the disabled soft key list to enabled soft key list in the file or replace the Empty in the enabled soft key list.

The following shows a portion of the softkey layout file "CallFailed.xml":

```

1  <?xml version="1.0"?>
2  <CallFailed>
3    <Disable>
4      <Key Type="Empty" />
5      <Key Type="End Call" />
6    </Disable>
7    <Enable>
8      <Key Type="NewCall" />
9      <Key Type="Empty" />
10     <Key Type="Empty" />
11     <Key Type="Cancel" />
12  </Enable>
13  <Default>
14     <Key Type="NewCall" />
15     <Key Type="Empty" />
16     <Key Type="Empty" />
17     <Key Type="Cancel" />
18  </Default>

```

3. For each soft key that you want to disable, just move the string from the enabled soft key list to disabled soft key list.

The following shows a portion of the softkey layout file "CallFailed.xml":

```

1 <?xml version="1.0"?>
2 <CallFailed>
3   <Disable>
4     <Key Type="Empty" />
5     <Key Type="End Call" />
6   </Disable>
7   <Enable>
8     <Key Type="NewCall" />
9     <Key Type="Empty" />
10    <Key Type="Empty" />
11    <Key Type="Cancel" />
12  </Enable>
13 </CallFailed>
14 <Default>
15   <Key Type="NewCall" />
16   <Key Type="Empty" />
17   <Key Type="Empty" />
18   <Key Type="Cancel" />

```

4. Save the change and place this file to the provisioning server.

## Softkey Layout Configuration

The following table lists the parameters you can use to configure the softkey layout.

<b>Parameter</b>	phone_setting.custom_softkey_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the custom soft keys layout feature.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Settings > Softkey Layout > Custom SoftKey	
<b>Parameter</b>	phone_setting.custom_softkey.apply_to_states	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the desired call state to apply the custom softkey layout.</p> <p>To configure the call states to apply the custom softkey layout:</p> <p><b>Example:</b></p> <p>phone_setting.custom_softkey.apply_to_states = DialingEmpty,DialTransEmpty</p> <p>It means that DialingEmpty and DialTransEmpty call states will use the custom softkey layout.</p> <p>To configure the call states not to apply the custom softkey layout:</p> <p><b>Example:</b></p> <p>phone_setting.custom_softkey.apply_to_states = -DialingEmpty,DialTransEmpty</p> <p>It means that DialingEmpty and DialTransEmpty call states will not use the custom softkey layout.</p> <p><b>Note:</b> Multiple call states are separated by commas. It works only if "phone_setting.custom_softkey_enable" is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	Blank (all call states will use the custom softkey layout) Dialing, DialingEmpty, DialTrans, DialTransEmpty, DialConference, DialConferenceEmpty, Talk, Hold, Held, CallIn, NewCallIn, BeTransferred, SemiAttendTrans, Conferenced, ConferencedHold, ConferencedNewCallIn, Connecting, CallFailed, Paging, ListeningPaging, RingBack, SemiAttendTransBack	
<b>Default</b>	Blank	
<b>Parameter</b>	features.custom_softkey_dynamic.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to display the soft keys relevant to the features (call center, cent-	

	ralized call recording, and executive-assistant). <b>Note:</b> It works only if “phone_setting.custom_softkey_enable” is set to 1 (Enabled).
<b>Permitted Values</b>	0-Disabled 1-Enabled, the functional soft keys display on the phone screen if the corresponding feature is available.
<b>Default</b>	1
<b>Parameter</b>	custom_softkey_call_failed.url <y0000000000xx>.cfg
<b>Description</b>	It configures the access URL of the custom softkey layout file in the CallFailed state. <b>Note:</b> It works only if “phone_setting.custom_softkey_enable” is set to 1 (Enabled).
<b>Permitted Values</b>	URL within 511 characters
<b>Default</b>	Blank
<b>Parameter</b>	custom_softkey_call_in.url <y0000000000xx>.cfg
<b>Description</b>	It configures the access URL of the custom softkey layout file in the CallIn state. <b>Note:</b> It works only if “phone_setting.custom_softkey_enable” is set to 1 (Enabled).
<b>Permitted Values</b>	URL within 511 characters
<b>Default</b>	Blank
<b>Parameter</b>	custom_softkey_connecting.url <y0000000000xx>.cfg
<b>Description</b>	It configures the access URL of the custom softkey layout file in the Connecting state. <b>Note:</b> It works only if “phone_setting.custom_softkey_enable” is set to 1 (Enabled).
<b>Permitted Values</b>	URL within 511 characters
<b>Default</b>	Blank
<b>Parameter</b>	custom_softkey_dialing.url <y0000000000xx>.cfg
<b>Description</b>	It configures the access URL of the custom softkey layout file in the Dialing state. <b>Note:</b> It works only if “phone_setting.custom_softkey_enable” is set to 1 (Enabled).
<b>Permitted Values</b>	URL within 511 characters
<b>Default</b>	Blank
<b>Supported Devices</b>	All phones except T57W, T48U, T48S and T48G
<b>Parameter</b>	custom_softkey_ring_back.url <y0000000000xx>.cfg
<b>Description</b>	It configures the access URL of the custom softkey layout file in the RingBack state. <b>Note:</b> It works only if “phone_setting.custom_softkey_enable” is set to 1 (Enabled).
<b>Permitted Values</b>	URL within 511 characters
<b>Default</b>	Blank
<b>Parameter</b>	custom_softkey_talking.url <y0000000000xx>.cfg
<b>Description</b>	It configures the access URL of the custom softkey layout file in the Talking state.

	<b>Note:</b> It works only if "phone_setting.custom_softkey_enable" is set to 1 (Enabled).
<b>Permitted Values</b>	URL within 511 characters
<b>Default</b>	Blank

## Example: Setting the Soft Keys Layout in Talking State

The following example shows the configuration for setting the soft key layout in the talking state.

Customize a softkey layout file "Talking.xml" and place this file to the provisioning server "http://192.168.10.25".

### Example

```
phone_setting.custom_softkey_enable = 1
```

```
custom_softkey_talking.url = http://192.168.10.25/Talking.xml
```

After provisioning, you can use the enabled soft keys during a call.

## Input Method

You can customize the existing keypad input method for all phones and the existing onscreen keyboard input method for T57W/T48U/T48S/T48G phones.

The T57W/T48U/T48S/T48G phones use the onscreen keyboard by default. After you disable it, you can use the phone keypad to enter data .

### Topics

[Keypad Input Method File Customization](#)

[Onscreen Keyboard Input Method File Customization](#)

[Input Method Configuration](#)

[Example: Configuring the French Onscreen Keyboard Input Method](#)

## Keypad Input Method File Customization

You can first customize the Yealink-supplied keypad input method file "ime.txt", "Russian\_ime.txt" or "Hebrew\_ime.txt", and then download it to the IP phone. The changes in the "Russian\_ime.txt" file becomes effective when the language is set to Russian. If you want to customize the input method for all languages, the input method file must be named as "custom\_ime.txt" (case-sensitive).

Yealink phones support 6 input methods: 2aB, abc, Abc, 123, ABC and Hebrew.

**Note:** By default, the Hebrew input method is hidden, the phone will automatically use the Hebrew input method when the language is set to Hebrew.

The changes in the "Hebrew\_ime.txt" file becomes effective when the language is set to Hebrew.

You can ask the distributor or Yealink FAE for keypad input method file. You can also obtain the keypad input method file online: <http://support.yealink.com/documentFront/forwardToDocumentFrontDisplayPage>.

### Topic

[Customizing the Keypad Input Method File](#)

## Customizing the Keypad Input Method File

When adding new characters for the existing input method, ensure that the added characters are supported by the phones. The IP phone can only recognize the keypad input method files uploaded using Unicode encoding.

1. Open the desired keypad input method file (for example, ime.txt).
2. Under the input method field (for example, [abc]), add new characters or adjust the order of the characters within the double quotation marks on the right of the equal sign.

```

ime.txt x
0 1,0 2,0 3,0 4,0
1 [2aB]
2 1 = "1"
3 2 = "2abcABC"
4 3 = "3defDEF"
5 4 = "4ghiGHI"
6 5 = "5jklJKL"
7 6 = "6mnoMNO"
8 7 = "7pqrsPQRS"
9 8 = "8tuvTUV"
10 9 = "9wxyzWXYZ"
11 0 = "0"
12 * = "*, '?!\\- () @ / : _ ; + & % = < > £ $ % ¢ [ ] { } ~ ^ ¡ ¢ $ # " | "
13 # = "#"
14
15 [abc]
16 1 = ""
17 2 = "abc2äääääääç"
18 3 = "def3ééééé"
19 4 = "ghi4ííííí"
20 5 = "jkl5z"
21 6 = "mno6öóóóóñ"
22 7 = "pqrs7ßß"
23 8 = "tuv8ùúúúú"
24 9 = "wxyz9ýÿ"
25 0 = ""
26 * = "*, '?!\\- () @ / : _ ; + & % = < > £ $ % ¢ [ ] { } ~ ^ ¡ ¢ $ # " | "
27 # = "#"

```

3. Save the keypad input method file.
4. Rename the input method file (for example, custom\_ime.txt), and place it to the provisioning server.

**Note:** If you just want to customize the input method for a certain language, the file name must be "language name\_ime.txt" (for example, German\_ime.txt). The valid language names are: English, Chinese\_S, Chinese\_T, French\_CA, French, German, Italian, Polish, Portuguese, Portuguese\_LA, Spanish, Spanish\_LA, Turkish and Russian.

## Onscreen Keyboard Input Method File Customization

The T57W/T48U/T48S/T48G phones support using the onscreen keyboard to enter data and provide English onscreen keyboard by default. You can create a new language onscreen keyboard or customize the existing input method files of the onscreen keyboard.

Yealink provides three types of input method files for onscreen keyboard customization. You can configure them as required.

You can ask the distributor or Yealink FAE for onscreen keyboard input method files. You can also obtain the onscreen keyboard input method files online: <http://support.yealink.com/documentFront/forwardToDocumentFrontDisplayPage>.

### Topics

- [Description of the Onscreen Keyboard Input Method Files](#)
- [Lang File Elements and Attributes](#)
- [Customizing a Lang File](#)
- [Ime File Elements and Attributes](#)
- [Customizing an Ime File](#)
- [Layout File Elements and Attributes](#)
- [Customizing a Layout File](#)

## Description of the Onscreen Keyboard Input Method Files

Before you customize the onscreen keyboard input method files, take a few moments to familiarize yourself with their formats and descriptions.

File Type	File Name (* represents any character)	Template File	Description
Lang	keyboard_lang.xml	keyboard_lang.xml	Configures the language of the keyboard.
Ime	keyboard_ime_*.xml	keyboard_ime_en.xml	Configures the alternative characters for English keyboard in alphabetic input mode.
		keyboard_ime_francais.xml	Configures the alternative characters for French keyboard in alphabetic input mode.
		keyboard_ime_num.xml	Configures the alternative characters for keyboard in numeric&symbolic input mode.
Layout	keyboard_layout_*.xml	keyboard_layout_1.xml	Configures the layout of English keyboard in alphabetic input mode.
		keyboard_layout_2.xml	Configures the layout of English or French keyboard in numeric&symbolic input mode.
		keyboard_layout_francais.xml	Configures the layout of French keyboard in alphabetic input mode.

**Note:** If you want to customize the existing input method files of the onscreen keyboard, you just need to upload the custom files.

If you want to create a new language onscreen keyboard, you should upload all three types of input method files at a time. For the example above, you should upload “keyboard\_lang.xml”, “keyboard\_ime\_francais.xml” and “keyboard\_layout\_francais.xml” files at a time.

## Lang File Elements and Attributes

The following table lists the elements and attributes you need to understand in the Lang file. We recommend that you do not edit these elements and attributes.

Elements	Attributes	Description
Lang	Name	Specify the display name of the language.
Ime	Name	Specify the Ime file(s) that the language will use.  <b>Note:</b> One Ime file can be used by multiple languages. For example, the keyboard in numeric&symbolic input mode is almost the same for each language, you can use the template file (keyboard_ime_num.xml) as the input method file for multiple languages.

## Customizing a Lang File

1. Open the template file.
2. Edit the corresponding string in the file.

```

1  <?xml version="1.0" encoding="ISO-8859-1"?>
2  <KeyboardLang>
3
4  <!--
5  -->
6  <!--
7  <Lang Name="English">
8      <Ime Name="keyboard_ime_en.xml"></Ime>
9      <Ime Name="keyboard_ime_num.xml"></Ime>
10 </Lang>
11 -->
12 -->
13 <Lang Name="Francais">
14     <Ime Name="keyboard_ime_francais.xml"></Ime>
15     <Ime Name="keyboard_ime_num.xml"></Ime>
16 </Lang>
17
18
19 </KeyboardLang>

```

3. Save the change and place this file to the provisioning server.

### Ime File Elements and Attributes

The following table lists the elements and attributes you need to understand in the Ime file. We recommend that you do not edit these elements and attributes.

Elements	Attributes	Description
KeyboardIme	Layout	Configures the Layout file that the keyboard will use.
	DisplayName	Configures the display name of the input mode when the input mode changes to lowercase.
	CapitalName	Configures the display name of the input mode when the input mode changes to uppercase.
	ImeType	It can be set to Char or Symbol. If it is set to Symbol, the shift key will not take effect.
Line	/	Specifies a line on the keyboard. The first Line element represents the first line of the keyboard.
Key	ImeNormal	Configures the characters the key provides when the input mode is set to lowercase.
	ImeCapital	Configures the characters the key provides when the input mode is set to uppercase. <b>Note:</b> It works only if the ImeType is set to Char.
	Function	Configures the key's function. There are 11 types of values for function attributes, you can set to different values to provide different functions. The details are introduced below.


The following table lists the usage of the function keys:

No.	Function Key	Usage
1	backspace	Delete the entered characters.
2	space	Enter spaces.
3	enter	Confirm the settings/Go to the next field.
4	left	Position the cursor.

No.	Function Key	Usage
5	right	Position the cursor.
6	up	Position the cursor.
7	down	Position the cursor.
8	hide	Hide the onscreen keyboard.
9	shift	Switch between the uppercase input mode and the lowercase input mode.
10	lang	Change the language of the keyboard.
11	switch	Change input mode.

### Customizing an Ime File

1. Open the template file.
2. Edit the corresponding string in the file.

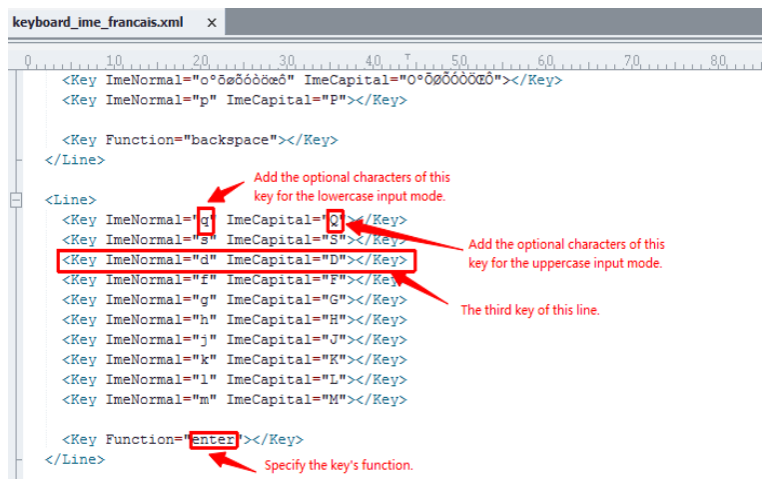

3. Save the change and place this file to the provisioning server.


### Layout File Elements and Attributes

The following lists the elements and attributes you need to understand in the Layout file. We recommend that you do not edit these elements and attributes.

Elements	Description
<KeyboardLayout > </KeyboardLayout >	Indicate the start and end of a Layout file.
<Line > </Line >	Specify a line on the keyboard. The first Line element represents the first line of the keyboard.
<Key > </Key >	Specify a key on the keyboard. The first key element in the Line element represents the first key of this line.

- The Line elements and Key elements both have four attributes: LeftIndent, TopIndent, Width, and Height (all attribute values are in pixels). The following picture shows the meaning of four attributes:




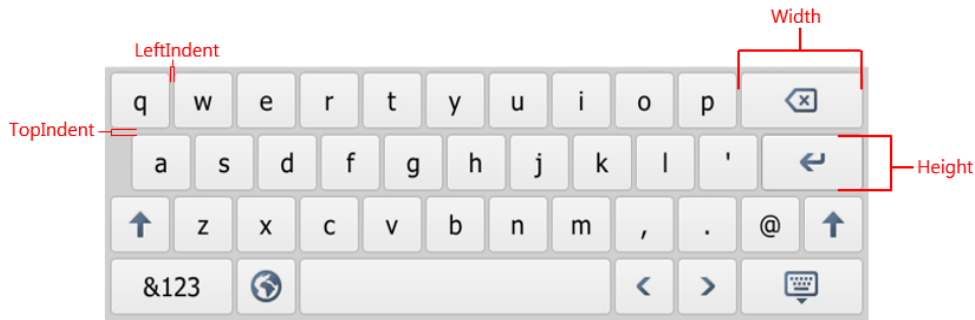

- The value of attributes in a line element is the default value of the corresponding attribute in the key element. For example, if you have not configured the width attribute in the key element, the key will automatically use the value of width attribute configured in line element as the width.
- The size of the onscreen keyboard is 800 pixels wide by 256 pixels high. If the area of the keyboard you configured is larger than the size of the keyboard, the part of the area beyond the keyboard will not be shown.

### Customizing a Layout File

1. Open the template file.
2. Edit the corresponding string in the file.

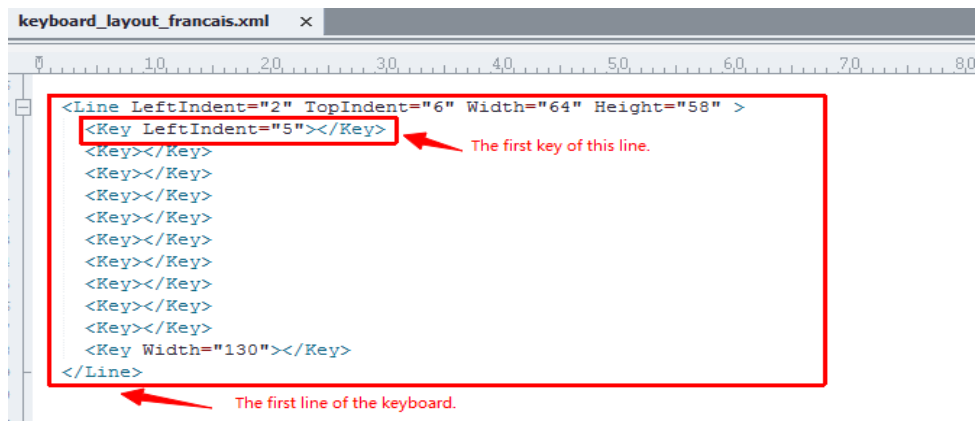

3. Save the change and place this file to the provisioning server.

### Input Method Configuration

The following table lists the parameters you can use to configure the input method.

Parameter	gui_input_method.url	<y0000000000xx>.cfg
Description	It configures the access URL of the custom keypad input method file for the phone user interface.	
	<p><b>Example:</b></p> <p>gui_input_method.url = http://192.168.10.25/custom_ime.txt</p> <p>During the auto provisioning process, the phone connects to the provisioning server “192.168.1.25”, and downloads the custom keypad input method file “custom_ime.txt”.</p> <p>gui_input_method.url = http://192.168.10.25/Russian_ime.txt</p> <p>During auto provisioning, the phone connects to the provisioning server “192.168.1.25”, and downloads the custom keypad input method file “Russian_ime.txt” for the Russian language.</p> <p><b>Note:</b> If you want to upload a custom keypad input method file for the desired language, you can name the file “language name_ime.txt”. The valid language names are: English, Chinese_S, Chinese_T, French_CA, French, German, Italian, Polish, Portuguese, Portuguese_LA, Spanish, Span-</p>	

	ish_LA, Turkish and Russian.	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except CP925/CP935W	
<b>Parameter</b>	gui_input_method.delete	<y0000000000xx>.cfg
<b>Description</b>	<p>It deletes the specified or all custom keypad input method files of the phone user interface.</p> <p>Delete all custom keypad input method files: gui_input_method.delete = http://localhost/all</p> <p>Delete a custom keypad input method file (for example, custom_ime.txt) for the phone: gui_input_method.delete = http://localhost/custom_ime.txt</p>	
<b>Permitted Values</b>	http://localhost/all or http://localhost/Name.txt	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except CP925/CP935W	
<b>Parameter</b>	default_input_method.dialing	<y0000000000xx>.cfg
<b>Description</b>	It configures the default input method in the dialing screen.	
<b>Permitted Values</b>	<p>0-2aB</p> <p>1-123</p> <p>2-abc</p> <p>3-ABC</p>	
<b>Default</b>	1	
<b>Supported Devices</b>	All phones except CP925/CP935W	
<b>Parameter</b>	directory.edit_default_input_method	<y0000000000xx>.cfg
<b>Description</b>	It configures the default input method when the user edits contacts in the Local Directory, LDAP, Remote Phone Book, Blocklist or Network Directory.	
<b>Permitted Values</b>	<p>Abc, 2aB, 123, abc, ABC or Hebrew</p> <p><b>Note:</b> By default, the Hebrew input method is hidden, the phone will automatically use the Hebrew input method when the language is set to Hebrew.</p>	
<b>Default</b>	Abc	
<b>Supported Devices</b>	All phones except CP925/CP935W	
<b>Parameter</b>	directory.search_default_input_method	<y0000000000xx>.cfg
<b>Description</b>	It configures the default input method when the user searches for contacts in the Local Directory, LDAP, Remote Phone Book, Blocklist or Network Directory.	
<b>Permitted Values</b>	Abc, 2aB, 123, abc or ABC	
<b>Default</b>	Abc	

<b>Supported Devices</b>	All phones except CP925/CP935W	
<b>Parameter</b>	default_input_method.xml_browser_input_screen	<y0000000000xx>.cfg
<b>Description</b>	It configures the default input method when the type for input box is set to "string" in the InputScreen object. <b>Note:</b> For T57W/T48U/T48S/T48G, it works only if "phone_setting.virtual_keyboard.enable" is set to 0 (Disabled).	
<b>Permitted Values</b>	Abc, 2aB, 123, abc or ABC	
<b>Default</b>	2aB	
<b>Supported Devices</b>	All phones except CP925/CP935W	
<b>Parameter</b>	phone_setting.virtual_keyboard.enable <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to use the onscreen keyboard.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Supported Devices</b>	T57W, T48U, T48S, T48G	
<b>Parameter</b>	gui_onscreen_keyboard.url <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the access URL of the custom onscreen keyboard input method file.	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T48U, T48S, T48G, CP925, CP935W	
<b>Parameter</b>	gui_input_method_hide.list <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the input methods that need to be hidden. Multiple input methods are separated by commas. <b>Example:</b> gui_input_method_hide.list = English,Hebrew,Russia	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T48U,	

<sup>[1]</sup>If you change this parameter, the phone will reboot to make the change take effect.

## Example: Configuring the French Onscreen Keyboard Input Method

The following example shows the configuration for configuring the French onscreen keyboard input method. The onscreen keyboard input method is only applicable to T57W/T48U/T48S/T48G phones.

Customize the onscreen keyboard input method files "keyboard\_lang.xml", "keyboard\_ime\_francais.xml", "keyboard\_ime\_num.xml", "keyboard\_layout\_francais.xml", "keyboard\_layout\_2.xml" and place these files to the provisioning server "http://192.168.10.25".

### Example

```
phone_setting.virtual_keyboard.enable = 1
gui_onscreen_keyboard.url = http://192.168.10.25/keyboard_lang.xml
gui_onscreen_keyboard.url = http://192.168.10.25/keyboard_ime_francais.xml
gui_onscreen_keyboard.url = http://192.168.10.25/keyboard_ime_num.xml
gui_onscreen_keyboard.url = http://192.168.10.25/keyboard_layout_francais.xml
gui_onscreen_keyboard.url = http://192.168.10.25/keyboard_layout_2.xml
```

After provisioning, you can use the French onscreen keyboard for entering information.




When using multiple keyboards, you can tap  to change the language of the keyboard.

## Notification Popups

Notification popups feature allows the IP phone to pop up the message when it misses a call, forwards an incoming call to another party, receives a new voice mail or a new text message.

The following shows an example of receiving a new voice mail:

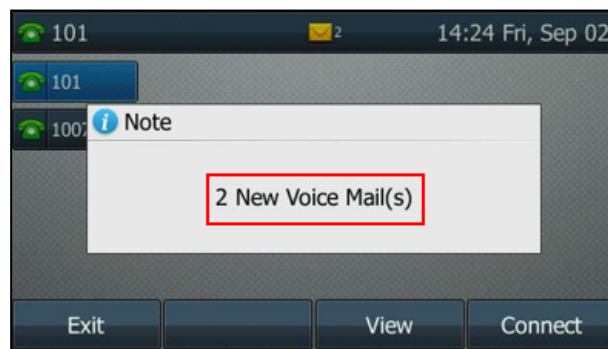

### Topic

[Notification Popups Configuration](#)

## Notification Popups Configuration

The following table lists the parameters you can use to configure notification popups.

Parameter	features.voice_mail_popup.enable	<y0000000000xx>.cfg

<b>Description</b>	It enables or disables the phone to pop up the message when it receives a new voice mail. If the message disappears, it will not pop up again unless the phone receives a new voice mail or the user re-registers the account that has unread voice mail(s). <b>Note:</b> It works only if “account.X.display_mwi.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Web UI</b>	Features > Notification Popups > Display Voice Mail Popup	
<b>Parameter</b>	features.missed_call_popup.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to pop up the message when it misses a call. <b>Note:</b> It works only if “account.X.missed_calllog” is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Web UI</b>	Features > Notification Popups > Display Missed Call Popup	
<b>Parameter</b>	features.forward_call_popup.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to pop up the message when it forwards an incoming call to another party.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Web UI</b>	Features > Notification Popups > Display Forward Call Popup	
<b>Parameter</b>	features.text_message_popup.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to pop up the message when it receives a new text message. <b>Note:</b> It works only if “features.text_message.enable” is set to 1.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Supported Devices</b>	All phones except CP920/CP925/CP935W	
<b>Web UI</b>	Features > Notification Popups > Display Text Message Popup	

## Power LED Indicator

Power LED indicator indicates power status and phone status. It is not applicable to CP920/CP925/CP935W phones.

You can configure the power LED indicator behavior in the following scenarios:

- The IP phone receives an incoming call
- The IP phone receives a voice mail or a text message
- A call is muted
- A call is placed on hold or is held

- The IP phone is busy
- The IP phone misses a call

**Topic**

[Power LED Indicator Configuration](#)

## Power LED Indicator Configuration

The following table lists the parameters you can use to configure the power LED indicator.

<b>Parameter</b>	phone_setting.common_power_led_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the power LED indicator to be turned on.	
<b>Permitted Values</b>	<p>0-Disabled (power LED indicator is off)</p> <p>1-Enabled (power LED indicator glows red)</p> <p><b>For T19(P) E2 phones:</b></p> <p>0-Disabled (power LED indicator is off)</p> <p>1-Enabled (power LED indicator glows yellow)</p>	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except CP920/CP925/CP935W	
<b>Web UI</b>	Features > Power LED > Common Power Light On	
<b>Parameter</b>	phone_setting.ring_power_led_flash_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the power LED indicator to flash when the phone receives an incoming call.	
<b>Permitted Values</b>	<p>0-Disabled (power LED indicator does not flash)</p> <p>1-Enabled (power LED indicator fast flashes (0.3s) red)</p> <p><b>For T19(P) E2 phones:</b></p> <p>0-Disabled (power LED indicator does not flash)</p> <p>1-Enabled (power LED indicator fast flashes (0.3s) yellow)</p>	
<b>Default</b>	1	
<b>Supported Devices</b>	All phones except CP920/CP925/CP935W	
<b>Web UI</b>	Features > Power LED > Ringing Power Light Flash	
<b>Parameter</b>	phone_setting.mail_power_led_flash_enable	<y0000000000xx>.cfg
<b>Description</b>	<p>It enables or disables the power LED indicator to flash when the phone receives a voice mail or a text message.</p> <p><b>Note:</b> It works only if "account.X.display_mwi.enable" is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	<p>0-Disabled (power LED indicator does not flash)</p> <p>1-Enabled (power LED indicator slowly flashes (1s) red)</p> <p>2-Enabled (if there are unread voice mails or text messages, the power LED indicator slowly flashes (1s) red) even when the phone is busy, but value set by "phone_setting.talk_and_dial_power_led_enable" has a higher priority.)</p> <p><b>For T19(P) E2 phones:</b></p>	

	<b>0</b> -Disabled (power LED indicator does not flash) <b>1</b> -Enabled (power LED indicator slowly flashes (1s) yellow) <b>2</b> -Enabled (if there are unread voice mails or text messages, the power LED indicator slowly flashes (1s) yellow even when the phone is busy, but value set by "phone_setting.talk_and_dial_power_led_enable" has a higher priority.)	
<b>Default</b>	1	
<b>Supported Devices</b>	All phones except CP920/CP925/CP935W	
<b>Web UI</b>	Features > Power LED > Voice/Text Mail Power Light Flash	
<b>Parameter</b>	phone_setting.mute_power_led_flash_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the power LED indicator to flash when a call is muted.	
<b>Permitted Values</b>	<b>0</b> -Disabled (power LED indicator does not flash) <b>1</b> -Enabled (power LED indicator fast flashes (0.3s) red) <b>For T19(P) E2 phones:</b> <b>0</b> -Disabled (power LED indicator does not flash) <b>1</b> -Enabled (power LED indicator fast flashes (0.3s) yellow)	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except CP920/CP925/CP935W	
<b>Web UI</b>	Features > Power LED > Mute Power Light Flash	
<b>Parameter</b>	phone_setting.hold_and_held_power_led_flash_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the power LED indicator to flash when a call is placed on hold or is held.	
<b>Permitted Values</b>	<b>0</b> -Disabled (power LED indicator does not flash) <b>1</b> -Enabled ( power LED indicator fast flashes (0.5s) red) <b>For T19(P) E2 phones:</b> <b>0</b> -Disabled (power LED indicator does not flash) <b>1</b> -Enabled ( power LED indicator fast flashes (0.5s) yellow)	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except CP920/CP925/CP935W	
<b>Web UI</b>	Features > Power LED > Hold/Held Power Light Flash	
<b>Parameter</b>	phone_setting.talk_and_dial_power_led_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the power LED indicator to be turned on when the phone is busy.	
<b>Permitted Values</b>	<b>0</b> -Disabled (power LED indicator is off) <b>1</b> -Enabled (power LED indicator glows red) <b>For T19(P) E2 phones:</b> <b>0</b> -Disabled (power LED indicator is off)	

	1-Enabled (power LED indicator glows yellow)	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except CP920/CP925/CP935W	
<b>Web UI</b>	Features > Power LED > Talk/Dial Power Light On	
<b>Parameter</b>	phone_setting.missed_call_power_led_flash.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the power LED indicator to flash when the phone misses a call.	
<b>Permitted Values</b>	0-Disabled (power LED indicator does not flash) 1-Enabled (power LED indicator slowly flashes (1s) red) <b>For T19(P) E2 phones:</b> 0-Disabled (power LED indicator does not flash) 1-Enabled (power LED indicator slowly flashes (1s) yellow)	
<b>Default</b>	1	
<b>Supported Devices</b>	All phones except CP920/CP925/CP935W	
<b>Web UI</b>	Features > Power LED > MissCall Power Light Flash	
<b>Parameter</b>	phone_setting.autop_led_flash_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the power LED indicator to flash when the phone performs an auto provisioning.	
<b>Permitted Values</b>	0-Disabled, auto provisioning does not change the LED status (that is, the original LED status will be kept). 1-Enabled, during auto provisioning, the power LED indicator flashes at a fixed frequency.	
<b>Default</b>	1	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T48S, T46S, T42S, T41S, T33P, T33G, T31P, T31G, T31, T30P, T30, T27G	

## Bluetooth

You can pair and connect a Bluetooth headset or Bluetooth-enabled mobile phone with the IP phone. After connecting the Bluetooth-enabled mobile phone, you can synchronize the mobile contacts to the IP phone. It is only applicable to

T57W/T54W/T53W/T53/T53C/T48U/T48S/T48G/T46U/T46S/T46G/T43U/T42U/T42S/T41S/T29G/T27G/CP920/CP925/CP935W phones. For T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U phones, they can also make and receive mobile calls on the IP phone. For CP920/CP925/CP935W phones, you can also use your IP phone as a Bluetooth speaker for your mobile phone and PC. You can set up a conference among the calls on your IP phone, the PSTN and connected mobile phone ( PSTN is not applicable to CP935W phones ).

**Note:** To use Bluetooth feature on T53/T53C/T48U/T48S/T48G/T46U/T46S/T46G/T43U/T42U/T42S/T41S/T29G/T27G phones, make sure the Bluetooth USB dongle is properly connected to the USB port on the back of the phones. The Bluetooth dongle should be purchased separately.

### Topic

[Bluetooth Configuration](#)



## Bluetooth Configuration

You can activate or deactivate the Bluetooth mode, and personalize the Bluetooth device name for the IP phone. The pre-configured Bluetooth device name will display in scanning list of other devices. It is helpful for the other Bluetooth devices to identify and pair with your IP phone.

The following table lists the parameters you can use to configure Bluetooth.

<b>Parameter</b>	static.bluetooth.function.enable <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the Bluetooth feature. <b>Note:</b> For T53/T53C/T48U/T48S/T48G/T46U/T46S/T46G/T43U/T42U/T42S/T41S/T29G/T27G phones, it works only if “static.usb.power.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled, you are not allowed to trigger Bluetooth mode to on. 1-Enabled	
<b>Default</b>	1	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T48G, T46U, T46S, T46G, T43U, T42U, T42S, T41S, T29G, T27G, CP920, CP925, CP935W	
<b>Parameter</b>	features.bluetooth_enable	<y0000000000xx>.cfg
<b>Description</b>	It triggers the Bluetooth mode to on or off. <b>Note:</b> It works only if “static.bluetooth.function.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Off 1-On	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T48G, T46U, T46S, T46G, T43U, T42U, T42S, T41S, T29G, T27G, CP920, CP925, CP935W	
<b>Web UI</b>	Features > Bluetooth > Bluetooth Active	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Basic > Bluetooth > Bluetooth <u>CP925/CP935W:</u> More > Basic > Bluetooth > Bluetooth <u>Black-and-white Screen Phones:</u> Menu > Settings > Basic Settings > Bluetooth	
<b>Parameter</b>	features.bluetooth_adapter_name	<y0000000000xx>.cfg
<b>Description</b>	It configures the Bluetooth device name. <b>Note:</b> It works only if “features.bluetooth_enable” is set to 1 (On).	
<b>Permitted Values</b>	String within 64 characters	
<b>Default</b>	Yealink-\$DEV	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T48G, T46U, T46S, T46G, T43U, T42U, T42S, T41S, T29G, T27G, CP920, CP925, CP935W	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Basic > Bluetooth > Bluetooth (On) > Edit My Device Information > Device Name <u>CP925/CP935W:</u>	

	Bluetooth > Bluetooth (On) > Edit My Device Information > Device Name <u>Black-and-white Screen Phones:</u> Menu > Settings > Basic Settings > Bluetooth > Bluetooth (On) > Edit My Device Information > Device Name	
<b>Parameter</b>	bluetooth.connect_confirm.enable <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to prompt users to confirm the connection request from the Bluetooth device.	
<b>Permitted Values</b>	0-Disabled 1-Enabled, the prompt will not appear during the call.	
<b>Default</b>	0	
<b>Supported Devices</b>	CP920, CP925, CP935W	
<b>Parameter</b>	bluetooth.a2dp_sink <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to act as the connected Bluetooth-enabled mobile phone player.	
<b>Permitted Values</b>	0-Disabled, the Media audio item is hidden on the connected Bluetooth-enabled mobile phone. 2-Enabled, the phone automatically acts as the Bluetooth-enabled mobile phone player after you pair and connect the Bluetooth-enabled mobile phone to the phone successfully.	
<b>Default</b>	1	
<b>Supported Devices</b>	CP920, CP925, CP935W	
<b>Parameter</b>	bluetooth.high_encryption.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the minimum password strength limit.	
<b>Permitted Values</b>	0-Disabled 1-Enabled, when the Bluetooth device is paired with the phone, the minimum password strength cannot be lower than 56bits.	
<b>Default</b>	1	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T46U, T46S, T43U, T42U, T42S, T41S, T27G, CP920, CP925, CP935W	
<b>Web UI</b>	Features > Bluetooth > High Security Pairing	

<sup>[1]</sup>If you change this parameter, the phone will reboot to make the change take effect.

## Handset/Headset/Speakerphone Mode

Yealink phones support three ways to place/answer a call: using the handset, using the headset or using the speakerphone. You can disable the infrequently used audio device as required.

### Topic

[Handset/Headset/Speakerphone Mode Configuration](#)

## Handset/Headset/Speakerphone Mode Configuration

The following table lists the parameters you can use to configure handset/headset/speakerphone mode.

<b>Parameter</b>	features.speaker_mode.enable	<y0000000000xx>.cfg
------------------	------------------------------	---------------------

<b>Description</b>	It enables or disables the phone's speakerphone mode.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Supported Devices</b>	All phones except CP920/CP925/CP935W	
<b>Parameter</b>	features.handset_mode.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone's handset mode.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Supported Devices</b>	All phones except CP920/CP925	
<b>Parameter</b>	features.group_listen_in_talking_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to enter into the group listening mode by pressing the Speakerphone key when you first answer the call using the handset. <b>Note:</b> The audio is sent only through the handset. So you are able to speak and listen through the handset, but you can only listen through the speaker.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Supported Devices</b>	All phones except CP920/CP925	
<b>Parameter</b>	features.headset_mode.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone's headset mode.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Supported Devices</b>	All phones except CP920/CP925	
<b>Parameter</b>	features.headset.group_listen_in_talking_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to enter into the group listening mode by pressing the Speakerphone key when you first answer the call using the headset. <b>Note:</b> The audio is sent only through the headset. So you are able to speak and listen through the headset, but you can only listen through the speaker. It is not applicable to Bluetooth headset.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T48S, T46S, T42S, T41S, T33P, T33G, T31P, T31G, T31, T30P, T30, T27G	
<b>Parameter</b>	phone_setting.headsetkey_mode	<y0000000000xx>.cfg
<b>Description</b>	It configures headset mode during a call.	

<b>Permitted Values</b>	0-Always use (pressing the Speakerphone key and picking up the handset are not effective when the headset mode is activated) 1-Use as normal
<b>Default</b>	1
<b>Supported Devices</b>	All phones except CP920/CP925

## DSS Keys

There are three kinds of DSS keys: Line Keys, Programmable Keys, and Ext Keys. You can assign various functions to DSS keys. This section explains how to set these keys.

Line key is not applicable to T30P/T30/T19(P) E2/CP920 phones, ext key is only applicable to expansion modules connected to T57W/T54W/T53W/T53/T53C/T48U/T48S/T48G/T46U/T46S/T46G/T43U/T29G/T27G phones.

**Note:** If the phone is downgraded to an earlier firmware from firmware version 83, the DSS key configuration will be reset after downgrading.

### Topics

[Supported DSS Keys](#)

[Supported Dsskey Types](#)

[Line Keys](#)

[Programmable Keys](#)

[Ext Keys](#)

[Dsskey Lock Configuration](#)

[Dsskey Page Reset Configuration](#)

[URL Icon Hide](#)

## Supported DSS Keys

The following table lists the number of DSS keys you can configure for each phone model:

Phone Model	Line Keys	Programmable Keys	Ext Keys
T57W	29	9	60
T54W	27	15	60
T53W/T53/T53C/T43U	21	13	60
T48U	29	15	60
T48G/T48S	29	15	40
T46U	27	15	60
T46S/T46G	27	15	40
T42U/T42G/T42S	15	13	/
T41P/T41S	15	13	/
T40P/T40G	3	13	/
T33P/T33G	12	13	/
T31P/T31G/T31	2	13	/

Phone Model	Line Keys	Programmable Keys	Ext Keys
T30P/T30	/	13	/
T29G	27	16	39
T27G	21	16	39
T23P/T23G	3	13	/
T19(P) E2	/	13	/
CP920	/	8	/
CP925	30	4	/
CP935W	30	4	/

**Note:** The programmable key takes effect only if the phone is idle.  
The ext key takes effect only if the expansion module is connected to the phone.

## Supported Dsskey Types

The supported Dsskey function types vary by line keys, programmable keys, and Ext keys.

ID	DSS Key Types	ID	DSS Key Types	ID	DSS Key Types
0	N/A	20	Private Hold	51	Switch Account Up (Programmable key)
1	Conference (Line key/Ext key)	22	XML Group	52	Switch Account Down (Programmable key)
2	Forward	23	Group Pickup	56	Retrieve Park (Line key/Ext key)
3	Transfer (Line key/Ext key)	24	Paging(Multicast Paging) (Line key/Ext key)	61	Directory
4	Hold (Line key/Ext key)	25	Record (Line key/Ext key)	66	Paging List
5	DND	27	XML Browser	72	Missed Call (Line key/Ext key)
7	Recall	28	History (Programmable key)	73	Custom Key (only appear when "features.enhanced_dss_keys.enable = 1")
8	SMS	30	Menu (Programmable key)	77	Mobile Account (only appear when the Bluetooth-enabled mobile phone is connected)
9	Pickup(Pick up/ Direct Pickup)	33	Status (Programmable key)	104	Google Contacts (only appear when "google_contact_server.enable = 1")
10	Call Park (Line key/Ext key)	34	Hot Desking	105	XML Park (Line key/Ext key)
11	DTMF (Line key/Ext key)	35	URL Record (Line key/Ext key)	107	Enterprise Directory (only appear when "features.enterprise_directory.enable = 1")
12	Voice Mail (Line key/Ext key)	38	LDAP(only appear when "ldap.enable=1")	150	Extend (Line key/Programmable key)
13	Speed Dial (SpeedDial)	39	BLF List	310	Dect Intercom (only appear when the DECT USB dongle is connected)

ID	DSS Key Types	ID	DSS Key Types	ID	DSS Key Types
14	Intercom	40	Prefix		
15	Line (Line key/Ext key)	41	Zero Touch		
16	BLF (Line key/Ext key)	42	ACD (Line key/Ext key)		
17	URL (Line key/Ext key)	45	Local Group		
18	Group Listening (Line key/Ext key)	50	Phone Lock (Line key/Ext key)		

## Line Keys

Line keys provide one-touch feature (for example, one-touch park). This allows you to quickly access features and to view the monitored status when the line keys are assigned with particular features (for example, BLF).

Line key is not applicable to T30P/T30/T19(P) E2/CP920 phones.

### Topics

#### Line Keys Configuration

Example: [Set a Park/Retrieve Key for FAC Call Park Mode](#)

Example: [Set a Park/Retrieve Key for Transfer Call Park Mode](#)

Example: [Setting a Line Key as Directed Pickup Key](#)

Example: [Setting a Line Key as Group Pickup Key](#)

Example: [Setting a Line Key as Forward Key](#)

Example: [Setting a Line Key as BLF List Key](#)

Example: [Setting a Line Key as Private Hold Key](#)

Example: [Setting a Line Key as Multicast Paging Key](#)

## Line Keys Configuration

The following table lists the parameters you can use to configure line keys.

<b>Parameter</b>	linekey.type_range.custom	<y0000000000xx>.cfg
<b>Description</b>	It configures the list of available line key types when configuring line keys. To assign function types, specify line key type IDs which start with or without a symbol "+". For example, "+2,15,16,7,4" or "2,15,16,7,4" means only "N/A", "Forward", "Line", "BLF", "Recall", "Hold" types are available when you configure line keys. To remove a function type, specify line key type IDs which start with the symbol "-". For example, "-14, 5, 2" means to remove "Intercom", "DND", "Forward" types from the line key types list. These line key types are not available when you configure line keys. <b>Note:</b> Multiple line key type IDs are separated by commas. "N/A" type is always kept.	
<b>Permitted Values</b>	Blank or 0 (all valid function types are available); line key type IDs. For supported line key types and IDs, refer to <a href="#">Supported Dsskey Types</a> .	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	
<b>Parameter</b>	linekey.X.type <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the key feature.	
<b>Permitted</b>	0-N/A	15-Line 38-LDAP (only appear when "ldap.enable=1")

<b>Values</b>	<p>1-Conference</p> <p>2-Forward</p> <p>3-Transfer</p> <p>4-Hold</p> <p>5-DND</p> <p>7-Recall</p> <p>8-SMS</p> <p>9-Pickup(pick up/Direct Pickup)</p> <p>10-Call Park</p> <p>11-DTMF</p> <p>12-Voice Mail</p> <p>13-SpeedDial (Speed Dial)</p> <p>14-Intercom</p>	<p>16-BLF</p> <p>17-URL</p> <p>18-Group Listening</p> <p>20-Private Hold</p> <p>22-XML Group</p> <p>23-Group Pickup</p> <p>24-Paging(Multicast Paging)</p> <p>25-Record</p> <p>27-XML Browser</p> <p>34-Hot Desking</p> <p>35-URL Record</p>	<p>39-BLF List</p> <p>40-Prefix</p> <p>41-Zero Touch</p> <p>42-ACD</p> <p>45-Local Group</p> <p>50-Phone Lock</p> <p>56-Retrieve Park</p> <p>61-Directory</p> <p>66-Paging List</p> <p>72-Missed Call (only applicable to T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/T33P/T33G/T31P/T31G/T31/T30P/T30 phones)</p> <p>73-Custom Key (only available when “features.enhanced_dss_keys.enable=1”)</p> <p>77-Mobile Account (only applicable to T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U phones when the Bluetooth-enabled mobile phone is connected)</p> <p>104-Google Contacts (only appear when “google_contact_server.enable = 1”)</p> <p>105-XML Park (not applicable to CP920 phones)</p> <p>107-Enterprise Directory (only appear when “features.enterprise_directory.enable = 1”)</p> <p>150-Extend (only applicable to T54W/T53W/T53/T53C/T46U/T46S/T43U/T42S/T42U/T41S/T27G phones)</p> <p>310-DECT Intercom (only applicable to T57W/T54W/T53W/T53/T53C phones when the DECT USB dongle is connected)</p>
	<b>Note:</b> The permitted values are configurable by “linekey.type_range.custom”.		
<b>Default</b>	15	<p>T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G: X= 1-16;</p> <p>T53W/T53/T53C/T43U/T42U/T42S/T42G: X = 1-12;</p> <p>T41P/T41S/T27G: X = 1-6;</p> <p>T33P/T33G: X = 1-4;</p> <p>T40P/T40G/T31P/T31G/T31/T23P/T23G/T21(P) E2: all line keys.</p> <p>CP925/CP935W: 1</p>	
	0	other line keys	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920		
<b>Web UI</b>	Dsskey > Line Key > Line KeyX > Type		

<b>Phone UI</b>	Menu > Features > Dsskey > Line Key X > Type CP925/CP935W: Dsskey > Line Key X > Type	
<b>Parameter</b>	linekey.X.line <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the desired line to apply the line key feature.	
<b>Permitted Values</b>	T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G: 0, 1-16; T53W/T53/T53C/T43U/T42U/T42S/T42G: 0, 1-12; T41P/T41S/T27G: 0, 1-6; T33P/T33G: 0, 1-4; T40P/T40G/T23P/T23G: 0, 1-3 T31P/T31G/T31/T21(P) E2: 0, 1-2 CP925/CP935W: 1 <b>Note:</b> features.fwd_mode = 1 & linekey.X.type =2 & linekey.X.line =0: it means forward will apply to all lines on the phone; linekey.X.type = 13 & linekey.X.line =0: it means the phone can automatically switch accounts for speed dial; linekey.X.type = 14 & linekey.X.line =0: it means the phone can automatically switch accounts for intercom.	
<b>Default</b>	1	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	
<b>Web UI</b>	Dsskey > Line Key > Line KeyX > Line	
<b>Phone UI</b>	Menu > Features > Dsskey > Line Key X > Account ID CP925/CP935W: Dsskey > Line Key X > Account ID	
<b>Parameter</b>	linekey.X.value <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the value for some line key features. For example, when you assign the Speed Dial to the line key, this parameter is used to specify the contact number you want to dial out. It is also used to specify the contact number with the DTMF sequence. The contact number and DTMF sequence are separated by commas.	
<b>Permitted Values</b>	String within 99 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	
<b>Web UI</b>	Dsskey > Line Key > Line KeyX > Value	
<b>Phone UI</b>	Menu > Features > Dsskey > Line Key X > Value CP925/CP935W: Dsskey > Line Key X > Value	
<b>Parameter</b>	linekey.X.label <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the label displayed on the phone screen.	



<b>tion</b>	This is an optional configuration.	
<b>Permitted Values</b>	String within 99 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	
<b>Web UI</b>	Dsskey > Line Key > Line KeyX > Label	
<b>Phone UI</b>	Menu > Features > Dsskey > Line Key X > Label CP925/CP935W: Dsskey > Line Key X > Label	
<b>Parameter</b>	linekey.X.extension <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	<p>For multicast paging: It configures the channel of the multicast paging group.</p> <p>For the BLF/BLF list/intercom feature: It configures the pickup code.</p> <p><b>Note:</b> It is only applicable when “linekey.X.type” is set to 14, 16, 24 or 39.</p>	
<b>Permitted Values</b>	<p>For multicast paging: 0 to 31</p> <p>For the BLF/BLF list/intercom feature: String within 256 characters</p>	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	
<b>Web UI</b>	Dsskey > Line Key > Line KeyX > Extension	
<b>Phone UI</b>	<p>Menu &gt; Features &gt; Dsskey &gt; Line Key X &gt; Channel or Menu &gt; Features &gt; Dsskey &gt; Line Key X &gt; PIN/ID or Menu &gt; Features &gt; Dsskey &gt; Line Key X &gt; Extension</p> <p>CP925/CP935W: Dsskey &gt; Line Key X &gt; Channel or Dsskey &gt; Line Key X &gt; PIN/ID or Dsskey &gt; Line Key X &gt; Extension</p>	
<b>Parameter</b>	linekey.X.xml_phonebook <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	<p>It specifies a specific group/phone book when multiple groups/phone books are configured on the phone.</p> <p>For example, both Remote Phone Book 1 “Sell” and Remote Phone Book 2 “Market” are configured on the phone, you can configure “linekey.X.xml_phonebook = 0” to specify the Remote Phone Book 1 “Sell” for the specific line key. The user can press this line key to access the Remote Phone Book 1 “Sell”.</p> <p><b>Note:</b> It is only applicable when “linekey.X.type” is set to 22 or 45.</p>	
<b>Permitted</b>	Integer from 0 to 48	

<b>Values</b>	
<b>Default</b>	0
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920
<b>Web UI</b>	Dsskey > Line Key > Line KeyX > Line
<b>Parameter</b>	features.flash_url_dsskey_led.enable <y0000000000xx>.cfg
<b>Description</b>	It enables or disables the LED indicator of the URL DSS key. The LED indicator behavior depends on the response message from the server when you press the URL DSS key on the phone.
<b>Permitted Values</b>	0-Disabled 1-Enabled
<b>Default</b>	1
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2, CP920, CP925 and CP935W
<b>Parameter</b>	features.block_linekey_in_menu.enable <y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to prevent the user from using line keys when browsing the menu.
<b>Permitted Values</b>	0-Disabled 1-Enabled, it prevents the user from using line keys.
<b>Default</b>	0
<b>Supported Devices</b>	All phones except T57W, T48U, T48S, T48G, T30P, T30, T19(P) E2, CP920, CP925 and CP935W

[1]X is the line key ID. For T57W/T48U/T48S/T48G, X=1-29; for T54W/T46U/T46S/T46G/T29G, X=1-27; for T53W/T53C/T43U/T27G, X=1-21; for T42U/T42G/T42S/T41P/T41S, X=1-15; for T33P/T33G, X=1-12; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for CP925/CP935W, X=1-30.

### Example: Set a Park/Retrieve Key for FAC Call Park Mode

Scenario Conditions	Related Topic
features.call_park.park_code = *68	<a href="#">Call Park and Retrieve</a>
features.call_park.park_retrieve_code = *88	
features.call_park.park_mode = 1	

#### Example

#####Set a Park key#####

linekey.1.type = 10

linekey.1.value =4603

linekey.1.label =Bill

#####Set a Retrieve key####

linekey.3.type = 56

linekey.3.line =1

```
linekey.3.value =4603
```

```
linekey.3.label =Retrieve Bill
```

After provisioning, you can easily press the Park key (line key 1) to park a call to a specific extension (4603) during a call, and press the Retrieve key (line key 3) to retrieve the parked call from the specific extension (4603) when the phone is idle.

If the “linekey.1.value” is set to blank, the park key will perform as the **Park** soft key.

**Note:** In FAC call park mode, the Park/Retrieve key invokes the call park code/park retrieve code by default. Therefore, the phone dials out \*684603 to park a call, and dials out \*884603 to retrieve a call. If these codes are not set, you can assign code and extension to “linekey.X.value”, for example, “\*684603”.

### Example: Set a Park/Retrieve Key for Transfer Call Park Mode

Scenario Conditions	Related Topic
features.call_park.park_mode = 2	<a href="#">Call Park and Retrieve</a>
features.call_park.line_restriction.enable = 1	

#### Example

```
#####Set a Park key#####
```

```
linekey.1.type = 10
```

```
linekey.1.value =*01
```

```
linekey.1.line = 1
```

```
linekey.1.label =Bill
```

```
#####Set a Retrieve key####
```

```
linekey.3.type = 56
```

```
linekey.3.line = 1
```

```
linekey.3.value =*11
```

```
linekey.3.label =Retrieve Bill
```

After provisioning, you can easily press the Park key (line key 1) to park a call to the specific shared parking lot (\*01) during a call, and press the Retrieve key (line key 3) to retrieve the parked call from the shared parking lot (\*01) using the retrieve code (\*11). You can only perform call park feature on the specific line (line 1).

If the “features.call\_park.line\_restriction.enable” is set to 0 (Disabled), the phone will park/retrieve the call to the server on the current line in use.

**Note:** In Transfer call park mode, if you press the Park key when the phone is idle, the Park key will invoke the call park code. Therefore, you can use a Park key to park and retrieve a call. In this case, you need to assign the park retrieve code (\*11) to “features.call\_park.park\_code”. When you press the Park key again on the idle screen, the phone will dial out “\*11\*01” to retrieve the parked call.

### Example: Setting a Line Key as Directed Pickup Key

Scenario Conditions	Related Topic
account.1.direct_pickup_code = *97	<a href="#">Directed Call Pickup</a>
or features.pickup.direct_pickup_code = *97	

#### Example

```
linekey.1.type = 9
linekey.1.line =1
linekey.1.value= 4603
linekey.1.label=Bill
```

After provisioning, you can easily press the Directed Pickup key (line key 1) to pick up an incoming call to a specific phone (4603).

**Note:** The Directed Pickup invokes the directed pickup code by default. Therefore, the phone dials out \*974603 to pick up a call. If the directed code is not set, you can assign code and extension to "linekey.X.value", for example, "\*974603".

### Example: Setting a Line Key as Group Pickup Key

The following example shows the configuration for a group pickup key.

#### Example

```
linekey.1.type = 23
linekey.1.line =1
linekey.1.value =*98
linekey.1.label =Sell
```

After provisioning, you can easily press the Group Pickup key (line key 1) to pick up an incoming call to any phone within a predefined group of phones.

**Note:** If the "linekey.X.value" is not assigned with a group pickup code, the Park key will invoke the group pickup code set by "features.pickup.group\_pickup\_code" or "account.X.group\_pickup\_code".

### Example: Setting a Line Key as Forward Key

When the phone receives an incoming call, you can press a Forward key to forward the incoming call to the preset number.

When the phone is idle, the key behavior depends on the forward modes:

Forward Modes	Key Behavior
Phone Mode	<p><b>The destination number is configured:</b></p> <p>Press the Forward key to activate/deactivate the always forward feature or switch the target among Forward keys.</p> <p><b>The destination number is blank:</b></p> <p>Press the Forward key to enter the forward setting screen or activate/deactivate the forward feature (if forward has been configured from the Call Forward menu).</p>
Custom Mode	Press the Forward key to enter the forward setting screen.

The following example shows the configuration for Forward keys.

Scenario Conditions	Related Topic
features.fwd.allow = 1	Call Forward
features.fwd_mode = 0	
forward.idle_access_always_fwd.enable = 0	

#### Example

```
#####Set a Forward key for Bill#####
```

```
linekey.1.type = 2
```

```
linekey.1.line =1
```

```
linekey.1.value =4603
```

```
linekey.1.label =Bill
```

```
#####Set a Forward key for Tom#####
```

```
linekey.2.type = 2
```

```
linekey.2.line =1
```

```
linekey.2.value =4605
```

```
linekey.2.label =Tom
```

After provisioning, you can easily press the Forward key (line key 1 or line key 2) to activate/deactivate the always forward feature. For example, after pressing line key 1 to activate always forward and forward all calls to Bill (4603), you can press the line key 1 to deactivate always forward, or press line key 2 to switch the forward target and forward all calls to Tom (4605).

### Example: Setting a Line Key as BLF List Key

The following example shows the configuration for a BLF List key.

Scenario Conditions	Related Topic
phone_setting.auto_blf_list_enable = 0	<a href="#">BLF List Configuration</a>

#### Example

```
linekey.1.type = 39
```

```
linekey.1.line =1
```

After provisioning, a BLF List key displays on line key 1. You can easily use this key to monitor a remote line. The monitored line depends on a pre-configured SIP server.

### Example: Setting a Line Key as Private Hold Key

The following example shows the configuration for a Private Hold key.

#### Example

```
linekey.1.type = 20
```

```
linekey.1.label =Private Hold
```

After provisioning, you can press the line key 1 to hold calls without notifying other phones registered with the shared line, the shared line displays active to others shared line. It is only applicable to Shared Line Appearance.

### Example: Setting a Line Key as Multicast Paging Key

The following example shows the configuration for a Multicast Paging key.

#### Example

```
linekey.1.type = 24
```

```
linekey.1.value = 224.5.6.20:10008
```

```
linekey.1.label = Sales
```

```
linekey.1.extension = 2
```

After provisioning, you can press the line key 1 to send announcements quickly to the Sales group.

## Programmable Keys

You can customize programmable keys on the phone to enable users to access frequently used functions, or, if your phone does not have a particular hard key, you can create a soft key. For example, if the phone does not have a Do Not Disturb hard key, you can create a Do Not Disturb soft key.

The programmable key takes effect only when the IP phone is idle.

### Topics

[Supported Programmable Keys](#)  
[Programmable Keys Configuration](#)

## Supported Programmable Keys

The following tables list programmable keys for each phone model.

Pro-gram-mable Key IDs	CP925/CP-935W	CP92-0	T31P/T31G/T31/T30P-/T30/T19(P) E2	T23P/T23-G/T21(P) E2	T29G/T-27G	T53W/T53/T53-C/T43U/ T42G/T42S/T42-U/ T41P/T41S /T40P/T40G/ T33P/T33G	T54W/T48U/T48-G/ T48S/T46U/T46-S/T46G	T57W
1	SoftKey1	SoftK-ey1	SoftKey1	SoftKey1	SoftKey-1	SoftKey1	SoftKey1	SoftK-ey1
2	SoftKey2	SoftK-ey2	SoftKey2	SoftKey2	SoftKey-2	SoftKey2	SoftKey2	SoftK-ey2
3	SoftKey3	SoftK-ey3	SoftKey3	SoftKey3	SoftKey-3	SoftKey3	SoftKey3	SoftK-ey3
4	SoftKey4	SoftK-ey4	SoftKey4	SoftKey4	SoftKey-4	SoftKey4	SoftKey4	SoftK-ey4
5	/	Up	Up	Up	Up	Up	Up	/
6	/	Down	Down	Down	Down	Down	Down	/
7	/	/	Left	Left	Left	Left	Left	/
8	/	/	Right	Right	Right	Right	Right	/
9	/	OK	OK	OK	OK	OK	OK	/
10	/	/	/	Cancel	Cancel	Cancel	Cancel	/
11	/	/	/	/	CONF	/	/	/
12	/	/	/	/	HOLD	/	HOLD	HOLD
13	/	MUTE	MUTE	/	MUTE	MUTE	MUTE	MUTE
14	/	/	TRAN	TRAN	TRAN	/	TRAN	TRAN
17	/	/	Redial	Redial	Redial	Redial	Redial	Redia-I
18	/	/	Message	Message	Mes-sage	Message	Message	Mes-sage

## Programmable Keys Configuration

For T23P/T23G/T21(P) E2 phones, Cancel key can be configured only when “features.keep\_mute.enable” is set to 0 (Disabled).

For other phones, Mute key can be configured only when “features.keep\_mute.enable” is set to 0 (Disabled).

The following table lists the parameters you can use to configure programmable keys.

<b>Parameter</b>	programablekey.type_range.custom		<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the list for available programmable key types when configuring programmable keys.</p> <p>To assign function types, specify programmable key type IDs which start with or without a symbol “+”. For example, “+2,15,16,7,4” or “2,15,16,7,4” means only “N/A”, “Forward”, “Line”, “BLF”, “Recall”, “Hold” types are available when you configure programmable keys.</p> <p>To remove a function type, specify programmable key type IDs which start with the symbol “-”. For example, “-14, 5, 2” means to remove “Intercom”, “DND”, “Forward” types from the Dsskey function types list. These programmable key types are not available when you configure programmable keys.</p> <p><b>Note:</b> Multiple programmable key type IDs are separated by commas. “N/A” type is always kept.</p>		
<b>Permitted Values</b>	<p>Blank or 0 (all valid function types are available);</p> <p>Dsskey type IDs.</p> <p>For supported Dsskey types and IDs, refer to <a href="#">Supported Dsskey Types</a>.</p>		
<b>Default</b>	Blank		
<b>Parameter</b>	programablekey.X.type <sup>[1]</sup>		<y0000000000xx>.cfg
<b>Description</b>	It configures a key feature for a specific programmable key.		
<b>Permitted Values</b>	<p><b>0</b>-N/A</p> <p><b>2</b>-Forward</p> <p><b>5</b>-DND</p> <p><b>7</b>-Recall</p> <p><b>8</b>-SMS</p> <p><b>9</b>-Pick up</p> <p><b>13</b>-Speed Dial</p> <p><b>14</b>-Intercom</p> <p><b>22</b>-XML Group</p> <p><b>23</b>-Group Pickup</p> <p><b>24</b>-Multicast Paging (Paging)</p>	<p><b>27</b>-XML Browser</p> <p><b>28</b>-History</p> <p><b>29</b>-Directory (only applicable to CP925/CP935W)</p> <p><b>30</b>-Menu</p> <p><b>32</b>-New SMS</p> <p><b>33</b>-Status</p> <p><b>34</b>-Hot Desking</p> <p><b>38</b>-LDAP (only appear when “ldap.enable = 1”)</p> <p><b>40</b>-Prefix</p> <p><b>41</b>-Zero Touch</p>	<p><b>43</b>-Local Directory (Local Phonebook)</p> <p><b>45</b>-Local Group</p> <p><b>50</b>-Phone Lock</p> <p><b>51</b>-Switch Account Up (not applicable to T57W/T30P/T30/T19(P) E2)</p> <p><b>52</b>-Switch Account Down (not applicable to T57W/T30P/T30/T19(P) E2)</p> <p><b>61</b>-Directory</p> <p><b>66</b>-Paging List</p> <p><b>73</b>-Custom Key (only appear when “features.enhanced_dss_keys.enable = 1”)</p> <p><b>104</b>-Google Contacts (only appear when “google_contact_server.enable = 1”)</p> <p><b>107</b>-Enterprise Directory (only appear when “features.enterprise_directory.enable = 1”)</p> <p><b>150</b>-Extend (only applicable to T54W/T53W/T53/T53C/T46U/T46S/T43U/T42S/T42U/T41S/T27G phones)</p> <p><b>308</b>-Dial (only applicable to CP925/CP935W)</p> <p><b>309</b>-Bluetooth (only applicable to CP925/CP935W)</p>

			<b>310-DECT Intercom</b> (only applicable to T57W/T54W/T53W/T53/T53C phones when the DECT USB dongle is connected)
	<b>Note:</b> The permitted values are configurable by "programablekey.type_range.custom". The CP925/CP935W phones only support the following types: N/A (0), XML Browser (27), Dial (308), Bluetooth (309), History (28), Directory (29), Status (33).		
<b>Default</b>	X=1, default: 28 - History X=2, default: 61 - Directory X=3, default: 5 - DND X=4, default: 30 - Menu X=5, default: 28- History X=6, default: 61- Directory X=7, default: 51- Switch Account Up X=8, default: 52- Switch Account Down	X=9, default: 33- Status X=10, default: 0 - NA X=11, default: 0 - NA X=12, default: 0 - NA X=13, default: 0 - NA X=14, default: 2- Forward X=17, default: 0 - NA X=18, default: 0 - NA	
<b>Web UI</b>	Dsskey > Programmable Key > Type		
<b>Parameter</b>	programablekey.X.history_type <sup>[1]</sup>		<y0000000000xx>.cfg
<b>Description</b>	It configures the history type of programmable key.		
<b>Permitted Values</b>	0-Local History 1-Network CallLog (only appear when "bw.enable=1" and "bw.xsi.call_log.enable=1")		
<b>Default</b>	0		
<b>Web UI</b>	Dsskey > Programmable Key > Line		
<b>Parameter</b>	programablekey.X.line <sup>[1]</sup>		<y0000000000xx>.cfg
<b>Description</b>	It configures the desired line to apply the programmable key feature.		
<b>Permitted Values</b>	T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G: 0, 1-16; T53W/T53/T53C/T43U/T42U/T42S/T42G: 0, 1-12; T41P/T41S/T27G: 0, 1-6; T33P/T33G: 0, 1-4; T40P/T40G/T23P/T23G: 0, 1-3; T31P/T31G/T31/T21(P) E2: 0, 1-2; CP920: 1, 101, 102. 0-All (it is configurable only when "features.fwd_mode" is set to 1 (Custom) and "programablekey.X.type" is set to 2 (Forward)); Auto (it is configurable only when "linekey.X.type" is set to 13 (SpeedDial) or 14 (Intercom)). 1-Line 1 2-Line 2 ... 16-Line 16 101-PSTN1		



	102-PSTN2	
	<b>Note:</b> features.fwd_mode = 1 & programablekey.X.type =2 & programablekey.X.line =0: it means forward will apply to all lines on the phone; programablekey.X.type = 13 & programablekey.X.line =0: it means the phone can automatically switch accounts for speed dial; programablekey.X.type = 14 & programablekey.X.line =0: it means the phone can automatically switch accounts for intercom.	
<b>Default</b>	1	
<b>Supported Devices</b>	All phones except T30P/T30/T19(P) E2/CP925/CP935W	
<b>Web UI</b>	Dsskey > Programmable Key > Line	
<b>Parameter</b>	programablekey.X.value <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the value for some programmable key features. For example, when you assign the Speed Dial to the programmable key, this parameter is used to specify the contact number you want to dial out. It is also used to specify the contact number with the DTMF sequence. The contact number and DTMF sequence are separated by commas.	
<b>Permitted Values</b>	String within 99 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Dsskey > Programmable Key > Value	
<b>Parameter</b>	programablekey.X.label <sup>[1]</sup> (X=1-4)	<y0000000000xx>.cfg
<b>Description</b>	It configures the label displayed on the phone screen for a specific programmable key. This is an optional configuration.	
<b>Permitted Values</b>	String within 99 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Dsskey > Programmable Key > Label	
<b>Parameter</b>	programablekey.X.extension <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	For multicast paging: It configures the channel of the multicast paging group. For intercom feature: It configures the pickup code. <b>Note:</b> It is only applicable when “programablekey.X.type” is set to 13, 14 or 24.	
<b>Permitted Values</b>	For multicast paging: 0 to 31 For intercom feature: String within 256 characters	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except CP925/CP935W	
<b>Web UI</b>	Dsskey > Programmable Key > Extension	
<b>Parameter</b>	programablekey.X.xml_phonebook <sup>[1]</sup>	<y0000000000xx>.cfg

<b>Description</b>	<p>It specifies a specific group/phone book when multiple groups/phone books are configured on the IP phone.</p> <p>For, example, both Remote Phone Book 1 "Sell" and Remote Phone Book 2 "Market" are configured on the phone, you can configure "programablekey.X.xml_phonebook = 0" to specify the Remote Phone Book 1 "Sell" for the specific programmable key. The user can press this line key to access the Remote Phone Book 1 "Sell".</p> <p><b>Note:</b> It is only applicable when "programablekey.X.type" is set to 22 or 45.</p>
<b>Permitted Values</b>	Integer from 0 to 48
<b>Default</b>	0
<b>Supported Devices</b>	All phones except CP925/CP935W
<b>Web UI</b>	Dsskey > Programmable Key > Line

[1]X is the programmable key ID. For T57W, X=1-4, 12-14, 17-18; For T54W/T48U/T48S/T48G/T46U/T46S/T46G, X=1-10, 12-14, 17-18; For T53W/T53/T53C/T43U/T42U/T42G/T42S/T41P/T41S/T40P/T40G/T33P/T33G, X=1-10, 13, 17-18; for T29G/T27G, X=1-14, 17-18; for T23P/T23G/T21(P) E2, X=1-10, 14, 17-18; for T31P/T31G/T31/T30P/T30/T19(P) E2, X=1-9, 13, 14, 17-18; for CP920: X=1-6, 9, 13; for CP925/CP935W: X=1-4.

## Ext Keys

The ext keys take effect only if the expansion module is connected to the IP phone.

It is only applicable to T57W/T54W/T53W/T53/T53C/T48U/T48S/T48G/T46U/T46S/T46G/T43U/T29G/T27G phones.

### Topic

[Ext Keys Configuration](#)

## Ext Keys Configuration

The following table lists the parameters you can use to configure ext keys.

<b>Parameter</b>	expkey.type_range.custom	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the list for available ext key types list when configuring ext keys.</p> <p>To assign function types, specify ext key type IDs which start with or without a symbol "+". For example, "+2,15,16,7,4" or "2,15,16,7,4" means only "N/A", "Forward", "Line", "BLF", "Recall", "Hold" types are available when you configure ext keys.</p> <p>To remove a function type, specify ext key type IDs which start with the symbol "-". For example, "-14, 5, 2" means to remove "Intercom", "DND", "Forward" types from the ext key types list. These ext key types are not available when you configure ext keys.</p> <p><b>Note:</b> Multiple ext key type IDs are separated by commas. N/A type is always kept.</p>	
<b>Permitted Values</b>	<p>Blank or 0 (all valid function types are available);</p> <p>Dsskey type IDs.</p> <p>For supported Dsskey types and IDs, refer to <a href="#">Supported Dsskey Types</a>.</p>	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T48G, T46U, T46S, T46G, T43U, T29G, T27G	
<b>Parameter</b>	expansion_module.X.key.Y.type <sup>[1]</sup>	<y0000000000xx>.cfg

<b>Description</b>	It configures the feature for a specific ext key.		
<b>Permitted Values</b>	<p>0-N/A</p> <p>1-Conference</p> <p>2-Forward</p> <p>3-Transfer</p> <p>4-Hold</p> <p>5-DND</p> <p>7-Recall</p> <p>8-SMS</p> <p>9-Direct Pickup</p> <p>10-Call Park</p> <p>11-DTMF</p> <p>12-Voice Mail</p> <p>13-Speed Dial</p> <p>14-Intercom</p>	<p>15-Line</p> <p>16-BLF</p> <p>17-URL</p> <p>18-Group Listening</p> <p>20-Private Hold</p> <p>22-XML Group</p> <p>23-Group Pickup</p> <p>24-Multicast Paging (Paging)</p> <p>25-Record</p> <p>27-XML Browser</p> <p>34-Hot Desking</p> <p>35-URL Record</p>	<p>37-Switch (only applicable to ext key 1 for T29G/T27G phones)</p> <p>38-LDAP (only appears when "ldap.enable=1")</p> <p>39-BLF List</p> <p>40-Prefix</p> <p>41-Zero Touch</p> <p>42-ACD</p> <p>45-Local Group</p> <p>50-Phone Lock</p> <p>56-Retrieve Park</p> <p>61-Directory</p> <p>66-Paging List</p> <p>72-Missed Call (only applicable to T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/T33P/T33G/T31P/T31G/T31/T30P/T30 phones)</p> <p>73-Custom Key (only available when "features.enhanced_dss_keys.enable=1")</p> <p>77-Mobile Account (only available to T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U phones when the Bluetooth-enabled mobile phone is connected)</p> <p>104-Google Contacts (only appear when "google_contact_server.enable = 1")</p> <p>105-XML Park</p> <p>107-Enterprise Directory (only appear when "features.enterprise_directory.enable = 1")</p> <p>310-DECT Intercom (only applicable to T57W/T54W/T53W/T53/T53C phones when the DECT USB dongle is connected)</p>
	<b>Note:</b> The permitted values are configurable by "expkey.type_range.custom".		
<b>Default</b>	<p>Y=1-40 or 1-60, default: 0 – NA</p> <p>Y=1 or 21, default: 37 – Switch, only for T29G/T27G</p> <p>Y=2-20, 22-40, default: 0 – NA, only for T29G/T27G</p>		
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T48G, T46U, T46S, T46G, T43U, T29G, T27G		
<b>Web UI</b>	Dsskey > Ext Key > Type		
<b>Parameter</b>	expansion_module.X.key.Y.line <sup>[1]</sup>		<y0000000000xx>.cfg
<b>Description</b>	It configures the desired line to apply the ext key feature.		
<b>Permitted</b>	T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G: 0, 1-16;		

<b>Values</b>	T53W/T53/T53C/T43U: 0, 1-12; T27G: 0, 1-6; <b>Note:</b> The permitted value 0 is configurable only when "features.fwd_mode" is set to 1 (Custom) and "expansion_module.X.key.Y.type" is set to 2 (Forward).	
<b>Default</b>	1	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T48G, T46U, T46S, T46G, T43U, T29G, T27G	
<b>Web UI</b>	Dsskey > Ext Key > Line	
<b>Parameter</b>	expansion_module.X.key.Y.value <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the value for some ext key features. For example, when you assign the Speed Dial to the ext key, this parameter is used to specify the contact number you want to dial out. It is also used to specify the contact number with the DTMF sequence. The contact number and DTMF sequence are separated by commas.	
<b>Permitted Values</b>	String within 99 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T48G, T46U, T46S, T46G, T43U, T29G, T27G	
<b>Web UI</b>	Dsskey > Ext Key > Value	
<b>Parameter</b>	expansion_module.X.key.Y.label <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the label displayed on the LCD screen for a specific programmable key. This is an optional configuration.	
<b>Permitted Values</b>	String within 99 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T48G, T46U, T46S, T46G, T43U, T29G, T27G	
<b>Web UI</b>	Dsskey > Ext Key > Label	
<b>Parameter</b>	expansion_module.X.key.Y.extension <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	For multicast paging: It configures the channel of the multicast paging group. For the BLF/BLF list/intercom feature: It configures the pickup code. <b>Note:</b> It is only applicable when "expansion_module.X.key.Y.type" is set to 14, 16, 24 or 39.	
<b>Permitted Values</b>	For multicast paging: 0 to 31 For the BLF/BLF list/intercom feature: String within 256 characters	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T48G, T46U, T46S, T46G, T43U, T29G, T27G	

<b>Web UI</b>	Dsskey > Ext Key > Extension	
<b>Parameter</b>	expansion_module.X.key.Y.xml_phonebook <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	<p>It specifies a specific group/phone book when multiple groups/phone books are configured on the phone.</p> <p>For example, both Remote Phone Book 1 “Sell” and Remote Phone Book 2 “Market” are configured on the phone, you can configure “expansion_module.X.key.Y.xml_phonebook = 0” to specify the Remote Phone Book 1 “Sell” for the specific ext key. The user can press this line key to access the Remote Phone Book 1 “Sell”.</p> <p><b>Note:</b> It is only applicable when “expansion_module.X.key.Y.type” is set to 22 or 45.</p>	
<b>Permitted Values</b>	Integer from 0 to 48	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T48G, T46U, T46S, T46G, T43U, T29G, T27G	
<b>Web UI</b>	Dsskey > Ext Key > Ext KeyX > Line	
<b>Parameter</b>	expansion_module.display_order.type	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the order of ext key.</p> <p><b>Note:</b> It is only applicable when “expansion_module.X.key.Y.type” is set to 22 or 45.</p>	
<b>Permitted Values</b>	<p>0-The first row displays ext key in the order of No.1, No.2 from left to right, the second row displays ext key in the order of No.3, No.4 ext key from left to right, and so on.</p> <p>1-The first column displays ext key in the order of No.1, No.2, ... No.N , and the second column displays the ext key in the order of No.(N+1), No.(N+2), ...</p>	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T48G, T46U, T46S, T46G, T43U, T29G, T27G	
<b>Web UI</b>	Dsskey > Ext Key > Ext KeyX	

[1]X is the expansion module ID, Y is the EXT key ID. For T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U, X=1-3, Y=1-60; For T48S/T48G/T46S/T46G, X=1-6, Y=1-40; for T29G/T27G, X=1-6, Y=1-20, 22-40.

## Dsskey Lock Configuration

The following table lists the parameters you can use to configure dsskey lock.

<b>Parameter</b>	custom.features.dsskey_lock_type	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures which types of dsskeys to be locked on the phone.</p> <p>Multiple dsskey type IDs are separated by commas.</p>	
<b>Permitted Values</b>	Blank (all valid function types are not locked); dsskey type IDs. For supported dsskey types and IDs, refer to <a href="#">Supported Dsskey Types</a> .	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P and T29G	
<b>Parameter</b>	custom.features.dsskey_unlock_password	<y0000000000xx>.cfg
<b>Description</b>	It configures the password for unlocking the phone's dsskeys.	

	If it is set to a value, the phone prompts users to enter the password when using the corresponding dsskey configured by "custom.features.dsskey_lock_type".
<b>Permitted Values</b>	String within 32 characters
<b>Default</b>	Blank (no prompt for entering the unlock password)
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P and T29G

## Dsskey Page Reset Configuration

The following table lists the parameter you can use to configure reset dsskey page.

<b>Parameter</b>	features.dsskey_page_reset.call_established.enable	<y000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to automatically switch to a specified dsskey page when a call is established.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	T54W, T53W, T53, T53C, T46U, T46S, T43U, T42S, T42U, T41S, T33P, T33G, T27G	
<b>Parameter</b>	features.dsskey_page_reset.call_established.page	<y000000000xx>.cfg
<b>Description</b>	It controls which dsskey page the phone automatically switches to when a call is established. <b>Note:</b> It works only if "features.dsskey_page_reset.call_established.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	Integer from 1 to 3 (4 for T3 phones)	
<b>Default</b>	1	
<b>Supported Devices</b>	T54W, T53W, T53, T53C, T46U, T46S, T43U, T42S, T42U, T41S, T33P, T33G, T27G	
<b>Parameter</b>	features.dsskey_page_reset.enable	<y000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to automatically switch to a specified dsskey page when all calls end.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	T54W, T53W, T53, T53C, T46U, T46S, T43U, T42S, T42U, T41S, T33P, T33G, T27G	
<b>Parameter</b>	features.dsskey_page_reset.page	<y000000000xx>.cfg
<b>Description</b>	It controls which dsskey page the phone automatically switches to when all calls end. <b>Note:</b> It works only if "features.dsskey_page_reset.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	Integer from 1 to 3 (4 for T3 phones)	
<b>Default</b>	1	
<b>Supported Devices</b>	T54W, T53W, T53, T53C, T46U, T46S, T43U, T42S, T42U, T41S, T33P, T33G, T27G	

<b>Parameter</b>	features.dsskey_page_reset.switch_time	<y0000000000xx>.cfg
<b>Description</b>	It configures the time (in seconds) to return to the first page of dsskey when the phone is in an idle state and is on the non-current page.	
<b>Permitted Values</b>	0-Disabled the fuction that return to the first page of dsskey. 5 to 3600-It will return to the first page of the dsskey after the specified time.	
<b>Default</b>	0	
<b>Supported Devices</b>	T54W, T53W, T53, T53C, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31	

## URL Icon Hide

You can choose whether to hide the icon displayed before the label when line key/ext key is configured as URL type. When the icon is hidden, the label will be displayed on the left so that the phone can display more label characters.

### Topic

[URL Icon Hide Configuration](#)

## URL Icon Hide Configuration

The following table lists the parameter you can use to configure dsskey hide.

<b>Parameter</b>	custom.hide_url_dsskey_icon.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables phone to hide the icon when line key/ext key is configured as URL type.	
<b>Permitted Values</b>	0-Disabled 1-Enabled, line key/ext key does not display the URL icon, and the label is displayed on the left.	
<b>Default</b>	0	

## Enhanced DSS Keys

Enhanced DSS Keys (EDK) enables users to customize the functions of the phone's DSS keys.

With EDK, You can do the following:

- Assign a frequently-used function to DSS keys.
- Create menu shortcuts for frequently-used phone settings as need.
- Use EDK macro strings as the contact number.

Application scenarios involve the following:

- Adding new DSS keys to simplify the operation of common telephony tasks that may need more than one keypress with the default configuration.
- Removing certain default DSS keys for the functions that may be redundant or never used.
- One-touch connecting to the contact's extension number without entering DTMF manually.

The rules for configuring EDK for DSS keys are different. Before using EDK, you are advised to become familiar with the macro language.

For more information on Enhanced DSS Keys, refer to [Using Enhanced DSS Keys on Yealink IP Phones](#).

### Topics

[Guidelines for Configuring Enhanced DSS Keys](#)

[Macro Action Strings](#)

[EDK Configuration](#)

[EDK List Configuration](#)

[EDK User Input Prompt Configuration](#)

[EDK Soft Keys Configuration](#)

[Example: Configuring EDK List for a Line Key](#)

[Example: Using EDK Macro Strings as the Contact Number](#)

## Guidelines for Configuring Enhanced DSS Keys

The following guidelines will help you to configure EDK efficiently:

- Activation of EDK functions requires valid macro construction.
- Character "\$" delimits the parts of the macro string (except the digits only) and it must exist in pairs. For more information, refer to [Macro Action Strings](#).
- Macros can be invoked in the format "!<macro name>", where <macro name > is defined by the parameter "edk.edklist.X.mname".
- If there are two or more same macros, the soft key or DSS key will invoke the macro with the smallest value of X defined by the parameter "edk.edklist.X.mname".

## Macro Action Strings

Before using EDK, you must be familiar with macro language shown in this section.

The following table shows the basic macro action string syntax when creating EDK macros:

Macro Action	Description
<b>Digits</b>	The characters to be sent. The following characters are supported: . @ * # + 0-9 and English letters. The appearance of this parameter depends on the action string. <b>Example:</b> *981135.
<b>\$C&lt;command&gt;\$</b>	This is the command. It can appear anywhere in the action string. Supported commands (or shortcuts) include: <ul style="list-style-type: none"> <li>• hang up (hu)</li> <li>• hold (h)</li> <li>• waitconnect (wc)</li> <li>• pause &lt;number of seconds&gt; (p &lt;num sec&gt;) where the maximum value is 10</li> </ul> <b>Example:</b> 4411\$Cwc\$\$Cp10\$ defines dialing 4411 > > waitconnect > > connected and lasts 10 seconds.
<b>\$T&lt;type&gt;\$</b>	The embedded action type. Multiple actions can be defined. Supported action types include: <ul style="list-style-type: none"> <li>• invite</li> <li>• dtmf</li> <li>• refer</li> <li>• intercom</li> </ul> <b>Example:</b> *338\$Tdtmf\$ defines sending the *338 by the type of DTMF. <b>Note:</b> We recommend that you always define this field. If not, the supplied digits are dialed using INVITE.
<b>\$M&lt;macro&gt;\$</b>	The embedded macro. The <macro > string must begin with a letter. If the macro name is not defined, the execution of the action string will be ignored. <b>Example:</b> \$MAA\$ means invoking the EDK macro AA.
<b>\$S&lt;softkey ID&gt;\$</b>	It has the same effect as pressing the desired soft key. Each soft key has a unique identifier on the IP phone, you can configure this parameter according to the system-defined softkey ID. If the softkey ID is not defined on the phone or there is no matched soft key on the current screen,



Macro Action	Description
	<p>the execution of the action string will be ignored. The softkey ID is case-insensitive.</p> <p><b>Example:</b> \$Sanswer\$ means pressing the <b>Answer</b> soft key.</p> <p>Yealink phones support customizing soft keys. When the phone invokes a custom soft key, the prefix “#” must be added.</p> <p><b>Example:</b> If the custom softkey label is IVR1, the custom softkey ID is custom_macro, then \$S#custom_macro\$ means pressing the <b>IVR1</b> soft key.</p> <p><b>Note:</b> To view the softkey ID, you can set “features.enhanced_dss_key-enable” and “edk.id_mode.enable” to 1 (Enabled) and then long press the Volume Up key when the phone is idle.</p>
\$K<key name>\$	<p>The functionality of performing this action is the same as that of pressing the desired hard key.</p> <p>Supported key names include:</p> <ul style="list-style-type: none"> <li>• LineKeyX (for T57W/T48U/T48S/T48G, X=29; for T54W/T46U/T46S/T46G/T29G, X=27; for T42U/T42G/T42S/T41P/T41S, X=15; for T53W/T53/T53C/T43U/T27G, X=21; for T33P/T33G, X=12; for T40P/T40G/T23P/T23G, X=3; for T31P/T31G/T31/T21(P) E2, X=2; for CP925/CP935W, X=30).</li> <li>• SoftKeyX (X ranges from 1 to 4)</li> <li>• ArrowUp (not applicable to T57W)</li> <li>• ArrowDown (not applicable to T57W)</li> <li>• ArrowLeft (not applicable to T57W)</li> <li>• ArrowRight (not applicable to T57W)</li> <li>• VolDown</li> <li>• VolUp</li> <li>• Cancel (not applicable to T57W)</li> <li>• OK (not applicable to T57W)</li> <li>• DialPadX (X ranges from 0 to 9)</li> <li>• DialPadPound</li> <li>• DialPadStar</li> <li>• Headset</li> <li>• Mute</li> <li>• Message</li> <li>• Hold</li> <li>• Redial</li> <li>• Transfer</li> <li>• Speaker</li> <li>• Conference (only applicable to T29G/T27G)</li> <li>• ExtX@Y (X stands for the serial number of expansion module key, Y stands for the serial number of expansion module; For T48S/T48G/T46S/T46G/T29G: X ranges from 1 to 40, Y ranges from 1 to 6; For T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U: X ranges from 1 to 60, Y ranges from 1 to 3; @Y can be omitted if there is only one expansion module connected to the phone.)</li> <li>• Menu (You can enter the menu by executing this command at any interface except the non-executable situations. For example, entering menu is blocked during an active call.)</li> </ul>

Macro Action	Description
	<ul style="list-style-type: none"> <li>Home (You can return to the idle screen by executing this command on the dialing screen for T57W/T48U/T48S/T48G phones)</li> </ul> <p><b>Example:</b> \$KDialPadPound\$ means pressing the pound key.</p> <p><b>Note:</b> If a key (for example, Redial key) is not found but the function is available, the phone will perform the corresponding action. If a key is not found and the function is unavailable, the execution of the action string will be ignored.</p>
\$I<menu item ID>\$	<p>The action is to position and enter the desired menu item.</p> <p>Each menu item has a unique identifier on the IP phone, and you can configure this parameter according to the system-defined menu item ID. If the menu item ID is not defined on the phone or there is no matched menu item on the current screen, the execution of the action string will be ignored. The menu item ID is case-insensitive.</p> <p><b>Example:</b> \$Istatus_list&amp; means entering the <b>Status</b> menu.</p> <p><b>Note:</b> To view the menu item ID, you can set “edk.id_mode.enable” to 1 (Enabled) and then long press the Volume Up key when the phone is idle.</p>
\$P<label>&T<title>&C<characters number allowed>&N&M\$	<p>The string of the user input prompt.</p> <p>“label” means the specified label for the user input prompt.</p> <p>“title” means the specified title for the user input prompt.</p> <p>“characters number allowed” defines the maximum number of input characters.</p> <p>If &amp;N is included, the character type is Number (default input method: 123). If &amp;N is not included, the character type is Text (default input method: abc), you can manually change the input method. (For T57W/T48U/T48S/T48G, if &amp;N is included, the input mode is numeric&amp;symbolic. If &amp;N is not included, the onscreen keyboard is displayed, you can manually change the input mode.)</p> <p>If &amp;M is included, the inputs are masked by the asterisk characters “*” (dot for T57W/T48U/T48S/T48G).</p> <p><b>Example:</b> \$PPassword&amp;C3&amp;N&amp;M\$ means prompting a <b>Password</b> pop-up box, the maximum number of input characters is 3, the input type is Number, and the input is masked by the asterisk characters “*” (dot for T57W/T48U/T48S/T48G).</p> <p><b>Note:</b> &amp;T&lt;title&gt; is not applicable to T57W/T48U/T48S/T48G/T46G/T42G/T41P/T29G phones.</p>
\$P<EDK user input prompt X>N<characters number allowed>\$	<p>The user input prompt string.</p> <p>“EDK user input prompt X” means which EDK user input prompt is invoked. It indicates the X defined by “edk.edkprompt.X.enable”.</p> <p>“characters number allowed” defines the maximum number of input characters. You need to press the <b>Enter</b> soft key to complete data entry.</p> <p><b>Example:</b> \$P2N5\$ means invoking the EDK user input prompt 2 and inputting 5 characters at most.</p> <p><b>Note:</b> For more information on EDK user input prompt, refer to <a href="#">EDK User Input Prompt Configuration</a>.</p>
\$L<label>\$	<p>This is the label for the entire operation. The value can be any string including the null string (in this case, no label displays).</p>


Macro Action	Description
	<p>This label is used if no label is configured for a custom DSS key or soft key, otherwise, this one is ignored. Make this the first entry in the action string.</p> <p><b>Example:</b> \$LEDK2\$1234\$Tinvite\$ defines calling out the number 1234 and using the label “EDK2” for a Custom Key.</p>
<p><b>\$LED&lt;color and time&gt;&amp;L&lt;label&gt;\$</b> (not applicable to T30P/T30/T19(P) E2/CP920 phones)</p>	<p>The status of the BLF/BLF list DSS key LED. Specify the LED color for the BLF/BLF list DSS key and the duration time (in milliseconds) for the corresponding status of the BLF/BLF list DSS key. The valid value of the duration ranges from 100 to 60000ms.</p> <p>Can be composed of multiple combinations of “color” and “time”. The status will be stuck in an infinite loop until triggered by other macros.</p> <p>Supported colors include (must be lowercase):</p> <ul style="list-style-type: none"> <li>• r (red)</li> <li>• ri (red; red with an incoming mark for T57W/T48U/T48S/T48G)</li> <li>• ro (red; red with an outgoing mark for T57W/T48U/T48S/T48G)</li> <li>• rd (red; red with a DND mark for T57W/T48U/T48S)</li> <li>• g (green)</li> <li>• gi (green; green with an incoming mark for T57W/T48U/T48S/T48G)</li> <li>• go (green; green with an outgoing mark for T57W/T48U/T48S/T48G)</li> <li>• y (yellow)</li> <li>• yi (yellow; yellow with an incoming mark for T57W/T48U/T48S/T48G)</li> <li>• yo (yellow; yellow with outgoing mark for T57W/T48U/T48S/T48G)</li> <li>• yd (yellow; yellow with a DND mark for T57W/T48U/T48S)</li> <li>• o (off)</li> </ul> <p>&amp;L&lt;label&gt; (Optional.): You have to put the “&amp;L&lt;label&gt;” last in the command flow.</p> <p><b>Example:</b> \$LEDg1000o100r300&amp;Lidle\$ means an infinite loop for BLF/BLF list DSS key LED status: glow green for 1000ms, be in the off state for 100ms and then glow red for 300ms. At the same time, the label of the BLF/BLF list DSS key is changed to “idle”.</p> <p><b>Note:</b> The last “color” can be configured without “time”, and it means permanently displaying the last color until triggered by other macros. This macro can be only used for BLF/BLF list feature. For more information, refer to <a href="#">BLF/BLF List Key LED Status and Behavior Configuration</a>.</p>
<p><b>\$XML&lt;xml browser url&gt;\$</b></p>	<p>The action is to execute the XML browser URL.</p> <p><b>Example:</b> \$XMLhttp://10.83.3.12/XML/PhoneExecute.xml\$ defines excute the XML browser URL <i>http://10.83.3.12/XML/PhoneExecute.xml</i>. For more information on XML browser, refer to <a href="#">XML Browser</a>.</p>

## EDK Configuration

To configure the EDK list, EDK user input prompt, EDK soft keys, and custom DSS keys, you have to enable EDK feature. By default, the EDK feature is disabled.

Yealink phones can display the softkey ID or menu item ID by long pressing the Volume Up key. It is especially useful for those users who need to view the softkey ID or menu item ID when configuring EDK macros.

The following graphic shows an example for displaying the softkey ID and menu item ID after accessing the menu of T46S/G phones:

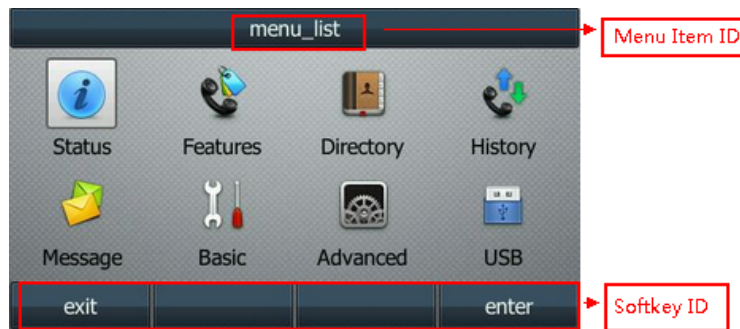

The following table lists the parameters you can use to configure EDK.

<b>Parameter</b>	features.enhanced_dss_keys.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the Enhanced DSS Keys (EDK) feature.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	edk.id_mode.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables to view the softkey or menu item ID by long pressing the Volume Up key for three seconds on any screen. <b>Note:</b> The menu item ID is displayed on the status bar of the phone. Long pressing the Volume Up key again for three seconds to exit. It works only if "features.enhanced_dss_keys.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	

## EDK List Configuration

Using the Enhanced DSS Keys (EDK) List parameters to define a macro is useful when defining more than one soft key or DSS key.

The following table lists the parameters you can use to configure the EDK list.

<b>Parameter</b>	edk.edklist.X.enable <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables Enhanced DSS Keys (EDK) macro X. <b>Note:</b> It works only if "features.enhanced_dss_keys.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	edk.edklist.X.mname <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the unique identifier used by the soft key or DSS key configuration to reference the enhanced DSS keys entry for macro X. It cannot start with a digit. This parameter must have a value, it cannot be left blank. <b>Example:</b>	

	edk.edklist.2.mname = macro2	
	<b>Note:</b> If there are two or more same macros, the soft key or DSS key will invoke the macro with the smallest value of X. It works only if “features.enhanced_dss_keys.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Parameter</b>	edk.edklist.X.action <sup>[1]</sup>	<y000000000xx>.cfg
<b>Description</b>	<p>It configures the action string that contains a macro definition of the action that the softkey or DSS key performs.</p> <p>This parameter must have a value, it cannot be left blank.</p> <p><b>Example:</b></p> <p>edk.edklist.2.action = 1013\$Tinvite\$</p> <p><b>Note:</b> It works only if “features.enhanced_dss_keys.enable” is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	

<sup>[1]</sup>X is the macro ID. X=1-255.

## EDK User Input Prompt Configuration

The EDK user input prompt parameters must be used if interactivity with the user is implemented as part of any macro.

The following table lists the parameters you can use to configure the EDK user input prompt.

<b>Parameter</b>	edk.edkprompt.X.enable <sup>[1]</sup>	<y000000000xx>.cfg
<b>Description</b>	<p>It enables or disables user input prompt X.</p> <p><b>Note:</b> If a macro attempts to use an EDK user input prompt that is disabled, the macro execution fails. It works only if “features.enhanced_dss_keys.enable” is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	<p>0-Disabled</p> <p>1-Enabled</p>	
<b>Default</b>	0	
<b>Parameter</b>	edk.edkprompt.X.label <sup>[1]</sup>	<y000000000xx>.cfg
<b>Description</b>	<p>It configures the text string used as a label of the user input prompt X.</p> <p>If it is left blank, Default is displayed.</p> <p><b>Example:</b></p> <p>edk.edkprompt.1.label = Enter Password</p> <p><b>Note:</b> It works only if “features.enhanced_dss_keys.enable” and “edk.edkprompt.X.enable” are set to 1 (Enabled).</p>	
<b>Permitted Values</b>	String	
<b>Default</b>	Default	
<b>Parameter</b>	edk.edkprompt.X.type <sup>[1]</sup>	<y000000000xx>.cfg

<b>Description</b>	<p>It configures the type of characters entered by the user for user input prompt X.</p> <p>If it is set to numeric, the default input method is 123, and you can switch among abc/ABC/2aB input methods.</p> <p>If it is set to text, the default input method is abc, and you can switch among ABC/2aB/123 input methods.</p> <p><b>Note:</b> It works only if “features.enhanced_dss_keys.enable” and “edk.edkprompt.X.enable” are set to 1 (Enabled).</p>	
<b>Permitted Values</b>	text or numeric	
<b>Default</b>	text	
<b>Parameter</b>	edk.edkprompt.X.userfeedback <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the user input feedback method for user input prompt X.</p> <p><b>Note:</b> It works only if “features.enhanced_dss_keys.enable” and “edk.edkprompt.X.enable” are set to 1 (Enabled).</p>	
<b>Permitted Values</b>	<p><b>visible</b>-the entered text is visible.</p> <p><b>masked</b>-the entered text is displayed as asterisk characters “*”. It can be used to mask password fields.</p>	
<b>Default</b>	visible	
<b>Parameter</b>	edk.edkprompt.X.title <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the text string used as a title for the user input prompt X. The title appears at the top of the user input prompt screen.</p> <p>If it is left blank, the EDK Prompt is displayed.</p> <p><b>Note:</b> It works only if “features.enhanced_dss_keys.enable” and “edk.edkprompt.X.enable” are set to 1 (Enabled).</p>	
<b>Permitted Values</b>	String	
<b>Default</b>	EDK Prompt	
<b>Supported Devices</b>	All phones except T57W, T48U, T48S, T48G, T46G, T42G, T41P, T29G	

<sup>[1]</sup>X is the prompt ID. X=1-10.

## EDK Soft Keys Configuration

You can customize the soft keys as need. This feature is typically used to access frequently-used functions or to create menu shortcuts to frequently-used phone settings.

Custom soft keys can be added in the following phone states:

- **Idle** - There are no active calls on the phone.
- **Alerting (or ringing)** – There is an incoming call on the phone.
- **Connecting** – There is an outgoing call on the phone. Moreover, the call is connecting.
- **Transfer connecting** – There is a call being transferred to another phone. Moreover, the call is connecting.
- **Talk** – There is an active call on the phone.
- **Call failed** – The outgoing call encounters a failure.
- **Ring back** - There is an outgoing call on the phone. Moreover, the phone is in the ringback state.

- **Transfer ring back** - There is a call being transferred to another phone. Moreover, the phone is in the ringback state.
- **Hold** – The call is placed on hold on the phone.
- **Held** – The call is held.
- **Conference** – The phone sets up a conference call.
- **Dial tone** –The phone is on the dialing screen without entering the number.
- **Dialing** – The phone is on the dialing screen with entering the number but not dialing.

**Note:** Configuring the custom soft keys may affect the softkey layout in different call states. For more information on softkey layout, refer to [Softkey Layout](#).

The following table lists the parameters you can use to configure EDK soft keys.

<b>Parameter</b>	softkey.X.enable <sup>[1]</sup>	<y000000000xx>.cfg
<b>Description</b>	It enables or disables the custom soft key X. <b>Note:</b> It works only if “features.enhanced_dss_keys.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	softkey.X.label <sup>[1]</sup>	<y000000000xx>.cfg
<b>Description</b>	It configures the text displayed on the soft key label. <b>Note:</b> It works only if “features.enhanced_dss_keys.enable” and “softkey.X.enable” are set to 1 (Enabled).	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Parameter</b>	softkey.X.position <sup>[1]</sup>	<y000000000xx>.cfg
<b>Description</b>	It configures the location on the phone screen for soft key X. <b>Note:</b> It works only if “features.enhanced_dss_keys.enable” and “softkey.X.enable” are set to 1 (Enabled).	
<b>Permitted Values</b>	Integer from 0 to 10 If it is set to 0, the soft key X is located in the first available position from the left. If it is set to other values, a <b>More</b> soft key appears and the soft key X is located in the specified position. The following soft keys are moved by one position to the right. Press the <b>More</b> soft key to view the remaining soft keys.	
<b>Default</b>	0	
<b>Parameter</b>	softkey.X.action <sup>[1]</sup>	<y000000000xx>.cfg
<b>Description</b>	It configures the action or function for custom soft key X. This value uses the same macro action string syntax as an Enhanced DSS key. You can also invoke the EDK macro that was already defined. The macro name follows the character “!”. <b>Example:</b> softkey.1.action = !macro1 In this example, macro1 stands for the macro name configured by the parameter “edk.edk-list.X.mname”.	

	<b>Note:</b> It works only if "features.enhanced_dss_keys.enable" and "softkey.X.enable" are set to 1 (Enabled).	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Parameter</b>	softkey.X.softkey_id <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the softkey id for custom soft key X. <b>Example:</b> softkey.1.softkey_id = custom_macro1 <b>Note:</b> It works only if "features.enhanced_dss_keys.enable" and "softkey.X.enable" are set to 1 (Enabled).	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Parameter</b>	softkey.X.use.idle <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the custom soft key X to be displayed in the idle state. <b>Note:</b> It works only if "features.enhanced_dss_keys.enable" and "softkey.X.enable" are set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	softkey.X.use.incoming_call <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the custom soft key X to be displayed in the alerting (ringing) state. <b>Note:</b> It works only if "features.enhanced_dss_keys.enable" and "softkey.X.enable" are set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	softkey.X.use.connecting <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the custom soft key X to be displayed in the connecting state. <b>Note:</b> It works only if "features.enhanced_dss_keys.enable" and "softkey.X.enable" are set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	softkey.X.use.transfer_connecting <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the custom soft key X to be displayed in the transfer connecting state. <b>Note:</b> It works only if "features.enhanced_dss_keys.enable" and "softkey.X.enable" are set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	



<b>Default</b>	0	
<b>Parameter</b>	softkey.X.use.on_talk <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the custom soft key X to be displayed in the talking state. <b>Note:</b> It works only if “features.enhanced_dss_keys.enable” and “softkey.X.enable” are set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	softkey.X.use.call_failed <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the custom soft key X to be displayed in the call failed state. <b>Note:</b> It works only if “features.enhanced_dss_keys.enable” and “softkey.X.enable” are set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	softkey.X.use.ring_back <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the custom soft key X to be displayed in the ring back state. <b>Note:</b> It works only if “features.enhanced_dss_keys.enable” and “softkey.X.enable” are set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	softkey.X.use.transfer_ring_back <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the custom soft key X to be displayed in the transfer ring back state. <b>Note:</b> It works only if “features.enhanced_dss_keys.enable” and “softkey.X.enable” are set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	softkey.X.use.hold <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the custom soft key X to be displayed in the hold state. <b>Note:</b> It works only if “features.enhanced_dss_keys.enable” and “softkey.X.enable” are set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	softkey.X.use.held <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the custom soft key X to be displayed in the held state. <b>Note:</b> It works only if “features.enhanced_dss_keys.enable” and “softkey.X.enable” are set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	

<b>Default</b>	0	
<b>Parameter</b>	softkey.X.use.conferenced <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the custom soft key X to be displayed in the conference state. <b>Note:</b> It works only if “features.enhanced_dss_keys.enable” and “softkey.X.enable” are set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	softkey.X.use.dialtone <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the custom soft key X to be displayed in the dial tone (no numbers entered) state. <b>Note:</b> It works only if “features.enhanced_dss_keys.enable” and “softkey.X.enable” are set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	softkey.X.use.dialing <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the custom soft key X to be displayed in the dialing state. <b>Note:</b> It works only if “features.enhanced_dss_keys.enable” and “softkey.X.enable” are set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	

<sup>[1]</sup>X is the soft key ID. X=1-10.

## Example: Configuring EDK List for a Line Key

The following takes an example to help you understand how to execute the macro action string.

### Example

*features.enhanced\_dss\_keys.enable = 1*

*edk.edklist.1.enable = 1*

*edk.edklist.1.mname = IVR1*

*edk.edklist.1.action = 1013\$Tinvite\$\$Cwc\$\$Cp10\$\$Penter number&C4&N\$\$Tdtmf\$\$Cp3\$\$Chu\$*

*linekey.1.type = 73*

*linekey.1.value = !IVR1*

*linekey.1.label = Custom*

After provisioning, the line key 1 will invoke the macro “IVR1”. You can press the line key 1 to execute the action “1013\$Tinvite\$\$Cwc\$\$Cp10\$\$Penter number&C4&N\$\$Tdtmf\$\$Cp3\$\$Chu\$”.

You can also set “linekey.1.value = 1013\$Tinvite\$\$Cwc\$\$Cp10\$\$Penter number&C4&N\$\$Tdtmf\$\$Cp3\$\$Chu\$” without configuring an EDK list. You can also manually assign a line key using the macro “IVR1” or action string “1013\$Tinvite\$\$Cwc\$\$Cp10\$\$Penter number&C4&N\$\$Tdtmf\$\$Cp3\$\$Chu\$” manually on their phone.

## Example: Using EDK Macro Strings as the Contact Number

When you add a contact number in the local directory, LDAP, Remote phone book or XML phone book, you can use the EDK macro strings.

Use one of the following formats when adding a contact number:

- Add an exclamation mark (!) prefix to the macro name, and then enclose them in parenthesis. For example, (!macro1).
- EDK macro strings enclosed in parenthesis. For example, (8001234567\$Cwc\$\$Cp2\$103\$Tdtmf\$).

**Example:** Assume that a contact whose company phone number is 8001234567, and extension number is 103. If you want to call this contact directly, you can configure the contact number according to the following steps:

1. Configure the following parameters:

```
features.enhanced_dss_keys.enable = 1
edk.edklist.1.enable = 1
edk.edklist.1.mname = macro1
edk.edklist.1.action = 8001234567$Cwc$$Cp2$103$Tdtmf$
```

2. Trigger the phone to perform auto provisioning.
3. On your phone, assign (!macro1) to be the contact number.

When you call this contact, the phone will invoke the macro "macro1". So that the phone will execute the action "8001234567\$Cwc\$\$Cp2\$103\$Tdtmf\$".

You can also assign (8001234567\$Cwc\$\$Cp2\$103\$Tdtmf\$) to be the contact number directly.

**Note:** 8001234567\$Cwc\$\$Cp2\$103\$Tdtmf\$ defines that the phone dials 8001234567 first, and sends DTMF sequence 103 automatically after the call is connected and lasts for 2 seconds.

## Power Saving

The power-saving feature turns off the backlight and screen (turning off the screen is only applicable to color screen phones and EXP50 (connected to the T57W/T54W/T53W/T53/T53C phones)/EXP43 (connected to the T48U/T46U/T43U phones) to conserve energy. The IP phone and EXP50/EXP43 (if connected) enter power-saving mode after the phone has been idle for a certain period of time. And the IP phone and EXP50/EXP43 (if connected) will exit power-saving mode if a phone/EXP50/EXP43 event occurs - for example, the phone receives an incoming call or a new message, or you press a key on the phone/EXP50/EXP43 or tap the touch screen (touch screen is only applicable to T57W/T48U/T48S/T48G phones). The power saving is not applicable to T30P/T30/T19(P) E2 phones.

**Note:** If the [Screen Saver](#) is enabled on your phone, the power-saving mode will still occur. For example, if a screen saver is configured to display after the phone has been idle for 5 minutes, and the power-saving mode is configured to turn off the backlight and screen after the phone has been idle for 15 minutes, the backlight and screen will be turned off after the screen saver displays for 10 minutes.

### Topic

[Power Saving Configuration](#)

## Power Saving Configuration

You can enable or disable power saving, and set the different idle timeout for office hours and off hours.

- **Office Hour:** specify the start time and end time of the day's office hour. You can change the office hours to avoid affecting your work.
- **Idle Timeout:** specify the period of time before the IP phone enters the power-saving mode.

You can specify the following three types of idle timeout:

- **Office Hours Idle TimeOut:** specify the idle timeout for office hours.
- **Off Hours Idle TimeOut:** specify the idle timeout for non-office hours.

- **User Input Extension Idle TimeOut:** specify the idle timeout that applies after you use the IP phone (for example, press a key on the phone or pick up/hang up the handset).

By default, the Office Hours Idle Timeout is much longer than the Off Hours Idle TimeOut. If you use the IP phone, the idle timeout that applies (User Input Extension Idle Timeout or Office Hours/Off Hours Idle TimeOut) is the timeout with the highest value.

If the phone has an incoming call or new message, the User Input Extension Idle TimeOut is ignored.

**Tip:** You can choose to set a higher User Input Extension Idle TimeOut than the Office Hours Idle TimeOut and Off Hours Idle TimeOut so that the phone does not enter the power-saving mode too often after you use the phone.

The following table lists the parameters you can use to configure power saving.

<b>Parameter</b>	features.power_saving.intelligent_mode	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the power saving intelligent mode.	
<b>Permitted Values</b>	<p>0-Disabled, the phone stays in power-saving mode even if the office hour arrives the next day.</p> <p>1-Enabled, the phone automatically identifies the office hour and lights up the screen once the office hour arrives the next day.</p> <p>2-Enabled, the phone automatically identifies the office hour and lights up the screen once the office hour arrives the next day. And it is not affected by the phone's autoP behavior or Notify notifications.</p>	
<b>Default</b>	1	
<b>Supported Devices</b>	All phones except T30P/T30/T19(P) E2	
<b>Parameter</b>	features.power_saving.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the power saving feature.	
<b>Permitted Values</b>	<p>0-Disabled, the phone automatically enters the power-saving mode to protect the screen when the phone is inactive for 72 hours. That is, the color screen phones will turn off the backlight and screen, and the black-and-white screen phones will only turn off the backlight. Image persistence may be caused by LCD.</p> <p>1-Enabled</p>	
<b>Default</b>	1	
<b>Supported Devices</b>	All phones except T30P/T30/T19(P) E2/CP925/CP935W	
<b>Web UI</b>	Settings > Power Saving > Power Saving	
<b>Parameter</b>	features.power_saving.office_hour.idle_timeout	<y0000000000xx>.cfg
<b>Description</b>	It configures the time (in minutes) to wait in the idle state before the phone enters power-saving mode during the office hours.	
<b>Permitted Values</b>	Integer from 1 to 960	
<b>Default</b>	30	
<b>Supported Devices</b>	All phones except T30P/T30/T19(P) E2	
<b>Web UI</b>	Settings > Power Saving > Office Hour Idle TimeOut	
<b>Parameter</b>	features.power_saving.off_hour.idle_timeout	<y0000000000xx>.cfg
<b>Description</b>	It configures the time (in minutes) to wait in the idle state before phone enters power-saving mode during the non-office hours.	
<b>Permitted</b>	Integer from 1 to 10	


<b>Values</b>	
<b>Default</b>	5
<b>Supported Devices</b>	All phones except T30P/T30/T19(P) E2
<b>Web UI</b>	Settings > Power Saving > Off Hour Idle TimeOut
<b>Parameter</b>	features.power_saving.user_input_ext.idle_timeout <y0000000000xx>.cfg
<b>Description</b>	It configures the minimum time (in minutes) to wait in the idle state - after using the phone - before the phone enters the power-saving mode.
<b>Permitted Values</b>	Integer from 1 to 30
<b>Default</b>	10
<b>Supported Devices</b>	All phones except T30P/T30/T19(P) E2
<b>Web UI</b>	Settings > Power Saving > User Input Extension Idle TimeOut
<b>Parameter</b>	features.power_saving.office_hour.monday features.power_saving.office_hour.tuesday features.power_saving.office_hour.wednesday features.power_saving.office_hour.thursday features.power_saving.office_hour.friday features.power_saving.office_hour.saturday features.power_saving.office_hour.sunday <y0000000000xx>.cfg
<b>Description</b>	It configures the start time and end time of the day's office hour. Start time and end time are separated by a comma. <b>Example:</b> features.power_saving.office_hour.monday = 7,19
<b>Permitted Values</b>	Integer from 0 to 23, Integer from 0 to 23
<b>Default</b>	7,19 - for Monday, Tuesday, Wednesday, Thursday, Friday. 7,7 - for Saturday, Sunday.
<b>Supported Devices</b>	All phones except T30P/T30/T19(P) E2
<b>Web UI</b>	Settings > Power Saving > Monday/Tuesday/Wednesday/Thursday/Friday/Saturday/Sunday
<b>Parameter</b>	features.power_saving.power_led_flash.on_time <y0000000000xx>.cfg
<b>Description</b>	It configures the period of time (in milliseconds) when the power LED indicator is on in the power-saving mode. If it is set to 0 and "features.power_saving.power_led_flash.off_time" is not set to 0, the power LED indicator will be off when the phone enters the power-saving mode.
<b>Permitted Values</b>	0, Integer from 100 to 10000
<b>Default</b>	500
<b>Supported Devices</b>	All color screen phones (except T33P/T33G/CP925/CP935W)

<b>Web UI</b>	Features > Power LED > Power Saving Light Time	
<b>Parameter</b>	features.power_saving.power_led_flash.off_time	<y0000000000xx>.cfg
<b>Description</b>	It configures the period of time (in milliseconds) when the power LED indicator is off in the power-saving mode. If it is set to 0, the power LED indicator will be on when the phone enters the power-saving mode.	
<b>Permitted Values</b>	0, Integer from 100 to 10000	
<b>Default</b>	3000	
<b>Supported Devices</b>	All color screen phones (except T33P/T33G/CP925/CP935W)	
<b>Web UI</b>	Features > Power LED > Power Saving Dark Time	

## Search Source List in Dialing

The search source list in dialing allows you to search entries from the source list when the phone is on the pre-dialing/dialing screen. You can select the desired entry to dial out quickly.

The following shows search results displayed on T46S/G phones:

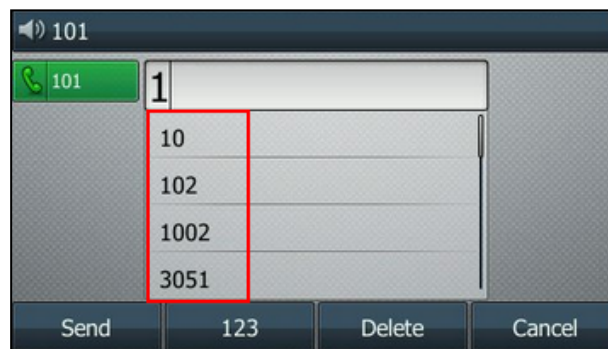

The search source list can be configured using a supplied super search template file (super\_search.xml).

### Topics

[Search Source File Customization](#)

[Search Source List Configuration](#)

## Search Source File Customization

You can ask the distributor or Yealink FAE for super search template. You can also obtain the super search template online: <http://support.yealink.com/documentFront/forwardToDocumentFrontDisplayPage>.

### Topics

[Search Source File Attributes](#)

[Customizing Search Source File](#)

## Search Source File Attributes

The following table lists the attributes you can use to add source lists to the super search file:

Attributes	Valid Values	Description
id_name	local_directory_search callog_search	The directory list (For example, "local_directory_search" for the local directory list). <b>Note:</b> Do not edit this field.

Attributes	Valid Values	Description
	remote_directory_search ldap_search BroadSoft_directory_search BroadSoft_UC_search plcm_directory_search genband_directory_search MetaSwitch_directory_search MetaSwitch_callog_search mobile_directory_search google_directory_search	
display_name	Local Contacts History Remote Phonebook LDAP Network Directories BroadSoft Buddies PhoneBook Personal Address Book Network Contacts Network Call List Mobile Contacts Google Contacts	The display name of the directory list. <b>Note:</b> We recommend that you do not edit this field.
priority	1 to 12 1 is the highest priority.	The priority of the search results.
enable	0/1 <b>0:</b> Disabled <b>1:</b> Enabled.	Enable or disable the phone to search the desired directory list.
dev	T19 T21 T23 T40 T40G T27 T27G T29 T41 T42 T42S T41S T46 T46S T48 T48S CP920 T54W T53W T53 T53C T57W T48U T46U T43U T42U T29 T46 T46S T48 T48S T54W T53W T53 T53C T57W T48U T46U T43U T42U T29 T46 T46S T48 T48S T42S T41S T27G CP920 T54W T53W T53 T53C T57W T48U T46U T43U T42U	The applicable phone models of the directory list. <b>Note:</b> Do not edit this field.

## Customizing Search Source File

1. Open the search source file.
2. To configure each directory list, edit the values within double quotes in the corresponding field.  
For example, enable the local directory search, disable the call log search and specify a priority.  

```
<item id_name="local_directory_search" display_name="Local Contacts" priority="1" enable="1" />
<item id_name="calllog_search" display_name="History" priority="2" enable="0" />
```
3. Save the change and place this file to the provisioning server.

## Search Source List Configuration

The following table lists the parameters you can use to configure the search source list.

<b>Parameter</b>	super_search.url	<y0000000000xx>.cfg
<b>Description</b>	It configures the access URL of the custom super search file.	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Directory > Settings > Search Source List In Dialing	
<b>Parameter</b>	search_in_dialing.local_directory.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to automatically search entries from the local directory, and display results on the pre-dialing/dialing screen.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Web UI</b>	Directory > Settings > Search Source List In Dialing	
<b>Parameter</b>	search_in_dialing.local_directory.priority	<y0000000000xx>.cfg
<b>Description</b>	It configures the search priority of the local directory.	
<b>Permitted Values</b>	Integer greater than or equal to 0	
<b>Default</b>	1	
<b>Web UI</b>	Directory > Settings > Search Source List In Dialing	
<b>Parameter</b>	search_in_dialing.history.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to automatically search entries from the call history list, and display results on the pre-dialing/dialing screen.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Web UI</b>	Directory > Settings > Search Source List In Dialing	
<b>Parameter</b>	search_in_dialing.history.priority	<y0000000000xx>.cfg
<b>Description</b>	It configures the search priority of the call history list.	




<b>Permitted Values</b>	Integer greater than or equal to 0	
<b>Default</b>	2	
<b>Web UI</b>	Directory > Settings > Search Source List In Dialing	
<b>Parameter</b>	search_in_dialing.remote_phone_book.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to automatically search entries from the remote phone book, and display results on the pre-dialing/dialing screen.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Directory > Settings > Search Source List In Dialing	
<b>Parameter</b>	search_in_dialing.remote_phone_book.priority	<y0000000000xx>.cfg
<b>Description</b>	It configures the search priority of the remote phone book.	
<b>Permitted Values</b>	Integer greater than or equal to 0	
<b>Default</b>	3	
<b>Web UI</b>	Directory > Settings > Search Source List In Dialing	
<b>Parameter</b>	search_in_dialing.ldap.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to automatically search entries from the LDAP, and display results on the pre-dialing/dialing screen.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Directory > Settings > Search Source List In Dialing	
<b>Parameter</b>	search_in_dialing.ldap.priority	<y0000000000xx>.cfg
<b>Description</b>	It configures the search priority of the LDAP.	
<b>Permitted Values</b>	Integer greater than or equal to 0	
<b>Default</b>	4	
<b>Web UI</b>	Directory > Settings > Search Source List In Dialing	

## Recent Call Display in Dialing

Recent call display allows you to view the placed calls list when the phone is on the dialing screen (lifts the handset, presses the Speakerphone key or desired line key). You can select to place a call from the placed calls list.

The following shows the recent calls displayed on T46S/G phones:

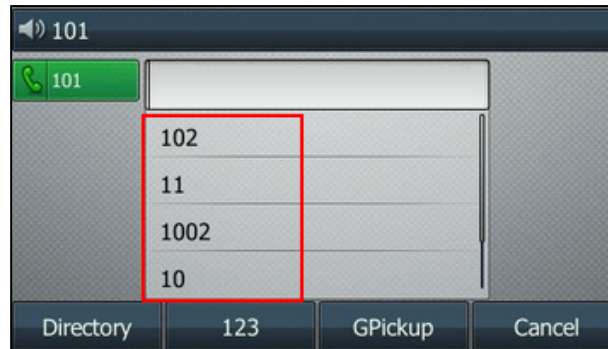

**Topic**

[Recent Call in Dialing Configuration](#)

## Recent Call in Dialing Configuration

The following table lists the parameter you can use to configure the recent call display in dialing.

<b>Parameter</b>	super_search.recent_call	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables Recent Call in Dialing feature.	
<b>Permitted Values</b>	0-Disabled 1-Enabled, users can view the placed calls list when the phone is on the dialing screen.	
<b>Default</b>	1	
<b>Web UI</b>	Directory > Settings > Recent Call In Dialing	

## Icon Customization

You can upload custom DSS keys icons and menu icons to the phone. Contact Yealink FAE to obtain the Icon Templates Pack. Make sure that the name, size, and format of new icons are the same as the built-in ones.

It is only applicable to T57W/T54W/T53C/T48U/T48S/T46U/T46S phones.

**Topic**

[Custom Icons Configuration](#)

## Custom Icons Configuration

The following table lists the parameters you can use to configure custom icons.

<b>Parameter</b>	phone_setting.icon.url <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the access URL of the *.tar file for custom icons.	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53C, T48U, T48S, T46U, T46S	
<b>Parameter</b>	phone_setting.icon.delete <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It deletes all custom icons.	
<b>Permitted</b>	http://localhost/all	

<b>Values</b>	
<b>Default</b>	Blank
<b>Supported Devices</b>	T57W, T54W, T53C, T48U, T48S, T46U, T46S

[1]If you change this parameter, the phone will reboot to make the change take effect.

## Warnings Display

When one of the following situations occurs:

- The default password is being used
- Account registration failed
- Provisioning credentials are wrong
- Network is unavailable
- Line on redundancy registration

On the T42S/T42U/T41S phones, a warning message appears on the idle screen.

On the other phones, a warning icon appears in the status bar.

### Topic

[Warnings Display Configuration](#)

## Warnings Display Configuration

The following table lists the parameter you can use to configure the warnings display.

<b>Parameter</b>	phone_setting.warnings_display.mode	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to display warnings.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P and T29G	

## Out of Service

When the network of the phone is disconnected and the warning message appears on the screen, the phone will play an alert tone.

### Topic

[Out of Service Configuration](#)

## Out of Service Configuration

The following table lists the parameter you can use to configure out of service.

<b>Parameter</b>	features.out_of_service_alert.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to play an alert tone when out of service caused by network abnormality. <b>Note:</b> You can customize the alert tone by the parameter "voice.tone.congestion".	
<b>Permitted</b>	0-Disabled	

<b>Values</b>	1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T48S, T46S, T42S, T41S, T33P, T33G, T31P, T31G, T31, T30P, T30, T27G, CP920, CP925, CP935W	
<b>Parameter</b>	features.out_of_service_alert_time	<y0000000000xx>.cfg
<b>Description</b>	It configures the time (in seconds) to wait before the phone plays an alert tone after the network is abnormal. <b>Note:</b> It works only if "features.out_of_service_alert.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	Integer from 0 to 3600	
<b>Default</b>	60	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T48S, T46S, T42S, T41S, T33P, T33G, T31P, T31G, T31, T30P, T30, T27G, CP920, CP925, CP935W	

## Analog Headset Mode

You can manually configure audio solutions for Yealink RJ headsets.

### Topic

[Analog Headset Mode Configuration](#)

## Analog Headset Mode Configuration

The following table lists the parameters you can use to configure analog headset mode.

<b>Parameter</b>	features.analog_headset.mode	<y0000000000xx>.cfg
<b>Description</b>	It sets the audio parameter mode of the analog headset.	
<b>Permitted Values</b>	Common, YHS36, YHS34, YHS33	
<b>Default</b>	Common	
<b>Supported Devices</b>	All phones except CP920/CP925/CP935W	
<b>Web UI</b>	Settings > Voice > Analog Headset Mode	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Basic > Analog Headset Mode <u>Black-and-white Screen Phones:</u> Menu > Settings > Basic Settings > Analog Headset Mode	

## Account Settings

This chapter shows you how to register accounts and configure account settings on Yealink devices.

### Topics

[Account Registration](#)  
[Outbound Proxy in Dialog](#)  
[Server Redundancy](#)  
[SIP Server Name Resolution](#)  
[Static DNS Cache](#)  
[Logon Wizard](#)  
[Multiple Line Keys per Account](#)

## Account Registration

Registering an account makes it easier for the phones to receive an incoming call or dial an outgoing call. Yealink phone supports registering multiple accounts on a phone (T30P/T30/T19(P) E2 phones only support registering one SIP account; CP920 phones support one SIP/cloud account or two PSTN accounts, CP925 phones support one SIP account or two PSTN accounts), each account requires an extension or phone number.

### Topics

[Supported Accounts](#)  
[SIP Accounts Registration Configuration](#)  
[PSTN Account Configuration](#)  
[Registration Settings Configuration](#)

## Supported Accounts

The number of registered accounts must meet the following:

Phone Model	Accounts
T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G	<=16 <=2 (PSTN account)
T53W/T53/T53C/T43U/T42U/T42S/T42G	<=12 <=2 (PSTN account)
T41P/T41S/T27G	<=6
T33P/T33G	<=4
T40P/T40G/T23P/T23G	<=3
T31P/T31G/T31/T21(P) E2	<=2
T30P/T30/T19(P) E2	1
CP920	1 (SIP/Cloud account) <=2 (PSTN account)
CP925	1 (SIP account) <=2 (PSTN account)

## SIP Accounts Registration Configuration

The following table lists the parameters you can use to register SIP accounts.

Parameter	account.X.enable <sup>[1]</sup>	<MAC>.cfg
-----------	---------------------------------	-----------

<b>Description</b>	It defines the activation status of the account.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Account > Register > Line Active	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Advanced (default password: admin) > Accounts > Account X > Activation <u>CP925/CP935W:</u> More > Advanced (default password: admin) > Accounts > Account X > Active Line <u>Black-and-white Screen Phones:</u> Menu > Settings > Advanced Settings (default password: admin) > Accounts > Activation	
<b>Parameter</b>	account.X.label <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the display label of the account.	
<b>Permitted Values</b>	String within 99 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Account > Register > Label	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Advanced (default password: admin) > Accounts > Account X > Label <u>CP925/CP935W:</u> More > Advanced (default password: admin) > Accounts > Account X > Label <u>Black-and-white Screen Phones:</u> Menu > Settings > Advanced Settings (default password: admin) > Accounts > Label	
<b>Parameter</b>	account.X.display_name <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the display name of the account.	
<b>Permitted Values</b>	String within 99 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Account > Register > Display Name	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Advanced (default password: admin) > Accounts > Account X > Display Name <u>CP925/CP935W:</u> More > Advanced (default password: admin) > Accounts > Account X > Display Name <u>Black-and-white Screen Phones:</u> Menu > Settings > Advanced Settings (default password: admin) > Accounts > Display Name	
<b>Parameter</b>	account.X.auth_name <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the user name for authentication registration.	

<b>Permitted Values</b>	String within 99 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Account > Register > Register Name	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Advanced (default password: admin) > Accounts > Account X > Register Name <u>CP925/CP935W:</u> More > Advanced (default password: admin) > Accounts > Account X > Register Name <u>Black-and-white Screen Phones:</u> Menu > Settings > Advanced Settings (default password: admin) > Accounts > Register Name	
<b>Parameter</b>	account.X.user_name <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the user name of the account.	
<b>Permitted Values</b>	String within 99 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Account > Register > Username	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Advanced (default password: admin) > Accounts > Account X > User Name <u>CP925/CP935W:</u> More > Advanced (default password: admin) > Accounts > Account X > Username <u>Black-and-white Screen Phones:</u> Menu > Settings > Advanced Settings (default password: admin) > Accounts > User Name	
<b>Parameter</b>	account.X.password <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures password of the account.	
<b>Permitted Values</b>	String within 99 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Account > Register > Password	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Advanced (default password: admin) > Accounts > Account X > Password <u>CP925/CP935W:</u> More > Advanced (default password: admin) > Accounts > Account X > Password <u>Black-and-white Screen Phones:</u> Menu > Settings > Advanced Settings (default password: admin) > Accounts > Password	
<b>Parameter</b>	account.X.sip_server.Y.address <sup>[1][2]</sup>	<MAC>.cfg
<b>Description</b>	It configures the IP address or domain name of the SIP server in which the account is registered.	
<b>Permitted Values</b>	String within 256 characters	

<b>Default</b>	Blank	
<b>Web UI</b>	Account > Register > SIP Server Y > Server Host	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Advanced (default password: admin) > Accounts > Account X > SIP ServerY	
	<u>CP925/CP935W:</u> More > Advanced (default password: admin) > Accounts > Account X > SIP ServerY	
	<u>Black-and-white Screen Phones:</u> Menu > Settings > Advanced Settings (default password: admin) > Accounts > SIP ServerY	
<b>Parameter</b>	account.X.sip_server.Y.port <sup>[1][2]</sup>	<MAC>.cfg
<b>Description</b>	It configures the port of SIP server. If it is set to 0 when UDP is used ("account.X.sip_server.Y.transport_type" is set to 0), the phone uses a random port for responding to the messages from the server.	
<b>Permitted Values</b>	Integer from 0 to 65535	
<b>Default</b>	5060	
<b>Web UI</b>	Account > Register > SIP Server Y > Port	
<b>Parameter</b>	account.X.outbound_proxy_enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the phone to send requests to the outbound proxy server.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Account > Register > Enable Outbound Proxy Server	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Advanced (default password: admin) > Accounts > Outbound Status	
	<u>CP925/CP935W:</u> More > Advanced (default password: admin) > Accounts > Outbound Status	
	<u>Black-and-white Screen Phones:</u> Menu > Settings > Advanced Settings (default password: admin) > Accounts > Outbound Status	
<b>Parameter</b>	account.X.outbound_proxy.Y.address <sup>[1][2]</sup>	<MAC>.cfg
<b>Description</b>	It configures the IP address or domain name of the outbound proxy server. <b>Note:</b> It works only if "account.X.outbound_proxy_enable" is set to 1 (Enabled). To use an outbound proxy server address, "account.X.sip_server.Y.outbound_proxy_enable" should be set to 1 (Enabled).	
<b>Permitted Values</b>	String within 256 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Account > Register > Outbound Proxy Server Y	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Advanced (default password: admin) > Accounts > Account X > Outbound ProxyY	



	CP925/CP935W: More > Advanced (default password: admin) > Accounts > Account X > Outbound ProxyY Black-and-white Screen Phones: Menu > Settings > Advanced Settings (default password: admin) > Accounts > Outbound ProxyY	
<b>Parameter</b>	account.X.outbound_proxy.Y.port <sup>[1][2]</sup>	<MAC>.cfg
<b>Description</b>	It configures the port of the outbound proxy server. <b>Note:</b> It works only if "account.X.outbound_proxy_enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	Integer from 0 to 65535	
<b>Default</b>	5060	
<b>Web UI</b>	Account > Register > Outbound Proxy Server Y > Port	
<b>Parameter</b>	account.X.reg_fail_retry_interval <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the re-registration period (in seconds) after the account registration fails. <b>Note:</b> It works only if "account.X.reg_failed_retry_min_time" and "account.X.reg_failed_retry_max_time" are set to 0.	
<b>Permitted Values</b>	Integer from 0 to 1800	
<b>Default</b>	30	
<b>Web UI</b>	Account > Advanced > SIP Registration Retry Timer (0~1800s)	
<b>Parameter</b>	account.X.reg_failed_retry_min_time <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the base time to wait (in seconds) for the phone to retry to re-register after the account registration fails. <b>Note:</b> It is used in conjunction with the parameter "account.X.reg_failed_retry_max_time" to determine how long to wait. The algorithm is defined in RFC 5626. We recommend that you set this value to an integer between 10 to 120 if needed. If the values of this parameter and the parameter "account.X.reg_failed_retry_max_time" are set to 0, the interval configured by "account.X.reg_fail_retry_interval" will be used.	
<b>Permitted Values</b>	Integer greater than or equal to 0	
<b>Default</b>	0	
<b>Parameter</b>	account.X.reg_failed_retry_max_time <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the maximum time to wait (in seconds) for the phone to retry to re-register after the account registration fails. <b>Note:</b> It is used in conjunction with the parameter "account.X.reg_failed_retry_min_time" to determine how long to wait. The algorithm is defined in RFC 5626. We recommend that you set this value to an integer between 60 to 1800 if needed. If the values of this parameter and the parameter "account.X.reg_failed_retry_min_time" are set to 0, the interval configured by "account.X.reg_fail_retry_interval" will be used.	
<b>Permitted Values</b>	Integer greater than or equal to 0	
<b>Default</b>	60	

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

[2]Y is the server ID. For T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/T33P/T33G/T31P/T31G/T31/T30P/T30, Y=1-3; for other phones, Y=1-2.

## PSTN Account Configuration

The following table lists the parameters you can use to register the PSTN account. It is not applicable to CP935W phones.

<b>Parameter</b>	pstn.account.X.enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the PSTN account X.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Supported Devices</b>	CP925, CP920, T57W, T54W, T53W, T53, T53C	
<b>Web UI</b>	PSTN Account > Register > Line Active	
<b>Phone UI</b>	<u>Black-and-white Screen Phones:</u> Menu > Settings > Advanced Settings (default password: admin) > Accounts > Active Line  <u>Color Screen Phones:</u> Menu > Advanced (default password: admin) > Accounts > Active Line  <u>CP925:</u> More > Advanced (default password: admin) > Accounts > Active Line	
<b>Parameter</b>	pstn.account.X.label <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	(Optional.) It configures the label to be displayed on the LCD screen for PSTN account X.	
<b>Permitted Values</b>	String within 99 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	CP925, CP920, T57W, T54W, T53W, T53, T53C	
<b>Web UI</b>	PSTN Account > Register > Label	
<b>Phone UI</b>	<u>Black-and-white Screen Phones:</u> Menu > Settings > Advanced Settings (default password: admin) > Accounts > Label  <u>Color Screen Phones:</u> Menu > Advanced (default password: admin) > Accounts > Label  <u>CP925:</u> More > Advanced (default password: admin) > Accounts > Label	

[1]X is the PSTN account ID. X= 1 to 2.

## Registration Settings Configuration

The following table lists the parameters you can use to change the registration settings.

<b>Parameter</b>	account.X.enable_user_equal_phone <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the phone to add "user=phone" to the SIP header of the INVITE message.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Account > Advanced > Send user=phone	
<b>Parameter</b>	account.X.register_mac <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the phone to add MAC address to the SIP header of the REGISTER message.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Account > Advanced > SIP Send MAC	
<b>Parameter</b>	account.X.register_line <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	<p>It enables or disables the phone to add a line number to the SIP header of the REGISTER message.</p> <p>For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G: 0~15 stand for line1~line16;  For T53W/T53/T53C/T43U/T42U/T42S/T42G: 0~11 stand for line1~line12;  For T41P/T41S/T27G: 0~5 stand for line1~line6;  For T33P/T33G: 0~3 stand for line1~line4;  For T40P/T40G/T23P/T23G: 0~2 stand for line1~line3;  For T31P/T31G/T31/T21(P) E2: 0~1 stand for line1~line2;  For T30P/T30/T19(P) E2/CP920/CP925/CP935W: 0 stands for line1.</p>	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Account > Advanced > SIP Send Line	
<b>Parameter</b>	account.X.contact_take_line_param <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the phone to carry the line parameter in the Contact header of the Register message.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	account.X.unregister_on_reboot <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the phone to unregister first before re-registering account X after a reboot.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	

<b>Default</b>	0	
<b>Web UI</b>	Account > Advanced > Unregister When Reboot	
<b>Parameter</b>	account.X.sip_server_type <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the type of SIP server.	
<b>Permitted Values</b>	0-Default 2-BroadSoft (It works only if "bw.enable" is set to 1 (Enabled)) 8-Genesys 10-Genesys Advanced 12-Star2Star	
<b>Default</b>	0	
<b>Web UI</b>	Account > Advanced > SIP Server Type	
<b>Parameter</b>	account.X.gruu.enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the Globally Routable User Agent URI (GRUU) feature. GRUU provides a unique user-agent identifier to a specific user-agent (UA) instance. It is required in which the REFER request must be routed to the correct UA instance, for example, a call transfer.	
<b>Permitted Values</b>	0-Disabled 1-Enabled, the phone will add +sip.instance attribute with the public GRUU to the Contact header of the REGISTER message. For example: Contact: <sip:1012@10.2.20.160:5060>;+sip.instance="<urn:uuid:5acd54e8-f197-57e2-aa42-5f4a5d04367c>"	
<b>Default</b>	0	
<b>Parameter</b>	sip.reg_surge_prevention	<y0000000000xx>.cfg
<b>Description</b>	It configures the waiting time (in seconds) for account register after startup.	
<b>Permitted Values</b>	Integer from 0 to 60	
<b>Default</b>	0	
<b>Web UI</b>	Network > Advanced > Registration Random > Random Registration (0~60s)	
<b>Parameter</b>	account.X.subscribe_register <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the phone to subscribe to the registration state change notifications.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Account > Advanced > Subscribe Register	
<b>Parameter</b>	phone_setting.disable_account_without_username.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to disable the account whose username is empty.	
<b>Permitted</b>	0-Disabled	

<b>Values</b>	1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	account.X.register_expires_overlap <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the renewal time (in seconds) away from the registration lease.	
<b>Permitted Values</b>	Positive integer and -1	
<b>Default</b>	-1	
<b>Parameter</b>	account.X.subscribe_expires_overlap <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the renewal time (in seconds) away from the subscription lease.	
<b>Permitted Values</b>	Positive integer and -1	
<b>Default</b>	-1	

<sup>[1]</sup>X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## Outbound Proxy in Dialog

An outbound proxy server can receive all initiating request messages and route them to the designated destination. If the device is configured to use an outbound proxy server within a dialog, all SIP request messages from the device will be sent to the outbound proxy server as a mandatory requirement.

**Note:** To use this feature, make sure the outbound server has been correctly configured on the device. For more information on how to configure the outbound server, refer to [Server Redundancy](#).

### Topic

[Outbound Proxy in Dialog Configuration](#)

## Outbound Proxy in Dialog Configuration

The following table lists the parameter you can use to configure the outbound proxy in dialog.

<b>Parameter</b>	sip.use_out_bound_in_dialog	<y000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to send all SIP requests to the outbound proxy server mandatorily in a dialog. <b>Note:</b> It works only if “account.X.outbound_proxy_enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled, only the new SIP request messages from the phone will be sent to the outbound proxy server in a dialog. 1-Enabled, all the SIP request messages from the phone will be sent to the outbound proxy server in a dialog.	
<b>Default</b>	0	
<b>Web UI</b>	Features > General Information > Use Outbound Proxy In Dialog	

## Server Redundancy

Server redundancy is often required in VoIP deployments to ensure continuity of phone service, for example, take the call server offline for maintenance, the server fails, or the connection between the device and the server fails.


Two types of redundancy are possible. In some cases, a combination of the two may be deployed:

- **Failover:** In this mode, the full phone system functionality is preserved by having a second equivalent capability call server take over from the one that has gone down/off-line. This mode of operation should be done using the DNS mechanism from the primary to the secondary server. Therefore, if you want to use this mode, the server must be configured with a domain name.
- **Fallback:** In this mode, a second less featured call server with SIP capability takes over call control to provide the basic calling capability, but without some advanced features (for example, shared line and MWI) offered by the working server. The phones support configuration of two servers per SIP registration for the fallback purpose.

**Note:** For concurrent registration mode, it has a certain limitation when using some advanced features, and for successive registration mode, the phone service may have a brief interrupt while the server fails. So we recommend that you use the fail-over mode for server redundancy because this mode can ensure the continuity of the phone service and you can use all the call features while the server fails.

### Phone Configuration for Redundancy Implementation

To assist in explaining the redundancy behavior, an illustrative example of how an IP phone may be configured is shown below. In the example, server redundancy for fallback and failover purposes is deployed. Two separate servers (a working server and a fallback server) are configured for per line registration.

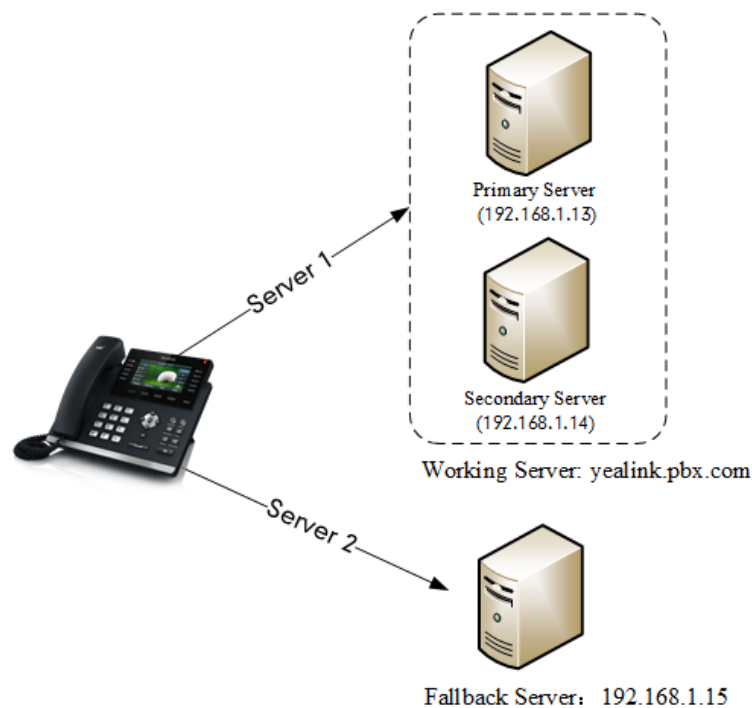

- **Working Server:** Server 1 is configured with the domain name of the working server. For example `yealink.pbx.com`. DNS mechanism is used such that the working server is resolved to multiple servers with different IP addresses for failover purpose. The working server is deployed in redundant pairs, designated as primary and secondary servers. The primary server (for example, 192.168.1.13) has the highest priority server in a cluster of servers resolved by the DNS server. The secondary server (for example, 192.168.1.14) backs up a primary server when the primary server fails and offers the same functionality as the primary server.
- **Fallback Server:** Server 2 is configured with the IP address of the fallback server. For example 192.168.1.15. A fallback server offers less functionality than the working server.

Yealink devices support Failover and Fallback server redundancy types. In some cases, you can deploy a combination of the two server redundancy types. For more information on server redundancy, refer to [Server Redundancy on Yealink IP Phones](#).

## Topics

[Behaviors When Working Server Connection Fails](#)  
[Registration Method of the Failover/Fallback Mode](#)  
[Fallback Server Redundancy Configuration](#)  
[Failover Server Redundancy Configuration](#)

## Behaviors When Working Server Connection Fails

### For Outgoing Call

When you initiate a call, the phone will go through the following steps to connect the call:

1. Sends the INVITE request to the primary server.
2. If the primary server does not respond correctly to the INVITE (that is, the primary server responds to the INVITE with 503 message or the request for responding with 100 Trying message times out (64\*T1 seconds, defined in [RFC 3261](#))), then tries to make the call using the secondary server.
3. If the secondary server is also unavailable, the phone will try the fallback server until it either succeeds in making a call or exhausts all servers at which point the call will fail.

At the start of a call, server availability is determined by SIP signaling failure. SIP signaling failure depends on the SIP protocol being used as described below:

- If TCP is used, then the signaling fails if the connection or the send fails.
- If UDP is used, then the signaling fails if ICMP is detected or if the signal times out. If the signaling has been attempted through all servers in the list (this list contains all the server addresses resolved by the DNS server) and this is the last server, then the signaling fails after the complete UDP timeout defined in [RFC 3261](#). If it is not the last server in the list, the maximum number of retries depends on the configured retry counts (configured by the parameter “account.X.sip\_server.Y.retry\_counts”).

## Registration Method of the Failover/Fallback Mode

### Registration method of the failover mode:

The IP phone must always register to the primary server first except in failover conditions. If this is unsuccessful, the phone will re-register as many times as configured until the registration is successful. When the primary server registration is unavailable, the secondary server will serve as the working server. As soon as the primary server registration succeeds, it returns to be the working server.

Registration methods of the fallback mode include (not applicable to outbound proxy servers):

- **Concurrent registration (default):** The IP phone registers to SIP server 1 and SIP server 2 (working server and fallback server) at the same time. Note that although the IP phone registers to two SIP servers, only one server works at the same time. If it fails, a fallback server can take over the basic calling capability, but without some advanced features (for example, shared lines and MWI) offered by the working server.
- **Successive registration:** The IP phone only registers to one server at a time. The IP phone first registers to the working server. In a failure situation, the phone registers to the fallback server, and the fallback server can take over all calling capabilities.

## Fallback Server Redundancy Configuration

The following table lists the parameters you can use to configure fallback server redundancy.

<b>Parameter</b>	account.X.fallback.redundancy_type <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the registration mode in fallback mode. <b>Note:</b> It is not applicable to outbound proxy servers.	
<b>Permitted</b>	0-Concurrent registration	

<b>Values</b>	1-Successive registration	
<b>Default</b>	0	
<b>Parameter</b>	account.X.fallback.timeout <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the time interval (in seconds) for the phone to detect whether the working server is available by sending the registration request after the fallback server takes over call control. <b>Note:</b> It is not applicable to outbound proxy servers.	
<b>Permitted Values</b>	Integer from 10 to 2147483647	
<b>Default</b>	120	
<b>Parameter</b>	account.X.outbound_proxy_fallback_interval <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the time interval (in seconds) for the phone to detect whether the working outbound proxy server is available by sending the registration request after the fallback server takes over call control. <b>Note:</b> It is only applicable to outbound proxy servers.	
<b>Permitted Values</b>	Integer from 0 to 65535	
<b>Default</b>	3600	
<b>Web UI</b>	Account > Register > Proxy Fallback Interval	
<b>Phone UI</b>	<p><u>Color Screen Phones:</u> Menu &gt; Advanced (default password: admin) &gt; Accounts &gt; Account X &gt; Proxy Fallback Interval</p> <p><u>CP925/CP935W:</u> More &gt; Advanced (default password: admin) &gt; Accounts &gt; Account X &gt; Proxy Fallback Interval</p> <p><u>Black-and-white Screen Phones:</u> Menu &gt; Settings &gt; Advanced Settings &gt; Accounts &gt; Proxy Fallback Interval</p>	
<b>Parameter</b>	account.X.redundancy_with_reg_fail.enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the phone to send the request to the next server when failing to register an account. <b>Note:</b> It works only if "account.X.fallback.redundancy_type" is set to 1 (Successive registration).	
<b>Permitted Values</b>	0-Disabled. Only if the working server does not respond, will the IP phone send the request to the next server. 1-Enabled	
<b>Default</b>	0	

<sup>[1]</sup>X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## Failover Server Redundancy Configuration

The following table lists the parameters you can use to configure failover server redundancy.

<b>Parameter</b>	account.X.sip_server.Y.register_on_enable <sup>[1][2]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the phone to send registration requests to the secondary server when encountering a failover.	



<b>Permitted Values</b>	<p><b>0</b>-Disabled, the phone will not attempt to register to the secondary server, since the phone assumes that the primary and secondary servers share registration information. So the phone will directly send the requests to the secondary server.</p> <p><b>1</b>-Enabled, the phone will register to the secondary server first, and then send the requests to it.</p>	
<b>Default</b>	0	
<b>Parameter</b>	sip.skip_redundant_failover_addr	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone only to send requests to the servers with different IP addresses when encountering a failover.	
<b>Permitted Values</b>	<p><b>0</b>-Disabled</p> <p><b>1</b>-Enabled</p>	
<b>Default</b>	1	
<b>Parameter</b>	account.X.sip_server.Y.expires <sup>[1][2]</sup>	<MAC>.cfg
<b>Description</b>	It configures the registration expiration time (in seconds) of SIP server Y for a specific account.	
<b>Permitted Values</b>	Integer from 30 to 2147483647	
<b>Default</b>	3600	
<b>Web UI</b>	Account > Register > SIP Server Y > Server Expires	
<b>Parameter</b>	account.X.sip_server.Y.retry_counts <sup>[1][2]</sup>	<MAC>.cfg
<b>Description</b>	<p>It configures the retry times for the phone to resend requests when the SIP server Y is unavailable or there is no response from the SIP server Y.</p> <p>The phone moves to the next available server after three failed attempts.</p>	
<b>Permitted Values</b>	Integer from 0 to 20	
<b>Default</b>	3	
<b>Web UI</b>	Account > Register > SIP Server Y > Server Retry Counts	
<b>Parameter</b>	account.X.sip_server.Y.only_signal_with_registered <sup>[1][2]</sup>	<MAC>.cfg
<b>Description</b>	<p>It enables or disables the phone to only send requests to the registered server when encountering a failover.</p> <p><b>Note:</b> It works only if “account.X.sip_server.Y.register_on_enable” is set to 1 (Enabled) and “account.X.sip_server.Y.failback_mode” is set to 1, 2 or 3.</p>	
<b>Permitted Values</b>	<p><b>0</b>-Disabled</p> <p><b>1</b>-Enabled</p>	
<b>Default</b>	0	
<b>Parameter</b>	account.X.sip_server.Y.invite_retry_counts <sup>[1][2]</sup>	<MAC>.cfg
<b>Description</b>	It configures the number of retries attempted before sending requests to the next available server when encountering a failover.	
<b>Permitted Values</b>	Integer from 1 to 10	
<b>Default</b>	3	
<b>Parameter</b>	account.X.sip_server.Y.failback_mode <sup>[1][2]</sup>	<MAC>.cfg
<b>Description</b>	It configures the mode for the phone to retry the primary server in failover.	

	<b>Note:</b> It works only if "account.X.sip_server.Y.address" is set to the domain name of the SIP server.	
<b>Permitted Values</b>	<p><b>0</b>-newRequests: all requests are sent to the primary server first, regardless of the last server that was used.</p> <p><b>1</b>-DNSTTL: the phone will send requests to the last registered server first. If the time defined by DNSTTL on the registered server expires, the phone will retry to send requests to the primary server.</p> <p><b>2</b>-Registration: the phone will send requests to the last registered server first. If the registration expires, the phone will retry to send requests to the primary server.</p> <p><b>3</b>-duration: the phone will send requests to the last registered server first. If the time defined by the "account.X.sip_server.Y.failback_timeout" parameter expires, the phone will retry to send requests to the primary server.</p>	
<b>Default</b>	0	
<b>Parameter</b>	account.X.sip_server.Y.failback_timeout <sup>[1][2]</sup>	<MAC>.cfg
<b>Description</b>	<p>It configures the timeout (in seconds) for the phone to retry to send requests to the primary server after failing over to the current working server.</p> <p>If you set the parameter to 0, the phone will not send requests to the primary server until a failover event occurs with the current working server.</p> <p>If you set the parameter between 1 and 59, the timeout will be 60 seconds.</p> <p><b>Note:</b> It works only if "account.X.sip_server.Y.failback_mode" is set to 3 (duration).</p>	
<b>Permitted Values</b>	0, Integer from 60 to 65535	
<b>Default</b>	3600	
<b>Parameter</b>	account.X.sip_server.Y.failback_subscribe.enable <sup>[1][2]</sup>	<MAC>.cfg
<b>Description</b>	<p>It enables or disables the phone to retry to re-subscribe after registering to the secondary server with different IP addresses when encountering a failover.</p> <p><b>Note:</b> It works only if "account.X.sip_server.Y.failback_mode" is set to 1, 2 or 3.</p>	
<b>Permitted Values</b>	<p><b>0</b>-Disabled</p> <p><b>1</b>-Enabled, the phone will immediately re-subscribe to the secondary server, for ensuring the normal use of the features associated with the subscription (for example, BLF, SCA).</p>	
<b>Default</b>	0	
<b>Parameter</b>	account.X.outbound_proxy.Y.register_on_enable <sup>[1][2]</sup>	<MAC>.cfg
<b>Description</b>	<p>It enables or disables the phone to register to the secondary outbound proxy server before sending requests to it when encountering a failover.</p>	
<b>Permitted Values</b>	<p><b>0</b>-Disabled, the phone will not attempt to register to the secondary outbound proxy server, since the phone assumes that the primary and secondary outbound proxy servers share registration information. So the phone will directly send the requests to the secondary outbound proxy server.</p> <p><b>1</b>-Enabled, the phone will register to the secondary outbound proxy server first, and then send the requests to it.</p>	
<b>Default</b>	-1, the phone will invoke "account.X.sip_server.Y.register_on_enable" to take effect.	
<b>Parameter</b>	account.X.outbound_proxy.Y.retry_counts <sup>[1][2]</sup>	<MAC>.cfg
<b>Description</b>	<p>It configures the retry times for the phone to resend requests when the outbound proxy server Y is unavailable or there is no response from the outbound proxy server Y.</p> <p>The phone moves to the next available outbound proxy server after three failed attempts.</p>	
<b>Permitted</b>	Integer from 0 to 20	

<b>Values</b>	
<b>Default</b>	-1, the phone will invoke “account.X.sip_server.Y.retry_counts” to take effect.
<b>Parameter</b>	account.X.outbound_proxy.Y.only_signal_with_registered <sup>[1][2]</sup> <MAC>.cfg
<b>Description</b>	It enables or disables the phone to only send requests to the registered outbound proxy server when encountering a failover. <b>Note:</b> It works only if “account.X.outbound_proxy.Y.register_on_enable” is set to 1 (Enabled) and “account.X.outbound_proxy.Y.failback_mode” is set to 1, 2 or 3.
<b>Permitted Values</b>	0-Disabled 1-Enabled
<b>Default</b>	-1, the phone will invoke “account.X.sip_server.Y.only_signal_with_registered” to take effect.
<b>Parameter</b>	account.X.outbound_proxy.Y.invite_retry_counts <sup>[1][2]</sup> <MAC>.cfg
<b>Description</b>	It configures the number of retries attempted before sending requests to the next available outbound proxy server when encountering a failover.
<b>Permitted Values</b>	Integer from 1 to 10
<b>Default</b>	-1, the phone will invoke “account.X.sip_server.Y.invite_retry_counts” to take effect.
<b>Parameter</b>	account.X.outbound_proxy.Y.failback_mode <sup>[1][2]</sup> <MAC>.cfg
<b>Description</b>	It configures the failback mode for the phone to retry the primary outbound proxy server in failover. <b>Note:</b> DNSTTL, Registration and duration mode can only be processed when the IP phone is idle (that is, no incoming/outbound calls, no active calls or meetings, and so on).
<b>Permitted Values</b>	0-newRequests: all requests are sent to the primary outbound proxy server first, regardless of the last server that was used. If the primary outbound proxy server does not respond correctly, the phone will try to send requests to the secondary outbound proxy server.  1-DNSTTL: the phone will send requests to the last registered outbound proxy server first. If the TTL for the DNS A records on the registered outbound proxy server expires, the phone will retry to send requests to the primary outbound proxy server.  2-Registration: the phone will send requests to the last registered outbound proxy server first. If the registration expires, the phone will retry to send requests to the primary outbound proxy server.  3-duration: the phone will send requests to the last registered outbound proxy server first. If the time defined by the parameter “account.X.outbound_proxy.Y.failback_timeout” expires, the phone will retry to send requests to the primary outbound proxy server.
<b>Default</b>	-1, the phone will invoke “account.X.sip_server.Y.failback_mode” to take effect.
<b>Parameter</b>	account.X.outbound_proxy.Y.failback_timeout <sup>[1][2]</sup> <MAC>.cfg
<b>Description</b>	It configures the timeout (in seconds) for the phone to retry to send requests to the primary outbound proxy server after failing over to the current working server. If you set the parameter to 0, the phone will not send requests to the primary outbound proxy server until a failover event occurs with the current working server. <b>Note:</b> It works only if “account.X.outbound_proxy.Y.failback_mode” is set to 3 (duration).
<b>Permitted Values</b>	0, Integer from 60 to 65535
<b>Default</b>	-1, the phone will invoke “account.X.sip_server.Y.failback_timeout” to take effect.
<b>Parameter</b>	account.X.outbound_proxy.Y.failback_subscribe.enable <sup>[1][2]</sup> <MAC>.cfg
<b>Description</b>	It enables or disables the phone to retry to re-subscribe after registering to the secondary outbound

	proxy server with different IP addresses when encountering a failover. <b>Note:</b> It works only if "account.X.outbound_proxy.Y.failback_mode" is set to 1, 2 or 3.
<b>Permitted Values</b>	<b>0</b> -Disabled <b>1</b> -Enabled, the phone will immediately re-subscribe to the secondary outbound proxy server, for ensuring the normal use of the features associated with a subscription (for example, BLF, SCA).
<b>Default</b>	<b>-1</b> , the phone will invoke "account.X.sip_server.Y.failback_subscribe.enable" to take effect.
<b>Parameter</b>	account.X.sip_server.Y.outbound_proxy_enable <sup>[1][2]</sup> <MAC>.cfg
<b>Description</b>	It enables or disables the phone to use outbound proxy server address configured by "account.X.outbound_proxy.Y.address". <b>Note:</b> It works only if "account.X.outbound_proxy_enable" is set to 1 (Enabled).
<b>Permitted Values</b>	<b>0</b> -Disabled <b>1</b> -Enabled
<b>Default</b>	1

<sup>[1]</sup>X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

<sup>[2]</sup>Y is the server ID. For T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/T33P/T33G/T31P/T31G/T31/T30P/T30, Y=1-3; for other phones, Y=1-2.

## SIP Server Name Resolution

If a domain name is configured for a server, the IP address(es) associated with that domain name will be resolved through DNS as specified by [RFC 3263](#). The DNS query involves NAPTR, SRV and A queries, which allows the IP phone to adapt to various deployment environments. The IP phone performs NAPTR query for the NAPTR pointer and transport protocol (UDP, TCP, and TLS), the SRV query on the record returned from the NAPTR for the target domain name and the port number, and the A query for the IP addresses.

If an explicit port (except 0) is specified, A query will be performed only. If a server port is set to 0 and the transport type is set to DNS NAPTR, NAPTR and SRV queries will be tried before falling to A query. If no port is found through the DNS query, 5060 will be used.

### Topic

[SIP Server Name Resolution Configuration](#)

## SIP Server Name Resolution Configuration

The following table lists the parameters you can use to configure the SIP server name resolution.

<b>Parameter</b>	account.X.sip_server.Y.transport_type <sup>[1][2]</sup> <MAC>.cfg
<b>Description</b>	It configures the type of transport protocol.
<b>Permitted Values</b>	<b>0</b> -UDP <b>1</b> -TCP <b>2</b> -TLS <b>3</b> -DNS NAPTR, if no server port is given, the device performs the DNS NAPTR and SRV queries for the service type and port.

<b>Default</b>	0	
<b>Web UI</b>	Account > Register > SIP Server Y > Transport	
<b>Parameter</b>	account.X.naptr_build <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the way of SRV query for the phone to be performed when no result is returned from the NAPTR query.	
<b>Permitted Values</b>	0-SRV query using UDP only 1-SRV query using UDP, TCP, and TLS.	
<b>Default</b>	0	
<b>Parameter</b>	sip.dns_transport_type	<y0000000000xx>.cfg
<b>Description</b>	It configures the transport protocol the phone uses to perform a DNS query.	
<b>Permitted Values</b>	0-UDP 1-TCP	
<b>Default</b>	0	
<b>Parameter</b>	static.network.dns.query_timeout	<y0000000000xx>.cfg
<b>Description</b>	It configures the interval (in seconds) at which the phone retries to resolve a domain name when the DNS server does not respond.	
<b>Permitted Values</b>	Integer from 0 to 65535	
<b>Default</b>	3	
<b>Parameter</b>	static.network.dns.retry_times	<y0000000000xx>.cfg
<b>Description</b>	It configures the retry times when the DNS server does not respond.	
<b>Permitted Values</b>	Integer from 0 to 65535	
<b>Default</b>	2	

<sup>[1]</sup>X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

<sup>[2]</sup>Y is the server ID. For T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/T33P/T33G/T31P/T31G/T31/T30P/T30, Y=1-3; for other phones, Y=1-2.

## Static DNS Cache

Failover redundancy can only be utilized when the configured domain name of the server is resolved to multiple IP addresses. If the IP phone is not configured with a DNS server, or the DNS query returns no result from a DNS server, you can statically configure a set of DNS NAPTR/SRV/A records into the IP phone. The phone will attempt to resolve the domain name of the SIP server with static DNS cache.

Support for negative caching of DNS queries as described in [RFC 2308](#) is also provided to allow faster failover when prior DNS queries have returned no results from the DNS server.

### Topics

Behave with a Configured DNS Server  
Static DNS Cache Configuration

## Behave with a Configured DNS Server

When the phone is configured with a DNS server, it will behave as follows to resolve the domain name of the server:

- The phone performs a DNS query to resolve the domain name from the DNS server.
- If the DNS query returns no results for the domain name, or the returned record cannot be contacted, the values in the static DNS cache (if configured) are used when their configured time intervals are not elapsed.
- If the configured time interval is elapsed, the phone will attempt to perform a DNS query again.
- If the DNS query returns a result, the phone will use the returned record from the DNS server and ignore the statically configured cache values.

When the phone is not configured with a DNS server, it will behave as follows:

- The phone attempts to resolve the domain name within the static DNS cache.
- The phone will always use the results returned from the static DNS cache.

## Static DNS Cache Configuration

The following table lists the parameters you can use to configure static DNS cache.

<b>Parameter</b>	account.X.dns_cache_type <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures whether the phone uses the DNS cache for domain name resolution of the SIP server and caches the additional DNS records.	
<b>Permitted Values</b>	0-Perform real-time DNS query rather than using DNS cache. 1-Use DNS cache, but do not record the additional records. 2-Use DNS cache and cache the additional DNS records.	
<b>Default</b>	1	
<b>Parameter</b>	account.X.static_cache_pri <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures whether preferentially to use the static DNS cache for domain name resolution of the SIP server.	
<b>Permitted Values</b>	0-Use domain name resolution from server preferentially 1-Use static DNS cache preferentially	
<b>Default</b>	0	
<b>Parameter</b>	dns_cache_naptr.X.name <sup>[2]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the domain name to which NAPTR record X refers.	
<b>Permitted Values</b>	Domain name	
<b>Default</b>	Blank	
<b>Parameter</b>	dns_cache_naptr.X.order <sup>[2]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the order of NAPTR record X. NAPTR record with the lower order is more preferred.	
<b>Permitted Values</b>	Integer from 0 to 65535	
<b>Default</b>	0	
<b>Parameter</b>	dns_cache_naptr.X.preference <sup>[2]</sup>	<y0000000000xx>.cfg

<b>Description</b>	It configures the preference of NAPTR record X. NAPTR record with lower preference is more preferred.	
<b>Permitted Values</b>	Integer from 0 to 65535	
<b>Default</b>	0	
<b>Parameter</b>	dns_cache_naptr.X.replace <sup>[2]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures a domain name to be used for the next SRV query in NAPTR record X.	
<b>Permitted Values</b>	Domain name	
<b>Default</b>	Blank	
<b>Parameter</b>	dns_cache_naptr.X.service <sup>[2]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the transport protocol available for the SIP server in NAPTR record X.	
<b>Permitted Values</b>	<b>SIP+D2U</b> -SIP over UDP <b>SIP+D2T</b> -SIP over TCP <b>SIPS+D2T</b> -SIPS over TLS	
<b>Default</b>	Blank	
<b>Parameter</b>	dns_cache_srv.X.name <sup>[2]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the domain name in SRV record X.	
<b>Permitted Values</b>	Domain name	
<b>Default</b>	Blank	
<b>Parameter</b>	dns_cache_srv.X.port <sup>[2]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the port to be used in SRV record X.	
<b>Permitted Values</b>	Integer from 0 to 65535	
<b>Default</b>	0	
<b>Parameter</b>	dns_cache_srv.X.priority <sup>[2]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the priority for the target host in SRV record X. Lower priority is more preferred.	
<b>Permitted Values</b>	Integer from 0 to 65535	
<b>Default</b>	0	
<b>Parameter</b>	dns_cache_srv.X.target <sup>[2]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the domain name of the target host for an A query in SRV record X.	
<b>Permitted Values</b>	Domain name	
<b>Default</b>	Blank	
<b>Parameter</b>	dns_cache_srv.X.weight <sup>[2]</sup>	<y0000000000xx>.cfg

<b>Description</b>	It configures the weight of the target host in SRV record X. When priorities are equal, weight is used to differentiate the preference. Higher weight is more preferred.	
<b>Permitted Values</b>	Integer from 0 to 65535	
<b>Default</b>	0	
<b>Parameter</b>	dns_cache_a.X.name <sup>[2]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the domain name in A record X.	
<b>Permitted Values</b>	Domain name	
<b>Default</b>	Blank	
<b>Parameter</b>	dns_cache_a.X.ip <sup>[2]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the IP address that the domain name in A record X maps to.	
<b>Permitted Values</b>	IP address	
<b>Default</b>	Blank	
<b>Parameter</b>	static.network.dns.ttl_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to use TTL (Time To Live) in the A record.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Parameter</b>	static.network.dns.last_cache_expired	<y0000000000xx>.cfg
<b>Description</b>	It configures the validity period of the expired DNS cache. <b>Note:</b> It works only if "static.network.dns.last_cache_expired.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	Integer from 0 to 65535 0-the expired DNS cache can only be used once. After using, the phone will perform a DNS query again. 1 to 65535-the phone will use the expired DNS cache during the specified period. After that, the phone will perform a DNS query again.	
<b>Default</b>	3600	
<b>Parameter</b>	static.network.dns.last_cache_expired.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to use the DNS cache (even if the cache has expired) when the DNS server fails to resolve the domain name.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	static.network.dns_list.mode	<y0000000000xx>.cfg
<b>Description</b>	It configures the DNS query mode in the wired network.	
<b>Permitted Values</b>	0-If static DNS is configured, use static DNS. If not, use dynamic DNS obtained by DHCP. 1-The DNS list consists of static DNS + dynamic DNS. Use static DNS first. When static DNS is invalid,	



	use the DNS address obtained by DHCP. <b>2-</b> The DNS list is composed of dynamic DNS + static DNS. Use the DNS obtained by DHCP first, and then use the static DNS when the dynamic DNS is invalid.
<b>Default</b>	0
<b>Parameter</b>	static.network.wifi.dns_list.mode <y0000000000xx>.cfg
<b>Description</b>	It configures the DNS query mode in the wireless network.
<b>Permitted Values</b>	<b>0-</b> If static DNS is configured, use static DNS. If not, use dynamic DNS obtained by DHCP. <b>1-</b> The DNS list consists of static DNS and dynamic DNS. Use static DNS preferentially. When static DNS is invalid, use the DNS obtained by DHCP. <b>2-</b> The DNS list consists of dynamic DNS and static DNS. Use the DNS obtained by DHCP preferentially, and then use the static DNS when the dynamic DNS is invalid.
<b>Default</b>	0

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

[2]X is the record ID. X=1-12.

## Logon Wizard

Logon wizard allows the phones to provide the logon wizard during the first startup. It works only if there is no registered account on the IP phone.

It is not applicable to CP920 phones.

### Topic

[Logon Wizard Configuration](#)

## Logon Wizard Configuration

The following table lists the parameters you can use to configure the logon wizard.

<b>Parameter</b>	phone_setting.logon_wizard <y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to provide the logon wizard after startup when there is no registered account.
<b>Permitted Values</b>	<b>0-</b> Disabled <b>1-</b> Enabled
<b>Default</b>	0
<b>Supported Devices</b>	All phones except CP920
<b>Web UI</b>	Features > General Information > Logon Wizard
<b>Parameter</b>	hotdesking.startup_register_name_enable <y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to provide an input field of register name on the logon wizard after startup when there is no registered account. <b>Note:</b> It works only if "phone_setting.logon_wizard" is set to 1 (Enabled).
<b>Permitted Values</b>	<b>0-</b> Disabled <b>1-</b> Enabled

<b>Default</b>	0	
<b>Supported Devices</b>	All phones except CP920	
<b>Parameter</b>	hotdesking.startup_username_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to provide an input field of user name on the logon wizard after startup when there is no registered account. <b>Note:</b> It works only if "phone_setting.logon_wizard" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Supported Devices</b>	All phones except CP920	
<b>Parameter</b>	hotdesking.startup_password_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to provide an input field of password on the logon wizard after startup when there is no registered account. <b>Note:</b> It works only if "phone_setting.logon_wizard" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Supported Devices</b>	All phones except CP920	
<b>Parameter</b>	hotdesking.startup_sip_server_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to provide an input field of SIP server on the logon wizard after startup when there is no registered account. <b>Note:</b> It works only if "phone_setting.logon_wizard" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except CP920	
<b>Parameter</b>	hotdesking.startup_outbound_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to provide an input field of the outbound server on the logon wizard after startup when there is no registered account. <b>Note:</b> It works only if "phone_setting.logon_wizard" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except CP920	
<b>Parameter</b>	phone_setting.logon_wizard_forever_wait	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to remain at the hot desking logon wizard even though timeout.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	

<b>Default</b>	0
<b>Supported Devices</b>	All phones except CP920

## Multiple Line Keys per Account

You can assign multiple line keys to associate with a specific account. The line keys are automatically assigned with Line type from the first unused one (unused one means the line key is configured as N/A or the associated account is not registered). All calls on this account will be distributed evenly among these line keys. It is useful for managing a high volume of calls to an account.

When you assign multiple line keys to be associated with an account, you can configure the IP phone whether transferring a call or setting up a conference call on the current line key or on a new distribution line key.

It is not applicable to T30P/T30/T19(P) E2/CP920 phones.

### Topics

[Multiple Line Keys per Account Configuration](#)

[Auto Line Labels Rule Configuration](#)

[Default Account](#)

## Multiple Line Keys per Account Configuration

The following table lists the parameters you can use to configure multiple line keys per account.

<b>Parameter</b>	features.auto_linekeys.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables to assign multiple line keys to associate with a specific account. <b>Note:</b> The number of the line keys is determined by "account.X.number_of_linekey".	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	
<b>Web UI</b>	Features > General Information > Auto Linekeys	
<b>Parameter</b>	account.X.number_of_linekey <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the number of line keys to be assigned with a specific account from the first unused one. If a line key is in used, the phone will skip to the next unused DSS key.	
<b>Permitted Values</b>	Integer from 1 to 999 The number of the line keys varies by phone models, for the supported line keys, refer to <a href="#">Supported DSS Keys</a> .	
<b>Default</b>	1	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	
<b>Web UI</b>	Account > Advanced > Number of Line Key	
<b>Parameter</b>	phone_setting.call_appearance.transfer_via_new_linekey	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables to distribute a transferring call to a new line key (the new line key is not seized). If all line keys are seized, the current line key will be used. <b>Note:</b> The number of the line keys is determined by "account.X.number_of_linekey". The value con-	

	figured by the parameter "account.X.phone_setting.call_appearance.transfer_via_new_linekey" takes precedence over that configured by this parameter.	
<b>Permitted Values</b>	0-Disabled, the phone will transfer a call on the current line key. 1-Enabled	
<b>Default</b>	1	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	
<b>Parameter</b>	account.X.phone_setting.call_appearance.transfer_via_new_linekey <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables to distribute a transferring call to a new line key (the new line key is not seized) for account X. If all line keys are seized, the current line key will be used. <b>Note:</b> The number of the line keys is determined by "account.X.number_of_linekey". The value configured by this parameter takes precedence over that configured by the parameter "phone_setting.call_appearance.transfer_via_new_linekey".	
<b>Permitted Values</b>	0-Disabled, the phone will transfer a call on the current line key. 1-Enabled	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	
<b>Parameter</b>	phone_setting.call_appearance.conference_via_new_linekey	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables to distribute a conference call to a new line key (the new line key is not seized). If all line keys are seized, the current line key will be used. <b>Note:</b> The number of the line keys is determined by "account.X.number_of_linekey". The value configured by the parameter "account.X.phone_setting.call_appearance.conference_via_new_linekey" takes precedence over that configured by this parameter.	
<b>Permitted Values</b>	0-Disabled, the phone will place a new call using the current line key when pressing the <b>Conf/Conference</b> soft key. 1-Enabled, the phone will place a new call by automatically selecting a new line key (the corresponding line key is not seized) when pressing the <b>Conf/Conference</b> soft key. If all line keys are seized, the current line key will be used.	
<b>Default</b>	1	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	
<b>Parameter</b>	account.X.phone_setting.call_appearance.conference_via_new_linekey <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables to distribute a conference call to a new line key (the new line key is not seized) for account X. If all line keys are seized, the current line key will be used.	

	<b>Note:</b> The number of the line keys is determined by “account.X.number_of_linekey”. The value configured by this parameter takes precedence over that configured by the parameter “phone_setting.call_appearance.conference_via_new_linekey”.
<b>Permitted Values</b>	<b>0</b> -Disabled, the phone will place a new call using the current line key when pressing the <b>Conf/Conference</b> soft key. <b>1</b> -Enabled, the phone will place a new call by automatically selecting a new line key (the corresponding line key is not seized) when pressing the <b>Conf/Conference</b> soft key. If all line keys are seized, the current line key will be used.
<b>Default</b>	Blank
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42U/T42G/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for CP925/CP935W, X=1.

## Auto Line Labels Rule Configuration

When assigning multiple line keys per account, these automatically assigned line keys use its Account Label (set by “account.X.label”) as default label to display on the screen. In order to distinguish these automatically assigned line keys, you can customize the line key labels one by one or configure the auto line labels rule for these line keys.

The following table lists the parameters you can use to configure the auto line labels rule.

<b>Parameter</b>	account.X.auto_label.enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the Auto Label feature. It is only applicable to the automatically assigned line DSS keys. <b>Note:</b> It works only if “features.auto_linekeys.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	<b>0</b> -Disabled, the line keys labels are determined by “account.X.label”. <b>1</b> -Enabled, the line keys labels are determined by the custom label rule (configure by the parameter “accout.X.auto_label.rule”).	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	
<b>Parameter</b>	account.X.auto_label.rule <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the Auto Label rule. You need to know the following basic regular expression syntax: <b>{L}</b> : The value is configured by the parameter “account.X.label”. <b>{N}</b> : An increasing number from N. For example, abc{1}{5} represents the following labels: abc15, abc26, abc37, and so on. Multiple labels are separated by “ ”. For example, Yea Yea Yea Tom_{2} means to display “Yea” for first three line keys, and from the fourth one, display label Tom_2, Tom_3, and so on in turn. <b>Other Characters:</b> for example, ABC, will display ABC the same as what you have configured. <b>Note:</b> It works only if “features.auto_linekeys.enable” and “account.X.auto_label.enable” are set to 1 (Enabled). The number of valid labels is configured by the parameter “account.X.number_of_linekey”.	
<b>Permitted Values</b>	String	

<b>Default</b>	{L}_{1}
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42U/T42G/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for CP925/CP935W, X=1.

## Default Account

If there are multiple accounts registered on the phone, the phone will use the default account to dial out by default.

The following table lists the parameters you can use to configure the default account.

<b>Parameter</b>	static.features.default_account	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the default account.</p> <p>1-Account 1</p> <p>2-Account 2</p> <p>3-Account 3</p> <p>...</p> <p>16-Account 16</p> <p>101-PSTN 1</p> <p>102-PSTN 2</p> <p>For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, accounts 1-16, PSTN 1 and PSTN 2. (PSTN 1 and PSTN 2 are only applicable to T57W/T54W phones)</p> <p>For T53W/T53/T53C/T43U/T42U/T42S/T42G, accounts 1-12, PSTN 1 and PSTN 2. (PSTN 1 and PSTN 2 are only applicable to T53W/T53/T53C phones)</p> <p>For T41P/T41S/T27G, accounts 1-6.</p> <p>For T33P/T33G, accounts 1-4.</p> <p>For T40P/T40G/T23P/T23G, accounts 1-3.</p> <p>For T31P/T31G/T31/T21(P) E2, accounts 1-2.</p> <p>For CP920/CP925: account 1, PSTN 1 and PSTN 2.</p>	
<b>Permitted Values</b>	Integer from 1 to 16, 101, 102	
<b>Default</b>	1	
<b>Supported Devices</b>	All phones except T30P/T30/T19(P) E2	
<b>Parameter</b>	features.show_default_account	<y0000000000xx>.cfg
<b>Description</b>	<p>It enables or disables the phone to display the label of the default account in the left of the status bar on the idle screen.</p> <p><b>Note:</b> For T43U/T42G/T42S/T42U/T41P/T41S/T27G phones, the label of the default account is displayed in the middle bottom of the idle screen. It works only if "features.station_name.value" is left blank.</p>	
<b>Permitted Values</b>	<p>0-Disabled</p> <p>1-Enabled</p>	

---

<b>Default</b>	1	
<b>Parameter</b>	features.linekey_call_with_default_account	<y000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to switch the default account when pressing the line key to dial. For example, the account on line 2 is not the default account, if this feature is enabled, when pressing the line key 2 to dial, the default account will switch to the account on line 2.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2, CP920, CP925 and CP935W	

# Directory

The Yealink IP phone provides several types of phone directories.

## Topics

- [Local Directory](#)
- [Local Contacts Backup](#)
- [Local Contacts Order Configuration](#)
- [Local Contacts Number Configuration](#)
- [Favorite Contacts](#)
- [Google Contacts](#)
- [Lightweight Directory Access Protocol \(LDAP\)](#)
- [Remote Phone Book](#)
- [Directory List for Directory/Dir Soft Key](#)
- [Directory Search Settings](#)
- [Number Matching Settings](#)

Note: When you add a phone number to a contact in the local directory, LDAP, Remote phone book or XML phone book, you can use the EDK macros strings. For more information on EDK macros, refer to [Enhanced DSS Keys](#). For more information on XML phone book, refer to [XML Browser Developer's Guide for Yealink IP Phones](#).

## Local Directory

Yealink phones maintain a local directory that you can use to store contacts. The local directory can store up to 1000 contacts and 48 groups (47 groups for CP920 phones).

Contacts and groups can be added either one by one or in batch using a local contact file. Yealink phones support both \*.xml and \*.csv format contact files, but you can only customize the \*.xml format contact file.

## Topics

- [Contact Avatars and Icons Picture Limit](#)
- [Preparing the Tar Formatted File](#)
- [Local Contact File Customization](#)
- [Local Contact Files and Resource Upload](#)
- [Example: Adding Contacts Using a Contact File](#)

## Contact Avatars and Icons Picture Limit

For color screen phones, you can customize the contact avatar. You can also customize a contact icon for T57W/T48U/T48S/T48G phones.

The contact avatar format must meet the following:

Phone Model	Format	Resolution	Single File Size
T57W/T54W/T53C/T48U/T48S/T48G/T46U/T46S/T46G/T29G/CP925/CP935W	*.jpg/*.png/*.bmp/*.jpeg	<=110*110	<=5M-B

The contact icon format must meet the following:

Phone Model	Format	Resolution
T57W/T48U/T48S/T48G	*.jpg/*.png/*.bmp/*.jpeg	<=41*41




## Preparing the Tar Formatted File

This section provides you on how to package the tar file using 7-Zip.


**Note:** You can package the tar formatted file using the tool 7-Zip or GnuWin32. You can download 7-Zip online: <http://www.7-zip.org/> and GnuWin32 online: <http://gnuwin32.sourceforge.net/packages/gtar.htm>. The procedure may be different if you package the tar formatted file using other software that is not listed above.

### Procedure

1. Download and install 7-Zip on the local system.
2. Create a folder (for example, photo) on the local system (for example, C:\Program Files) and place the file that will be compressed (for example, cutom1.jpg, cutom2.png) to this folder.
3. Start the 7-Zip file manager application (7zFM.exe).
4. Locate the photo folder from the local system (C:\Program Files\photo).

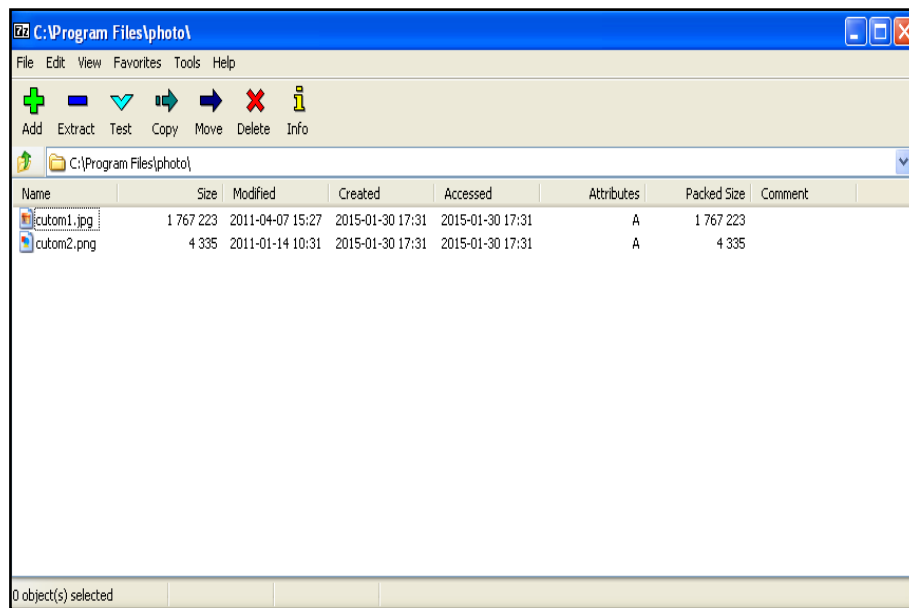

5. Select the desired photos that will be compressed.
6. Click the **Add** button.
7. Select **tar** from the **Archive format** drop-down menu.

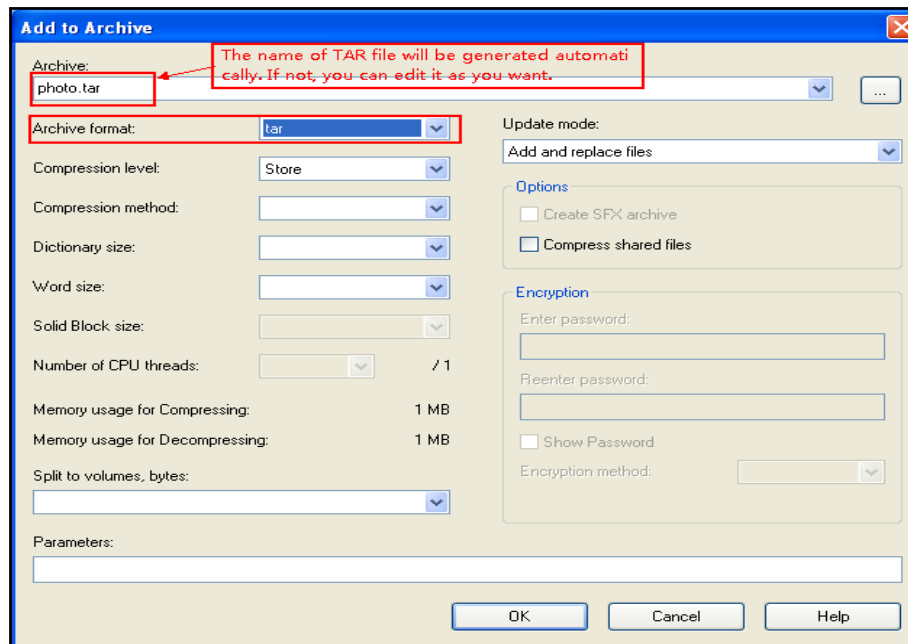

8. Click the **OK** button.

A photo.tar file is generated in the directory C:\Program Files\photo.

## Local Contact File Customization

You can ask the distributor or Yealink FAE for local contact template. You can also obtain the local contact template online: <http://support.yealink.com/documentFront/forwardToDocumentFrontDisplayPage>.

### Topics

[XML Conversion Table](#)

[Local Contact File Elements and Attributes](#)

[Customizing Local Contact File](#)

## XML Conversion Table

XML provides escape facilities for including characters which are problematic to include directly. For example, the characters "<" and "&" are key syntax markers and may never appear in the content. XML has five predefined entities.

The XML conversion table is shown as below:

Character	Name	Escape Sequence
&	Ampersand	&amp;
"	Quote	&quot;
'	Apostrophe	&apos;
<	Left angle bracket	&lt;
>	Right angle bracket	&gt;

## Local Contact File Elements and Attributes

The following table lists the elements and attributes you can use to add groups or contacts in the local contact file. We recommend that you do not edit these elements and attributes.

Elements	Attributes	Description
group	display_name	Specify the group name. For example <i>All Contacts</i> , <i>Blocklist</i> or <i>Friend</i>
	ring	Specify a ringtone for the group. System ring tone: Auto Silent.wav Splash.wav RingN.wav (integer N ranges from 1 to 8) Custom ring tone: Name.wav (the custom ring tone should be uploaded in advance)
Contact	display_name	Specify the contact name. For example <i>Jim</i> <b>Some characters (for example, ") are key syntax markers and may never appear in the content. Non-standard name formats may cause XML parsing to fail. You can use the escape sequence instead.</b> <b>Error:</b> display_name="Hurrell "&" Mclean" <b>Correct 1:</b> display_name="Hurrell & Mclean" <b>Correct 2:</b> display_name="Hurrell &amp; Mclean" <b>Note:</b> The contact name cannot be blank.
	office_number	Specify the office number or macro EDK Macro Strings
	mobile_number	Specify the mobile number or macro EDK Macro Strings.
	other_number	Specify the other number or macro EDK Macro Strings
	line	Specify a registered line for this contact for calling. Valid Values: -1~15; -1 stands for Auto (the first registered line); 0~15 stand for line1~line16. vary by phone models: T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G: 0~15; T53W/T53/T53C/T43U/T42U/T42S/T42G: 0~11; T41P/T41S/T27G: 0~5; T33P/T33G: 0~3; T40P/T40G/T23P/T23G: 0~2; T31P/T31G/T31/T21(P) E2: 0~1 <b>Note:</b> This is not applicable to T30P/T30/T19(P) E2/CP920/CP925/CP935W phones.
	ring	Specify a ringtone for this contact. System ring tone: Auto Silent.wav Splash.wav

Elements	Attributes	Description
		RingN.wav (integer N ranges from 1 to 8) Custom ring tone: XX.wav (for example, Music.wav, the custom ring tone should be uploaded in advance)
	group_id_name	Specify which group the contact adds to. Built-in group: All Contacts, Blocklist Custom group: XXX (for example, Friend)
	default_photo	Built-in avatar: Resource: avatar name Custom avatar: Config: custom avatar name <b>Note:</b> It is only applicable to color screen phones.
	auto_divert	Specify a destination number for diverted calls.

### Related Topics

[Example: Using EDK Macro Strings as the Contact Number XML Conversion Table](#)

## Customizing Local Contact File

1. Open the local contact file.
2. To add a group, add `<group display_name="" ring="" />` to the file. Each starts on a new line.
3. To add a contact, add `<contact display_name="" office_number="" mobile_number="" other_number="" line="" ring="" group_id_name="" default_photo="" auto_divert = "" />` to the file. Each starts on a new line.
4. Specify the values within double quotes.

For example:

```
<group display_name="Friend" ring="Splash.wav" />
<contact display_name="Lily" office_number="1020" mobile_number="1021" other_number="1112" line="1"
ring="Ring1.wav" group_id_name="Friend" default_photo="Lily_photo.jpg" auto_divert = "2022" />
<contact display_name="Tom" office_number="2020" mobile_number="2021" other_number="2112" line="2"
ring="Ring1.wav" group_id_name="Friend" default_photo=" Resource:icon_family_b.png" auto_divert = "2023"
 />
```

5. Save the changes and place this file to the provisioning server.

## Local Contact Files and Resource Upload

You can upload local contact files to add multiple contacts at a time or upload the contact resource, such as contact avatar and icon pictures.

The following table lists the parameters you can use to upload the local contact files and resource.

Parameter	local_contact.data.url	<y0000000000xx>.cfg
<b>Description</b>	It configures the access URL of the local contact file (*.xml).	
<b>Example:</b>	local_contact.data.url = http://192.168.10.25/contact.xml	

	<b>Note:</b> If "static.auto_provision.local_contact.backup.enable" is set to 1 (Enabled), the contacts in the contact file "contact.xml" downloaded from the provisioning server do not take effect.	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Directory > Local Directory > Import	
<b>Parameter</b>	local_contact.data.delete	<y0000000000xx>.cfg
<b>Description</b>	<p>It deletes all local contacts.</p> <p><b>Example:</b></p> <p>local_contact.data.delete = http://localhost/all</p>	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Parameter</b>	local_contact.photo.url	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the access URL of a contact avatar file.</p> <p>The format of the contact avatar must be *.png, *.jpg, *.bmp, *.jpeg.</p> <p>The contact avatar file should be uploaded to the provisioning server in advance.</p> <p><b>Example:</b></p> <p>local_contact.photo.url = tftp://192.168.10.25/Photo.jpg</p>	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All color screen phones (except T33P/T33G)	
<b>Parameter</b>	local_contact.icon_image.url	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the access URL of a contact icon file.</p> <p>The format of the contact icon must be *.png, *.jpg, *.bmp, *.jpeg.</p> <p>The contact icon file should be uploaded to the provisioning server in advance.</p> <p><b>Example:</b></p> <p>local_contact.icon_image.url = tftp://192.168.10.25/Photo.jpg</p>	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T48U, T48S, T48G	
<b>Parameter</b>	local_contact.image.url	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the access URL of a TAR contact avatar file.</p> <p>The format of the contact avatar must be *.png, *.jpg, *.bmp, *.jpeg.</p> <p>The contact avatar file should be compressed as a TAR file in advance and then place it to the provisioning server.</p>	

	<b>Example:</b> local_contact.image.url = tftp://192.168.10.25/photo.tar	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All color screen phones (except T33P/T33G)	
<b>Parameter</b>	local_contact.data_photo_tar.url	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the access URL of the compressed TAR file consisting of the avatars TAR file and contact XML file.</p> <p>All avatars needed for contacts should be compressed as a TAR file in advance.</p> <p><b>Example:</b></p> <p>local_contact.data_photo_tar.url = tftp://192.168.10.25/Contact.tar</p> <p><b>Note:</b> The name of the avatars TAR file must be photo.tar (case-sensitive), and the name of the contact XML file must be ContactData.xml (case-sensitive).</p>	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All color screen phones (except T33P/T33G)	
<b>Parameter</b>	local_contact.icon.url	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the access URL of a TAR contact icon file.</p> <p>The format of the contact icon must be *.png, *.jpg, *.bmp.</p> <p>The contact icon file should be compressed as a TAR file in advance and then place it to the provisioning server.</p> <p><b>Example:</b></p> <p>local_contact.icon.url = tftp://192.168.10.25/photo2.tar</p>	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T48U, T48S, T48G	

## Example: Adding Contacts Using a Contact File

The following example shows the configuration for customizing a local contact file.

Customize the contact file “contact.xml” and place the contact file “contact.xml” and custom contact source (avatars or icons) to the provisioning server “http://192.168.10.25”.

### Example


```
local_contact.photo.url = http://192.168.10.25/Lily_photo.jpg
```

```
local_contact.data.url = tftp://192.168.10.25/contact.xml
```

During auto provisioning, the phone connects to the provisioning server “192.168.10.25”, and downloads the local contact file “contact.xml” and an avatar “Lily\_photo.jpg”. You can view the contacts on their phone, and specify the avatar “Lily\_photo.jpg” for a contact.

On T57W/T48U/T48S/T48G phones, when uploading a contact avatar, you can also upload a contact icon named the same as this avatar, since a one-to-one correspondence between the icon and avatar. For example, an icon file and avatar file both named "Lily\_photo.jpg" are available on the phone, the contact with specified default\_pho-to="Lily\_photo.jpg" will use the corresponding name "Lily\_photo.jpg" as directory icon and avatar display.

The following shows the custom contact Lily with corresponding avatar and icon display:

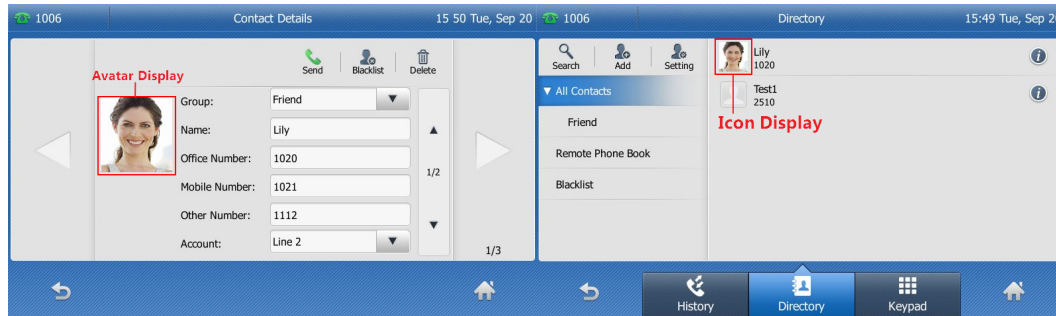

**Note:** If you have configured to back up the local contacts to the server, the phone will download the contact file "<MAC>-contact.xml" from the backup path from the server and display the downloaded contacts in the local directory list. The contacts in the local contact file "contact.xml" downloaded from the provisioning server do not take effect.

## Local Contacts Backup

Yealink phones support storing all local contacts to a contact file named <MAC>-contact.xml. You can back up this file to the server, avoiding data loss. Once the contacts update, the phone will automatically upload this file to the provisioning server or a specific server. If a contact file exists on the server, this file will be overridden. The phone will request to download the <MAC>-contact.xml file according to its MAC address from the server during auto provisioning.

The contact file is named after the MAC address of the IP phone. For example, if the MAC address of an IP phone is 00156574B150, the name of the contact file is 00156574B150-contact.xml (uppercase).

**Tip:** MAC address, a unique 12-digit serial number is assigned to each phone. You can obtain it from the bar code on the back of the phone.

The following table lists the parameters you can use to back up the local contacts.

<b>Parameter</b>	static.auto_provision.local_contact.backup.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to upload the <MAC>-contact.xml file to the server each time the contacts update and download the <MAC>-contact.xml file from the server during auto provisioning. <b>Note:</b> It does not affect the downloading of the contact avatar/icon files.	
<b>Permitted Values</b>	0-Disabled, the phone will not upload the contact file "<MAC>-contact.xml" to the server, so the IP phone downloads the contacts in the "contact.xml" from the access URL configured by the parameter "local_contact.data.url" or "local_contact.data_photo_tar.url" during auto provisioning. 1-Enabled, the phone uploads the contact file "<MAC>-contact.xml" to the specific path configured by the parameter "static.auto_provision.local_contact.backup.path" each time the contacts update; and downloads the contacts in the "<MAC>-contact.xml" according to its MAC address from the specific path during auto provisioning.	
<b>Default</b>	0	
<b>Parameter</b>	static.auto_provision.local_contact.backup.path	<y0000000000xx>.cfg
<b>Description</b>	It configures a path or URL for the phone to upload/download the <MAC>-contact.xml file. If it is left blank, the phone connects to the provisioning server URL, and uploads/downloads the contact file "<MAC>-contact.xml".	

	<p><b>Example:</b></p> <pre>static.auto_provision.local_contact.backup.path = http://192.168.1.20/contact</pre> <p>Once the contacts update, the phone will upload the contact file to the specified path "http://192.168.1.20/contact".</p> <p>During auto provisioning, the phone downloads the contact file "&lt;MAC&gt;-contact.xml" from the specified path "http://192.168.1.20/contact".</p> <p><b>Note:</b> It works only if "static.auto_provision.local_contact.backup.enable" is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Parameter</b>	static.auto_provision.custom.upload_method	<y0000000000xx>.cfg
<b>Description</b>	It configures the way the phone uploads the <MAC>-local.cfg file, <MAC>-callog.xml file or <MAC>-contact.xml file to the provisioning server (for HTTP/HTTPS server only).	
<b>Permitted Values</b>	0-PUT 1-POST	
<b>Default</b>	0	

## Local Contacts Order Configuration

The following table lists the parameters you can use to configure local contacts order.

<b>Parameter</b>	phone_setting.local_directory_order.type	<y0000000000xx>.cfg
<b>Description</b>	It configures the sorting method of the local contacts.	
<b>Permitted Values</b>	0-Sort by local contact name. 1-Sort by local contact number (office number) in ascending order.	
<b>Default</b>	0	

## Local Contacts Number Configuration

The following table lists the parameters you can use to configure local contacts number.

<b>Parameter</b>	features.local_directory_number.type	<y0000000000xx>.cfg
<b>Description</b>	It configures the number restrictions when manually adding local contacts.	
<b>Permitted Values</b>	1-Unlimited, any input can be saved. 2-Only pure numbers can be saved, non-pure numbers cannot be saved successfully.	
<b>Default</b>	1	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	


## Favorite Contacts

You can enable the user to mark local contacts as favorites. The favorite contacts are stored in the Favorites directory and the phone will automatically assign Speed Dial keys for these favorite contacts.


The following figures show that you have three favorite contacts:



In the Favorites directory:

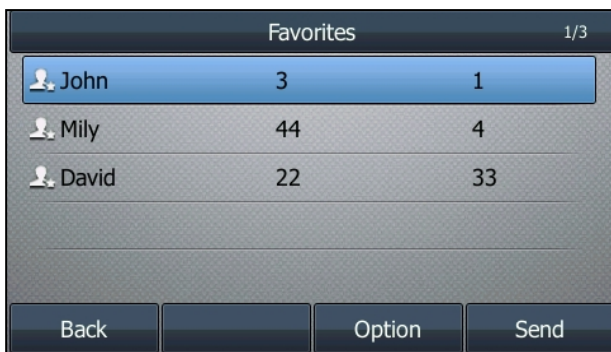

On the idle screen:

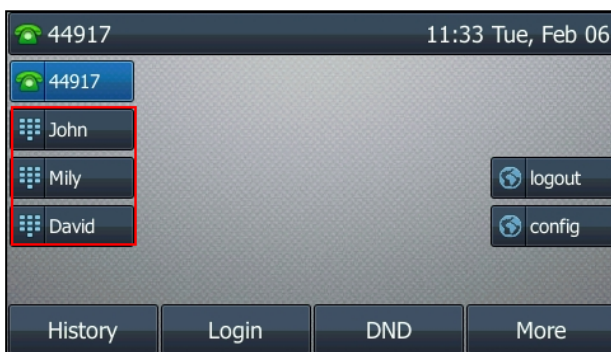

**Topic**

[Favorites Configuration](#)

## Favorites Configuration

The following table lists the parameters you can use to configure the favorites.

<b>Parameter</b>	local_contact.favorite.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the Favorites feature.	
<b>Permitted Values</b>	0-Disabled 1-Enabled, the phone automatically assigns Speed Dial keys for favorite contacts.	
<b>Default</b>	0 (1 for CP920)	
<b>Parameter</b>	local.dsskey_type_config.mode	<y0000000000xx>.cfg
<b>Description</b>	It configures which screen to enter by long pressing the line key or ext key. <b>Note:</b> It works only if "local_contact.favorite.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Enter the line key/ext key configuration screen 1-Enter the Add Contact screen	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	
<b>Parameter</b>	phone_setting.favorite_sequence_type	<y0000000000xx>.cfg
<b>Description</b>	It configures the order of Speed Dial (Favorite) keys to be assigned automatically.	

	<b>Note:</b> It works only if "local_contact.favorite.enable" is set to 1 (Enabled). To assign Ext key, make sure the expansion module has been connected to the phone in advance.
<b>Permitted Values</b>	<p>0 - linekey &gt; exp1 key &gt; ... &gt; expN key</p> <p>1 - exp1 key &gt; ... &gt; expN key &gt; linekey</p> <p>2 - linekey page1 &gt; page1 from exp1 to expN &gt; page2 from exp1 to expN &gt; ... &gt; linekey from page2 to page3</p> <p>3-page1 from exp1 to expN &gt; page2 from exp1 to expN &gt; ... &gt; linekey</p> <p><b>Note:</b> N is the number of your connected expansion modules.</p>
<b>Default</b>	0
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T48G, T46U, T46S, T46G, T43U, T29G, T27G

## Google Contacts

Google contact is a phone book that is stored on the Google Contact Server. You can sign in to the Google Contact Server on your phone, and then the phone can establish a connection with the Google Contact Server and download the phone book. As a result, Google contacts appear in the phone directory.

It is not applicable to T48G/T46G/T42G/T41P/T29G phones.

### Topics

[Google Contacts Configuration](#)  
[Signing in to the Google Contact Server](#)

## Google Contacts Configuration

The following table lists the parameter that the phone can use to connect to the Google Contact Server.

<b>Parameter</b>	google_contact_server.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to connect to the Google Contact Server.	
<b>Permitted Values</b>	<p>0-Disabled</p> <p>1-Enabled</p>	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P and T29G	
<b>Web UI</b>	<p><u>T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/CP925/CP935W:</u></p> <p>Directory &gt; Google Contacts &gt; Google Contacts</p> <p><u>Other Phones:</u></p> <p>Directory &gt; Google Contacts &gt; Google Contact Server</p>	
<b>Parameter</b>	google_contact_server.display_mode	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the display mode of the Google contacts.</p> <p><b>Note:</b> It works only if "google_contact_server.enable" is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	0-All downloaded Google contacts will be displayed on the phone.	

	1-Only the Google contacts whose number fields are not empty will be displayed on the phone.
<b>Default</b>	1
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P and T29G

## Signing in to the Google Contact Server

After you allow the IP phone to connect to the Google Contact Server, you can sign in to the Google Contact Server via the web user interface, so that the Google contacts will appear in the phone directory.

### Procedure

1. On your web user interface, select **Directory > Google Contacts**.
2. In the **Authentication** field, click **Sign In**.  
A pop-up window and a code are displayed.
3. Enter the code generated on the web user interface into the pop-up window.
4. Enter your email address and password.
5. Allow contact test to access your Google account.

## Lightweight Directory Access Protocol (LDAP)

LDAP is an application protocol for accessing and maintaining information services for the distributed directory over an IP network. You can configure the phones to interface with a corporate directory server that supports LDAP version 2 or 3. The following LDAP servers are supported:

- Microsoft Active Directory
- Sun ONE Directory Server
- Open LDAP Directory Server
- Microsoft Active Directory Application Mode (ADAM)

For more information on LDAP, refer to [LDAP Directory on Yealink IP Phones](#).

### Topics

[LDAP Attributes](#)

[Securely Storing the LDAP Credentials](#)

[LDAP Configuration](#)

## LDAP Attributes

The following table lists the most common attributes used to configure the LDAP lookup on the phones.

Abbreviation	Name	Description
gn	givenName	First name
cn	commonName	LDAP attribute is made up from given name joined to surname.
sn	surname	Last name or family name
dn	distinguishedName	Unique identifier for each entry
dc	dc	Domain component
-	company	Company or organization name
-	telephoneNumber	Office phone number

Abbreviation	Name	Description
mobile	mobilephoneNumber	Mobile or cellular phone number
ipPhone	IPphoneNumber	Home phone number

## Securely Storing the LDAP Credentials

You can enable the IP phone to securely store the LDAP user credentials when Broadsoft Flexible Seating feature is enabled. When the user logs into the guest profile next time, he/she can access the LDAP directory directly instead of entering the LDAP user credentials again.

The IP phone can store up to 100 LDAP user credentials. If the number of user credentials reaches 100, the user who has the longest inactivity period is removed from the phone when any additional user is added.

The LDAP user credentials persist after the phone reboots.

### Related Topic

[Broadsoft Flexible Seating](#)

## LDAP Configuration

The following table lists the parameters you can use to configure LDAP for all handsets.

<b>Parameter</b>	ldap.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the LDAP feature.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Directory > LDAP > Enable LDAP	
<b>Parameter</b>	ldap.search_type	<y0000000000xx>.cfg
<b>Description</b>	It configures the search type for LDAP contact lookup.	
<b>Permitted Values</b>	0-Prefix matching, the phone will search the LDAP contact numbers or names start with the entered character(s). 1-Approximate string matching, the phone will search the LDAP contact numbers or names contain the entered character(s).	
<b>Default</b>	0	
<b>Parameter</b>	ldap.name_filter	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the search criteria for LDAP contact names lookup.</p> <p>The "*" symbol in the filter stands for any character. The "%" symbol in the filter stands for the name entered by the user.</p> <p><b>Example:</b></p> <p>ldap.name_filter = ((cn=%)(sn=%))</p> <p>When the cn or sn of the LDAP contact matches the entered name, the record will be displayed on the phone screen.</p> <p>ldap.name_filter = (&amp;(cn=*)(sn=%))</p> <p>When the cn of the LDAP contact is set and the sn of the LDAP contact matches the entered name, the records will be displayed on the phone screen.</p>	

	<p>ldap.name_filter = (!(cn=%))</p> <p>When the cn of the LDAP contact does not match the entered name, the records will be displayed on the phone screen.</p>	
<b>Permitted Values</b>	String within 512 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Directory > LDAP > LDAP Name Filter	
<b>Parameter</b>	ldap.number_filter	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the search criteria for LDAP contact numbers lookup.</p> <p>The "*" symbol in the filter stands for any number. The "%" symbol in the filter stands for the number entered by the user.</p> <p><b>Example:</b></p> <p>ldap.number_filter = ((telephoneNumber=%)(mobile=%)(ipPhone=%))</p> <p>When the number of the telephoneNumber, mobile or ipPhone of the contact record matches the search criteria, the record will be displayed on the phone screen.</p> <p>ldap.number_filter = (&amp;(telephoneNumber=*)(mobile=%))</p> <p>When the telephoneNumber of the LDAP contact is set and the mobile of the LDAP contact matches the entered number, the record will be displayed on the phone screen.</p>	
<b>Permitted Values</b>	String within 512 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Directory > LDAP > LDAP Number Filter	
<b>Parameter</b>	ldap.tls_mode	<y0000000000xx>.cfg
<b>Description</b>	It configures the connection mode between the LDAP server and the phone.	
<b>Permitted Values</b>	<p>0-LDAP—The unencrypted connection between the LDAP server and the IP phone (port 389 is used by default).</p> <p>1-LDAP TLS Start—The TLS/SSL connection between the LDAP server and the IP phone (port 389 is used by default).</p> <p>2-LDAPs—The TLS/SSL connection between the LDAP server and the IP phone (port 636 is used by default).</p>	
<b>Default</b>	0	
<b>Web UI</b>	Directory > LDAP > LDAP TLS Mode	
<b>Parameter</b>	ldap.host	<y0000000000xx>.cfg
<b>Description</b>	It configures the IP address or domain name of the LDAP server.	
<b>Permitted Values</b>	IP address or domain name	
<b>Default</b>	Blank	
<b>Web UI</b>	<p>T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/CP925/CP935W:</p> <p>Directory &gt; LDAP &gt; LDAP Server Address</p> <p><u>Other Phones:</u></p>	

	Directory > LDAP > Server Address	
<b>Parameter</b>	ldap.port	<y0000000000xx>.cfg
<b>Description</b>	It configures the port of the LDAP server.	
<b>Permitted Values</b>	Integer from 1 to 65535	
<b>Default</b>	389 (LDAPS: 636)	
<b>Web UI</b>	Directory > LDAP > Port	
<b>Parameter</b>	ldap.base	<y0000000000xx>.cfg
<b>Description</b>	It configures the LDAP search base which corresponds to the location of the LDAP phonebook from which the LDAP search request begins. The search base narrows the search scope and decreases directory search time. <b>Example:</b> ldap.base = dc=yealink,dc=cn	
<b>Permitted Values</b>	String within 512 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	<a href="#">T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/CP925/CP935W:</a> Directory > LDAP > LDAP Base <a href="#">Other Phones:</a> Directory > LDAP > Base	
<b>Parameter</b>	ldap.user	<y0000000000xx>.cfg
<b>Description</b>	It configures the user name used to log into the LDAP server.  This parameter can be left blank in case the server allows anonymity to log into. Otherwise, you will need to provide the user name to log into the LDAP server. <b>Example:</b> ldap.user = cn=manager,dc=yealink,dc=cn	
<b>Permitted Values</b>	String within 512 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	<a href="#">T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/CP925/CP935W:</a> Directory > LDAP > LDAP Username <a href="#">Other Phones:</a> Directory > LDAP > User Name	
<b>Parameter</b>	ldap.password	<y0000000000xx>.cfg
<b>Description</b>	It configures the password to log into the LDAP server.  This parameter can be left blank in case the server allows anonymous to log into. Otherwise, you will need to provide the password to log into the LDAP server.	
<b>Permitted Values</b>	String within 512 characters	

<b>Default</b>	Blank	
<b>Web UI</b>	<p>T57W/T54W/T53W/T53C/T48U/T46U/T43U/T42U/CP925/CP935W:</p> <p>Directory &gt; LDAP &gt; LDAP Password</p> <p>Other Phones:</p> <p>Directory &gt; LDAP &gt; Password</p>	
<b>Parameter</b>	ldap.max_hits	<y0000000000xx>.cfg
<b>Description</b>	It configures the maximum number of search results to be returned by the LDAP server.	
<b>Permitted Values</b>	Integer from 1 to 1000	
<b>Default</b>	50	
<b>Web UI</b>	Directory > LDAP > Max Hits (1~1000)	
<b>Parameter</b>	ldap.name_attr	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the name attributes of each record to be returned by the LDAP server. It compresses the search results. You can configure multiple name attributes separated by spaces.</p> <p><b>Example:</b></p> <p>ldap.name_attr = cn sn</p> <p>This requires the "cn" and "sn" attributes set for each contact record on the LDAP server.</p>	
<b>Permitted Values</b>	String within 512 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Directory > LDAP > LDAP Name Attributes	
<b>Parameter</b>	ldap.numb_attr	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the number attributes of each record to be returned by the LDAP server and display them to the phone in the order of the configured attributes..</p> <p>Multiple number attributes are separated by spaces.</p>	
<b>Permitted Values</b>	String within 512 characters	
<b>Default</b>	Blank	
<b>Case Scenario</b>	<p><b>Contacts and attribute values on the LDAP server are configured as follows:</b></p> <p>user0005-telephoneNumber (2598), mobile (13048957895)</p> <p>user0006-telephoneNumber (3598), mobile (15956524892)</p> <p>user0007-telephoneNumber (4598), mobile (blank)</p> <p>user0007-telephoneNumber (blank), mobile (18954125624)</p> <p><b>Set the following:</b></p> <p>ldap.numb_attr = telephoneNumber mobile</p> <p>This requires the "telephoneNumber" and "mobile" attributes set for each contact record on the LDAP server. And the phone screen will display the number in the order of the configured attributes (telephoneNumber &gt; mobile).</p> <p><b>Results:</b></p>	

	user0005 2598 user0006 3598 user0007 4598 user0008 18954125624
<b>Web UI</b>	Directory > LDAP > LDAP Number Attributes
<b>Parameter</b>	ldap.display_name <y0000000000xx>.cfg
<b>Description</b>	It configures the display name of the contact record displayed on the phone screen. The value must start with a “%” symbol. <b>Example:</b> ldap.display_name = %cn The cn of the contact record is displayed on the phone screen.
<b>Permitted Values</b>	String within 99 characters
<b>Default</b>	Blank
<b>Web UI</b>	Directory > LDAP > LDAP Display Name
<b>Parameter</b>	ldap.version <y0000000000xx>.cfg
<b>Description</b>	It configures the LDAP protocol version supported by the IP phone. The version must be the same as the version assigned on the LDAP server.
<b>Permitted Values</b>	2 or 3
<b>Default</b>	3
<b>Web UI</b>	Directory > LDAP > Protocol
<b>Parameter</b>	ldap.call_in_lookup <y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to perform an LDAP search when receiving an incoming call.
<b>Permitted Values</b>	0-Disabled 1-Enabled
<b>Default</b>	0
<b>Web UI</b>	Directory > LDAP > LDAP Lookup for Incoming Call
<b>Parameter</b>	ldap.call_out_lookup <y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to perform an LDAP search when placing a call.
<b>Permitted Values</b>	0-Disabled 1-Enabled
<b>Default</b>	1
<b>Web UI</b>	Directory > LDAP > LDAP Lookup for Callout
<b>Parameter</b>	ldap.ldap_sort <y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to sort the search results in alphabetical order or numerical order.
<b>Permitted Values</b>	0-Disabled 1-Enabled



<b>Default</b>	0	
<b>Web UI</b>	Directory > LDAP > LDAP Sorting Results	
<b>Parameter</b>	ldap.incoming_call_special_search.enable	<y0000000000xx>.cfg
<b>Description</b>	<p>It enables or disables the phone to search the telephone numbers starting with "+" symbol and "00" from the LDAP server if the incoming phone number starts with "+" or "00". When completing the LDAP search, all the search results will be displayed on the phone screen.</p> <p><b>Example:</b></p> <p>If the phone receives an incoming call from the phone number 0044123456789, it will search 0044123456789 from the LDAP server first, if no result found, it will search +44123456789 from the server again. The phone will display all the search results.</p> <p><b>Note:</b> It works only if "ldap.call_in_lookup" is set to 1 (Enabled). You may need to set "ldap.name_filter" to be ( (cn=%)(sn=%)(telephoneNumber=%)(mobile=%)) for searching the telephone numbers starting with "+" symbol.</p>	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	ldap.numb_display_mode	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the display mode of the attribute name for the LDAP contact number.</p> <p><b>Note:</b> It works only if "ldap.enable" is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	0-NumberN (N is an increasing number), for example Number1, Number2, Number3... 1-Attribute name pushed by the server	
<b>Default</b>	0	
<b>Parameter</b>	ldap.customize_label	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the display name of the LDAP phone book.</p> <p>If it is left blank, LDAP is displayed.</p> <p><b>Note:</b> It works only if "ldap.enable" is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	String within 512 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Directory > LDAP > LDAP Label	
<b>Parameter</b>	ldap.extra_attr	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the extra attributes of each record to be returned by the LDAP server.</p> <p>Multiple attributes are separated by spaces.</p> <p><b>Example:</b></p> <p>ldap.extra_attr = title lang</p> <p>This requires the "title" and "lang" extra attributes set for each contact record on the LDAP server.</p> <p><b>Note:</b> It works only if "ldap.enable" is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	String	

<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53C, T48U, T48S, T46U, T46S	
<b>Parameter</b>	ldap.display_extra_attr	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the extra attributes list of each record to be displayed on the phone.</p> <p>The attribute must start with a “%” symbol. Multiple attributes are separated by spaces.</p> <p><b>Example:</b></p> <p>ldap.display_extra_attr = %title %lang</p> <p>The title and lang of the contact record are displayed on the phone screen.</p> <p><b>Note:</b> It works only if “ldap.enable” is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53C, T48U, T48S, T46U, T46S	
<b>Parameter</b>	ldap.custom_extra_attr_name	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the custom attribute names of each record that are displayed on the phone.</p> <p>The valid format is: &lt;custom attribute name on the phone&gt;%&lt;attribute name on the server&gt;. Multiple attribute names are separated by spaces.</p> <p><b>Example:</b></p> <p>ldap.custom_extra_attr_name = Comment%title Language%lang</p> <p>The phone screen displays "Comment: title of the contact record" and "Language: lang of the contact record".</p> <p><b>Note:</b> It works only if “ldap.enable” is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53C, T48U, T48S, T46U, T46S	
<b>Parameter</b>	ldap.anonymous_bind_operation.enable	<y0000000000xx>.cfg
<b>Description</b>	<p>It enables or disables the phone to use anonymous identity for accessing the LDAP directory.</p> <p><b>Note:</b> It works only if “ldap.enable” is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	<p>0-Disabled</p> <p>1-Enabled, if the authentication information is not configured on the phone, the phone can use the empty one to log into the LDAP server. But if the server does not allow anonymity to log into, the phone prompts users to enter the corresponding user name and password.</p>	
<b>Default</b>	1	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P and T29G	
<b>Related Parameters</b>	<p>ldap.user</p> <p>ldap.password</p>	

<b>Parameter</b>	ldap.search_scope	<y0000000000xx>.cfg
<b>Description</b>	It configures a search scope level below the base domain name.	
<b>Permitted Values</b>	<b>sub</b> -A recursive search of all levels below the base domain name is performed. <b>one</b> -A search of one level below the base domain name is performed. <b>base</b> -A search at the base domain name level is performed.	
<b>Default</b>	sub	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Parameter</b>	ldap.search_t9.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables T9 search for LDAP contact.	
<b>Permitted Values</b>	<b>0</b> -Disabled <b>1</b> -Enabled <b>Note:</b> It works when the LDAP contact name exists.	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	

## Remote Phone Book

The remote phone book is a centrally maintained phone book, stored on the remote server. Users only need the access URL of the remote phone book. The IP phone can establish a connection with the remote server and download the phone book, and then display the remote phone book entries on the phone.

Yealink phones support up to 5 remote phone books. The remote phone book is customizable.

**Note:** For T40P/T40G/T23P/T23G/T21(P) E2/T19(P) E2 phones, we recommend that you download less than 3000 remote contacts (including one name and three numbers fields) from the remote server. For other phones, we recommend that you download less than 5000 remote contacts (including one name and three numbers fields) from the remote server.

### Topics

[Remote Phone Book File Customization](#)  
[Remote Phone Book Configuration](#)  
[Example: Configuring a Remote Phone Book](#)

## Remote Phone Book File Customization

Yealink phones support remote phone book contact customization.

You can add multiple contacts at a time and/or share contacts between the phones using the supplied template files (Menu.xml and Department.xml).

You can ask the distributor or Yealink FAE for remote phone book template. You can also obtain the remote phone book template online: <http://support.yealink.com/documentFront/forwardToDocumentFrontDisplayPage>.

### Topics

[Remote Phone Book File Elements](#)  
[Customizing Remote Phone Book File](#)

## Remote Phone Book File Elements

Yealink phones support two template files: Menu.xml and Department.xml.

The Menu.xml file defines the group/department of a remote phone book. The Department.xml file defines contact lists for a department/group, which is nested in Menu.xml file.

The following table lists the elements you can use to add groups or contacts in the remote phone book file. We recommend that you do not edit these elements.

Template	Element	Valid Values
Department.xml	<pre>&lt;DirectoryEntry&gt;   &lt;Name&gt;Contact Name &lt;/Name&gt;   &lt;Telephone label="Number Label"&gt;Contact Num- ber&lt;/Telephone&gt;   &lt;Extra label="Label"&gt; Extra Information&lt;/Extra&gt; &lt;/DirectoryEntry&gt;</pre>	<p>Add a contact in a department/group:</p> <p>If the label of the contact number is left blank, the default label "Number X" is used.</p>
Menu.xml	<pre>&lt;MenuItem&gt;   &lt;Name&gt;Department&lt;/Name&gt;   &lt;URL&gt;Department URI&lt;/URL&gt; &lt;/MenuItem&gt;</pre>	<p>Add a contact department/group file:</p> <p>Specify the department/group name between &lt;Name&gt; and &lt;/Name&gt;;</p> <p>Specify the department/group access URL between &lt;URL&gt; and &lt;/URL&gt;</p>
	<pre>&lt;SoftKeyItem&gt;   &lt;Name&gt;#&lt;/Name&gt;   &lt;URL&gt;http://10.2.9.1:99/Department.xml&lt;/URL&gt; &lt;/SoftKeyItem&gt;</pre>	<p>Specify a department/group file for a key:</p> <p>Specify *key, # key or digit key between &lt;Name&gt; and &lt;/Name&gt;;</p> <p>Specify the department/group access URL between &lt;URL&gt; and &lt;/URL&gt;</p>

## Customizing Remote Phone Book File

1. Add contacts in a Department.xml file. Each starts on a new line.

For example,

```
<DirectoryEntry>
```

```
  <Name>Lily </Name>
```

```
  <Telephone label="Mobile Number">12345654626</Telephone >
```

```
</DirectoryEntry>
```

```
<DirectoryEntry>
```

```
  <Name>Jim</Name>
```

```
  <Telephone label="Office Number">654321</Telephone>
```

```
  <Telephone label="Mobile Number">54321665462</Telephone>
```

```
  <Telephone label="Other Number">8608</Telephone>
```

```
  <Extra label="Language">English</Extra>
```

```
</DirectoryEntry>
```

2. You can create multiple department.xml files, rename these files and specify multiple contacts in these files. For example, Market.xml with contact Lily and Jim, Propaganda.xml with other contacts and so on.
3. Save these files and place them on the provisioning server.
4. Copy the department files URLs and specify them in the Menu.xml file.

For example,

```
<MenuItem>
```

```

<Name > Market</Name>
<URL > http://192.168.0.1:99/Market.xml</URL>

</MenuItem>
<SoftKeyItem>

    <Name>1</Name>
    <URL>http://192.168.0.1:99/Propaganda.xml</URL>

</SoftKeyItem>

```

5. Save Menu.xml file and place it to the provisioning server.

## Remote Phone Book Configuration

The following table lists the parameters you can use to configure the remote phone book.

<b>Parameter</b>	remote_phonebook.data.X.url <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the access URL of the remote phone book. <b>Note:</b> For T40P/T40G/T23P/T23G/T21(P) E2/T19(P) E2 phones, the size of a remote phone book file should be less than 750K. For other phones, the size of a remote phone book file should be less than 1.5M.	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Directory > Remote Phone Book > Remote URL	
<b>Parameter</b>	remote_phonebook.data.X.name <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the display name of the remote phone book item.	
<b>Permitted Values</b>	String within 99 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Directory > Remote Phone Book > Display Name	
<b>Parameter</b>	remote_phonebook.data.X.username <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the user name used to access the remote phone book X.	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Parameter</b>	remote_phonebook.data.X.password <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the password used to access the remote phone book X.	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Parameter</b>	remote_phonebook.display_name	<y0000000000xx>.cfg
<b>Description</b>	It configures the display name of the remote phone book. If it is left blank, "Remote Phone Book" will be the display name.	
<b>Permitted</b>	String within 99 characters	

<b>Values</b>	
<b>Default</b>	Blank
<b>Parameter</b>	features.remote_phonebook.enable <y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to perform a remote phone book search for an incoming or outgoing call and display the matched results on the phone screen.
<b>Permitted Values</b>	0-Disabled 1-Enabled
<b>Default</b>	0
<b>Web UI</b>	Directory > Remote Phone Book > Incoming/Outgoing Call Lookup
<b>Parameter</b>	features.remote_phonebook.flash_time <y0000000000xx>.cfg
<b>Description</b>	It configures how often to refresh the local cache of the remote phone book. If it is set to 3600, the phone will refresh the local cache of the remote phone book every 3600 seconds (1 hour). If it is set to 0, the phone will not refresh the local cache of the remote phone book.
<b>Permitted Values</b>	0, Integer from 3600 to 1296000
<b>Default</b>	21600
<b>Web UI</b>	Directory > Remote Phone Book > Update Time Interval(Seconds)
<b>Parameter</b>	features.remote_phonebook.enter_update_enable <y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to refresh the local cache of the remote phone book at a time when accessing the remote phone book.
<b>Permitted Values</b>	0-Disabled 1-Enabled
<b>Default</b>	0

[1]X is the phone book ID. X=1-5.

## Example: Configuring a Remote Phone Book

The following example shows the configuration for the remote phone book.

Customize the "Department.xml" and "Menu.xml" files, and then place these files to the provisioning server "http://192.168.10.25".

### Example

```
remote_phonebook.data.1.url = http://192.168.10.25/Menu.xml
```

```
remote_phonebook.data.1.name = Yealink
```

```
remote_phonebook.data.2.url = http://192.168.10.25/Market.xml
```

```
remote_phonebook.data.2.name = Market
```

After provision, you can go to **Menu > Directory > Remote Phone Book** to access the corporate directory straight from their phones.

## Directory List for Directory/Dir Soft Key

Users can access frequently used directory lists by pressing the **Directory/Dir** soft key when the IP phone is idle. The lists include Local Directory, History, Remote Phone Book and Blocklist by default.

You can add the desired lists to directory list using a directory list file (favorite\_setting.xml).

### Topics

[Directory List File Customization](#)  
[Directory List Configuration](#)  
[Example: Configuring a Directory List](#)

## Directory List File Customization

You can ask the distributor or Yealink FAE for directory template. You can also obtain the directory template online: <http://support.yealink.com/documentFront/forwardToDocumentFrontDisplayPage>.

### Topics

[Directory List File Attributes](#)  
[Customizing Directory List File](#)

## Directory List File Attributes

The following table lists the attributes you can use to add contact lists to the directory list file. We recommend that you do not edit these attributes.

Attributes	Valid Values	Description
id_name	localdirectory history networkcalllog remotedirectory ldap broadsoftdirectory plcmdirectory gabdirectory pabdirectory metaswitchcontacts metaswitchcalllog uc_buddies mobilecontant blocklist googledirectory sharedirectory (only applicable to T57W/T54W/T53W/T53/T53C phones) dectintercom (only applicable to T57W/T54W/T53W/T53/T53C phones) presencelist	The existing directory list (For example, "localdirectory" for the local directory list). <b>Note:</b> Do not edit this field.
display_	Local Directory	The display name of the directory list.

Attributes	Valid Values	Description
name	History Network CallLog Remote Phone Book LDAP Network Directories PhoneBook Global Address Book Personal Address Book Network Contacts Network Call List Buddies Mobile Contacts Blocklist Google Contact Shared Directory (only applicable to T57W/T54W/T53W/T53/T53C phones) Dect Intercom (only applicable to T57WT54W/T53W/T53/T53C phones) Presence List	<b>Note:</b> We recommend that you do not edit this field. Network Directories and Network CallLog lists are hidden for phones in GA firmware, GA firmware which is designed for the BroadWorks environment.
priority	1 to 18 1 is the highest priority.	The display priority of the directory list. <b>Note:</b> This attribute is not applicable for
enable	0/1 <b>0:</b> Disabled <b>1:</b> Enabled	Whether to display this list when you press Directory (Dir) on the phone.
dev	common T19 T21 T23 T40 T40G T27 T27G T29 T41 T42 T42S T41S T46 T46S T48 T48S CP920 T54W T53W T53 T53C T57W T48U T46U T43U T42U T29 T46 T46S T48 T48S T54W T53W T53 T53C T57W T48U T46U T43U T42U T29 T46 T46S T48 T48S T42S T41S T27G CP920 T54W T53W T53 T53C T57W T48U T46U T43U T42U T54W T53W T53 T53C T57W T48U T46U T43U T42U	The applicable phone models of the directory list. Common represents that the desired directory list is applicable to all IP phone models. <b>Note:</b> Do not edit this field.

## Customizing Directory List File

1. Open the directory list XML file.
2. To configure each directory list, edit the values within double quotes in the corresponding field.

For example, enable the local directory, disable the history and specify a priority.

```
<item id_name="localdirectory" display_name="Local Directory" priority="1" enable="1" dev="common"/ >
<item id_name="history" display_name="History" priority="2" enable="0" dev="common"/ >
```



3. Save the change and place this file to the provisioning server.

## Directory List Configuration

The following table lists the parameters you can use to configure the directory list.

<b>Parameter</b>	static.directory_setting.url	<y0000000000xx>.cfg
<b>Description</b>	It configures the access URL of the custom directory file (favorite_setting.xml).	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Directory > Settings > Directory	
<b>Parameter</b>	directory_setting.local_directory.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the users to access the local directory by pressing the <b>Directory/Dir</b> soft key.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Parameter</b>	directory_setting.local_directory.priority	<y0000000000xx>.cfg
<b>Description</b>	It configures the display priority of the local directory.	
<b>Permitted Values</b>	Integer greater than or equal to 0	
<b>Default</b>	1	
<b>Parameter</b>	directory_setting.history.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the users to access the history by pressing the <b>Directory/Dir</b> soft key.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	directory_setting.history.priority	<y0000000000xx>.cfg
<b>Description</b>	It configures the display priority of the call log list.	
<b>Permitted Values</b>	Integer greater than or equal to 0	
<b>Default</b>	2	
<b>Parameter</b>	directory_setting.remote_phone_book.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the users to access the remote phone book by pressing the <b>Directory/Dir</b> soft key.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	

<b>Default</b>	0	
<b>Parameter</b>	directory_setting.remote_phone_book.priority	<y0000000000xx>.cfg
<b>Description</b>	It configures the display priority of the remote phone book.	
<b>Permitted Values</b>	Integer greater than or equal to 0	
<b>Default</b>	4	
<b>Parameter</b>	directory_setting.ldap.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the users to access the LDAP by pressing the <b>Directory/Dir</b> soft key.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	directory_setting.ldap.priority	<y0000000000xx>.cfg
<b>Description</b>	It configures the display priority of the LDAP.	
<b>Permitted Values</b>	Integer greater than or equal to 0	
<b>Default</b>	5	

## Example: Configuring a Directory List

The following example shows the configuration for the directory list.

Customize the directory list file, and then place this file to the provisioning server "http://192.168.10.25".

### Example


*static.directory\_setting.url = http://192.168.10.25/favorite\_setting.xml*

After provisioning, you can press the **Directory/Dir** soft key to access the desired contact list quickly.

## Directory Search Settings

You can configure how the phones search contacts and whether to highlight the matched keywords for contact searching.

The following shows the search results on T46S/G phones:

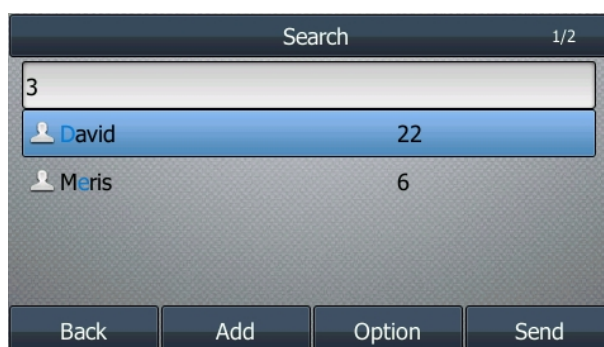

### Topic

[Directory Search Settings Configuration](#)

## Directory Search Settings Configuration

The following table lists the parameters you can use to configure directory search settings.

<b>Parameter</b>	directory.search_type	<y0000000000xx>.cfg
<b>Description</b>	It configures the search type when searching the contact in Local Directory, Remote Phone Book, Network Directory or Blocklist.	
<b>Permitted Values</b>	0-Approximate string matching, the phone will search the contact numbers or names contain the entered character(s). 1-Prefix matching, the phone will search the contact numbers or names start with the entered character(s).	
<b>Default</b>	0	
<b>Parameter</b>	phone_setting.search.highlight_keywords.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to highlight the matched characters in the search results.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	All color screen phones	
<b>Parameter</b>	phone_setting.search_t9.enable <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to perform an intelligent search when searching for contacts in the directory.	
<b>Permitted Values</b>	0-Disabled, the phone only displays the search results of a number match. 1-Enabled	
<b>Default</b>	1	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P and T29G	
<b>Parameter</b>	directory.containing_search.additional_sorting_mode	<y0000000000xx>.cfg
<b>Description</b>	It configures the sorting mode in the search results. <b>Note:</b> It works only if "directory.search_type" is set to 0 (Approximate string matching).	
<b>Permitted Values</b>	0-Sort by ASCII code order. 1-The contacts starting with the searched content are displayed first, and the remaining contacts are displayed in the ASCII code order.	
<b>Default</b>	0	

<sup>[1]</sup>If you change this parameter, the phone will reboot to make the change take effect.

## Number Matching Settings

You can configure the pattern to match the contact numbers/blocklist numbers with the caller's phone number/SMS contact number.

### Topics

[Number Matching Settings Configuration](#)

[Example: Matching Contacts / Blocklist with the Caller's Phone Number Using the Regular Expression](#)

## Number Matching Settings Configuration

The following table lists the parameters you can use to configure number matching settings.

<b>Parameter</b>	phone_setting.reverse_lookup.contact_list.replace.pattern	<y0000000000xx>.cfg
<b>Description</b>	It configures the matching pattern used to identify the replaced string of the contact number / blocklist number.	
<b>Permitted Values</b>	Regular Expression	
<b>Default</b>	Blank	
<b>Related Parameters</b>	phone_setting.reverse_lookup.contact_list.replace.with	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P and T29G	
<b>Parameter</b>	phone_setting.reverse_lookup.contact_list.replace.with	<y0000000000xx>.cfg
<b>Description</b>	It configures the string used to replace the certain matched one of the contact number / blocklist number.	
<b>Permitted Values</b>	String within 512 characters	
<b>Default</b>	Blank	
<b>Related Parameters</b>	phone_setting.reverse_lookup.contact_list.replace.pattern	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P and T29G	
<b>Parameter</b>	phone_setting.reverse_lookup.incoming_call.replace.pattern	<y0000000000xx>.cfg
<b>Description</b>	It configures the matching pattern used to identify the replaced string of the caller's phone number / SMS contact number. <b>Note:</b> SMS feature is not applicable to CP920/CP925/CP935W phones.	
<b>Permitted Values</b>	Regular Expression	
<b>Default</b>	Blank	
<b>Related Parameters</b>	phone_setting.reverse_lookup.incoming_call.replace.with	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P and T29G	
<b>Parameter</b>	phone_setting.reverse_lookup.incoming_call.replace.with	<y0000000000xx>.cfg
<b>Description</b>	It configures the string used to replace the certain matched one of the caller's phone number / SMS contact number. <b>Note:</b> SMS feature is not applicable to CP920/CP925/CP935W phones.	
<b>Permitted Values</b>	String within 512 characters	
<b>Default</b>	Blank	
<b>Related</b>	phone_setting.reverse_lookup.incoming_call.replace.pattern	

<b>Parameters</b>	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P and T29G


## Example: Matching Contacts / Blocklist with the Caller's Phone Number Using the Regular Expression

The following example shows the configuration for matching contacts / blocklist numbers with the caller's phone number using the regular expression.

**Example:**

```
phone_setting.reverse_lookup.contact_list.replace.pattern = 0
phone_setting.reverse_lookup.contact_list.replace.with =
phone_setting.reverse_lookup.incoming_call.replace.pattern = +49
phone_setting.reverse_lookup.incoming_call.replace.with =
```

After provisioning, the contact number "01781296" will be replaced with "1781296". When receiving the incoming call from "+491781296", "+491781296" will be replaced with "1781296". Then the phone screen displays the contact name and the caller's phone number "+491781296".

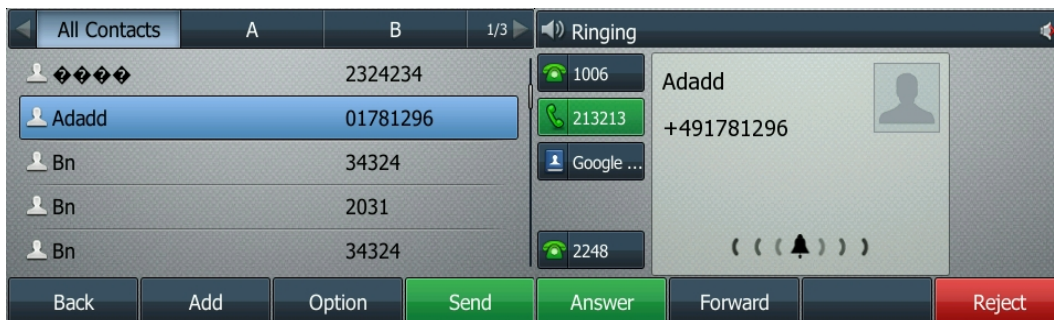

After provisioning, the blocklist number "0123456" will be replaced with "123456". When receiving the incoming call from "+49123456" will be replaced with "123456". Then the phone rejects the call from the phone number "+49123456".

## Enterprise Directory

Yealink phones support enterprise directory to meet the needs of Huawei's corporate communications market.

**Topics**

[Enterprise Directory Configuration](#)

### Enterprise Directory Configuration

The following table lists the parameter that the phone can use to configure enterprise directory.

<b>Parameter</b>	features.enterprise_directory.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the Huawei enterprise directory feature.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	

<b>Devices</b>		
<b>Parameter</b>	features.enterprise_directory.host	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the IP address of the enterprise directory server.</p> <p>You need to configure the complete address (port is required), such as: https://11.11.182.202/services:443.</p> <p><b>Note:</b> It works only if "features.enterprise_directory.enable" is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Web UI</b>	Directory > Enterprise Directory > Enterprise Directory Server Address	
<b>Parameter</b>	features.enterprise_directory_photo.host	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the IP address of the contact avatars of the enterprise contacts.</p> <p>You need to configure the complete address, such as: https://11.11.182.202/photo.</p> <p><b>Note:</b> It works only if "features.enterprise_directory.enable" is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Web UI</b>	Directory > Enterprise Directory > Directory Photo Server Address	
<b>Parameter</b>	features.enterprise_directory_authentication_type	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the authentication type of the enterprise contact.</p> <p><b>Note:</b> It works only if "features.enterprise_directory.enable" is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	<p>0-SIP authentication, use account 1 information to authenticate by default</p> <p>1-Authentication information can be configured separately</p>	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Web UI</b>	Directory > Enterprise Directory > Allow SIP Authentication	
<b>Parameter</b>	features.enterprise_directory.user	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the user name used for authentication of the enterprise directory.</p> <p><b>Note:</b> It works only if "features.enterprise_directory_authentication_type" is set to 1.</p>	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Web UI</b>	Directory > Enterprise Directory > User ID	

---

<b>Parameter</b>	features.enterprise_directory.password	<y0000000000xx>.cfg
<b>Description</b>	It configures the password used for authentication of the enterprise directory. <b>Note:</b> It works only if "features.enterprise_directory.authentication_type" is set to 1.	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Web UI</b>	Directory > Enterprise Directory > Password	

## Call Log

Yealink phones record and maintain phone events to a call log, also known as a call list.

Call log consists of four lists: Missed Calls, Placed Calls, Received Calls, and Forwarded Calls. Each call log list supports up to 100 entries.

### Topics

- [Call Log Display](#)
- [Call Log Configuration](#)
- [Call Logs Backup](#)

## Call Log Display

You can access the call history information via the web user interface at the path: **Directory > Phone Call Info** or via the phone user interface at the path: **Menu > History**.

The following table describes the detailed call log information:

Display Field	Description
Name	Shows the name of the remote party.
Number	Shows the number of the remote party.
Time	Shows the call initiation time.
Line	Shows which line is used.
Duration	Shows the duration of the call.
Relation	Shows what happened to the call. The valid display contents are: <ul style="list-style-type: none"> <li>• <b>Rejected</b>: Reject an incoming call.</li> <li>• <b>Forward to X</b>: Forward an incoming call to X. For example, <b>Forward to 1048</b> means you forward an incoming call to 1048.</li> <li>• <b>Busy</b>: The outgoing call is rejected.</li> <li>• <b>Transfer to X</b>: Transfer a call to X. For example, <b>Transfer to 1048</b> means you transfer a call to 1048.</li> <li>• <b>X</b>: Answer a transferred/forwarded call from remote party X; your call is transferred/forwarded to X. For example, <b>1048</b> means you answer a transferred/forwarded call from remote party 1048.</li> </ul> It is configurable by “features.calllog_detailed_information”.

### Related Topic

- [Call Log Configuration](#)

## Call Log Configuration

The following table lists the parameters you can use to change the call log settings.

Parameter	features.save_call_history	<y0000000000xx>.cfg
Description	It enables or disables the phone to log the call history (missed calls, placed calls, received calls and forwarded calls) in the call lists. <b>Note:</b> To log the missed calls, “account.X.missed_calllog” should be set to 1 (Enabled).	



<b>Permitted Values</b>	0-Disabled, the phone cannot log the placed calls, received calls, missed calls and the forwarded calls in the call lists. 1-Enabled	
<b>Default</b>	1	
<b>Web UI</b>	Features > General Information > Save Call Log	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Features > Others > General > History Record  <u>CP925/CP935W:</u> More > Features > History Settings > History Record  <u>Black-and-white Screen Phones:</u> Menu > Features > History Setting > History Record	
<b>Parameter</b>	account.X.missed_calllog <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the phone to record missed calls for account X. <b>Note:</b> It works only if "features.save_call_history" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Web UI</b>	Account > Basic > Missed Call Log	
<b>Parameter</b>	pstn.account.X.missed_calllog <sup>[2]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the phone to indicate and record missed calls for PSTN account X. <b>Note:</b> It works only if "features.save_call_history" is set to 1 (Enabled). The prompt message displays only if "features.missed_call_popup.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled, the phone does not display a prompt message and an indicator icon on the idle screen and log the missed call in the Missed Calls list when it misses calls. 1-Enabled, the phone displays a prompt message and an indicator icon on the idle screen and logs the missed call in the Missed Calls list when it misses calls.	
<b>Default</b>	1	
<b>Supported Devices</b>	CP925, CP920, T57W, T54W, T53W, T53, T53C	
<b>Web UI</b>	PSTN Account > Basic > Missed Call Log	
<b>Parameter</b>	features.call_log_show_num	<y0000000000xx>.cfg
<b>Description</b>	It configures the display type of the other parties' information in the call log lists. <b>Note:</b> It works only if "features.save_call_history" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Name, the name is displayed preferentially; if there is no name, the number is displayed 1-Number 2-Name & Number, the name and number are displayed; if there is no name, the number is displayed	
<b>Default</b>	0	
<b>Web UI</b>	Features > General Information > Call List Show Number	
<b>Parameter</b>	features.calllog_detailed_information	<y0000000000xx>.cfg

<b>Description</b>	<p>It enables or disables the phone to indicate what happened to the call in the call log lists.</p> <p>It is applicable to the following scenarios:</p> <ul style="list-style-type: none"> <li>Reject an incoming call</li> <li>Forward an incoming call</li> <li>The outgoing call is rejected</li> <li>Transfer a call</li> <li>Answer a transferred/forwarded call from the remote party; your call is transferred/forwarded to another party.</li> </ul> <p><b>Note:</b> It works only if "features.save_call_history" is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	<p>0-Disabled</p> <p>1-Enabled, you can get the detailed call-disposition information . at the path via the phone user interface: <b>History &gt; Option &gt; Detail &gt; Relation.</b></p>	
<b>Default</b>	1	
<b>Parameter</b>	features.save_init_num_to_history.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to log the transfer party's phone number in the call history list.	
<b>Permitted Values</b>	<p>0-Disabled, the phone will log the transfer-to party's phone number in the call history list.</p> <p>1-Enabled</p>	
<b>Default</b>	1	
<b>Parameter</b>	features.call_out_history_by_off_hook.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to dial out automatically once you go off-hook or press the Speakerphone key in the call history list.	
<b>Permitted Values</b>	<p>0-Disabled</p> <p>1-Enabled</p>	
<b>Default</b>	0	
<b>Parameter</b>	features.call_log_merge.enable	<y0000000000xx>.cfg
<b>Description</b>	<p>It enables or disables the phone to merge the same history records.</p> <p><b>Note:</b> The merged entry only displays the initiation time of the last call.</p>	
<b>Permitted Values</b>	<p>0-Disabled, each call is logged individually in the calls list.</p> <p>1-Enabled, consecutive incomplete calls to/from the same party and in the same direction are merged into one record in the calls list. The merged entry displays the number of consecutive calls.</p>	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P and T29G	
<b>Parameter</b>	features.local_calllog.received.replace_rule	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the string of the digit map to be applied to the numbers dialed from the call history list.</p> <p><b>Example:</b></p> <p>features.local_calllog.received.replace_rule = &lt;00:+&gt;x. &lt;5:1&gt;xx</p> <p>When you call the contact 001234567 from the call history list, the number +1234567 will be dialed out because "001234567" matches the "&lt;00:+&gt;x." in the digit map;</p> <p>When you call the contact 532 from the call history list, the number 132 will be dialed out because "532" matches the "&lt;5:1&gt;xx" in the digit map.</p> <p><b>Note:</b> The records in the Placed Calls are not matched.</p>	

<b>Permitted Values</b>	String
<b>Default</b>	Blank
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P and T29G

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

[2]X is the PSTN account ID. X=1-2.

**Related Topic**

[Basic Regular Expression Syntax for Digit Map](#)

## Call Logs Backup

Yealink phones support storing all call logs to a call log file named <MAC>-calllog.xml. You can back up this file to the server, avoiding data loss. Once the call logs update, the phone will automatically upload this file to the provisioning server or a specific server. If a call log file exists on the server, it will be overridden. The phone will request to download the <MAC>-calllog.xml file according to its MAC address from the server during auto provisioning.

The call log file is named after the MAC address of the IP phone. For example, if the MAC address of an IP phone is 00156574B150, the name of the call log file is 00156574B150-calllog.xml (uppercase).

**Tip:** MAC address, a unique 12-digit serial number is assigned to each phone. You can obtain it from the bar code on the back of the IP phone.

The following table lists the parameters you can use to back up the call log.

<b>Parameter</b>	static.auto_provision.local_calllog.backup.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to upload the <MAC>-calllog.xml file to the server each time the call logs update and download the <MAC>-calllog.xml file from the server during auto provisioning.	
<b>Permitted Values</b>	0-Disabled, the phone does not upload/download the call log file "<MAC>-calllog.xml" to the server. 1-Enabled, the phone uploads the call log file "<MAC>-calllog.xml" to the specific path configured by the parameter "static.auto_provision.local_calllog.backup.path" each time the call logs update; and downloads the call logs in the "<MAC>-calllog.xml" according to its MAC address from the specific path during auto provisioning.	
<b>Default</b>	0	
<b>Parameter</b>	static.auto_provision.local_calllog.backup.path	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures a path or URL for the phone to upload/download the &lt;MAC&gt;-calllog.xml file.</p> <p>If it is left blank, the phone connects to the provisioning server URL, and uploads/downloads the contact file "&lt;MAC&gt;-calllog.xml".</p> <p><b>Example:</b></p> <p>static.auto_provision.local_calllog.backup.path = http://192.168.1.20/calllog</p> <p>Once the call logs update, the phone will upload the call log file to the specified path "http://192.168.1.20/calllog".</p> <p>During auto provisioning, the phone downloads the call log file "&lt;MAC&gt;-calllog.xml" from the specified path "http://192.168.1.20/calllog".</p> <p><b>Note:</b> It works only if "static.auto_provision.local_calllog.backup.enable" is set to 1 (Enabled).</p>	

<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Parameter</b>	static.auto_provision.local_calllog.write_delay.terminated	<y0000000000xx>.cfg
<b>Description</b>	It configures the delay time (in seconds) for the phone to upload the <MAC>-calllog.xml file each time the call logs update. <b>Note:</b> It works only if “static.auto_provision.local_calllog.backup.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	Integer from 10 to 600	
<b>Default</b>	60	
<b>Parameter</b>	static.auto_provision.custom.upload_method	<y0000000000xx>.cfg
<b>Description</b>	It configures the way the phone uploads the <MAC>-local.cfg file, <MAC>-calllog.xml file or <MAC>-contact.xml file to the provisioning server (for HTTP/HTTPS server only).	
<b>Permitted Values</b>	0-PUT 1-POST	
<b>Default</b>	0	

## Call Features

This chapter shows you how to configure the call feature on Yealink phones.

### Topics

[Dial Plan Defined by Four Patterns \(Old Dial Plan Mechanism\)](#)

[Dial Plan Defined by Digit Map \(New Dial Plan Mechanism\)](#)

[Emergency Dialplan and Enhanced 911](#)

[Hotline](#)

[Off Hook Hot Line Dialing](#)

[Live Dialpad](#)

[Auto Redial](#)

[Recall Configuration](#)

[Speed Dial](#)

[Password Dial](#)

[Call Timeout](#)

[Anonymous Call](#)

[Call Number Filter](#)

[IP Address Call](#)

[Ignoring Incoming Calls](#)

[Off Hook Answering](#)

[Auto Answer](#)

[Anonymous Call Rejection](#)

[Call Waiting](#)

[Do Not Disturb \(DND\)](#)

[Multiple Call Appearances](#)

[Call Hold](#)

[Call Mute](#)

[Call Forward](#)

[Call Transfer](#)

[Conference](#)

[USB Recording](#)

[Multicast Paging](#)

## Dial Plan Defined by Four Patterns (Old Dial Plan Mechanism)

Dial plan is a string of characters that governs the way how the phones process the inputs received from the IP phone's keypads. You can use the regular expression to define the dial plan.

It is only applicable to W90 multi-cell system.

Yealink phones support four patterns:

- **Replace rule:** is an alternative string that replaces the numbers entered by the user. Yealink phones support up to 100 replace rules.
- **Dial now:** is a string used to match numbers entered by the user. When entered numbers match the predefined dial now rule, the phone will automatically dial out the numbers without pressing the send key. Yealink phones support up to 100 dial now rules.
- **Area code:** are also known as Numbering Plan Areas (NPAs). They usually indicate geographical areas in one country. When entered numbers match the predefined area code rule, the phone will automatically add the area code before the numbers when dialing out them. Yealink phones only support one area code rule.
- **Block out:** prevents users from dialing out specific numbers. When entered numbers match the predefined block out rule, the phone screen prompts "Forbidden Number". Yealink phones support up to 10 block out rules.

You can configure these four patterns via the web user interface or auto provisioning. For replace rule and dial now, you can select to add the rule one by one or using the template file to add multiple rules at a time.

**Note:** If you enable a new dial plan mechanism, old dial plan will be ignored. For more information on the new dial plan, refer to [Dial Plan Defined by Digit Map \(New Dial Plan Mechanism\)](#).

## Topics

[Basic Regular Expression Syntax for Four Patterns](#)  
[Replace Rule File Customization](#)  
[Dial Now File Customization](#)  
[Replace Rule Configuration](#)  
[Dial Now Configuration](#)  
[Area Code Configuration](#)  
[Block Out Configuration](#)  
[Example: Adding Replace Rules Using a Replace Rule File](#)

## Basic Regular Expression Syntax for Four Patterns

You need to know the following basic regular expression syntax when creating an old dial plan:

Regular Expression	Description
.	The dot "." can be used as a placeholder or multiple placeholders for any string. Example: "12." would match "123", "1234", "12345", "12abc", and so on.
x	The "x" can be used as a placeholder for any character. Example: "12x" would match "121", "122", "123", "12a", and so on.
-	The dash "-" can be used to match a range of characters within the brackets. Example: "[5-7]" would match the number "5", "6" or "7".
,	The comma "," can be used as a separator within the bracket. Example: "[2,5,8]" would match the number "2", "5" or "8".
[]	The square bracket "[]" can be used as a placeholder for a single character which matches any of a set of characters. Example: "91[5-7]1234" would match "9151234", "9161234", "9171234".
()	The parenthesis "(" )" can be used to group together patterns, for instance, to logically combine two or more patterns. Example: "([1-9])([2-7])3" would match "923", "153", "673", and so on.
\$	The "\$" followed by the sequence number of a parenthesis means the characters placed in the parenthesis. The sequence number stands for the corresponding parenthesis. Example: A replace rule configuration, Prefix: "001(xxx)45(xx)", Replace: "9001\$145\$2". When you dial out "0012354599" on your phone, the phone will replace the number with "9001 <b>235</b> 45 <b>99</b> ". "\$1" means 3 digits in the first parenthesis, that is, "235". "\$2" means 2 digits in the second parenthesis, that is, "99".

## Replace Rule File Customization

The replace rule file helps create multiple replace rules. At most 100 replace rules can be added to the IP phone.

You can ask the distributor or Yealink FAE for the replace rule file template. You can also obtain the replace rule file template online: <http://support.yealink.com/documentFront/forwardToDocumentFrontDisplayPage>.

## Topics

[Replace Rule File Attributes](#)  
[Customizing the Replace Rule File](#)

## Replace Rule File Attributes

The following table lists the attributes you can use to add replace rules to the replace rule file:

Attributes	Description
Prefix	Specify the number to be replaced.
Replace	Specify the alternate string instead of what the user enters.
LineID	<p>Specify a registered line to apply the replace rule.</p> <p>Valid Values: 0~16</p> <p>0, 1 (for CP920/CP925/CP935W)</p> <p>0 stands for all lines;</p> <p>1~16 stand for line1~line16 (vary by phone models:  T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G: 1~16; T53W/T53/T53C/T43U/T42U/T42S/T42G:  1~12; T41P/T41S/T27G: 1~6; T33P/T33G: 1~4; T40P/T40G/T23P/T23G: 1~3; T31P/T31G/T31/T21(P)  E2: 1~2; T30P/T30/T19(P) E2/CP920/CP925/CP935W: 1)</p> <p>Multiple line IDs are separated by commas.</p>

## Customizing the Replace Rule File

1. Open the replace rule file.
2. To add a replace rule, add `<Data Prefix="" Replace="" LineID="">` to the file. Each starts on a new line.
3. Specify the values within double quotes.  
For example,  
`<Data Prefix="2512" Replace="05922512" LineID="1"/>`
4. Save the changes and place this file to the provisioning server.

## Dial Now File Customization

The dial now file helps create multiple dial now rules. At most 100 dial now rules can be added to the IP phone.

You can ask the distributor or Yealink FAE for dial now file template. You can also obtain the dial now file template online: <http://support.yealink.com/documentFront/forwardToDocumentFrontDisplayPage>.

### Topics

[Dial Now File Attributes](#)

[Customizing the Dial Now File](#)

## Dial Now File Attributes

The following table lists the attributes you can use to add dial-now rules to the dial now file:

Attributes	Description
DialNowRule	Specify the dial-now number.
LineID	<p>Specify a registered line to apply the dial-now rule.</p> <p>Valid Values: 0~16</p> <p>0, 1 (for CP920/CP925/CP935W)</p> <p>0 stands for all lines;</p> <p>1~16 stand for line1~line16 (vary by phone models:  T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G: 1~16;  T53W/T53/T53C/T43U/T42U/T42S/T42G: 1~12; T41P/T41S/T27G: 1~6; T33P/T33G: 1~4;  T40P/T40G/T23P/T23G: 1~3; T31P/T31G/T31/T21(P) E2: 1~2; T30P/T30/T19(P)  E2/CP920/CP925/CP935W: 1)</p> <p>Multiple line IDs are separated by commas.</p>

## Customizing the Dial Now File

1. Open the dial now file.
2. To add a dial-now rule, add `<Data DialNowRule="" LineID="" />` to the file. Each starts on a new line.
3. Specify the values within double quotes.

For example,

```
<Data DialNowRule="1001" LineID="0" />
```

4. Save the changes and place this file to the provisioning server.

## Replace Rule Configuration

You can configure replace rules either one by one or in batch using a replace rule template.

The following table lists the parameters you can use to configure the replace rule.

<b>Parameter</b>	dialplan.replace.prefix.X <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the entered number to be replaced. <b>Note:</b> It works only if "dialplan.digitmap.enable" and "account.X.dialplan.digitmap.enable" are set to 0 (Disabled).	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Settings > Dial Plan > Replace Rule > Prefix	
<b>Parameter</b>	dialplan.replace.replace.X <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the alternate number to replace the entered number. The entered number is configured by "dialplan.replace.prefix.X". <b>Note:</b> It works only if "dialplan.digitmap.enable" and "account.X.dialplan.digitmap.enable" are set to 0 (Disabled).	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Settings > Dial Plan > Replace Rule > Replace	
<b>Parameter</b>	dialplan.replace.line_id.X <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the desired line to apply the replace rule. The digit 0 stands for all lines. If it is left blank, the replace rule will apply to all lines on the phone. Multiple line IDs are separated by commas. <b>Note:</b> It works only if "dialplan.digitmap.enable" and "account.X.dialplan.digitmap.enable" are set to 0 (Disabled).	
<b>Permitted Values</b>	0 to 16 (for T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G) 0 to 12 (for T53W/T53/T53C/T43U/T42U/T42S/T42G) 0 to 6 (for T41P/T41S/T27G) 0 to 4 (for T33P/T33G) 0 to 3 (for T40P/T40G/T23P/T23G) 0 to 2 (for T31P/T31G/T31/T21(P) E2) 0, 1 (for T30P/T30/T19(P) E2/CP920/CP925/CP935W)	



<b>Default</b>	Blank
<b>Web UI</b>	Settings > Dial Plan > Replace Rule > Account
<b>Parameter</b>	dialplan_replace_rule.url <y0000000000xx>.cfg
<b>Description</b>	It configures the access URL of the replace rule template file. For customizing replace rule template file, refer to <a href="#">Replace Rule File Customization</a> . <b>Note:</b> It works only if “dialplan.digitmap.enable” and “account.X.dialplan.digitmap.enable” are set to 0 (Disabled).
<b>Permitted Values</b>	URL within 511 characters
<b>Default</b>	Blank

[1]X is from 1 to 100.

## Dial Now Configuration

You can configure dial now rules either one by one or in batch using a dial now template.

The following table lists the parameters you can use to configure the dial now.

<b>Parameter</b>	dialplan.dialnow.rule.X <sup>[1]</sup> <y0000000000xx>.cfg
<b>Description</b>	It configures the dial now rule (the string used to match the numbers entered by the user). When entered numbers match the predefined dial now rule, the phone will automatically dial out the numbers without pressing the send key. <b>Example:</b> dialplan.dialnow.rule.1 = 123 <b>Note:</b> It works only if “dialplan.digitmap.enable” and “account.X.dialplan.digitmap.enable” are set to 0 (Disabled).
<b>Permitted Values</b>	String within 511 characters
<b>Default</b>	Blank
<b>Web UI</b>	Settings > Dial Plan > Dial Now > Rule
<b>Parameter</b>	dialplan.dialnow.line_id.X <sup>[1]</sup> <y0000000000xx>.cfg
<b>Description</b>	It configures the desired line to apply the dial now rule. The digit 0 stands for all lines. If it is left blank, the dial-now rule will apply to all lines on the phone. <b>Note:</b> Multiple line IDs are separated by commas. It works only if “dialplan.digitmap.enable” and “account.X.dialplan.digitmap.enable” are set to 0 (Disabled).
<b>Permitted Values</b>	0 to 16 (for T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G) 0 to 12 (for T53W/T53/T53C/T43U/T42U/T42S/T42G) 0 to 6 (for T41P/T41S/T27G) 0 to 4 (for T33P/T33G) 0 to 3 (for T40P/T40G/T23P/T23G) 0 to 2 (for T31P/T31G/T31/T21(P) E2) 0, 1 (for T30P/T30/T19(P) E2/CP920/CP925/CP935W)

<b>Default</b>	Blank	
<b>Web UI</b>	Settings > Dial Plan > Dial Now > Account	
<b>Parameter</b>	phone_setting.dialnow_delay	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the delay time (in seconds) for the dial now rule.</p> <p>When entered numbers match the predefined dial now rule, the phone will automatically dial out the entered number after the designated delay time.</p> <p>If it is set to 0, the phone will automatically dial out the entered number immediately.</p> <p><b>Note:</b> It works only if “dialplan.digitmap.enable” and “account.X.dialplan.digitmap.enable” are set to 0 (Disabled).</p>	
<b>Permitted Values</b>	Integer from 0 to 14	
<b>Default</b>	1	
<b>Web UI</b>	Features > General Information > Time Out for Dial Now Rule	
<b>Parameter</b>	dialplan_dialnow.url	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the access URL of the dial now template file.</p> <p>For customizing dial now template file, refer to <a href="#">Dial Now File Customization</a>.</p> <p><b>Note:</b> It works only if “dialplan.digitmap.enable” and “account.X.dialplan.digitmap.enable” are set to 0 (Disabled).</p>	
<b>Permitted Values</b>	String within 511 characters	
<b>Default</b>	Blank	
<b>Parameter</b>	dialplan.transfer.mode	<y0000000000xx>.cfg
<b>Description</b>	It configures the transfer type the phone will perform when the entered transferee numbers match the Dial Now rule of the dial plan or the predefined string of the digit map.	
<b>Permitted Values</b>	<p>0-Semi-attended Transfer/Attended Transfer</p> <p>1-Blind Transfer</p>	
<b>Default</b>	0	
<b>Related Parameters</b>	<p>dialplan.dialnow.rule.X</p> <p>dialplan.digitmap.string</p> <p>account.X.dialplan.digitmap.string</p>	

[1]X is from 1 to 100.

## Area Code Configuration

The following table lists the parameters you can use to configure the area code.

<b>Parameter</b>	dialplan.area_code.code	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the area code to be added before the entered numbers when dialing out.</p> <p><b>Note:</b> The length of the entered number must be between the minimum length configured by the parameter “dialplan.area_code.min_len” and the maximum length configured by the parameter “dialplan.area_code.max_len”. It works only if “dialplan.digitmap.enable” and “account.X.dialplan.digitmap.enable” are set to 0 (Disabled).</p>	

<b>Permitted Values</b>	String within 16 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Settings > Dial Plan > Area Code > Code	
<b>Parameter</b>	dialplan.area_code.min_len	<y0000000000xx>.cfg
<b>Description</b>	It configures the minimum length of the entered number. <b>Note:</b> It works only if “dialplan.digitmap.enable” and “account.X.dialplan.digitmap.enable” are set to 0 (Disabled).	
<b>Permitted Values</b>	Integer from 1 to 15	
<b>Default</b>	1	
<b>Web UI</b>	Settings > Dial Plan > Area Code > Min Length (1-15)	
<b>Parameter</b>	dialplan.area_code.max_len	<y0000000000xx>.cfg
<b>Description</b>	It configures the maximum length of the entered number. <b>Note:</b> The value must be larger than the minimum length. It works only if “dialplan.digitmap.enable” and “account.X.dialplan.digitmap.enable” are set to 0 (Disabled).	
<b>Permitted Values</b>	Integer from 1 to 15	
<b>Default</b>	15	
<b>Web UI</b>	Settings > Dial Plan > Area Code > Max Length (1-15)	
<b>Parameter</b>	dialplan.area_code.line_id	<y0000000000xx>.cfg
<b>Description</b>	It configures the desired line to apply the area code rule. The digit 0 stands for all lines. If it is left blank, the area code rule will apply to all lines on the IP phone. <b>Note:</b> Multiple line IDs are separated by commas. It works only if “dialplan.digitmap.enable” and “account.X.dialplan.digitmap.enable” are set to 0 (Disabled).	
<b>Permitted Values</b>	0 to 16 (for T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G) 0 to 12 (for T53W/T53/T53C/T43U/T42U/T42S/T42G) 0 to 6 (for T41P/T41S/T27G) 0 to 4 (for T33P/T33G) 0 to 3 (for T40P/T40G/T23P/T23G) 0 to 2 (for T31P/T31G/T31/T21(P) E2) 0, 1 (for T30P/T30/T19(P) E2/CP920/CP925/CP935W)	
<b>Default</b>	Blank	
<b>Web UI</b>	Settings > Dial Plan > Area Code > Account	

## Block Out Configuration

The following table lists the parameters you can use to configure the block out.

<b>Parameter</b>	dialplan.block_out.number.X <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the block out numbers.	

	<p><b>Example:</b></p> <p>dialplan.block_out.number.1 = 4321</p> <p>When you dial the number “4321” on your phone, the dialing will fail and the phone screen will prompt “Forbidden Number”.</p> <p><b>Note:</b> It works only if “dialplan.digitmap.enable” and “account.X.dialplan.digitmap.enable” are set to 0 (Disabled).</p>	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Settings > Dial Plan > Block Out > BlockOut NumberX <sup>[1]</sup>	
<b>Parameter</b>	dialplan.block_out.line_id.X <sup>[2]</sup>	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the desired line to apply the block out rule. The digit 0 stands for all lines. If it is left blank, the block out rule will apply to all lines on the IP phone.</p> <p><b>Note:</b> Multiple line IDs are separated by commas. It works only if “dialplan.digitmap.enable” and “account.X.dialplan.digitmap.enable” are set to 0 (Disabled).</p>	
<b>Permitted Values</b>	<p>0 to 16 (for T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G)</p> <p>0 to 12 (for T53W/T53/T53C/T43U/T42U/T42S/T42G)</p> <p>0 to 6 (for T41P/T41S/T27G)</p> <p>0 to 4 (for T33P/T33G)</p> <p>0 to 3 (for T40P/T40G/T23P/T23G)</p> <p>0 to 2 (for T31P/T31G/T31/T21(P) E2)</p> <p>0, 1 (for T30P/T30/T19(P) E2/CP920/CP925/CP935W)</p>	
<b>Default</b>	Blank	
<b>Web UI</b>	Settings > Dial Plan > Block Out > Account	

<sup>[1]</sup>X is from 1 to 10.

## Example: Adding Replace Rules Using a Replace Rule File

The following example shows the configuration for adding replace rules.

Customize the replace rule template file and place this file to the provisioning server “http://192.168.10.25”.

### Example

*dialplan\_replace\_rule.url = http://192.168.10.25/DialPlan.xml*

After provisioning, the rules defined in this file are added to the IP phone, and you can use the replace rules on the phone.

## Dial Plan Defined by Digit Map (New Dial Plan Mechanism)

Digit maps, described in [RFC 3435](#), are defined by a single string or a list of strings. If a number entered matches any string of a digit map, the call is automatically placed. If a number entered matches no string - an impossible match - you can specify the phone's behavior. You can specify the digit map timeout, the period of time before the entered number is dialed out.

## Topics

[Basic Regular Expression Syntax for Digit Map](#)

[Digit Map for All Lines Configuration](#)

[Digit Map for a Specific Line Configuration](#)

## Basic Regular Expression Syntax for Digit Map

You need to know the following basic regular expression syntax when creating a new dial plan:

T	<p>The timer letter “T” indicates a timer expiry. If “T” is used alone (for example, 123T), the default timeout value of 3 will be used. If “T” is not used alone (for example, 123&lt;Tx&gt;, x can be a digit from 0 to 99), a complete match occurs when waiting x seconds after inputting 123.</p> <p><b>Note:</b> It is not applicable to emergency numbers (phone_setting.phone_lock.emergency.number_rule).</p>
x	<p>The “x” can be used as a placeholder for any digit from 0 to 9.</p> <p>Example:</p> <p>“12x” would match “121”, “122”, “123”, and so on.</p>
[]	<p>The square bracket “[]” can be used as a placeholder for a single character which matches any of a set of characters. Example:</p> <p>“91[5-7]1234” would match “9151234”, “9161234”, “9171234”.</p>
-	<p>The dash “-” can be used to match a range of digits within the brackets.</p> <p>Example:</p> <p>“[35-7]” would match the number “3”, “5”, “6” or “7”.</p> <p><b>Note:</b> The digits must be concrete, for example, [3-x] is invalid.</p>
.	<p>The dot “.” can be used as a placeholder or multiple placeholders, including zero, of occurrences of the preceding construct.</p> <p>Examples:</p> <p>“123.T” would match “123”, “1233”, “12333”, “123333”, and so on.</p> <p>“x.T” would match an arbitrary number.</p> <p>“[x*#+].T” would match an arbitrary character.</p> <p><b>Note:</b> If the string ends with a dot (for example, 123.), a match will occur immediately after inputting the characters before the dot (e., 123) since the dot allows for zero occurrences of the preceding construct. Therefore, we recommend that you add a letter “T” after the dot (for example, 123.T) for inputting more characters.</p>
R	<p>The letter “R” indicates that certain matched strings are replaced. Using an RRR syntax, you can replace the digits between the first two Rs with the digits between the last two Rs. Example:</p> <p>“R12R234R” would replace <b>12</b> with <b>234</b>.</p>
<:>	<p>The letter “:” in the angle bracket indicates that certain matched strings are replaced. Using the &lt;:&gt; syntax, you can replace the digits before the colon with the digits after the colon.</p> <p>Example:</p> <p>“&lt;12:234&gt;” would replace <b>12</b> with <b>234</b>. It is the same with R12R234R.</p>
!	<p>The exclamation mark “!” can be used to prevent users from dialing out specific numbers. It can only be put last in each string of the digit map.</p> <p>Example:</p> <p>“235x!” would match “2351”, “2352”, “2353”, and so on. The number starting with 235 will be blocked to dial out.</p>
,	<p>The comma “,” can be used as a separator to generate a secondary dial tone.</p>

	<p>Example:</p> <p>"&lt;9,:55&gt;xx", after entering digit "9", secondary dial tone plays and you can complete the remaining two-digit number.</p> <p><b>Note:</b> The secondary dial tone can be customized. For more information, refer to <a href="#">Tones</a>.</p>
A	<p>The letter "A" indicates the account that is applied to the digit map. You can use A alone or a combination of A and account ID (for example, &lt;A1&gt;).</p> <p>Example:</p> <p>"123A", the default account will be applied to the digit map.</p> <p>"123&lt;A2&gt;", the second account will be applied to the digit map.</p> <p><b>Note:</b> It is not applicable to the digit map on a per-line basis. It is also not applicable to emergency numbers (phone_setting.phone_lock.emergency.number_rule).</p>

## Digit Map for All Lines Configuration

The following table lists the parameters you can use to configure the digit map for all lines.

<b>Parameter</b>	dialplan.digitmap.enable	<y0000000000xx>.cfg
<b>Description</b>	<p>It enables or disables the digit map feature.</p> <p><b>Note:</b> The value configured by the parameter "account.X.dialplan.digitmap.enable" takes precedence over that configured by this parameter.</p>	
<b>Permitted Values</b>	<p>0-Disabled</p> <p>1-Enabled</p>	
<b>Default</b>	0	
<b>Parameter</b>	dialplan.digitmap.string	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the digit map pattern used for the dial plan.</p> <p><b>Example:</b></p> <p>dialplan.digitmap.string = &lt;[2-9]x:86&gt;3.T 0x.! 1xxx</p> <p><b>Note:</b> The string must be compatible with the digit map feature of MGCP described in 2.1.5 of RFC 3435. It works only if "dialplan.digitmap.enable" or "account.X.dialplan.digitmap.enable" is set to 1 (Enabled). The value configured by the parameter "account.X.dialplan.digitmap.string" takes precedence over that configured by this parameter.</p>	
<b>Permitted Values</b>	String within 2048 characters	
<b>Default</b>	[2-9]11   0T   011xxx.T   [0-1][2-9]xx xxxxxxx   [2-9]xx xxxxxxx   [2-9]xxxT   **x.T   +x.T   00x.T	
<b>Parameter</b>	dialplan.digitmap.interdigit_long_timer	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the time (in seconds) for the phone to wait before dialing an entered number if it matches part of any string of the digit map.</p> <p>If it is set to 0, the phone will not dial the entered number if only a partial match exists.</p> <p>The value of this parameter should be greater than that configured by the parameter "dialplan.digitmap.interdigit_short_timer".</p> <p>For example:</p> <p>dialplan.digitmap.string = 1xxT xxxxx&lt;T1&gt;</p> <p>dialplan.digitmap.interdigit_long_timer = 10</p>	

	<p>dialplan.digitmap.interdigit_short_timer = 5</p> <p>When you enter 1, it matches part of two-digit maps, the phone tries to wait 10 seconds and then dials out 1 if no numbers entered;</p> <p>When you enter 15, it also matches part of two-digit maps, the phone tries to wait 10 seconds and then dials out 15 if no numbers entered;</p> <p>When you enter 153, it also matches part of two-digit maps, the phone tries to wait 10 seconds. But after waiting for 5 seconds, it completely matches the first digit map and then immediately dials out 153.</p> <p><b>Note:</b> It works only if “dialplan.digitmap.enable” or “account.X.dialplan.digitmap.enable” is set to 1 (Enabled). The value configured by the parameter “account.X.dialplan.digitmap.interdigit_long_timer” takes precedence over that configured by this parameter.</p>	
<b>Permitted Values</b>	Integer from 0 to 255	
<b>Default</b>	10	
<b>Parameter</b>	dialplan.digitmap.interdigit_short_timer	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the timeout interval (in seconds) for any string of digit map.</p> <p>The phone will wait this many seconds before matching the entered digits to the dial plan and placing the call.</p> <p><b>Note:</b> It works only if “dialplan.digitmap.enable” or “account.X.dialplan.digitmap.enable” is set to 1 (Enabled). The value configured by the parameter “account.X.dialplan.digitmap.interdigit_short_timer” takes precedence over that configured by this parameter.</p>	
<b>Permitted Values</b>	<p><b>Single configuration</b> (configure a specific value for the timer letter “T” for all strings with “T” of the digit map)</p> <p><b>Example:</b></p> <p>dialplan.digitmap.interdigit_short_timer = 5</p> <p>If “dialplan.digitmap.string” is set to &lt;[2-9]x:86&gt;3.T 0T, the phone will wait 5 seconds before matching the entered digits to this dial plan and placing the call.</p> <p><b>Distribution configuration</b> (configure a string of positive integers separated by “ ” for each string of the digit map in the corresponding position)</p> <p>If there are more digit maps than timeout values, the last timeout is applied to the extra digit map. If there are more timeout values than digit maps, the extra timeout values are ignored.</p> <p><b>Example:</b></p> <p>dialplan.digitmap.interdigit_short_timer = 4 5 3 6 2 1</p> <p>If “dialplan.digitmap.string” is set to &lt;[2-9]x:86&gt;3.T 2T 1xxT 0x.  [2-9]1 1T, 4 is applied to the “&lt;[2-9]x:86&gt;3.T” digit map, 5 is applied to “2T” digit map, 3 is applied to “1xxT” digit map, 6 is applied to “0x.!” digit map, 2 is applied to the “[2-9]1 1T” digit map, the last digit 1 is ignored.</p>	
<b>Default</b>	3	
<b>Parameter</b>	dialplan.digitmap.no_match_action	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the behavior when an impossible digit map match occurs.</p> <p><b>Note:</b> It works only if “dialplan.digitmap.enable” or “account.X.dialplan.digitmap.enable” is set to 1 (Enabled). The value configured by the parameter “account.X.dialplan.digitmap.no_match_action” takes precedence over that configured by this parameter.</p>	
<b>Permitted Values</b>	<p><b>0</b>-prevent users from entering a number and immediately dial out the entered numbers</p> <p><b>1</b>-the dialing will fail and the phone screen will prompt “Forbidden Number”</p>	

	2-allow users to accumulate digits and dispatch call manually with the send key or automatically dial out the entered number after a certain period of time configured by the parameter "dialplan.digitmap.interdigit_long_timer"	
<b>Default</b>	0	
<b>Parameter</b>	dialplan.digitmap.active.on_hook_dialing	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the entered numbers to match the predefined string of the digit map in real time. It is only applicable to the on-hook dialing. <b>Note:</b> It works only if "dialplan.digitmap.enable" or "account.X.dialplan.digitmap.enable" is set to 1 (Enabled). The value configured by the parameter "account.X.dialplan.digitmap.active.on_hook_dialing" takes precedence over that configured by this parameter.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	dialplan.digitmap.apply_to.on_hook_dial	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the entered number to match the predefined string of the digit map after pressing a send key when dialing on-hook or pressing the DSS key (for example, speed dial, BLF or prefix key). <b>Note:</b> It works only if "dialplan.digitmap.enable" or "account.X.dialplan.digitmap.enable" is set to 1 (Enabled). The value configured by the parameter "account.X.dialplan.digitmap.apply_to.on_hook_dial" takes precedence over that configured by this parameter.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Parameter</b>	dialplan.digitmap.apply_to.directory_dial	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the digit map to be applied to the numbers dialed from the directory. <b>Note:</b> It works only if "dialplan.digitmap.enable" or "account.X.dialplan.digitmap.enable" is set to 1 (Enabled). The value configured by the parameter "account.X.dialplan.digitmap.apply_to.directory_dial" takes precedence over that configured by this parameter.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Parameter</b>	dialplan.digitmap.apply_to.history_dial	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the digit map to be applied to the numbers (received calls or missed calls) dialed from the call history list. <b>Note:</b> It works only if "dialplan.digitmap.enable" or "account.X.dialplan.digitmap.enable" is set to 1 (Enabled). The value configured by the parameter "account.X.dialplan.digitmap.apply_to.history_dial" takes precedence over that configured by this parameter.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	dialplan.digitmap.apply_to.forward	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the digit map to be applied to the numbers that you want to forward to when performing call forward. <b>Note:</b> It works only if "dialplan.digitmap.enable" or "account.X.dialplan.digitmap.enable" is set to 1 (Enabled). The value configured by the parameter "account.X.dialplan.digitmap.apply_to.forward"	



	takes precedence over that configured by this parameter.	
<b>Permitted Values</b>	<b>0</b> -Disabled <b>1</b> -Enabled, the incoming calls will be forwarded to the desired destination number according to the string of the digit map.	
<b>Default</b>	1	
<b>Parameter</b>	dialplan.digitmap.apply_to.press_send	<y000000000xx>.cfg
<b>Description</b>	It enables or disables the entered number to match the predefined string of the digit map after pressing a send key. It is only applicable to the off-hook dialing. The off-hook dialing includes: pick up the handset, press the Speakerphone key or press the line key when the phone is idle. <b>Note:</b> It works only if “dialplan.digitmap.enable” or “account.X.dialplan.digitmap.enable” is set to 1 (Enabled). The value configured by the parameter “account.X.dialplan.digitmap.apply_to.press_send” takes precedence over that configured by this parameter.	
<b>Permitted Values</b>	<b>0</b> -Disabled <b>1</b> -Enabled	
<b>Default</b>	1	
<b>Parameter</b>	dialplan.digitmap.apply_to.prefix_key	<y000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to apply the predefined string of the digit map after pressing a Prefix key. <b>Note:</b> It works only if “dialplan.digitmap.enable” or “account.X.dialplan.digitmap.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	<b>0</b> -Disabled <b>1</b> -Enabled	
<b>Default</b>	1	

## Digit Map for a Specific Line Configuration

The following table lists the parameters you can use to configure the digit map for a specific line.

<b>Parameter</b>	account.X.dialplan.digitmap.enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the digit map feature for a specific account. <b>Note:</b> The value configured by the parameter “account.X.dialplan.digitmap.enable” takes precedence over that configured by the parameter “dialplan.digitmap.enable”.	
<b>Permitted Values</b>	<b>0</b> -Disabled <b>1</b> -Enabled	
<b>Default</b>	Blank	
<b>Parameter</b>	account.X.dialplan.digitmap.string <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the digit map pattern used for the dial plan. <b>Example:</b> account.1.dialplan.digitmap.string = <[2-9]x:86>3.T 0x.! 1xxx <b>Note:</b> The string must be compatible with the digit map feature of MGCP described in 2.1.5 of RFC 3435. It works only if “account.X.dialplan.digitmap.enable” is set to 1 (Enabled). The value configured by the parameter “account.X.dialplan.digitmap.string” takes precedence over that configured by the parameter “dialplan.digitmap.string”.	
<b>Permitted</b>	String within 2048 characters	

<b>Values</b>	
<b>Default</b>	Blank
<b>Parameter</b>	account.X.dialplan.digitmap.interdigit_long_timer <sup>[1]</sup> <MAC>.cfg
<b>Description</b>	<p>It configures the time (in seconds) to wait before dialing an entered number if it matches part of any string of the digit map for the account X.</p> <p>If it is set to 0, the phone will not dial the entered number if only a partial match exists.</p> <p>The value of this parameter should be greater than that configured by the parameter "account.X.dialplan.digitmap.interdigit_short_timer".</p> <p>For example:</p> <pre>account.1.dialplan.digitmap.string = 1xxT xxxxx&lt;T1 &gt; account.1.dialplan.digitmap.interdigit_long_timer = 10 account.1.dialplan.digitmap.interdigit_short_timer = 5</pre> <p>When you enter 1, it matches part of two-digit maps, the phone tries to wait 10 seconds and then dials out 1 if no numbers entered;</p> <p>When you enter 15, it also matches part of two-digit maps, the phone tries to wait 10 seconds and then dials out 15 if no numbers entered;</p> <p>When you enter 153, it also matches part of two-digit maps, the phone tries to wait 10 seconds. But after waiting for 5 seconds, it completely matches the first digit map and then immediately dials out 153.</p> <p><b>Note:</b> It works only if "account.X.dialplan.digitmap.enable" is set to 1 (Enabled). The value configured by the parameter "account.X.dialplan.digitmap.interdigit_long_timer" takes precedence over that configured by the parameter "dialplan.digitmap.interdigit_long_timer".</p>
<b>Permitted Values</b>	Integer from 0 to 255
<b>Default</b>	Blank
<b>Parameter</b>	account.X.dialplan.digitmap.interdigit_short_timer <sup>[1]</sup> <MAC>.cfg
<b>Description</b>	<p>It configures the timeout interval (in seconds) for any string of digit map.</p> <p>The phone will wait this many seconds before matching the entered digits to the dial plan and placing the call.</p> <p><b>Note:</b> It works only if "account.X.dialplan.digitmap.enable" is set to 1 (Enabled). The value configured by the parameter "account.X.dialplan.digitmap.interdigit_short_timer" takes precedence over that configured by the parameter "dialplan.digitmap.interdigit_short_timer".</p>
<b>Permitted Values</b>	<p><b>Single configuration</b> (configure a specific value for the timer letter "T" for all strings with "T" of the digit map)</p> <p><b>Example:</b></p> <pre>account.1.dialplan.digitmap.interdigit_short_timer = 5</pre> <p>If "dialplan.digitmap.string" is set to &lt;[2-9]x:86&gt;3.T 0T, the phone will wait 5 seconds before matching the entered digits to this dial plan and placing the call.</p> <p><b>Distribution configuration</b> (configure a string of positive integers separated by " " for each string of the digit map in the corresponding position)</p> <p>If there are more digit maps than timeout values, the last timeout is applied to the extra digit map. If there are more timeout values than digit maps, the extra timeout values are ignored.</p>

	<p><b>Example:</b></p> <p>account.1.dialplan.digitmap.interdigit_short_timer = 4 5 3 6 2 1</p> <p>If “dialplan.digitmap.string” is set to &lt;[2-9]x:86 &gt; 3.T 2T 1xxT 0x.!! [2-9]11T, 4 is applied to the “&lt;[2-9]x:86 &gt; 3.T” digit map, 5 is applied to “2T” digit map, 3 is applied to “1xxT” digit map, 6 is applied to “0x.!” digit map, 2 is applied to the “[2-9]11T” digit map, the last digit 1 is ignored.</p>	
<b>Default</b>	3	
<b>Parameter</b>	account.X.dialplan.digitmap.no_match_action <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	<p>It configures the behavior when an impossible digit map match occurs.</p> <p><b>Note:</b> It works only if “account.X.dialplan.digitmap.enable” is set to 1 (Enabled). The value configured by the parameter “account.X.dialplan.digitmap.no_match_action” takes precedence over that configured by the parameter “dialplan.digitmap.no_match_action”.</p>	
<b>Permitted Values</b>	<p>0-prevent users from entering a number and immediately dial out the entered numbers</p> <p>1-the dialing will fail and the phone screen will prompt “Forbidden Number”</p> <p>2-allow users to accumulate digits and dispatch call manually with the send key or automatically dial out the entered number after a certain period of time configured by the parameter “dialplan.digitmap.interdigit_long_timer”</p>	
<b>Default</b>	Blank	
<b>Parameter</b>	account.X.dialplan.digitmap.active.on_hook_dialing <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	<p>It enables or disables the entered numbers to match the predefined string of the digit map in real time on the pre-dialing screen.</p> <p>To enter the pre-dialing screen, directly enter numbers when the phone is idle.</p> <p><b>Note:</b> It works only if “account.X.dialplan.digitmap.enable” is set to 1 (Enabled). The value configured by the parameter “account.X.dialplan.digitmap.active.on_hook_dialing” takes precedence over that configured by the parameter “dialplan.digitmap.active.on_hook_dialing”.</p>	
<b>Permitted Values</b>	<p>0-Disabled</p> <p>1-Enabled</p>	
<b>Default</b>	Blank	
<b>Parameter</b>	account.X.dialplan.digitmap.apply_to.on_hook_dial <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	<p>It enables or disables the entered number to match the predefined string of the digit map after pressing a send key on the pre-dialing screen or pressing the DSS key (for example, speed dial, BLF or prefix DSS key).</p> <p>To enter the pre-dialing screen, directly enter numbers when the phone is idle.</p> <p><b>Note:</b> It works only if “account.X.dialplan.digitmap.enable” is set to 1 (Enabled). The value configured by the parameter “account.X.dialplan.digitmap.apply_to.on_hook_dial” takes precedence over that configured by the parameter “dialplan.digitmap.apply_to.on_hook_dial”.</p>	
<b>Permitted Values</b>	<p>0-Disabled</p> <p>1-Enabled</p>	
<b>Default</b>	Blank	
<b>Parameter</b>	account.X.dialplan.digitmap.apply_to.directory_dial <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	<p>It enables or disables the digit map to be applied to the numbers dialed from the directory.</p> <p><b>Note:</b> It works only if “account.X.dialplan.digitmap.enable” is set to 1 (Enabled). The value configured by the parameter “account.X.dialplan.digitmap.apply_to.directory_dial” takes precedence over that configured by the parameter “dialplan.digitmap.apply_to.directory_dial”.</p>	

<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	Blank	
<b>Parameter</b>	account.X.dialplan.digitmap.apply_to.history_dial <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the digit map to be applied to the numbers (received calls or missed calls) dialed from call log lists. <b>Note:</b> It works only if “account.X.dialplan.digitmap.enable” is set to 1 (Enabled). The value configured by the parameter “account.X.dialplan.digitmap.apply_to.history_dial” takes precedence over that configured by this parameter.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	Blank	
<b>Parameter</b>	account.X.dialplan.digitmap.apply_to.forward <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the digit map to be applied to the numbers that you want to forward to when performing call forward. <b>Note:</b> It works only if “account.X.dialplan.digitmap.enable” is set to 1 (Enabled). The value configured by the parameter “account.X.dialplan.digitmap.apply_to.forward” takes precedence over that configured by the parameter “dialplan.digitmap.apply_to.forward”.	
<b>Permitted Values</b>	0-Disabled 1-Enabled, the incoming calls will be forwarded to the desired destination number according to the string of the digit map.	
<b>Default</b>	Blank	
<b>Parameter</b>	account.X.dialplan.digitmap.apply_to.press_send <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the entered number to match the predefined string of the digit map after pressing a send key using off-hook dialing. The off-hook dialing includes: pick up the handset, press the Speakerphone key or press the line key when the phone is idle. <b>Note:</b> It works only if “account.X.dialplan.digitmap.enable” is set to 1 (Enabled). The value configured by the parameter “account.X.dialplan.digitmap.apply_to.press_send” takes precedence over that configured by the parameter “dialplan.digitmap.apply_to.press_send”.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	Blank	

<sup>[1]</sup>X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## Emergency Dialplan and Enhanced 911

You can dial the emergency telephone number (emergency services number) at any time when the IP phone is powered on and has been connected to the network. It is available even if your phone keypad is locked or no SIP account is registered.

Yealink phones support emergency dialplan and enhanced 911.

### Emergency Dial Plan

You can configure the emergency dial plan for the phone (for example, emergency number, emergency routing). The phone determines if this is an emergency number by checking the emergency dial plan. When placing an emergency call, the call is directed to the configured emergency server. Multiple emergency servers may need to be configured for emergency routing, avoiding that emergency calls could not get through because of the server failure. If the phone is not locked, it checks against the regular dial plan. If the phone is locked, it checks against the emergency dial plan.

### Enhanced 911

E911 (Enhanced 911) is a location technology that enables the called party to identify the geographical location of the calling party. For example, if a caller makes an emergency call to E911, the feature extracts the caller's information for the police department to immediately identify the caller's location.

#### Topic

[Emergency Dialplan and Enhanced 911 Configuration](#)

## Emergency Dialplan and Enhanced 911 Configuration

The following table lists the parameters you can use to configure emergency dialplan and Enhanced 911.

<b>Parameter</b>	dialplan.emergency.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the Emergency dialplan feature.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Parameter</b>	dialplan.emergency.asserted_id_source	<y0000000000xx>.cfg
<b>Description</b>	It configures the precedence of the source of emergency outbound identities when placing an emergency call. <b>Note:</b> If the obtained LLDP-MED ELIN value is blank and no custom outbound identity, the PAI header will not be included in the SIP INVITE request. It works only if "dialplan.emergency.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	<p><b>ELIN</b>-The outbound identity used in the P-Asserted-Identity (PAI) header of the SIP INVITE request is taken from the network using an LLDP-MED Emergency Location Identifier Number (ELIN). The custom outbound identity configured by "dialplan.emergency.custom_asserted_id" will be used if the phone fails to get the LLDP-MED ELIN value.</p> <p><b>CUSTOM</b>-The custom outbound identity configured by "dialplan.emergency.custom_asserted_id" will be used; if "dialplan.emergency.custom_asserted_id" is left blank, the LLDP-MED ELIN value will be used.</p> <p><b>HELD</b>-The phone will use the HELD protocol to retrieve location information from the Location Information Server.</p> <p><b>GENBAND</b>-Ribbon E911 feature is enabled, the location ID will be added to the INVITE and REGISTER SIP messages.</p>	
<b>Default</b>	ELIN	
<b>Parameter</b>	dialplan.emergency.asserted_id.sip_account	<y0000000000xx>.cfg
<b>Description</b>	It configures the account to be used to retrieve E911 location information.	
<b>Permitted Values</b>	<p>T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G: Integer from 1 to 16;</p> <p>T53W/T53/T53C/T43U/T42U/T42S/T42G: Integer from 1 to 12;</p> <p>T41P/T41S/T27G: Integer from 1 to 6;</p>	

	T33P/T33G: Integer from 1 to 4; T40P/T40G/T23P/T23G: Integer from 1 to 3; T31P/T31G/T31/T21(P) E2: Integer from 1 to 2; T30P/T30/T19(P) E2/CP920/CP925/CP935W: 1.	
<b>Default</b>	1	
<b>Parameter</b>	dialplan.emergency.custom_asserted_id	<y0000000000xx>.cfg
<b>Description</b>	It configures the custom outbound identity when placing an emergency call. <b>Note:</b> It works only if “dialplan.emergency.enable” is set to 1 (Enabled) and “dialplan.emergency.asserted_id_source” is not set to <b>HELD</b> .	
<b>Permitted Values</b>	<b>A number with 10 to 25 digits</b> - for example, 1234567890. The SIP URI constructed from the number and SIP server (for example, abc.com) is included in the P-Asserted-Identity (PAI) header (for example, <sip:1234567890@abc.com > ). <b>SIP URI</b> - for example, sip:1234567890123@abc.com. The full URI is included in the P-Asserted-Identity (PAI) header and the address will be replaced by the emergency server (for example, <sip:1234567890123@emergency.com > ). <b>TEL URI</b> - for example, tel:+16045558000. The full URI is included in the P-Asserted-Identity (PAI) header (for example, <tel:+16045558000 > ).	
<b>Default</b>	Blank	
<b>Parameter</b>	dialplan.emergency.server.X.address <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the IP address or domain name of the emergency server X to be used for routing calls. <b>Note:</b> If the account information has been configured (no matter whether the account registration succeeds or fails), the emergency calls will be dialed using the following priority: SIP server > emergency server; if not, the emergency server will be used. It works only if “dialplan.emergency.enable” is set to 1 (Enabled) and “dialplan.emergency.asserted_id_source” is not set to <b>HELD</b> .	
<b>Permitted Values</b>	IP address or domain name	
<b>Default</b>	Blank	
<b>Parameter</b>	dialplan.emergency.server.X.port <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the port of emergency server X to be used for routing calls. <b>Note:</b> It works only if “dialplan.emergency.enable” is set to 1 (Enabled) and “dialplan.emergency.asserted_id_source” is not set to <b>HELD</b> .	
<b>Permitted Values</b>	Integer from 0 to 65535	
<b>Default</b>	5060	
<b>Parameter</b>	dialplan.emergency.server.X.transport_type <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the transport protocol the phones use to communicate with the emergency server X. <b>Note:</b> It works only if “dialplan.emergency.enable” is set to 1 (Enabled) and “dialplan.emergency.asserted_id_source” is not set to <b>HELD</b> .	
<b>Permitted Values</b>	0-UDP 1-TCP 2-TLS 3-DNS-NAPTR	

<b>Default</b>	0	
<b>Parameter</b>	dialplan.emergency.X.value <sup>[2]</sup>	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the emergency number to use on your phones so a caller can contact emergency services in the local area when required.</p> <p><b>Note:</b> It works only if “dialplan.emergency.enable” is set to 1 (Enabled) and “dialplan.emergency.asserted_id_source” is not set to <b>HELD</b>.</p>	
<b>Permitted Values</b>	Number or SIP URI	
<b>Default</b>	<p>When X = 1, the default value is 911;</p> <p>When X = 2-255, the default value is Blank.</p>	
<b>Parameter</b>	dialplan.emergency.X.server_priority <sup>[2]</sup>	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the priority of which the emergency servers to be used first.</p> <p>Multiple values are separated by commas. The servers to be used in the order listed (left to right).</p> <p>The IP phone tries to make emergency calls using the emergency server with higher priority, and then with lower priority. The IP phone tries to send the INVITE request to each emergency server three times.</p> <p><b>Note:</b> If the account information has been configured (no matter whether the account registration succeeds or fails), the emergency calls will be dialed using the following priority: SIP server &gt; emergency server; if not, the emergency server will be used. It works only if “dialplan.emergency.enable” is set to 1 (Enabled). And “dialplan.emergency.asserted_id_source” is not set to <b>HELD</b>.</p>	
<b>Permitted Values</b>	a combination of digits 1, 2 and 3	
<b>Default</b>	1, 2, 3	
<b>Parameter</b>	dialplan.emergency.held.server_url	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the primary Location Information Server URL for the phone to send HELD location request.</p> <p><b>Note:</b> It works only if “dialplan.emergency.enable” is set to 1 (Enabled) and “dialplan.emergency.asserted_id_source” is set to <b>HELD</b>.</p>	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Parameter</b>	dialplan.emergency.held.secondary.server_url	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the secondary Location Information Server URL for the phone to send HELD location request.</p> <p><b>Note:</b> It works only if “dialplan.emergency.enable” is set to 1 (Enabled) and “dialplan.emergency.asserted_id_source” is set to <b>HELD</b>.</p>	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P and T29G	
<b>Parameter</b>	dialplan.emergency.held.request_type	<y0000000000xx>.cfg
<b>Description</b>	It configures the type of location request message.	

	<b>Note:</b> It works only if “dialplan.emergency.enable” is set to 1 (Enabled) and “dialplan.emergency.asserted_id_source” is set to <b>HELD</b> .	
<b>Permitted Values</b>	SIMPLE or REDSKY or YEALINK If it is set to <b>SIMPLE</b> , the phone will send the location request message defined in RFC5985. If it is set to <b>REDSKY</b> , the phone will send the location request message defined by REDSKY. If it is set to <b>YEALINK</b> , the phone will send the location request message defined by REDSKY and the <ChassisID>, </PortID> fields.	
<b>Default</b>	SIMPLE	
<b>Parameter</b>	dialplan.emergency.held.request_element.X.name <sup>[2]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the custom element name to be sent in a location request message. <b>Example:</b> dialplan.emergency.held.request_element.1.name = mac dialplan.emergency.held.request_element.2.name = companyID dialplan.emergency.held.request_element.3.name = nai <b>Note:</b> It works only if “dialplan.emergency.enable” is set to 1 (Enabled) and “dialplan.emergency.asserted_id_source” is set to <b>HELD</b> .	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Parameter</b>	dialplan.emergency.held.request_element.X.value <sup>[2]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the custom element value to be sent in a location request message. <b>Example:</b> dialplan.emergency.held.request_element.1.value = 001565B38ECB dialplan.emergency.held.request_element.2.value = 6f2f2d50-c385-4b72-b84a-ce0ca3a77cb7 dialplan.emergency.held.request_element.3.value = 8611@pbx.yealink.com <b>Note:</b> It works only if “dialplan.emergency.enable” is set to 1 (Enabled) and “dialplan.emergency.asserted_id_source” is set to <b>HELD</b> .	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Parameter</b>	dialplan.emergency.held.username	<y0000000000xx>.cfg
<b>Description</b>	It configures the user name authentication when the phone sends location information to the E911 Location Information Server. <b>Note:</b> It works only if “dialplan.emergency.held.request_type” is set to <b>YEALINK</b> .	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Parameter</b>	dialplan.emergency.held.password	<y0000000000xx>.cfg



<b>Description</b>	It configures the password authentication when the phone sends location information to the E911 Location Information Server. <b>Note:</b> It works only if “dialplan.emergency.held.request_type” is set to <b>YEALINK</b> or <b>REDSKY</b> .	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Parameter</b>	dialplan.emergency.held.secondary.username	<y0000000000xx>.cfg
<b>Description</b>	It configures the user name authentication when the phone sends location information to the secondary E911 Location Information Server. <b>Note:</b> It works only if “dialplan.emergency.held.request_type” is set to <b>YEALINK</b> or <b>REDSKY</b> .	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Parameter</b>	dialplan.emergency.held.secondary.password	<y0000000000xx>.cfg
<b>Description</b>	It configures the password authentication when the phone sends location information to the secondary E911 Location Information Server. <b>Note:</b> It works only if “dialplan.emergency.held.request_type” is set to <b>YEALINK</b> or <b>REDSKY</b> .	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Parameter</b>	dialplan.emergency.held.nai.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to send Network Access Identifier (nai) information to the E911 Location Information Server. <b>Note:</b> It works only if “dialplan.emergency.held.request_type” is set to <b>YEALINK</b> or <b>REDSKY</b> .	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Parameter</b>	dialplan.emergency.held.location_retry_timer	<y0000000000xx>.cfg
<b>Description</b>	It configures the time interval (seconds) for the phone to report location information to the E911 Location Information Server when the phone fails to report the location to the sever. <b>Note:</b> It works only if “dialplan.emergency.held.request_type” is set to <b>YEALINK</b> or <b>REDSKY</b> .	
<b>Permitted Values</b>	0-The phone does not report the location to the E911 Location Information Server again when failed to report the location to the sever. <b>60 to 86400</b> -The phone reports the location to the E911 Location Information Server within the specified time interval .	

<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Parameter</b>	dialplan.emergency.held.prompt_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to pop up the "Set E911 location failed! Please contact your administrator." prompt when the phone failed to report location information to the server. <b>Note:</b> It works only if "dialplan.emergency.held.request_type" is set to <b>YEALINK</b> or <b>REDSKY</b> .	
<b>Permitted Values</b>	1-Enabled 0-Disabled	
<b>Default</b>	1	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Parameter</b>	dialplan.emergency.sip_header.geolocation_routing_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to carry the geolocation-routing header information in the E911 INVITE message when the phone calls emergency number. <b>Note:</b> It works only if "dialplan.emergency.held.request_type" is set to <b>YEALINK</b> or <b>REDSKY</b> .	
<b>Permitted Values</b>	0-The information "Geolocation-Routing: no" exists in the E911 INVITE message, and the information "geolocation", "Supported: geolocation" do not exist. 1-The information "Geolocation-Routing: yes" exists in the E911 INVITE message, and the information "geolocation", "Supported: geolocation" also exist.	
<b>Default</b>	1	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Parameter</b>	sip.emgr.header	<y0000000000xx>.cfg
<b>Description</b>	It configures the content of E911 INVITE header field when the phone calls the emergency number.	
<b>Permitted Values</b>	<b>priority:emergency</b> -The E911 INVITE header field contains priority:emergency. <b>String</b> -The INVITE header field can be customized.	
<b>Default</b>	priority:emergency	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Parameter</b>	dialplan.emergency.held.non_ldp.chassisid_portid_enable	<y0000000000xx>.cfg
<b>Description</b>	It configures the contents of held requests when the phone cannot connect to LDAP switch.	
<b>Permitted Values</b>	0-The phone does not send the ChassisID and PortID fields to the server. 1-The phone sends the ChassisID and PortID fields to the server, ChassisID field is the mac of the gateway, and PortID field is the mac of the phone.	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Parameter</b>	dialplan.emergency.held.resync_period	<y0000000000xx>.cfg
<b>Description</b>	It configures the time interval (minutes) for the phone to send held requests regularly to the E911 Location Information Server.	
<b>Permitted</b>	0-The phone will not periodically send held requests to the server.	

<b>Values</b>	<b>Integer from 1 to 10800</b> -The phone sends held request to the server within the specified time interval.	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Parameter</b>	account.X.reg_with_pani_header.enable <sup>[3]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the phone to carry the PANI header in the REGISTER request message.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	account.X.invite_with_pani_header.enable <sup>[3]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the phone to carry the PANI header in the INVITE request message. The PANI header format is: P-Access-Network-Info:IEEE-802.3; eth-location=<MAC Address Of The Phone > ; local-time-zone-e="0800"	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	sip.emergency_call.mode	<y0000000000xx>.cfg
<b>Description</b>	It configures the server mode for emergency calls.	
<b>Permitted Values</b>	0-Use the account's SIP server to make emergency calls first, and switch to the emergency server to call out when the SIP server is unavailable. 1-Only use the emergency server to make emergency calls. If the emergency server is not available, the call fails directly.	
<b>Default</b>	0	
<b>Related Parameters</b>	account.X.sip_server.Y.address dialplan.emergency.server.X.address	

[1] X is from 1 to 3.

[2] X is from 1 to 255.

[3]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## Hotline

Hotline, sometimes referred to as hot dialing, is a point-to-point communication link in which a call is automatically directed to the preset hotline number. If you lift the handset, press the Speakerphone key or the line key, and do nothing for a specified time interval, the phone will automatically dial out the hotline number. Yealink phones only support one hotline number.

**Note:** If you do not specify a line, the phone uses the first available line to dial out the hotline number by default. This feature works only if the Off Hook Hot Line Dialing feature is disabled. For more information, refer to [Off Hook Hot Line Dialing](#).

**Topic**[Hotline Configuration](#)

## Hotline Configuration

The following table lists the parameters you can use to configure hotline.

<b>Parameter</b>	features.hotline_number	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the hotline number that the phone automatically dials out when you lift the handset, press the Speakerphone/off-hook key or the line key.</p> <p>Leaving it blank disables hotline feature.</p> <p><b>Note:</b> Line key is not applicable to T30P/T30/T19(P) E2/CP920 phones, handset and Speakerphone key are not applicable to CP920/CP925/CP935W phones; the off-hook key is only applicable to CP920 phones.</p>	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > General Information > Hotline Number	
<b>Phone UI</b>	<p><u>Color Screen Phones:</u></p> <p>Menu &gt; Features &gt; Others &gt; Hot Line &gt; Hotline Number</p> <p><u>CP925/CP935W:</u></p> <p>More &gt; Features &gt; Hot Line &gt; Hotline Number</p> <p><u>Black-and-white Screen Phones:</u></p> <p>Menu &gt; Features &gt; Hot Line &gt; Hotline Number</p>	
<b>Parameter</b>	features.hotline_delay	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the waiting time (in seconds) for the phone to automatically dial out the preset hotline number.</p> <p>If it is set to 0 (0s), the phone will immediately dial out the preset hotline number when you lift the handset, press the Speakerphone/off-hook key or press the line key.</p> <p>If it is set to a value greater than 0, the phone will wait the designated seconds before dialing out the preset hotline number when you lift the handset, press the Speakerphone/off-hook key or press the line key.</p> <p><b>Note:</b> Line key is not applicable to T30P/T30/T19(P) E2/CP920 phones, handset and Speakerphone key are not applicable to CP920/CP925/CP935W phones; the off-hook key is only applicable to CP920 phones.</p>	
<b>Permitted Values</b>	Integer from 0 to 10	
<b>Default</b>	4	
<b>Web UI</b>	Features > General Information > Hotline Delay(0~10s)	
<b>Phone UI</b>	<p><u>Color Screen Phones:</u></p> <p>Menu &gt; Features &gt; Others &gt; Hot Line &gt; Hotline Delay</p> <p><u>CP925/CP935W:</u></p> <p>More &gt; Features &gt; Hot Line &gt; Hotline Delay</p> <p><u>Black-and-white Screen Phones:</u></p>	

Menu > Features > Hot Line > Hotline Delay
--

## Off Hook Hot Line Dialing

For security reasons, the phones support off hook hot line dialing feature, which allows the phone to automatically dial out the pre-configured number when you lift the handset, press the Speakerphone key or desired line key. The SIP server may then prompts you to enter an activation code for call service. Only if you enter a valid activation code, the phone will use this account to dial out a call successfully.

Off hook hot line dialing feature is configurable on a per-line basis and depends on the support from a SIP server. The server actions may vary from different servers.

It is also applicable to the IP call and intercom call.

**Note:** Off hook hot line dialing feature limits the call-out permission of this account and disables the hotline feature. For example, when the phone goes off-hook using the account with this feature enabled, the configured hotline number will not be dialed out automatically.

### Topic

[Off Hook Hot Line Dialing Configuration](#)

## Off Hook Hot Line Dialing Configuration

The following table lists the parameters you can use to configure off hook hot line dialing.

<b>Parameter</b>	account.X.auto_dial_enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the phone to automatically dial out a pre-configured number when a user lifts the handset, presses the Speakerphone/off-hook key or desired line key. <b>Note:</b> Line key is not applicable to T30P/T30/T19(P) E2/CP920 phones; handset and Speakerphone key are not applicable to CP920/CP925/CP935W phones; the off-hook key is only applicable to CP920 phones.	
<b>Permitted Values</b>	0-Disabled 1-Enabled, the phone will dial out the pre-configured number (configured by “account.X.auto_dial_num”).	
<b>Default</b>	0	
<b>Parameter</b>	account.X.auto_dial_num <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the number that the phone automatically dials out when a user lifts the handset, presses the Speakerphone/off-hook key or desired line key. <b>Note:</b> It works only if “account.X.auto_dial_enable” is set to 1 (Enabled). Line key is not applicable to T30P/T30/T19(P) E2/CP920 phones; handset and Speakerphone key are not applicable to CP920/CP925/CP935W phones; the off-hook key is only applicable to CP920 phones.	
<b>Permitted Values</b>	String within 1024 characters	
<b>Default</b>	Blank	

<sup>[1]</sup>X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## Live Dialpad

Live Dialpad allows the phones to automatically dial out the entered phone number without pressing the send key after a designated period of time.

### Topic

[Live Dialpad Configuration](#)

## Live Dialpad Configuration

The following table lists the parameters you can use to configure live dialpad.

<b>Parameter</b>	phone_setting.predial_autodial	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to automatically dial out the entered phone number on the pre-dialing screen without pressing a send key. To enter the pre-dialing screen, directly enter numbers when the phone is idle.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Settings > Preference > Live Dialpad	
<b>Parameter</b>	phone_setting.inter_digit_time	<y0000000000xx>.cfg
<b>Description</b>	It configures the delay time (in seconds) for the phone to automatically dial out the entered phone number without pressing a send key. For the pre-dialing screen, it works only if "phone_setting.predial_autodial" is set to 1 (Enabled).	
<b>Permitted Values</b>	Integer from 1 to 14	
<b>Default</b>	4	
<b>Web UI</b>	Settings > Preference > Inter Digit Time (1~14s)	

## Auto Redial

You can set the phone automatically redial the last dialed number when the callee is temporarily unavailable. Both the number of attempts and waiting time between redials are configurable.

### Topic

[Auto Redial Configuration](#)

## Auto Redial Configuration

The following table lists the parameters you can use to configure auto redial.

<b>Parameter</b>	auto_redial.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to automatically redial the last dialed number when the callee is temporarily unavailable.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Features > General Information > Auto Redial	
<b>Phone UI</b>	<a href="#">Color Screen Phones:</a>	

	Menu > Features > Others > Auto Redial > Auto Redial <u>CP925/CP935W:</u> More > Features > Auto Redial Setting > Auto Redial <u>Black-and-white Screen Phones:</u> Menu > Features > Auto Redial > Auto Redial	
<b>Parameter</b>	auto_redial.interval	<y0000000000xx>.cfg
<b>Description</b>	It configures the interval (in seconds) for the phone to wait between redials. The phone redials the last dialed number at regular intervals until the callee answers the call.	
<b>Permitted Values</b>	Integer from 1 to 300	
<b>Default</b>	10	
<b>Web UI</b>	Features > General Information > Auto Redial Interval (1~300s)	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Features > Others > Auto Redial > Redial Interval <u>CP925/CP935W:</u> More > Features > Auto Redial Setting > Redial Interval <u>Black-and-white Screen Phones:</u> Menu > Features > Auto Redial > Redial Interval	
<b>Parameter</b>	auto_redial.times	<y0000000000xx>.cfg
<b>Description</b>	It configures the auto redial times when the callee is temporarily unavailable. The phone tries to redial the callee as many times as configured until the callee answers the call.	
<b>Permitted Values</b>	Integer from 1 to 300	
<b>Default</b>	10	
<b>Web UI</b>	Features > General Information > Auto Redial Times (1~300)	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Features > Others > Auto Redial > Redial Times <u>CP925/CP935W:</u> More > Features > Auto Redial Setting > Redial Times <u>Black-and-white Screen Phones:</u> Menu > Features > Auto Redial > Redial Times	
<b>Parameter</b>	features.redial_via_local_sip_server.enable	<y0000000000xx>.cfg
<b>Description</b>	It configures the phone to redial via local SIP server or remote SIP server.	
<b>Permitted Values</b>	0-Remote SIP Server 1-Local SIP Server	
<b>Default</b>	1	

## Recall Configuration

Recall, also known as last call return, allows you to dial the last received call. Recall is implemented on the phones using a Recall key.

The following shows configuration for a Recall key.

Line Key Configuration	Programmable Key Configuration
linekey.X.type = 7 linekey.X.label = Recall	programmablekey.X.type = 7

After provisioning, a Recall key is available on the phone. When you press the Recall key, the phone places a call to the phone number that last called you.

### Related Topics

[Line Keys Configuration](#)

[Programmable Keys Configuration](#)

## Speed Dial

Speed dial allows you to speed up dialing contacts on the phone's idle screen using dedicated DSS keys.

### Topic

[Speed Dial Key Configuration](#)

## Speed Dial Key Configuration

There are two ways to configure a Speed Dial key:

- Manually, configure a line key or programmable key as Speed Dial key.
- Automatically, assign a favorite contact, the phone automatically links the contact to a line key.

The following shows manually configuration for a Speed Dial key.

Scenario Conditions	Related Topic
local_contact.favorite.enable = 0	<a href="#">Favorite Contacts</a>

Line Key Configuration	Programmable Key Configuration
linekey.X.type = 13 linekey.X.line = 1 linekey.X.value = 4603 linekey.X.label = Bill	programmablekey.X.type = 13 programmablekey.X.line = 1 programmablekey.X.value = 4603

After provisioning, a Speed Dial key for Bill (4603) is available on the phone, and you can press the Speed Dial key to call Bill (4603) quickly.

You can configure multiple Speed Dial keys for different contacts which are used frequently or hard to remember. Alternatively, you can use favorite contact feature, and automatically assign Speed Dial keys for favorite contacts.

### Related Topics

[Line Keys Configuration](#)

[Programmable Keys Configuration](#)



## Password Dial

Password dial feature allows the callee number to be partly displayed on the IP phone when placing a call. The hidden digits are displayed as asterisks on the phone screen. The number in the placed call list is also partly displayed on the IP phone. This feature is especially useful for users who often place important and confidential calls.

### Topic

[Password Dial Configuration](#)

## Password Dial Configuration

The following table lists the parameters you can use to configure password dial.

<b>Parameter</b>	features.password_dial.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to partly display the callee number when placing a call.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Features > General Information > PswDial	
<b>Parameter</b>	features.password_dial.prefix	<y0000000000xx>.cfg
<b>Description</b>	It configures the prefix that the number starts with this prefix will be partially displayed. Multiple numbers are separated by commas. <b>Example:</b> features.password_dial.prefix = 12,13 <b>Note:</b> It works only if "features.password_dial.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > General Information > PswPrefix	
<b>Parameter</b>	features.password_dial.length	<y0000000000xx>.cfg
<b>Description</b>	It configures how many digits to be displayed as asterisks. <b>Example:</b> features.password_dial.length = 3 If you set the prefix to 12 and the length to 3, when you want to dial the number 123456, the entered number is displayed as 12***6 on the phone screen. <b>Note:</b> It works only if "features.password_dial.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	Integer from 0 to 32	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > General Information > PswLength	

## Call Timeout

Call timeout defines a specific period of time after which the phone will cancel the dialing if the call is not answered.

**Topic**[Call Timeout Configuration](#)

## Call Timeout Configuration

The following table lists the parameter you can use to configure call timeout.

<b>Parameter</b>	phone_setting.ringback_timeout	<y0000000000xx>.cfg
<b>Description</b>	It configures the duration time (in seconds) in the ringback state. If it is set to 180, the phone will cancel the dialing if the call is not answered after 180 seconds.	
<b>Permitted Values</b>	Integer from 1 to 3600	
<b>Default</b>	180	

## Anonymous Call

Anonymous call allows the caller to conceal the identity information shown to the callee. The callee's phone LCD screen prompts an incoming call from anonymity.

Anonymous calls can be performed locally or on the server. When performing anonymous call on local, the phone sends an INVITE request with a call source "From: "Anonymous" sip:anonymous@anonymous.invalid". If performing Anonymous call on a specific server, you may need to configure anonymous call on code and off code to activate and deactivate server-side anonymous call feature.

**Topic**[Anonymous Call Configuration](#)

## Anonymous Call Configuration

The following table lists the parameters you can use to configure the anonymous call.

<b>Parameter</b>	account.X.anonymous_call <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It triggers the anonymous call feature to on or off.	
<b>Permitted Values</b>	0-Off 1-On, the phone will block its identity from showing to the callee when placing a call. The callee's phone screen presents "Anonymous" instead of the caller's identity.	
<b>Default</b>	0	
<b>Web UI</b>	Account > Basic > Local Anonymous	
<b>Phone UI</b>	Menu > Features > Anonymous Call > Line X > Local Anonymous CP925/CP935W: More > Features > Anonymous Call > Line X > Local Anonymous	
<b>Parameter</b>	account.X.send_anonymous_code <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the phone to send anonymous on/off code to activate/deactivate the server-side anonymous call feature for a specific account.	
<b>Permitted Values</b>	0-Off Code, the phone will send anonymous off code to the server when you deactivate the anonymous call feature. 1-On Code, the phone will send anonymous on code to the server when you activate the anonymous call feature.	

<b>Default</b>	0	
<b>Web UI</b>	Account > Basic > Send Anonymous Code	
<b>Phone UI</b>	Menu > Features > Anonymous Call > Line X > Send Anonymous Code (Send Anony Code) <u>CP925/CP935W:</u> More > Features > Anonymous Call > Line X > Send Anonymous Code (Send Anony Code)	
<b>Parameter</b>	account.X.anonymous_call_server_base_only <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the phone to perform the anonymous call feature on server-side only. <b>Note:</b> You need to configure parameters “account.X.anonymous_call_oncode” and “account.X.anonymous_call_offcode” to activate and deactivate the server-side anonymous call feature.	
<b>Permitted Values</b>	0-Disabled, the phone will perform the anonymous call feature on server-side and locally. If the anonymous call feature is enabled on the phone, the phone will carry the Anonymous attribute in the From header of the INVITE message. 1-Enabled, the phone will perform the anonymous call feature on server-side only. The phone will not carry the Anonymous attribute in the From header of the INVITE message even if the anonymous call feature is enabled on the phone.	
<b>Default</b>	Blank	
<b>Parameter</b>	account.X.anonymous_call_oncode <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the anonymous call on code. The phone will send the code to activate the anonymous call feature on server-side when you activate it on the phone.	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Account > Basic > Send Anonymous Code > On Code	
<b>Phone UI</b>	Menu > Features > Anonymous Call > Line X > On Code <u>CP925/CP935W:</u> More > Features > Anonymous Call > Line X > On Code	
<b>Parameter</b>	account.X.anonymous_call_offcode <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the anonymous call off code. The phone will send the code to deactivate the anonymous call feature on server-side when you deactivate it on the phone.	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Account > Basic > Send Anonymous Code > Off Code	
<b>Phone UI</b>	Menu > Features > Anonymous Call > Line X > Off Code <u>CP925/CP935W:</u> More > Features > Anonymous Call > Line X > Off Code	
<b>Parameter</b>	features.anonymous.feature_key_sync.enable	<y0000000000xx>.cfg

<b>Description</b>	It enables or disables to synchronize the anonymous call status between the IP phone and the server.
<b>Permitted Values</b>	0-Disabled 1-Enabled
<b>Default</b>	0

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## Call Number Filter

Call number filter feature allows IP phone to filter designated characters automatically when dialing.

### Topic

[Call Number Filter Configuration](#)

## Call Number Filter Configuration

The following table lists the parameter you can use to configure call number filter.

<b>Parameter</b>	features.call_num_filter	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the characters the phone filters when dialing.</p> <p>If the dialed number contains configured characters, the phone will automatically filter these characters when dialing.</p> <p><b>Example:</b></p> <p>features.call_num_filter = -</p> <p>If you dial 3-61, the phone will filter the character - and then dial out 361.</p> <p><b>Note:</b> If it is left blank, the phone will not automatically filter any characters when dialing.</p>	
<b>Permitted Values</b>	String within 99 characters	
<b>Default</b>	, -()	
<b>Web UI</b>	Features > General Information > Call Number Filter	

## IP Address Call

You can set the phone whether to receive or place an IP call. You can neither receive nor place an IP call if you disable this feature.

### Topic

[IP Address Call Configuration](#)

## IP Address Call Configuration

The following table lists the parameter you can use to configure IP address call.

<b>Parameter</b>	features.direct_ip_call_enable	<y0000000000xx>.cfg
<b>Description</b>	<p>It enables or disables to allow IP address call.</p> <p><b>Note:</b> If you want to receive an IP address call, make sure "sip.trust_ctrl" is set to 0 (Disabled).</p>	
<b>Permitted</b>	0-Disabled	

<b>Values</b>	1-Enabled
<b>Default</b>	1
<b>Web UI</b>	Features > General Information > Allow IP Call

## Ignoring Incoming Calls


By default, when a phone receives an incoming call, the phone screen prompts the incoming call information. You should handle the incoming call first before performing other features. For example, you should handle the incoming call when there is an active call in progress, otherwise, you cannot hold or set up a conference on the current call.

You can configure the phone to ignore an incoming call. The incoming call is still in the progress and is not rejected, you can choose to answer it or not, or perform other features.

When the phone receives an incoming call in the idle state, the screen prompts the incoming call information.

- To ignore the call, and initial a new call, pick up the handset, press the Speakerphone key or HEADSET key, press keypad or other line keys.
- To answer the incoming call, press the corresponding line key, the **Answer** soft key or the **OK** key.

When the phone receives an incoming call in the call state, the screen does not prompt the incoming call information. You can perform other features on the current call. You can only answer the incoming call after ending the current call.

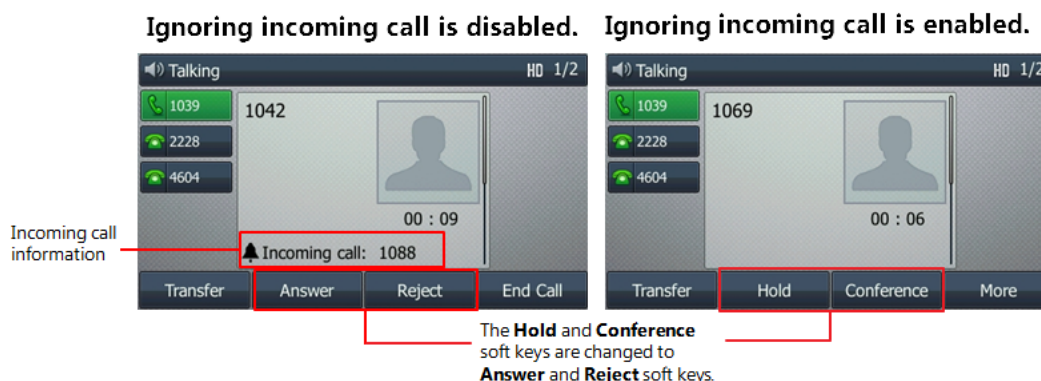

### Topic

[Ignoring Incoming Calls Configuration](#)

## Ignoring Incoming Calls Configuration

The following table lists the parameter you can use to configure ignoring incoming calls.

<b>Parameter</b>	features.ignore_incoming_call.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to ignore the incoming call.	
<b>Permitted Values</b>	0-Disabled 1-Enabled, the incoming call is still in the progress and is not rejected, the user can choose to answer it or not, or perform other features.	
<b>Default</b>	0	

## Off Hook Answering

You can set whether to answer an incoming call by picking up the handset, pressing the Speakerphone key or pressing the HEADSET key directly.

It is not applicable to CP920/CP925/CP935W phones.

### Topic

[Off Hook Answering Configuration](#)

## Off Hook Answering Configuration

The following table lists the parameter you can use to configure off hook answering.

<b>Parameter</b>	features.off_hook_answer.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to answer an incoming call by picking up the handset, pressing the Speakerphone key or pressing the HEADSET key directly.	
<b>Permitted Values</b>	0-Disabled, the user needs to press the corresponding line key, the <b>Answer</b> soft key or the OK key to answer an incoming call after picking up the handset, pressing the Speakerphone key or pressing the HEADSET key. 1-Enabled	
<b>Default</b>	1	
<b>Supported Devices</b>	All phones except CP920/CP925/CP935W	

## Auto Answer

Yealink phones support answering a SIP call or an IP address call automatically. Auto answer is configurable on a per-line basis, while IP address call is not.

By default, the phones will not automatically answer the incoming call during a call or while dialing even if the auto answer is enabled; and the incoming call will not be automatically answered after you end the current call or cancel the dialing. You can configure how the phone answers the call automatically.

### Topic

[Auto Answer Configuration](#)

## Auto Answer Configuration

The following table lists the parameters you can use to configure the auto answer.

<b>Parameter</b>	account.X.auto_answer <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables auto answer a SIP call. <b>Note:</b> The phone cannot automatically answer the incoming call during a call or while dialing even if the auto answer is enabled.	
<b>Permitted Values</b>	0-Disabled 1-Enabled, the phone can automatically answer an incoming call.	
<b>Default</b>	0	
<b>Web UI</b>	Account > Basic > Auto Answer	
<b>Phone UI</b>	Color Screen Phones: Menu > Features > Auto Answer > Line X > Auto Answer CP925/CP935W:	

	More > Features > Auto Answer > Line X > Auto Answer <u>Black-and-white Screen Phones:</u> Menu > Features > Auto Answer > Status	
<b>Parameter</b>	account.X.auto_answer_mute_enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the auto answer mute feature. <b>Note:</b> It works only if the values of parameters “account.X.auto_answer” and “features.allow_mute” are set to 1 (Enabled). The value configured by this parameter takes precedence over that configured by the parameter “features.mute.autoanswer_mute.enable”.	
<b>Permitted Values</b>	0-Disabled 1-Enabled, the phone will mute the microphone when an incoming call is automatically answered, and then the other party cannot hear you.	
<b>Default</b>	0	
<b>Web UI</b>	Account > Basic > Auto Answer Mute <b>Note:</b> It is only available for CP phones.	
<b>Phone UI</b>	Menu > Features > Auto Answer > Account 1 > Auto Answer (On) > Auto Answer Mute <u>CP925/CP935W:</u> More > Features > Auto Answer > Account 1 > Auto Answer (On) > Auto Answer Mute <b>Note:</b> It is only available for CP phones.	
<b>Parameter</b>	features.ip_call.auto_answer.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the auto answer feature for IP call. <b>Note:</b> It works only if “features.direct_ip_call_enable” is set to 1 (Enabled). The phone cannot automatically answer the incoming IP call when the IP phone is in a call or dialing even if IP call auto answer is enabled.	
<b>Permitted Values</b>	0-Disabled 1-Enabled, the phone can automatically answer the IP call.	
<b>Default</b>	0	
<b>Web UI</b>	Features > General Information > IP Direct Auto Answer	
<b>Parameter</b>	features.auto_answer.first_call_only	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to only automatically answer the incoming call when the phone is idle. <b>Note:</b> It works only if “account.X.auto_answer” or “features.ip_call.auto_answer.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled. If there is an incoming call arrived when the phone is in a call or dialing, the phone will automatically answer after you end the current call or cancel the dialing. 1-Enabled. The phone can only automatically answer the incoming call arrived when the phone is idle. If there is an incoming call arrived when the phone is in a call or dialing, you have to manually pick up the incoming call.	
<b>Default</b>	1	
<b>Parameter</b>	features.auto_answer_delay	<y0000000000xx>.cfg
<b>Description</b>	It configures the delay time (in seconds) before the phone automatically answers an incoming call. <b>Note:</b> For the call coming from a SIP account, it works only if “account.X.auto_answer” is set to 1 (Enabled).	

<b>Permitted Values</b>	T48G/T46G/T42G/T41P/T29G: Integer from 1 to 4 <u>Other Phones:</u> Integer from 1 to 60	
<b>Default</b>	1	
<b>Web UI</b>	Features > General Information > Auto Answer Delay	
<b>Parameter</b>	features.auto_answer_tone.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to play a warning tone when an incoming call is automatically answered. <b>Note:</b> For the call coming from a SIP account, it works only if "account.X.auto_answer" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Web UI</b>	Features > General Information > Enable Auto Answer Tone	
<b>Parameter</b>	features.auto_answer_ring_type	<y0000000000xx>.cfg
<b>Description</b>	It configures a ring tone the phone plays before the incoming call is automatically answered. <b>Note:</b> It works only if "features.auto_answer_tone.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0 (beep tone) Ring1.wav, Ring2.wav, Ring3.wav, Ring4.wav, Ring5.wav, Ring6.wav, Ring7.wav, Ring8.wav, Ring9.wav, Ring10.wav, Ring11.wav, Ring12.wav, Ring13.wav, Silent.wav, Splash.wav or custom ring tone name (for example, Customring.wav) <u>For T3 phones:</u> Ring1.wav, Ring2.wav, Ring3.wav, Ring4.wav, Silent.wav, Splash.wav or custom ring tone name (for example, Customring.wav)	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P and T29G	
<b>Parameter</b>	features.custom_auto_answer_tone.enable	<y0000000000xx>.cfg
<b>Description</b>	It configures the type of auto answer tone. <b>Note:</b> It works only if "features.auto_answer_tone.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-One beep 1-Double beep	
<b>Default</b>	1	
<b>Parameter</b>	features.mute.autoanswer_mute.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the auto answer mute feature. <b>Note:</b> It works only if "account.X.auto_answer" and "features.allow_mute" are set to 1 (Enabled). It is not available to the intercom call.	
<b>Permitted Values</b>	0-Disabled 1-Enabled, the phone will mute the microphone when an incoming call is automatically answered, and then the other party cannot hear you.	



<b>Default</b>	0	
<b>Parameter</b>	pstn.account.X.auto_answer <sup>[2]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the auto answer feature for PSTN account X. <b>Note:</b> The IP phone cannot automatically answer the incoming call during a call even if the auto answer is enabled.	
<b>Permitted Values</b>	0-Disabled 1-Enabled, the phone can automatically answer an incoming call.	
<b>Default</b>	0	
<b>Supported Devices</b>	CP925, CP920, T57W, T54W, T53W, T53, T53C	
<b>Web UI</b>	PSTN Account > Basic > Auto Answer	
<b>Phone UI</b>	Menu > Features > Auto Answer > Status CP925: More > Features > Auto Answer > Status	
<b>Parameter</b>	pstn.account.X.auto_answer_mute_enable <sup>[2]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the auto answer mute feature for PSTN account X. <b>Note:</b> It works only if the values of parameters “pstn.account.X.auto_answer” and “features.allow_mute” are set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled, the phone will mute the microphone when an incoming call is automatically answered, and then the other party cannot hear you.	
<b>Default</b>	0	
<b>Supported Devices</b>	CP925, CP920, T57W, T54W, T53W, T53, T53C	
<b>Web UI</b>	PSTN Account > Basic > Auto Answer Mute <b>Note:</b> It is only applicable to CP phones.	
<b>Phone UI</b>	Menu > Features > Auto Answer > Auto Answer Mute CP925: More > Features > Auto Answer > Auto Answer Mute <b>Note:</b> It is only applicable to CP phones.	

<sup>[1]</sup>X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

<sup>[2]</sup>X is the PSTN account ID. X=1-2.

## Anonymous Call Rejection

Anonymous call rejection allows IP phone to automatically reject incoming calls from callers whose identity has been deliberately concealed.

Anonymous call rejection can be performed locally or on the server. When performing anonymous call rejection on local, the phone sends the server a status message “Status-Line: SIP/2.0 433 Anonymity Disallowed”. If performing Anonymous call rejection on a specific server, you may need to configure anonymous call rejection on code and off code to activate and deactivate server-side anonymous call rejection feature.

**Topic**[Anonymous Call Rejection Configuration](#)

## Anonymous Call Rejection Configuration

The following table lists the parameters you can use to configure anonymous call rejection.

<b>Parameter</b>	account.X.reject_anonymous_call <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It triggers the anonymous call rejection feature to on or off.	
<b>Permitted Values</b>	<b>0</b> -Off <b>1</b> -On, the phone will automatically reject incoming calls from users enabled anonymous call feature. The anonymous user's phone screen presents "Anonymity Disallowed".	
<b>Default</b>	0	
<b>Web UI</b>	Account > Basic > Local Anonymous Rejection	
<b>Phone UI</b>	Menu > Features > Anonymous Call > Line X > Local Anonymous Rejection <u>CP925/CP935W:</u> More > Features > Anonymous Call > Line X > Local Anonymous Rejection	
<b>Parameter</b>	features.anonymous_response_code	<y0000000000xx>.cfg
<b>Description</b>	It configures the code the phone responds with to the server when it receives an anonymous call. <b>Note:</b> It works only if "account.X.reject_anonymous_call" is set to 1 (On).	
<b>Permitted Values</b>	Integer from 0 to 65535	
<b>Default</b>	433	
<b>Parameter</b>	account.X.anonymous_reject_oncode <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the anonymous call rejection on code. The phone will send the code to activate anonymous call rejection feature on server-side when you activate it on the phone.	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Account > Basic > Send Anonymous Rejection Code > On Code	
<b>Phone UI</b>	Menu > Features > Anonymous Call > Line X > Send Rejection Code > On Code <u>CP925/CP935W:</u> More > Features > Anonymous Call > Line X > Send Anonymous Rejection Code > On Code	
<b>Parameter</b>	account.X.send_anonymous_rejection_code <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the IP phone to send anonymous call rejection on/off code to activate/deactivate the server-side anonymous call rejection feature for account X.	
<b>Permitted Values</b>	<b>0</b> -Off Code, the phone will send anonymous rejection off code to the server when you deactivate the anonymous call rejection feature. <b>1</b> -On Code, the phone will send anonymous rejection on code to the server when you activate the anonymous call rejection feature.	
<b>Default</b>	0	

<b>Web UI</b>	Account > Basic > Send Anonymous Rejection Code	
<b>Phone UI</b>	Menu > Features > Anonymous Call > Line X > Send Rejection Code	
	CP925/CP935W: More > Features > Anonymous Call > Line X > Send Anonymous Rejection Code	
<b>Parameter</b>	account.X.anonymous_reject_offcode <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the anonymous call rejection off code.	
	The phone will send the code to deactivate anonymous call rejection feature on server-side when you deactivate it on the phone.	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Account > Basic > Send Anonymous Rejection Code > Off Code	
<b>Phone UI</b>	Menu > Features > Anonymous Call > Line X > Send Rejection Code > Off Code	
	CP925/CP935W: More > Features > Anonymous Call > Line X > Send Anonymous Rejection Code > Off Code	

<sup>[1]</sup>X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## Call Waiting

Call waiting enables you to receive another call when there is already an active call on your phone. If it is disabled, the new incoming call will be rejected automatically.

You can enable call waiting feature and set the phone to play a warning tone to avoid missing important calls during a call.

Yealink phones also support call waiting on code and off code to activate and deactivate server-side call waiting feature. They may vary on different servers.

### Topic

[Call Waiting Configuration](#)

## Call Waiting Configuration

The following table lists the parameters you can use to configure call waiting.

<b>Parameter</b>	call_waiting.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the call waiting feature.	
<b>Permitted Values</b>	0-Disabled, a new incoming call is automatically rejected by the phone with a busy message during a call.	
	1-Enabled, the phone screen will present a new incoming call during a call.	
<b>Default</b>	1	
<b>Web UI</b>	Features > General Information > Call Waiting	
<b>Phone UI</b>	Menu > Features > Call Waiting > Call Waiting	
	CP925/CP935W:	

	More > Features > Call Waiting > Call Waiting	
<b>Parameter</b>	call_waiting.tone	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to play the call waiting tone when the phone receives an incoming call during a call. <b>Note:</b> It works only if "call_waiting.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Web UI</b>	Features > Audio > Call Waiting Tone	
<b>Phone UI</b>	Menu > Features > Call Waiting > Play Tone <u>CP925/CP935W:</u> More > Features > Call Waiting > Play Tone	
<b>Parameter</b>	call_waiting.on_code	<y0000000000xx>.cfg
<b>Description</b>	It configures the call waiting on code. The phone will send the code to activate call waiting on server-side when you activate it on the phone.	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > General Information > Call Waiting On Code	
<b>Phone UI</b>	Menu > Features > Call Waiting > On Code <u>CP925/CP935W:</u> More > Features > Call Waiting > On Code	
<b>Parameter</b>	call_waiting.off_code	<y0000000000xx>.cfg
<b>Description</b>	It configures the call waiting off code. The phone will send the code to deactivate call waiting on server-side when you deactivate it on the phone.	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > General Information > Call Waiting Off Code	
<b>Phone UI</b>	Menu > Features > Call Waiting > Off Code <u>CP925/CP935W:</u> More > Features > Call Waiting > Off Code	

## Do Not Disturb (DND)

DND feature enables the phone to reject all incoming calls automatically when you do not want to be interrupted. You can choose to implement DND locally on the phone or on the server-side.

Usually, you can activate DND when the phone is idle. The phone stays in the DND state until you deactivate DND manually.

You can also temporarily activate DND during calls, the new incoming calls are rejected automatically. After ending the call, the DND is deactivated automatically. It prevents from interrupting during current calls and avoids missing calls after calls end.

## Topics

[DND Settings Configuration](#)

[DND Feature Configuration](#)

[DND Synchronization for Server-side Configuration](#)

## DND Settings Configuration

You can change the following DND settings:

- Enable or disable the DND feature. If disabled, DND soft key is not available, the users have no permission to configure DND on their phone.
- Choose a DND mode. You can configure DND for all lines or specific lines.
- Enable or disable the phone to persist DND state across calls when activating DND during calls. If disabled, the DND is automatically deactivated after calls end.
- Enable or disable DND emergency feature and specify DND authorized numbers. These numbers will not be DND when the DND feature is enabled. The incoming call will not be logged in the Missed Calls list.
- Define the return code and the reason of the SIP response message for a rejected incoming call when DND is activated. The caller's phone screen displays the received return code.
- Allow or disallow the IP phone to display a large DND icon on the idle screen. It helps users to clearly view that DND is activated.

The following table lists the parameters you can use to configure the DND settings.

<b>Parameter</b>	features.dnd.allow	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the DND feature.	
<b>Permitted Values</b>	0-Disabled, DND cannot be activated and users are not allowed to configure DND on the phone. 1-Enabled	
<b>Default</b>	1	
<b>Parameter</b>	features.dnd_mode	<y0000000000xx>.cfg
<b>Description</b>	It configures the DND mode for the IP phone. <b>Note:</b> It works only if "features.dnd.allow" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Phone, DND feature is effective for the phone system. 1-Custom, you can configure the DND feature for each or all accounts.	
<b>Default</b>	0	
<b>Web UI</b>	Features > Forward&DND > DND > Mode	
<b>Parameter</b>	features.keep_dnd.enable	<y0000000000xx>.cfg
<b>Description</b>	It configures if the DND state persists between calls after you activate DND during the call. <b>Note:</b> To activate DND during the call, you need to configure a DND key in advance.	
<b>Permitted Values</b>	0-DND state is automatically deactivated after the call. 1-DND state persists across calls. The phone stays in the DND state until you deactivate the DND manually.	
<b>Default</b>	1	
<b>Supported Devices</b>	All phones except CP920/CP925/CP935W	

<b>Parameter</b>	features.dnd.emergency_enable	<y0000000000xx>.cfg
<b>Description</b>	<p>It enables or disables the phone to receive incoming calls from authorized numbers when the DND feature is enabled.</p> <p><b>Note:</b> The authorized numbers are configured by the parameter “features.dnd.emergency_authorized_number”. It works only if “features.dnd.allow” is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	<p>0-Disabled 1-Enabled</p>	
<b>Default</b>	0	
<b>Web UI</b>	Features > Forward&DND > DND > DND Emergency	
<b>Parameter</b>	features.dnd.emergency_authorized_number	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the authorized numbers the phone can receive incoming calls from even if DND feature is activated.</p> <p>Multiple numbers are separated by commas.</p> <p><b>Example:</b></p> <p>features.dnd.emergency_authorized_number = 123,124</p> <p><b>Note:</b> It works only if “features.dnd.allow” and “features.dnd.emergency_enable” are set to 1 (Enabled).</p>	
<b>Permitted Values</b>	String within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Forward&DND > DND > DND Authorized Numbers	
<b>Parameter</b>	features.dnd_refuse_code	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures a return code and reason of SIP response messages when rejecting an incoming call by DND. A specific reason is displayed on the caller's phone screen.</p> <p><b>Note:</b> It works only if “features.dnd.allow” is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	<p>404-Not Found</p> <p>480-Temporarily Unavailable</p> <p>486-Busy Here, the caller's phone screen will display the reason “Busy Here” when the callee enables DND feature.</p> <p>600-Busy Everywhere</p> <p>603-Decline</p>	
<b>Default</b>	480	
<b>Web UI</b>	Features > General Information > Return Code When DND	
<b>Parameter</b>	features.dnd.large_icon.enable	<y0000000000xx>.cfg
<b>Description</b>	<p>It enables or disables the phone to display a large DND icon on the idle screen.</p> <p><b>Note:</b> It works only if “features.dnd.allow” is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	<p>0-Disabled 1-Enabled</p>	
<b>Default</b>	0	

<b>Parameter</b>	phone_setting.fwd_and_dnd.suspension_prompt	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to display the floating window prompt on the idle screen after DND is activated.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Supported Devices</b>	All color screen phones	

## DND Feature Configuration

After you choose a DND mode, you can configure the DND feature for all lines or a specific line. It depends on the DND mode (except T30P/T30/T19(P) E2/CP920/CP925/CP935W):

- **Phone** (default): DND feature is effective for all lines.
- **Custom**: DND feature can be configured for a specific line or multiple lines.

**Note:** DND mode is set by the parameter “features.dnd\_mode”.

Yealink phones also support DND on code and off code to activate and deactivate server-side DND feature. They may vary on different servers.

### Topics

[DND in Phone Mode Configuration](#)

[DND in Custom Mode Configuration](#)

## DND in Phone Mode Configuration

The following table lists the parameters you can use to configure DND in Phone mode.

<b>Parameter</b>	features.dnd.enable	<y0000000000xx>.cfg
<b>Description</b>	It triggers the DND feature to on or off. <b>Note:</b> It works only if “features.dnd.allow” is set to 1 (Enabled) and “features.dnd_mode” is set to 0 (Phone).	
<b>Permitted Values</b>	0-Off 1-On, the phone will reject incoming calls on all accounts.	
<b>Default</b>	0	
<b>Web UI</b>	Features > Forward&DND > DND > DND Status	
<b>Phone UI</b>	Menu > Features > DND > DND Status <u>CP925/CP935W:</u> More > Features > DND > DND Status	
<b>Parameter</b>	features.dnd.on_code	<y0000000000xx>.cfg
<b>Description</b>	It configures the DND on code to activate the server-side DND feature. The phone will send the DND on code to the server when you activate the DND feature on the phone. <b>Note:</b> It works only if “features.dnd.allow” is set to 1 (Enabled) and “features.dnd_mode” is set to 0 (Phone).	
<b>Permitted Values</b>	String within 32 characters	

<b>Default</b>	Blank	
<b>Web UI</b>	Features > Forward&DND > DND > On Code	
<b>Phone UI</b>	Menu > Features > DND > On Code	
	CP925/CP935W:	More > Features > DND > On Code
<b>Parameter</b>	features.dnd.off_code	<y0000000000xx>.cfg
<b>Description</b>	It configures the DND off code to deactivate the server-side DND feature. The phone will send the DND off code to the server when you deactivate the DND feature on the phone. <b>Note:</b> It works only if “features.dnd.allow” is set to 1 (Enabled) and “features.dnd_mode” is set to 0 (Phone).	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Forward&DND > DND > Off Code	
<b>Phone UI</b>	Menu > Features > DND > Off Code	
	CP925/CP935W:	More > Features > DND > Off Code

## DND in Custom Mode Configuration

The following table lists the parameters you can use to configure DND in Custom mode.

<b>Parameter</b>	account.X.dnd.enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It triggers the DND feature to on or off. <b>Note:</b> It works only if “features.dnd.allow” is set to 1 (Enabled) and “features.dnd_mode” is set to 1 (Custom).	
<b>Permitted Values</b>	0-Off 1-On, the phone will reject incoming calls on account X.	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2, CP920, CP925 and CP935W	
<b>Web UI</b>	Features > Forward& DND > DND > AccountX > DND Status	
<b>Phone UI</b>	Menu > Features > DND > AccountX > DND Status	
<b>Parameter</b>	account.X.dnd.on_code <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the DND on code to activate the server-side DND feature. The phone will send the DND on code to the server when you activate the DND feature on the phone. <b>Note:</b> It works only if “features.dnd.allow” is set to 1 (Enabled) and “features.dnd_mode” is set to 1 (Custom).	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2, CP920, CP925 and CP935W	



<b>Web UI</b>	Features > Forward& DND > DND > AccountX > On Code	
<b>Phone UI</b>	Menu > Features > DND > AccountX > On Code	
<b>Parameter</b>	account.X.dnd.off_code <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	<p>It configures the DND off code to deactivate the server-side DND feature.</p> <p>The phone will send the DND off code to the server when you deactivate the DND feature on the phone.</p> <p><b>Note:</b> It works only if “features.dnd.allow” is set to 1 (Enabled) and “features.dnd_mode” is set to 1 (Custom).</p>	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2, CP920, CP925 and CP935W	
<b>Web UI</b>	Features > Forward& DND > DND > AccountX > Off Code	
<b>Phone UI</b>	Menu > Features > DND > AccountX > Off Code	

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42U/T42G/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2.

## DND Synchronization for Server-side Configuration

DND synchronization feature provides the capability to synchronize the status of the DND features between the IP phone and the server.

If the DND is activated in phone mode, the DND status changing locally will be synchronized to all registered accounts on the server; but if the DND status of a specific account is changed on the server, the DND status locally will be changed.

The following table lists the parameters you can use to configure DND synchronization for server-side.

<b>Parameter</b>	features.feature_key_sync.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables to synchronize the feature status between the IP phone and the server.	
<b>Permitted Values</b>	<p>0-Disabled</p> <p>1-Enabled, the phone sends a SUBSCRIBE message with event “as-feature-event”.</p>	
<b>Default</b>	0	
<b>Parameter</b>	account.X.feature_key_sync.enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	<p>It enables or disables to synchronize the feature status between the IP phone and the server for account X.</p> <p><b>Note:</b> The value configured by this parameter takes precedence over that configured by the parameter “features.feature_key_sync.enable”.</p>	
<b>Permitted Values</b>	<p>0-Disabled</p> <p>1-Enabled, the phone to send a SUBSCRIBE message with event “as-feature-event”.</p>	
<b>Default</b>	0	
<b>Supported</b>	All phones except T48G, T46G, T42G, T41P, T29G, CP920, CP925 and CP935W	

<b>Devices</b>		
<b>Parameter</b>	features.dnd.feature_key_sync.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the DND feature synchronization. <b>Note:</b> It works only if "features.feature_key_sync.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled, server-based DND is enabled. Server and local phone DND are synchronized.	
<b>Default</b>	1	
<b>Supported Devices</b>	All phones except CP920/CP925/CP935W	
<b>Parameter</b>	account.X.dnd.feature_key_sync.enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the DND feature synchronization for account X. <b>Note:</b> The value configured by this parameter takes precedence over that configured by the parameter "features.dnd.feature_key_sync.enable". It works only if "account.X.feature_key_sync.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled, server-based DND is enabled. Server and local phone DND are synchronized.	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P, T29G, CP920, CP925 and CP935W	
<b>Parameter</b>	features.dnd.feature_key_sync.local_processing.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the local DND when DND feature synchronization is enabled. <b>Note:</b> It works only if "features.feature_key_sync.enable" and "features.dnd.feature_key_sync.enable" are set to 1 (Enabled). The value configured by the parameter "account.X.features.dnd.feature_key_sync.local_processing.enable" takes precedence over that configured by this parameter.	
<b>Permitted Values</b>	0-Disabled, DND is performed on the server side only. 1-Enabled, DND is performed on both the server side and locally.	
<b>Default</b>	0	
<b>Parameter</b>	account.X.features.dnd.feature_key_sync.local_processing.enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the local DND when DND feature synchronization is enabled. <b>Note:</b> It works only if "features.feature_key_sync.enable" and "features.dnd.feature_key_sync.enable" are set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled, DND is performed on the server side only. 1-Enabled, DND is performed on both the server side and locally.	
<b>Default</b>	Blank	

<sup>[1]</sup>X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## Multiple Call Appearances

You can enable each registered line to support multiple concurrent calls. For example, you can place one call on hold, switch to another call on the same registered line, and have both calls displayed.

You can set the maximum number of concurrent calls per line key on all-lines basis or a per-line basis. For example, if you specify 3 concurrent-calls for account 1, you can only have three call appearances on a corresponding line key. The additional incoming calls will be rejected.

**Note:** The number of concurrent calls applies to all line keys. For example, if three line keys are associated with an account, you can have three call appearances per line key.

### Topic

[Multiple Call Appearances Configuration](#)

## Multiple Call Appearances Configuration

You can specify the maximum concurrent calls per line key.

The following table lists the parameters you can use to configure multiple call appearances.

<b>Parameter</b>	phone_setting.call_appearance.calls_per_linekey	<y000000000xx>.cfg
<b>Description</b>	<p>It configures the maximum number of concurrent calls per line key for all registered lines.</p> <p>If it is set to 0, there is no limit for the number of concurrent calls.</p> <p><b>Example:</b></p> <p>phone_setting.call_appearance.calls_per_linekey = 2</p> <p>It means that you can have up to two concurrent calls per line key on the IP phone.</p> <p><b>Note:</b> The value configured by the parameter “account.X.phone_setting.call_appearance.calls_per_linekey” takes precedence over that configured by this parameter.</p>	
<b>Permitted Values</b>	Integer from 0 to 24	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2, CP920, CP925 and CP935W	
<b>Parameter</b>	account.X.phone_setting.call_appearance.calls_per_linekey <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	<p>It configures the maximum number of concurrent calls per line key for a specific line.</p> <p>If it is set to 0, there is no limit for the number of concurrent calls.</p> <p><b>Example:</b></p> <p>account.1.phone_setting.call_appearance.calls_per_linekey = 2</p> <p>It means that you can have up to two concurrent calls per line key associated with account 1.</p> <p><b>Note:</b> The value configured by this parameter takes precedence over that configured by the parameter “phone_setting.call_appearance.calls_per_linekey”.</p>	
<b>Permitted Values</b>	Integer from 0 to 24	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2, CP920, CP925 and CP935W	

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42U/T42G/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2.

## Call Hold

Call hold provides a service of placing an active call on hold. It enables you to pause activity on an active call so that you can use the phone for another task, for example, to place or receive another call.

When a call is placed on hold, the phones send an INVITE request with HOLD SDP to request remote parties to stop sending media and to inform them that they are being held. The phones support two call hold methods, one is [RFC 3264](#), which sets the “a” (media attribute) in the SDP to sendonly, recvonly or inactive (for example, a=sendonly). The other is [RFC 2543](#), which sets the “c” (connection addresses for the media streams) in the SDP to zero (for example, c=0.0.0.0).

When you place an active call on hold or the call is held by remote party, a call hold tone or held tone alerts you after a specific period of time that a call is still on hold or is still held by the remote party. You can configure the call hold tone and held tone.

If supported by the server, you can also configure a music-on-hold URI.

### Topics

[Call Hold Configuration](#)

[Music on Hold \(MoH\) Configuration](#)

## Call Hold Configuration

The following table lists the parameters you can use to configure call hold.

<b>Parameter</b>	sip.rfc2543_hold	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to use RFC 2543 (c=0.0.0.0) outgoing hold signaling.	
<b>Permitted Values</b>	<b>0</b> -Disabled, SDP media direction attributes (such as a=sendonly) per RFC 3264 is used when placing a call on hold. <b>1</b> -Enabled, SDP media connection address c=0.0.0.0 per RFC 2543 is used when placing a call on hold.	
<b>Default</b>	0	
<b>Web UI</b>	Features > General Information > RFC 2543 Hold	
<b>Parameter</b>	account.X.hold_use_inactive <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the phone to use inactive outgoing hold signaling. <b>Note:</b> It works only if “sip.rfc2543_hold” is set to 0 (Disabled).	
<b>Permitted Values</b>	<b>0</b> -Disabled, SDP media direction attribute “a=sendonly” is used when placing a call on hold. <b>1</b> -Enabled, SDP media direction attribute “a=inactive” is used when placing a call on hold. RTP packets will not be sent or received.	
<b>Default</b>	0	
<b>Parameter</b>	features.play_hold_tone.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to play the call hold tone when you place a call on hold.	
<b>Permitted Values</b>	<b>0</b> -Disabled <b>1</b> -Enabled	
<b>Default</b>	1	

<b>Web UI</b>	Features > General Information > Play Hold Tone	
<b>Parameter</b>	features.play_hold_tone.delay	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the time (in seconds) to wait for the phone to play the initial call hold tone.</p> <p>If it is set to 30 (30s), the phone will wait 30 seconds to play the initial call hold tone after you place a call on hold.</p> <p><b>Note:</b> It works only if “features.play_hold_tone.enable” is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	Integer from 3 to 3600	
<b>Default</b>	30	
<b>Web UI</b>	Features > General Information > Play Hold Tone Delay	
<b>Parameter</b>	features.play_hold_tone.interval	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the time (in seconds) between subsequent call hold tones.</p> <p>If it is set to 3 (3s) and “features.play_hold_tone.delay” is set to 30 (30s), the phone will begin to play a hold tone after you place a call on hold for 30 seconds, and repeat the call hold tone every 3 seconds.</p> <p><b>Note:</b> It works only if “features.play_hold_tone.enable” is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	Integer from 3 to 3600	
<b>Default</b>	30	
<b>Web UI</b>	Features > General Information > Hold Tone Interval(second)	
<b>Parameter</b>	features.play_held_tone.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to play the call held tone when a call is held by the other party.	
<b>Permitted Values</b>	<b>0</b> -Disabled <b>1</b> -Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Features > General Information > Play Held Tone	
<b>Parameter</b>	features.play_held_tone.delay	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the time (in seconds) to wait for the phone to play the initial call held tone.</p> <p>If it is set to 30 (30s), the phone will wait 30 seconds to play the initial call held tone after you are held by the other party.</p> <p><b>Note:</b> It works only if the Music on Hold feature is disabled and “features.play_held_tone.enable” is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	Integer from 3 to 3600	
<b>Default</b>	30	
<b>Web UI</b>	Features > General Information > Play Held Tone Delay	
<b>Parameter</b>	features.play_held_tone.interval	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the time (in seconds) between subsequent call held tones.</p> <p>If it is set to 3 (3s) and “features.play_held_tone.delay” is set to 30 (30s), the phone will begin to play a held tone after a call is held by the other party for 30 seconds, and repeat the call held tone every 3</p>	

	seconds. <b>Note:</b> It works only if the Music on Hold feature is disabled and "features.play_held_tone.enable" is set to 1 (Enabled).
<b>Permitted Values</b>	Integer from 3 to 3600
<b>Default</b>	60
<b>Web UI</b>	Features > General Information > Held Tone Interval(second)
<b>Parameter</b>	phone_setting.hold_or_swap.mode <y0000000000xx>.cfg
<b>Description</b>	It configures the display rule of the <b>Hold/Swap</b> soft key when there are two calls on the phone. <b>Note:</b> You can also configure the softkey layout feature to display the <b>Hold</b> or <b>Swap</b> soft key.
<b>Permitted Values</b>	0-Only display the <b>Swap</b> soft key. 1-Only display the <b>Hold</b> soft key. 2-Display the <b>Hold</b> and <b>Swap</b> soft keys.
<b>Default</b>	0
<b>Related Parameters</b>	phone_setting.custom_softkey_enable

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## Music on Hold (MoH) Configuration

When a call is placed on hold, the phone will send an INVITE message to the specified MoH server account according to the SIP URI. The MoH server account automatically responds to the INVITE message and immediately plays audio from some source located anywhere (LAN, Internet) to the held party. For more information, refer to [draft-worley-service-example](#).

The following table lists the parameters you can use to configure music on hold.

<b>Parameter</b>	account.X.music_server_uri <sup>[1]</sup> <MAC>.cfg
<b>Description</b>	It configures the address of the Music On Hold server. Examples for valid values: <10.1.3.165> , 10.1.3.165, sip:moh@sip.com, <sip:moh@sip.com> , <yealink.com > or yealink.com. <b>Note:</b> The DNS query in this parameter only supports A query.
<b>Permitted Values</b>	SIP URI within 256 characters
<b>Default</b>	Blank
<b>Web UI</b>	Account > Advanced > Music Server URI
<b>Parameter</b>	account.X.music_on_hold_type <sup>[1]</sup> <MAC>.cfg
<b>Description</b>	It configures the way to process Music On Hold when placing an active call on hold.
<b>Permitted Values</b>	0-Calling the Music On Hold server before holding the call 1-Calling the Music On Hold server after holding the call
<b>Default</b>	0

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## Call Mute

You can mute the microphone of the active audio device (handset, headset or speakerphone) on Yealink phones during an active call or when the phone is on the pre-dialing/dialing/calling/ringing screen. The call is automatically muted when setting up successfully. Muting before a call is answered prevents the other party from hearing the local discussion.

You can activate the mute feature by pressing the MUTE key. Normally, the mute feature is automatically deactivated when the active call ends. You can use keep mute feature to keep the mute state persisting across the calls.

**Note:** Muting microphone on the pre-dialing/dialing/calling/ringing screen is not available on T23P/T23G/T21(P) E2 phones when the keep mute feature is disabled.

### Topics

[Microphone Mute Configuration](#)

[Keep Mute](#)

[Mute Alert Tone](#)

## Microphone Mute Configuration

The following table lists the parameter you can use to configure the microphone mute feature.

<b>Parameter</b>	features.allow_mute	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the allow mute feature for the IP phone. <b>Note:</b> For T23P/T23G/T21(P) E2 phones, you are allowed to activate the mute feature on the pre-dialing/dialing/calling/ringing screen only if "features.keep_mute.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled, you are allowed to mute an active call or activate the mute feature on the pre-dialing/dialing/calling/ringing screen. (Mute the microphone on the calling screen is only applicable to the T57W/T54W/T53W/T53/T53C/T48U/T48S/T48G/T46U/T46S/T46G/T33P/T33G/T29G phones).	
<b>Default</b>	1	
<b>Web UI</b>	Features > General Information > Allow Mute	

## Keep Mute

Keep mute, also known as persistent mute, allows you to keep the mute state persisting across calls.

In a call center or meet room, if incoming calls are answered automatically, the callers may hear the local discussion. Therefore, you can mute the phone in an idle state to prevent the unintended situation. The mute state persists across calls until you unmute the microphone manually or until the phone restarts.

You can activate the mute feature by pressing the MUTE key in idle/pre-dialing/dialing/ringing/calling/talking state.

**Note:** For T23P/T23G/T21(P) E2 phones, the Cancel key (X key) can be used to cancel actions, reject incoming calls, mute/un-mutes calls or activate the mute feature. If keep mute feature is enabled, the Cancel key can only be used as a mute key.

### Topic

[Keep Mute Configuration](#)

## Keep Mute Configuration

The following table lists the parameter you can use to enable or disable keep mute.

<b>Parameter</b>	features.keep_mute.enable	<y0000000000xx>.cfg
<b>Description</b>	It configures the keep mute feature. <b>Note:</b> It works only if "features.allow_mute" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-The mute feature is automatically deactivated when the active call ends. 1-The mute state is kept until you change the mute state manually or the phone restarts.	
<b>Default</b>	0 (for other phones) 1 (for CP920/CP925/CP935W)	
<b>Parameter</b>	features.keep_mute.mode	<y0000000000xx>.cfg
<b>Description</b>	It configures the mute mode. <b>Note:</b> The value configured by this parameter takes precedence over that configured by the parameter "features.keep_mute.enable".	
<b>Permitted Values</b>	0-Exit the keep mute state. 1-Enter the keep mute state, but in the idle screen, you can press the mute key to enter or exit the keep mute state. 2-Enter the permanent mute state, that is, in the idle screen, you cannot press the mute key to exit the keep mute state. However, during the call, when the call is established, the call is muted by default, you can press the mute key to unmute/mute the call. After the call is finished, it returns to the keep mute state. 3-Enter the permanent mute state, that is, in the idle screen, you cannot press the mute key to exit the keep mute state, but during the call, the call is muted by default, you can long press the mute key to unmute the call, release the mute key to return to the mute state. After the call is finished, it still returns to the keep mute state.	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	

## Mute Alert Tone

You can configure the phone to play an audible tone if the mute status of the phone is changed. This allows you to know if your phone is in the mute or un-mute state. In addition, you can set a periodic reminder which plays the audible tone periodically when the phone is in the mute state. The time interval must not be less than 3 seconds.

It is only applicable to CP920/CP925/CP935W phones.

### Topic

[Mute Alert Tone Configuration](#)

## Mute Alert Tone Configuration

The following table lists the parameters you can use to configure the mute alert tone feature.

<b>Parameter</b>	features.play_mute_tone.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to play an audible tone when the mute status is changed.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	



<b>Default</b>	0	
<b>Supported Devices</b>	CP920, CP925, CP935W	
<b>Parameter</b>	features.play_mute_tone.interval	<y0000000000xx>.cfg
<b>Description</b>	It configures time interval (in seconds) for playing an audible tone when the phone is in the mute state during the call.	
<b>Permitted Values</b>	Integer from 3 to 3600	
<b>Default</b>	5	
<b>Supported Devices</b>	CP920, CP925, CP935W	

## Call Forward

You can forward calls from any line on your phone to a contact. There are two ways of forwarding your calls:

- Forward calls in special situations, such as when the phone is busy or there is no answer, or forwarding all incoming calls to a contact immediately.  
You can set the phone not to forward a call coming from authorized numbers.
- Manually forward an incoming call to a number.

### Topics

[Call Forward Settings Configuration](#)

[Call Forward Feature Configuration](#)

[Call Forward Synchronization for Server-side Configuration](#)

## Call Forward Settings Configuration

You can change the following call forward settings:

- Enable or disable the call forward feature. If disabled, the users have no permission to configure call forward on their phone.
- Choose a call forward mode. You can configure call forward for all lines or specific lines.
- Allow or disallow users to forward an incoming call to an international telephone number (the prefix is 00).
- Enable or disable forward emergency feature and specify forward authorized numbers. These numbers will not be forwarded when the call forward feature is enabled. The incoming call will not be logged in the Forwarded Calls list.
- Enable or disable the display of the Diversion header. The Diversion header allows the phone which receives a forwarded-call to indicate where the call was from.

The following table lists the parameters you can use to change the call forward settings.

<b>Parameter</b>	features.fwd.allow	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the call forward feature.	
<b>Permitted Values</b>	0-Disabled, call forward feature is not available to the users. 1-Enabled	
<b>Default</b>	1	
<b>Parameter</b>	features.fwd_mode	<y0000000000xx>.cfg
<b>Description</b>	It configures the call forward mode. <b>Note:</b> It works only if "features.fwd.allow" is set to 1 (Enabled).	

<b>Permitted Values</b>	0-Phone, call forward feature is effective on a phone basis. 1-Custom, you can configure call forward feature on a per-line basis.	
<b>Default</b>	0	
<b>Web UI</b>	Features > Forward&DND > Forward > Mode	
<b>Parameter</b>	features.forward.emergency.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to receive the call from authorized numbers when the call forward feature is activated. <b>Note:</b> It works only if "features.fwd.allow" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled, the call from authorized numbers will not be forwarded when the call forward feature is activated.	
<b>Default</b>	0	
<b>Web UI</b>	Features > Forward&DND > Forward > Forward Emergency	
<b>Parameter</b>	features.forward.emergency.authorized_number	<y0000000000xx>.cfg
<b>Description</b>	It configures the authorized numbers. The call from the authorized numbers cannot be forwarded even if the call forward feature is activated. Multiple numbers are separated by commas. <b>Note:</b> It works only if "features.fwd.allow" and "features.forward.emergency.enable" are set to 1 (Enabled).	
<b>Permitted Values</b>	String within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Forward&DND > Forward > Forward Authorized Numbers	
<b>Parameter</b>	forward.international.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to forward incoming calls to international numbers (the prefix is 00). <b>Note:</b> It works only if "features.fwd.allow" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Web UI</b>	Features > General Information > Fwd International	
<b>Phone UI</b>	<p><u>Color Screen Phones:</u> Menu &gt; Advanced (default password: admin) &gt; FWD International &gt; FWD International</p> <p><u>CP925/CP935W:</u> More &gt; Advanced (default password: admin) &gt; FWD International &gt; FWD International</p> <p><u>Black-and-white Screen Phones:</u> Menu &gt; Settings &gt; Advanced Settings (default password: admin) &gt; FWD International &gt; FWD International</p>	
<b>Parameter</b>	forward.idle_access_always_fwd.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to always enter the Always Forward setting screen when pressing	

	the Forward key on the Idle screen.	
<b>Permitted Values</b>	0-Disabled. When pressing the Forward key, the phone may activate/deactivate the call forward or enter the Always Forward/Busy Forward/No Answer Forward setting screen. 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	features.fwd_diversion_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to present the diversion information when an incoming call is forwarded to the IP phone.	
<b>Permitted Values</b>	0-Disabled 1-Enabled, the server can use the Diversion field with a SIP header to inform the phone of a call's history.	
<b>Default</b>	1	
<b>Web UI</b>	Features > General Information > Diversion/History-Info	
<b>Parameter</b>	phone_setting.fwd_and_dnd.suspension_prompt	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to display the floating window prompt on the idle screen after call forward is activated.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Supported Devices</b>	All color screen phones	

## Call Forward Feature Configuration

After you choose a call forward mode, you can configure call forward feature for all lines or specific lines. It depends on the call forward mode:

- **Phone** (default): Call forward feature is effective for all lines.
- **Custom**: Call forward feature can be configured for a specific line or multiple lines.

**Note:** Forward mode is set by the parameter “features.fwd\_mode”.

Yealink phones also support call forward on code and off code to activate and deactivate server-side call forward feature. They may vary on different servers.

**Tip:** You can set a DSS key as a Forward key, and specify a contact you want to forward the incoming calls to for this key. For more information, refer to [DSS Keys](#).

### Topics

[Call Forward in Phone Mode Configuration](#)

[Call Forward in Custom Mode Configuration](#)

## Call Forward in Phone Mode Configuration

The following table lists the parameters you can use to configure call forward in phone mode.

<b>Parameter</b>	forward.always.enable	<y0000000000xx>.cfg
<b>Description</b>	It triggers the always forward feature to on or off on a phone basis. <b>Note:</b> It works only if “features.fwd.allow” is set to 1 (Enabled) and “features.fwd_mode” is set to 0	

	(Phone) .	
<b>Permitted Values</b>	0-Off 1-On, incoming calls are forwarded to the destination number (configured by the parameter "forward.always.target") immediately.	
<b>Default</b>	0	
<b>Web UI</b>	Features > Forward&DND > Forward > Always Forward > On/Off	
<b>Phone UI</b>	Menu > Features > Call Forward > Always Forward > Always Forward <u>CP925/CP935W:</u> More > Features > Call Forward > Always Forward > Always Forward	
<b>Parameter</b>	forward.always.target	<y0000000000xx>.cfg
<b>Description</b>	It configures the destination number of the always forward on a phone basis. <b>Note:</b> It works only if "features.fwd.allow" is set to 1 (Enabled) and "features.fwd_mode" is set to 0 (Phone) .	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Forward&DND > Forward > Always Forward > Target	
<b>Phone UI</b>	Menu > Features > Call Forward > Always Forward > Forward to <u>CP925/CP935W:</u> More > Features > Call Forward > Always Forward > Forward to	
<b>Parameter</b>	forward.always.on_code	<y0000000000xx>.cfg
<b>Description</b>	It configures the always forward on code to activate the server-side always forward feature. The phone will send the always forward on code and the pre-configured destination number (configured by the parameter "forward.always.target") to the server when you activate always forward feature on a phone basis. <b>Note:</b> It works only if "features.fwd.allow" is set to 1 (Enabled) and "features.fwd_mode" is set to 0 (Phone) .	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Forward&DND > Forward > Always Forward > On Code	
<b>Phone UI</b>	Menu > Features > Call Forward > Always Forward > On Code <u>CP925/CP935W:</u> More > Features > Call Forward > Always Forward > On Code	
<b>Parameter</b>	forward.always.off_code	<y0000000000xx>.cfg
<b>Description</b>	It configures the always forward off code to deactivate the server-side always forward feature. The phone will send the always forward off code to the server when you deactivate always forward feature on a phone basis. <b>Note:</b> It works only if "features.fwd.allow" is set to 1 (Enabled) and "features.fwd_mode" is set to 0 (Phone) .	
<b>Permitted</b>	String within 32 characters	

<b>Values</b>	
<b>Default</b>	Blank
<b>Web UI</b>	Features > Forward&DND > Forward > Always Forward > Off Code
<b>Phone UI</b>	Menu > Features > Call Forward > Always Forward > Off Code <u>CP925/CP935W:</u> More > Features > Call Forward > Always Forward > Off Code
<b>Parameter</b>	forward.busy.enable <y0000000000xx>.cfg
<b>Description</b>	It triggers the busy forward feature to on or off on a phone basis. <b>Note:</b> It works only if “features.fwd.allow” is set to 1 (Enabled) and “features.fwd_mode” is set to 0 (Phone) .
<b>Permitted Values</b>	<b>0</b> -Off 1-On, incoming calls are forwarded to the destination number (configured by the parameter “forward.busy.target”) when the callee is busy.
<b>Default</b>	0
<b>Web UI</b>	Features > Forward&DND > Forward > Busy Forward > On/Off
<b>Phone UI</b>	Menu > Features > Call Forward > Busy Forward > Busy Forward <u>CP925/CP935W:</u> More > Features > Call Forward > Busy Forward > Busy Forward
<b>Parameter</b>	forward.busy.target <y0000000000xx>.cfg
<b>Description</b>	It configures the destination number of the busy forward on a phone basis. <b>Note:</b> It works only if “features.fwd.allow” is set to 1 (Enabled) and “features.fwd_mode” is set to 0 (Phone) .
<b>Permitted Values</b>	String within 32 characters
<b>Default</b>	Blank
<b>Web UI</b>	Features > Forward&DND > Forward > Busy Forward > Target
<b>Phone UI</b>	Menu > Features > Call Forward > Busy Forward > Forward to <u>CP925/CP935W:</u> More > Features > Call Forward > Busy Forward > Forward to
<b>Parameter</b>	forward.busy.on_code <y0000000000xx>.cfg
<b>Description</b>	It configures the busy forward on code to activate the server-side busy forward feature. The phone will send the busy forward on code and the pre-configured destination number (configured by the parameter “forward.busy.target”) to the server when you activate the busy forward feature on a phone basis. <b>Note:</b> It works only if “features.fwd.allow” is set to 1 (Enabled) and “features.fwd_mode” is set to 0 (Phone) .
<b>Permitted Values</b>	String within 32 characters
<b>Default</b>	Blank

<b>Web UI</b>	Features > Forward&DND > Forward > Busy Forward > On Code	
<b>Phone UI</b>	Menu > Features > Call Forward > Busy Forward > On Code <u>CP925/CP935W:</u> More > Features > Call Forward > Busy Forward > On Code	
<b>Parameter</b>	forward.busy.off_code	<y0000000000xx>.cfg
<b>Description</b>	It configures the busy forward off code to deactivate the server-side busy forward feature. The phone will send the busy forward off code to the server when you deactivate the busy forward feature on a phone basis. <b>Note:</b> It works only if “features.fwd.allow” is set to 1 (Enabled) and “features.fwd_mode” is set to 0 (Phone) .	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Forward&DND > Forward > Busy Forward > Off Code	
<b>Phone UI</b>	Menu > Features > Call Forward > Busy Forward > Off Code <u>CP925/CP935W:</u> More > Features > Call Forward > Busy Forward > Off Code	
<b>Parameter</b>	forward.no_answer.enable	<y0000000000xx>.cfg
<b>Description</b>	It triggers the no answer forward feature to on or off on a phone basis. <b>Note:</b> It works only if “features.fwd.allow” is set to 1 (Enabled) and “features.fwd_mode” is set to 0 (Phone) . DND activated on the IP phone deactivates the local No Answer Forward settings.	
<b>Permitted Values</b>	0-Off 1-On, incoming calls are forwarded to the destination number (configured by the parameter “forward.no_answer.target”) after a period of ring time.	
<b>Default</b>	0	
<b>Web UI</b>	Features > Forward&DND > Forward > No Answer Forward > On/Off	
<b>Phone UI</b>	Menu > Features > Call Forward > No Answer Forward > No Answer Forward <u>CP925/CP935W:</u> More > Features > Call Forward > No Answer Forward > No Answer Forward	
<b>Parameter</b>	forward.no_answer.target	<y0000000000xx>.cfg
<b>Description</b>	It configures the destination number of the no answer forward on a phone basis. <b>Note:</b> It works only if “features.fwd.allow” is set to 1 (Enabled) and “features.fwd_mode” is set to 0 (Phone) .	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Forward&DND > Forward > No Answer Forward > Target	
<b>Phone UI</b>	Menu > Features > Call Forward > No Answer Forward > Forward to <u>CP925/CP935W:</u> More > Features > Call Forward > No Answer Forward > Forward to	

<b>Parameter</b>	forward.no_answer.timeout	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures ring times (N) to wait before forwarding incoming calls.</p> <p>The incoming calls will be forwarded when not answered after N*M (M is configurable by “phone_setting.ring_duration”) seconds.</p> <p><b>Note:</b> It works only if “features.fwd.allow” is set to 1 (Enabled) and “features.fwd_mode” is set to 0 (Phone) .</p>	
<b>Permitted Values</b>	Integer from 0 to 20 (determined by “features.forward.no_answer.show_ring_times”)	
<b>Default</b>	2	
<b>Web UI</b>	Features > Forward&DND > Forward > No Answer Forward > After Ring Time (0~120s)	
<b>Phone UI</b>	<p>Menu &gt; Features &gt; Call Forward &gt; No Answer Forward &gt; After Ring Time</p> <p>CP925/CP935W:</p> <p>More &gt; Features &gt; Call Forward &gt; No Answer Forward &gt; After Ring Time</p>	
<b>Parameter</b>	features.forward.no_answer.show_ring_times	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the permitted values of the ring times (N) to wait before forwarding incoming calls.</p> <p><b>Example:</b></p> <p>features.forward.no_answer.show_ring_times = 0,2,3,4,5,6,7,8,9,10,11,12,13,14,15,16,17,18,19</p> <p><b>Note:</b> It works only if “forward.no_answer.enable” or “account.X.timeout_fwd.enable” is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	String within 512 characters	
<b>Default</b>	0,1,2,3,4,5,6,7,8,9,10,11,12,13,14,15,16,17,18,19,20 (1 is not applicable to BroadSoft users)	
<b>Parameter</b>	phone_setting.ring_duration	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the interval (in seconds) of the ring for the no answer forward feature.</p> <p><b>Note:</b> It works only if “forward.no_answer.enable” or “account.X.timeout_fwd.enable” is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	Integer greater than or equal to 0	
<b>Default</b>	6	
<b>Parameter</b>	forward.no_answer.on_code	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the no answer forward on code to activate the server-side no answer forward feature.</p> <p>The phone will send the no answer forward on code and the pre-configured destination number (configured by the parameter “forward.no_answer.target”) to the server when you activate the no answer forward feature on a phone basis.</p> <p><b>Note:</b> It works only if “features.fwd.allow” is set to 1 (Enabled) and “features.fwd_mode” is set to 0 (Phone) .</p>	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Forward&DND > Forward > No Answer Forward > On Code	
<b>Phone UI</b>	Menu > Features > Call Forward > No Answer Forward > On Code	

	CP925/CP935W: More > Features > Call Forward > No Answer Forward > On Code	
<b>Parameter</b>	forward.no_answer.off_code	<y0000000000xx>.cfg
<b>Description</b>	It configures the no answer forward off code to deactivate the server-side no answer forward feature. The phone will send the no answer forward off code to the server when you deactivate the no answer forward feature on a phone basis. <b>Note:</b> It works only if "features.fwd.allow" is set to 1 (Enabled) and "features.fwd_mode" is set to 0 (Phone) .	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Forward&DND > Forward > No Answer Forward > Off Code	
<b>Phone UI</b>	Menu > Features > Call Forward > No Answer Forward > Off Code CP925/CP935W: More > Features > Call Forward > No Answer Forward > Off Code	

### Call Forward in Custom Mode Configuration

The following table lists the parameters you can use to configure call forward in custom mode.

<b>Parameter</b>	account.X.always_fwd.enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It triggers always forward feature to on or off. <b>Note:</b> It works only if "features.fwd.allow" is set to 1 (Enabled) and "features.fwd_mode" is set to 1 (Custom).	
<b>Permitted Values</b>	0-Off 1-On, incoming calls to the account X are forwarded to the destination number (configured by the parameter "account.X.always_fwd.target") immediately.	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2, CP920, CP925 and CP935W	
<b>Web UI</b>	Features > Forward&DND > Forward > AccountX > Always Forward > On/Off	
<b>Phone UI</b>	Menu > Features > Call Forward > AccountX > Always Forward > Always Forward	
<b>Parameter</b>	account.X.always_fwd.target <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the destination number of the always forward. <b>Note:</b> It works only if "features.fwd.allow" is set to 1 (Enabled) and "features.fwd_mode" is set to 1 (Custom).	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2, CP920, CP925 and CP935W	
<b>Web UI</b>	Features > Forward&DND > Forward > AccountX > Always Forward > Target	



<b>Phone UI</b>	Menu > Features > Call Forward > AccountX > Always Forward > Forward to	
<b>Parameter</b>	account.X.always_fwd.on_code <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	<p>It configures the always forward on code to activate the server-side always forward feature.</p> <p>The phone will send the always forward on code and the pre-configured destination number (configured by the parameter “account.X.always_fwd.target”) to the server when you activate always forward feature on the phone.</p> <p><b>Note:</b> It works only if “features.fwd.allow” is set to 1 (Enabled) and “features.fwd_mode” is set to 1 (Custom).</p>	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2, CP920, CP925 and CP935W	
<b>Web UI</b>	Features > Forward&DND > Forward > AccountX > Always Forward > On Code	
<b>Phone UI</b>	Menu > Features > Call Forward > AccountX > Always Forward > On Code	
<b>Parameter</b>	account.X.always_fwd.off_code <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	<p>It configures the always forward off code to deactivate the server-side always forward feature.</p> <p>The phone will send the always forward off code to the server when you deactivate always forward feature on the phone.</p> <p><b>Note:</b> It works only if “features.fwd.allow” is set to 1 (Enabled) and “features.fwd_mode” is set to 1 (Custom).</p>	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2, CP920, CP925 and CP935W	
<b>Web UI</b>	Features > Forward&DND > Forward > AccountX > Always Forward > Off Code	
<b>Phone UI</b>	Menu > Features > Call Forward > AccountX > Always Forward > Off Code	
<b>Parameter</b>	account.X.busy_fwd.enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It triggers the busy forward feature to on or off.	
<b>Permitted Values</b>	<p>0-Off</p> <p>1-On, incoming calls to the account X are forwarded to the destination number (configured by the parameter “account.X.busy_fwd.target”) when the callee is busy.</p>	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2, CP920, CP925 and CP935W	
<b>Web UI</b>	Features > Forward&DND > Forward > AccountX > Busy Forward > On/Off	
<b>Phone UI</b>	Menu > Features > Call Forward > AccountX > Busy Forward > Busy Forward	
<b>Parameter</b>	account.X.busy_fwd.target <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the destination number of the busy forward.	

	<b>Note:</b> It works only if “features.fwd.allow” is set to 1 (Enabled) and “features.fwd_mode” is set to 1 (Custom).	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2, CP920, CP925 and CP935W	
<b>Web UI</b>	Features > Forward&DND > Forward > AccountX > Busy Forward > Target	
<b>Phone UI</b>	Menu > Features > Call Forward > AccountX > Busy Forward > Forward to	
<b>Parameter</b>	account.X.busy_fwd.on_code <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	<p>It configures the busy forward on code to activate the server-side busy forward feature.</p> <p>The phone will send the busy forward on code and the pre-configured destination number (configured by the parameter “account.X.busy_fwd.target”) to the server when you activate the busy forward feature on the phone.</p> <p><b>Note:</b> It works only if “features.fwd.allow” is set to 1 (Enabled) and “features.fwd_mode” is set to 1 (Custom).</p>	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2, CP920, CP925 and CP935W	
<b>Web UI</b>	Features > Forward&DND > Forward > AccountX > Busy Forward > On Code	
<b>Phone UI</b>	Menu > Features > Call Forward > AccountX > Busy Forward > On Code	
<b>Parameter</b>	account.X.busy_fwd.off_code <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	<p>It configures the busy forward off code to deactivate the server-side busy forward feature.</p> <p>The phone will send the busy forward off code to the server when you deactivate the busy forward feature on the phone.</p> <p><b>Note:</b> It works only if “features.fwd.allow” is set to 1 (Enabled) and “features.fwd_mode” is set to 1 (Custom).</p>	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2, CP920, CP925 and CP935W	
<b>Web UI</b>	Features > Forward&DND > Forward > AccountX > Busy Forward > Off Code	
<b>Phone UI</b>	Menu > Features > Call Forward > AccountX > Busy Forward > Off Code	
<b>Parameter</b>	account.X.timeout_fwd.enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	<p>It triggers no answer forward feature to on or off.</p> <p><b>Note:</b> It works only if “features.fwd.allow” is set to 1 (Enabled) and “features.fwd_mode” is set to 1 (Custom).</p>	
<b>Permitted Values</b>	<p>0-Off</p> <p>1-On, incoming calls to the account X are forwarded to the destination number (configured by the para-</p>	

	meter "account.X.timeout_fwd.target") after a period of ring time.	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2, CP920, CP925 and CP935W	
<b>Web UI</b>	Features > Forward&DND > Forward > AccountX > No Answer Forward > On/Off	
<b>Phone UI</b>	Menu > Features > Call Forward > AccountX > No Answer Forward > No Answer Forward	
<b>Parameter</b>	account.X.timeout_fwd.target <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the destination number of the no answer forward. <b>Note:</b> It works only if "features.fwd.allow" is set to 1 (Enabled) and "features.fwd_mode" is set to 1 (Custom).	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2, CP920, CP925 and CP935W	
<b>Web UI</b>	Features > Forward&DND > Forward > AccountX > No Answer Forward > Target	
<b>Phone UI</b>	Menu > Features > Call Forward > AccountX > No Answer Forward > Forward to	
<b>Parameter</b>	account.X.timeout_fwd.timeout <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures ring times (N) to wait before forwarding incoming calls. The incoming calls will be forwarded when not answered after N*M (M is configurable by "phone_setting.ring_duration") seconds. <b>Note:</b> It works only if "features.fwd.allow" is set to 1 (Enabled) and "features.fwd_mode" is set to 1 (Custom).	
<b>Permitted Values</b>	Integer from 0 to 20 (determined by "features.forward.no_answer.show_ring_times")	
<b>Default</b>	2	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2, CP920, CP925 and CP935W	
<b>Web UI</b>	Features > Forward&DND > Forward > AccountX > No Answer Forward > After Ring Time(0~120s)	
<b>Phone UI</b>	Menu > Features > Call Forward > AccountX > No Answer Forward > After Ring Time	
<b>Parameter</b>	account.X.timeout_fwd.on_code <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the no answer forward on code to activate the server-side no answer forward feature. The phone will send the no answer forward on code and the pre-configured destination number (configured by the parameter "account.X.timeout_fwd.target") to the server when you activate no answer forward feature on the phone. <b>Note:</b> It works only if "features.fwd.allow" is set to 1 (Enabled) and "features.fwd_mode" is set to 1 (Custom).	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Supported</b>	All phones except T30P, T30, T19(P) E2, CP920, CP925 and CP935W	

<b>Devices</b>	
<b>Web UI</b>	Features > Forward&DND > Forward > AccountX > No Answer Forward > On Code
<b>Phone UI</b>	Menu > Features > Call Forward > AccountX > No Answer Forward > On Code
<b>Parameter</b>	account.X.timeout_fwd.off_code <sup>[1]</sup> <MAC>.cfg
<b>Description</b>	<p>It configures the no answer forward off code to deactivate the server-side no answer forward feature. The phone will send the no answer forward off code to the server when you deactivate no answer forward feature on the phone.</p> <p><b>Note:</b> It works only if "features.fwd.allow" is set to 1 (Enabled) and "features.fwd_mode" is set to 1 (Custom).</p>
<b>Permitted Values</b>	String within 32 characters
<b>Default</b>	Blank
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2, CP920, CP925 and CP935W
<b>Web UI</b>	Features > Forward&DND > Forward > AccountX > No Answer Forward > Off Code
<b>Phone UI</b>	Menu > Features > Call Forward > AccountX > No Answer Forward > Off Code

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42U/T42G/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2.

## Call Forward Synchronization for Server-side Configuration

Call forward synchronization feature provides the capability to synchronize the status of the call forward features between the IP phone and the server.

If the call forward is activated in phone mode, the forward status changing locally will be synchronized to all registered accounts on the server; but if the forward status of the specific account is changed on the server, the forward status locally will be changed.

The following table lists the parameters you can use to configure call forward synchronization for server-side.

<b>Parameter</b>	features.feature_key_sync.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables to synchronize the feature status between the IP phone and the server.	
<b>Permitted Values</b>	<p>0-Disabled</p> <p>1-Enabled, the phone sends a SUBSCRIBE message with event "as-feature-event" to the server.</p>	
<b>Default</b>	0	
<b>Parameter</b>	account.X.feature_key_sync.enable <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	<p>It enables or disables to synchronize the feature status between the IP phone and the server for account X.</p> <p><b>Note:</b> The value configured by this parameter takes precedence over that configured by the parameter "features.feature_key_sync.enable".</p>	
<b>Permitted Values</b>	<p>0-Disabled</p> <p>1-Enabled, the phone to send a SUBSCRIBE message with event "as-feature-event" to the server.</p>	

<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P, T29G, CP920, CP925 and CP935W	
<b>Parameter</b>	features.forward.feature_key_sync.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the forward feature synchronization. <b>Note:</b> It works only if “features.feature_key_sync.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled, server-based call forward is enabled. Server and local phone call forward are synchronized.	
<b>Default</b>	1	
<b>Parameter</b>	account.X.forward.feature_key_sync.enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the forward feature synchronization for account X. <b>Note:</b> The value configured by this parameter takes precedence over that configured by the parameter “features.forward.feature_key_sync.enable”. It works only if “account.X.feature_key_sync.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled, server-based call forward is enabled. Server and local phone call forward are synchronized.	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P, T29G, CP920, CP925 and CP935W	
<b>Parameter</b>	features.forward.feature_key_sync.local_processing.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the local forward when call forward feature synchronization is enabled. <b>Note:</b> It works only if “features.feature_key_sync.enable” and “features.forward.feature_key_sync.enable” are set to 1 (Enabled). The value configured by the parameter “account.X.features.forward.feature_key_sync.local_processing.enable” takes precedence over that configured by this parameter.	
<b>Permitted Values</b>	0-Disabled, call forward is performed on the server side only. 1-Enabled, call forward is performed on both server side and locally.	
<b>Default</b>	0	
<b>Parameter</b>	account.X.features.forward.feature_key_sync.local_processing.enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the local forward when call forward feature synchronization is enabled. <b>Note:</b> It works only if “features.feature_key_sync.enable” and “features.forward.feature_key_sync.enable” are set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled, call forward is performed on the server side only. 1-Enabled, call forward is performed on both server side and locally.	
<b>Default</b>	Blank	

<sup>[1]</sup>X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## Call Transfer

Call transfer enables the phones to transfer an existing call to a third party. For example, if party A is in an active call with party B, party A can transfer this call to party C (the third party). Then, party B will begin a new call with party C, and party A will disconnect.

Yealink phones support call transfer using the REFER method specified in [RFC 3515](#) and offer three types of transfer:

- **Blind Transfer** -- Transfer a call directly to another party without consulting. Blind transfer is implemented by a simple REFER method without Replaces in the Refer-To header.
- **Semi-attended Transfer** -- Transfer a call after hearing the ringback tone. The semi-attended transfer is implemented by a REFER method with Replaces in the Refer-To header.  
The semi-attended transfer is applicable to that when users do not want to consult with the third party after hearing the ringback tone, and the third party has not answered the call, the users can cancel the transfer or implement the transfer.
- **Attended Transfer (Consultative Transfer)** -- Transfer a call with prior consulting. Attended transfer is implemented by a REFER method with Replaces in the Refer-To header.

### Topics

[Call Transfer Configuration](#)

[Transfer Mode for Dsskey Configuration](#)

## Call Transfer Configuration

The following table lists the parameters you can use to configure call transfer.

<b>Parameter</b>	features.transfer.allow	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the call transfer feature.	
<b>Permitted Values</b>	0-Disabled, call transfer feature is not available to users. 1-Enabled	
<b>Default</b>	1	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Parameter</b>	transfer.semi_attend_tran_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the semi-attended transfer.	
<b>Permitted Values</b>	0-Disabled, when the user presses the <b>Trans/Transfer</b> soft key after hearing the ringback tone, the phone will blind transfer the call. 1-Enabled, when the user presses the <b>Trans/Transfer</b> soft key after hearing the ringback tone, the phone will transfer the call after the transferee answers the call.	
<b>Default</b>	1	
<b>Web UI</b>	Features > Transfer > Semi-Attended Transfer	
<b>Parameter</b>	account.X.transfer_refer_to_contact_header.enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the Refer-To header to use the information of the Contact header in the second 200 OK message when attended transfer.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	

<b>Default</b>	0	
<b>Parameter</b>	features.transfer_keep_session2_after_failed.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to keep the original call status after the server rejects the semi-attended/attended transfer.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	transfer.blind_tran_on_hook_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to complete the blind transfer through on-hook besides pressing the <b>Trans/Transfer</b> soft key or TRAN/TRANSFER key. <b>Note:</b> Blind transfer means transferring a call directly to another party without consulting.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Web UI</b>	Features > Transfer > Blind Transfer On Hook	
<b>Parameter</b>	transfer.on_hook_trans_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to complete the semi-attended/attended transfer through on-hook besides pressing the <b>Trans/Transfer</b> soft key or TRAN/TRANSFER key. <b>Note:</b> Semi-attended transfer means transferring a call after hearing the ringback tone; Attended transfer means transferring a call with prior consulting.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Web UI</b>	Features > Transfer > Attended Transfer On Hook	
<b>Parameter</b>	features.transfer_complete_prompt.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to pop up a prompt after the transfer operation is completed.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T48S, T46S, T42S, T41S, T33P, T33G, T31P, T31G, T31, T30P, T30, T27G, CP920, CP925, CP935W	
<b>Parameter</b>	features.transfer.mode	<y0000000000xx>.cfg
<b>Description</b>	It configures the experience mode of the transfer.	
<b>Permitted Values</b>	<p>0-Blind transfer and attended transfer are distinguished in the transfer to screen.</p> <p>1-The call screen has softkeys for blind transfer and attended transfer.</p> <p>2-The default transfer mode is attended transfer, users can switch to the blind transfer mode in the transfer to screen.</p> <p>3-The default transfer mode is blind transfer, users can switch to the attended transfer mode in the transfer to screen.</p> <p>4-The default transfer mode is attended transfer, users cannot switch to the blind transfer mode in the</p>	

	transfer to screen.
<b>Default</b>	0

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## Transfer Mode for Dsskey Configuration

The following table lists the parameter you can use to configure transfer mode for Dsskey.

<b>Parameter</b>	transfer.dsskey_deal_type	<y0000000000xx>.cfg
<b>Description</b>	It configures the transfer mode for the DSS key. When the user presses the DSS Key during a call, the DSS Key behavior depends on the transfer mode. <b>Note:</b> This feature is only applicable to the Speed Dial key, BLF/BLF List key or Transfer key with an assigned value.	
<b>Permitted Values</b>	0-New Call 1-Attended Transfer 2-Blind Transfer 4-Optional, users can choose to transfer the call via New Call, Attended Transfer or Blind Transfer manually (not applicable to T48G/T46G/T42G/T41P/T29G phones)	
<b>Default</b>	2	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	
<b>Web UI</b>	Features > Transfer > Transfer Mode via Dsskey	

## Conference

The Yealink phones support local conference and network conference.

### Topics

[Conference Type Configuration](#)

[Local Conference Configuration](#)

[Network Conference Configuration](#)

## Conference Type Configuration

You can specify which type of conference to establish.

The following table lists the parameter you can use to set a conference type.

<b>Parameter</b>	account.X.conf_type <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the conference type for a specific account.	
<b>Permitted Values</b>	0-Local Conference 2-Network Conference	
<b>Default</b>	0	
<b>Web UI</b>	Account > Advanced > Conference Type	



[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## Local Conference Configuration

The local conference requires a host phone to process the audio of all parties. Yealink phones support up to 3 parties (5 parties for CP935W/CP925/CP920/T42U/T43U/T53/T53W/T33P/T33G/T31P/T31G/T31/T30P/T30 phones, 10 parties for T46U/T48U/T53C/T54W/T57W) (including yourself) in a local conference call.

**Note:** Codecs that can support 10-party conference: G722, G723, G726, G729, PCMA, PCMU, and iLBC; the codec can only support 5-party conference.

The following table lists the parameters you can use to configure the local conference.

<b>Parameter</b>	features.conference.local.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the local conference feature for the IP phone. <b>Note:</b> It works only when "account.X.conf_type" is set to 0 (Local Conference).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Parameter</b>	features.conference.with_previous_call.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to merge two calls into a conference directly by pressing the conference key when there are two calls on the phone.	
<b>Permitted Values</b>	0-Disabled, users can select to set up a conference with the held party or a new party during multiple calls. 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except CP920/CP925/CP935W	
<b>Parameter</b>	features.local_conf.combine_with_one_press.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to set up a three-way conference directly after the second party answers the call. <b>Note:</b> The CONF key is only applicable to T29G/T27G phones. The conference DSS key is not applicable to CP920 phones.	
<b>Permitted Values</b>	0-Disabled, the user needs to press the <b>Conf/Conference</b> soft key, CONF key or conference DSS key again to set up a conference after the second party answers the call. 1-Enabled, the second party joins a conference with the first party after answering the call, both phones play a warning tone.	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except CP920/CP925/CP935W	
<b>Parameter</b>	transfer.tran_others_after_conf_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to transfer the local conference call to the other two parties after the conference initiator drops the local conference call. <b>Note:</b> It works only if "account.X.conf_type" is set to 0 (Local Conference). And only available for 3-party conference.	
<b>Permitted</b>	0-Disabled, all parties are disconnected when the conference initiator drops the conference call.	

<b>Values</b>	1-Enabled, the other two parties remain connected when the conference initiator drops the conference call.	
<b>Default</b>	0	
<b>Web UI</b>	Features > Transfer > Transfer on Conference Hang up	
<b>Parameter</b>	account.X.local_conf.transfer_mode <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	<p>It enables or disables the phone to transfer the host to the other parties before the conference initiator drops the local conference call.</p> <p><b>Example:</b></p> <p>A hosts a conference with more than 3-party, if A wants to leave, goes to <b>Manage-&gt;more</b>, selects one of other parties and taps <b>Trans Host</b> or Trans Host icon, a 3-party conference host by another party restarts.</p> <p><b>Note:</b> It works only if "account.X.conf_type" is set to 0 (Local Conference). And only available for more than 4-party conference.</p>	
<b>Permitted Values</b>	<p>0-Disabled</p> <p>1-Enabled</p>	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	

<sup>[1]</sup>X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## Network Conference Configuration

Network conference, also known as a centralized conference, provides you with the flexibility of call with multiple participants (more than three). The phones implement network conference using the REFER method specified in [RFC 4579](#). This feature depends on the support from a SIP server

For network conference, if any party leaves the conference, the remaining parties are still connected.

The following table lists the parameter you can use to configure the network conference.

<b>Parameter</b>	account.X.conf_uri <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	<p>It configures the network conference URI for a specific account.</p> <p><b>Note:</b> It works only if "account.X.conf_type" is set to 2 (Network Conference).</p>	
<b>Permitted Values</b>	SIP URI within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Account > Advanced > Conference URI	
<b>Parameter</b>	account.X.networkconf_type <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	<p>It configures how a network conference is set up.</p> <p><b>Note:</b> It works only if "account.X.conf_type" is set to 2 (Network Conference).</p>	
<b>Permitted Values</b>	<p>0-The phone transfers the participant to the server by a REFER method with conference URI in the Refer-To header.</p> <p>1-The phone transfers the server to the participant by a REFER method with SIP URI in the Refer-To</p>	

	header.	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T48S, T46S, T42S, T41S, T33P, T33G, T31P, T31G, T31, T30P, T30, T27G, CP920, CP925, CP935W	
<b>Parameter</b>	account.X.conf_member.mode <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the phone subscribes to participants in the network conference.	
<b>Permitted Values</b>	0-Disabled 1-Enabled, the conference creator can display all participant information and remove someone from the conference.	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T48S, T46S, T42S, T41S, T33P, T33G, T31P, T31G, T31, T30P, T30, T27G, CP920, CP925, CP935W	

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## USB Recording

Yealink phones support manual recording during a call or automatic recording once the call is set up. Yealink CP920 phones support recording when the phone is idle, helping users record an important discussion in the local conference room. Before recording, ensure that the USB flash drive has been connected to the IP phone or USB port of the PSTN box CPN10 . USB recording is only applicable to T57W/T54W/T53W/T53/T53C/T48U/T48S/T48G/T46U/T46S/T46G/T43U/T42U/T42S/T41S/T29G/T27G/CP920/CP925/CP935W phones.

The recorded calls are saved in \*.wav format and include a date/time stamp, the other party's number/IP address/name (or the first person's number/IP address/name you called), duration of the call and the recording file size. For example, 20160422-1515-Bob was created on Apr. 22, 2016, at 15:15 and you have a call with Bob. If the recording is created when the phone is idle, the file is saved with a keyword "idleREC". Recorded calls can be played on either the phone itself or on a computer using an application capable of playing \*.wav files.

**Note:** Yealink phones support USB flash drive in FAT32 or NTFS (NTFS is not applicable to T43U/T42U/CP925/CP935W) format.

**Important:** Before recording any call, especially those involving PSTN, it is necessary to know about the rules and restrictions of any governing call-recording in the place where you are. It is also very important to have the consent of the person you are calling before recording the conversation.

### Topic

#### [USB Recording Configuration](#)

## USB Recording Configuration

The following table lists the parameter you can use to configure USB recording.

<b>Parameter</b>	features.usb_call_recording.enable	<y000000000xx>.cfg
<b>Description</b>	It enables or disables the USB call recording feature. <b>Note:</b> It works only if "static.usbdisk.function.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled, the recorded calls will be saved to the USB flash drive.	

<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T48G, T46U, T46S, T46G, T43U, T42U, T42S, T41S, T29G, T27G, CP920, CP925, CP935W	
<b>Parameter</b>	features.auto_recording.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the USB automatic recording feature. <b>Note:</b> It works only if "features.usb_call_recording.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T48G, T46U, T46S, T46G, T43U, T42U, T42S, T41S, T29G, T27G, CP920, CP925, CP935W	
<b>Parameter</b>	features.idle_recording.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the USB idle recording feature. <b>Note:</b> It works only if "features.usb_call_recording.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	CP920	
<b>Parameter</b>	phone_setting.recorder_tone.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to play an alert tone when the recording starts.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T46U, T46S, T43U, T42U, T42S, T41S, T27G, CP920	

## Multicast Paging

Multicast Paging allows you to easily and quickly broadcast instant audio announcements to users who are listening to a specific multicast group on a specific channel.

Yealink phones support the following 31 channels:

- **0:** Broadcasts are sent to channel 0. Note that the Yealink phones running firmware version 80 or earlier can be regarded as listening to channel 0. It is the default channel.
- **1 to 25:** Broadcasts are sent to channel 1 to 25. We recommend that you specify these channels when broadcasting with Polycom phones which have 25 channels you can listen to.
- **26 to 30:** Broadcasts are sent to channel 26 to 30.

The phones can only send and receives broadcasts to/from the listened channels. Other channels' broadcasts will be ignored automatically by the IP phone.

### Topics

[Multicast Paging Group Configuration](#)

Multicast Listening Group Configuration  
Multicast Paging Settings

## Multicast Paging Group Configuration

Yealink phones support up to 31 groups for paging. You can assign multicast IP address with a channel for each group, and specify a label to each group to identify the phones in the group, such as All, Sales, or HR.

**Tip:** You can set a DSS key as Multicast Paging key or Paging list key on the phone, which allows you to send announcements to the phones with the pre-configured multicast address(es) on the specific channel(s). For more information, refer to [DSS Keys](#).

The following table lists the parameters you can use to configure a multicast paging group.

<b>Parameter</b>	multicast.paging_address.X.ip_address <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the IP address and port number of the multicast paging group in the paging list.	
<b>Permitted Values</b>	IP address: port (224.0.0.1-239.255.255.255 port: 0-65535)	
<b>Default</b>	Blank	
<b>Web UI</b>	Directory > Multicast IP > Paging List > Paging Address	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Features > Others > Paging List > Option > Edit > Address <u>CP925/CP935W:</u> More > Features > Others > Paging List > Option > Edit > Address <u>Black-and-white Screen Phones:</u> Menu > Features > Paging List > Option > Edit > Address	
<b>Parameter</b>	multicast.paging_address.X.label <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the name of the multicast paging group to be displayed in the paging list. It will be displayed on the phone screen when placing the multicast paging calls.	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Web UI</b>	Directory > Multicast IP > Paging List > Label	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Features > Others > Paging List > Option > Edit > Label <u>CP925/CP935W:</u> More > Features > Others > Paging List > Option > Edit > Label <u>Black-and-white Screen Phones:</u> Menu > Features > Paging List > Option > Edit > Label	
<b>Parameter</b>	multicast.paging_address.X.channel <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the channel of the multicast paging group in the paging list.	
<b>Permitted Values</b>	<b>0</b> -all the Yealink phones running old firmware version or Yealink phones listen to channel 0 or third-party available devices in the paging group can receive the RTP stream. <b>1 to 25</b> -the Polycom or Yealink phones preconfigured to listen to the channel can receive the RTP	

	stream. <b>26 to 30</b> -the Yealink phones preconfigured to listen to the channel can receive the RTP stream.
<b>Default</b>	0
<b>Web UI</b>	Directory > Multicast IP > Paging List > Channel
<b>Phone UI</b>	<p><u>Color Screen Phones:</u> Menu &gt; Features &gt; Others &gt; Paging List &gt; Option &gt; Edit &gt; Channel</p> <p><u>CP925/CP935W:</u> More &gt; Features &gt; Others &gt; Paging List &gt; Option &gt; Edit &gt; Channel</p> <p><u>Black-and-white Screen Phones:</u> Menu &gt; Features &gt; Paging List &gt; Option &gt; Edit &gt; Channel</p>

[1]X ranges from 1 to 31.

## Multicast Listening Group Configuration

Yealink phones support up to 31 groups for listening. You can assign multicast IP address with a channel for each group, and specify a label to each group to identify the phones in the group, such as All, Sales, or HR.

The following table lists the parameters you can use to configure the multicast listening group.

<b>Parameter</b>	multicast.listen_address.X.ip_address <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the multicast address and port number that the phone listens to.	
<b>Permitted Values</b>	IP address: port (224.0.0.1-239.255.255.255 port: 0-65535)	
<b>Default</b>	Blank	
<b>Web UI</b>	Directory > Multicast IP > Multicast Listening > Listening Address	
<b>Parameter</b>	multicast.listen_address.X.label <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the label to be displayed on the phone screen when receiving the multicast paging calls.	
<b>Permitted Values</b>	String within 99 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Directory > Multicast IP > Multicast Listening > Label	
<b>Parameter</b>	multicast.listen_address.X.channel <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the channel that the phone listens to.	
<b>Permitted Values</b>	<p><b>0</b>-the phone can receive an RTP stream of the pre-configured multicast address from the phones running old firmwares version, from the phones listen to the channel 0, or from the available third-party devices.</p> <p><b>1 to 25</b>-the phone can receive an RTP stream of the pre-configured multicast address on the channel 1 to 25 respectively from Yealink or Polycom phones.</p> <p><b>26 to 30</b>-the phone can receive the RTP stream of the pre-configured multicast address on the channel 26 to 30 respectively from Yealink phones.</p>	
<b>Default</b>	0	

<b>Web UI</b>	Directory > Multicast IP > Multicast Listening > Channel
---------------	--

[1]X ranges from 1 to 31.

## Multicast Paging Settings

You can configure some general settings for multicast paging, for example, specify a codec, configure the volume and audio device for listening to a paging call.

By default, all the listening groups are considered with a certain priority from 1 (lower priority) to 31 (higher priority). If you neither want to receive some paging calls nor miss urgent paging calls when there is a voice call or paging call, or when DND is activated, you can use the priority to define how your phone handles different incoming paging calls.

### Paging Barge

You can set your phone whether an incoming paging call interrupts an active call.

The Paging Barge defines the lowest priority of the paging group from which the phone can receive a paging call when there is a voice call (a normal phone call rather than a multicast paging call) in progress. You can specify a priority that the incoming paging calls with higher or equal priority are automatically answered, and the lower ones are ignored.

If it is disabled, all incoming paging calls will be automatically ignored.

### Paging Priority

You can set your phone whether a new incoming paging call interrupts a current paging call.

The Paging Priority feature decides how the phone handles incoming paging calls when there is already a paging call on the phone. If enabled, the phone will ignore incoming paging calls with lower priorities, otherwise, the phone will answer incoming paging calls automatically and place the previous paging call on hold. If disabled, the phone will automatically ignore all incoming paging calls.

### DND for Ignoring Paging Call

If you do not want to miss some urgent paging calls when DND is activated. You can use the Ignore DND feature to define the lowest priority of paging group from which the phone can receive an urgent paging call when DND is activated. You can specify a priority that the incoming paging calls with higher or equal priority are automatically answered, and the lower ones are ignored.

If it is disabled, all the incoming paging calls will be ignored when DND is activated in phone mode.

### Topic

[Multicast Paging Settings Configuration](#)

## Multicast Paging Settings Configuration

The following table lists the parameters you can use to change multicast paging settings.

<b>Parameter</b>	multicast.codec	<y0000000000xx>.cfg
<b>Description</b>	It configures the codec for multicast paging.	
<b>Permitted Values</b>	PCMU, PCMA, G729, G722	
<b>Default</b>	G722	
<b>Supported Devices</b>	All phones except T30P/T30/T19(P) E2	
<b>Web UI</b>	Features > General Information > Multicast Codec	

<b>Parameter</b>	multicast.receive_priority.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to handle the incoming multicast paging calls when there is an active multicast paging call on the phone.	
<b>Permitted Values</b>	<p><b>0</b>-Disabled, the phone will ignore the incoming multicast paging calls when there is an active multicast paging call on the phone.</p> <p><b>1</b>-Enabled, the phone will receive the incoming multicast paging call with a higher priority and ignore the one with a lower priority.</p>	
<b>Default</b>	1	
<b>Web UI</b>	Directory > Multicast IP > Paging Priority Active	
<b>Parameter</b>	multicast.receive_priority.priority	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the priority of the voice call (a normal phone call rather than a multicast paging call) in progress.</p> <p>1 is the highest priority, 31 is the lowest priority.</p>	
<b>Permitted Values</b>	<p><b>0</b>-Disabled, all incoming multicast paging calls will be automatically ignored when a voice call is in progress.</p> <p><b>1</b>-1</p> <p><b>2</b>-2</p> <p><b>3</b>-3</p> <p>...</p> <p><b>31</b>-31</p> <p>If it is set to other values, the phone will receive the incoming multicast paging call with a higher or equal priority and ignore the one with a lower priority when a voice call is in progress.</p>	
<b>Default</b>	31	
<b>Web UI</b>	Directory > Multicast IP > Paging Barge	
<b>Parameter</b>	multicast.receive.ignore_dnd.priority	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the lowest priority of the multicast paging call that can be received when DND is activated in phone mode.</p> <p>1 is the highest priority, 31 is the lowest priority.</p>	
<b>Permitted Values</b>	<p><b>0</b>-Disabled, all incoming multicast paging calls will be automatically ignored when DND is activated in phone mode.</p> <p><b>1</b>-1</p> <p><b>2</b>-2</p> <p><b>3</b>-3</p> <p>...</p> <p><b>31</b>-31</p> <p>If it is not set to 0 (Disabled), the phone will receive the incoming multicast paging call with a higher or same priority than this value and ignore that with a lower priority than this value when DND is activated in phone mode.</p>	
<b>Default</b>	0	



<b>Web UI</b>	Directory > Multicast IP > Ignore DND	
<b>Parameter</b>	multicast.listen_address.X.volume <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the volume of the speaker when receiving the multicast paging calls.</p> <p>If it is set to 0, the current volume of the speaker takes effect. The volume of the speaker can be adjusted by pressing the Volume key in advance when the phone is during a call. You can also adjust the volume of the speaker during the paging call.</p> <p>If it is set to 1 to 15, the configured volume takes effect and the current volume of the speaker will be ignored. You are not allowed to adjust the volume of the speaker during the paging call.</p>	
<b>Permitted Values</b>	Integer from 0 to 15	
<b>Default</b>	0	
<b>Parameter</b>	multicast.receive.enhance_volume	<y0000000000xx>.cfg
<b>Description</b>	<p>It enables or disables the volume enhancement feature when receiving the multicast paging calls.</p> <p><b>Note:</b> It works only if "multicast.listen_address.X.volume" is not set to 0. If the value the parameter "multicast.listen_address.X.volume" is set to 1-15 and the value of this parameter is set to 1 (Enabled), the receiving volume will be 16-30.</p>	
<b>Permitted Values</b>	<p>0-Disabled</p> <p>1-Enabled, the receiving volume will be increased by 15 level.</p>	
<b>Default</b>	0	
<b>Parameter</b>	multicast.receive.use_speaker	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to always use the speaker as the audio device when receiving the multicast paging calls.	
<b>Permitted Values</b>	<p>0-Disabled, the engaged audio device will be used when receiving the multicast paging calls.</p> <p>1-Enabled</p>	
<b>Default</b>	0	
<b>Parameter</b>	features.paging_auto_resume.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to automatically resume the held multicast paging call after the second multicast paging call or a new call ends.	
<b>Permitted Values</b>	<p>0-Disabled</p> <p>1-Enabled</p>	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T48S, T46S, T42S, T41S, T33P, T33G, T31P, T31G, T31, T30P, T30, T27G, CP920, CP925, CP935W	

[1]X ranges from 1 to 31.

---

## Advanced Features

The advanced features require server support. Consult your server partner to find out if these features are supported.

### Topics

[Call Pickup](#)  
[Dialog Info Call Pickup](#)  
[Call Completion](#)  
[Call Park and Retrieve](#)  
[Automatic Call Distribution \(ACD\)](#)  
[Busy Lamp Field](#)  
[Shared Line](#)  
[Intercom](#)  
[CSTA Control](#)  
[Action URL](#)  
[Action URI](#)  
[Voice Mail](#)  
[Short Message Service \(SMS\)](#)  
[XML Browser](#)  
[Hot Desking](#)

## Call Pickup

You can use call pickup to answer someone else's incoming call on your phone.

The Yealink phones support Directed Call Pickup and Group Call Pickup:

- **Directed Call Pickup:** allows you to pick up incoming calls to a specific phone.
- **Group Call Pickup:** allows you to pick up incoming calls to any phone within a predefined group of phones.

### Topics

[Directed Call Pickup](#)  
[Group Call Pickup](#)

## Directed Call Pickup

Directed call pickup is used for picking up an incoming call on a specific extension. You can answer a call that rings on a specific phone. If there are multiple incoming calls on the phone at the same time, you can only pick up the first incoming call.

You can choose to implement directed call pickup using a directed call pick code or using SIP signaling.

### Topic

[Directed Call Pickup Configuration](#)

## Directed Call Pickup Configuration

You can enable directed call pickup, the LCD screen will display a **DPickup** soft key when picking up the handset, pressing the Speakerphone key or pressing the line key (You may need to press the **More** soft key to see the **DPickup** soft key). As shown below:



You can configure a directed call pickup code and pick up the incoming call using the **DPickup** soft key.

**Tip:** You can set a DSS key as a Directed Pickup key, and specify a contact you want to pick up a call from for this key. For more information, refer to [DSS Keys](#).

The following table lists the parameters you can use to configure directed call pickup.


<b>Parameter</b>	features.pickup.direct_pickup_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the user to use <b>DPickup</b> soft key when performing the directed call pickup feature.	
<b>Permitted Values</b>	0-Disabled 1-Enabled, the phone will display the <b>DPickup</b> soft key on the Dialing screen.	
<b>Default</b>	0	
<b>Web UI</b>	Features > Pick up & Park > Directed Call Pickup	
<b>Parameter</b>	features.pickup.direct_pickup_code	<y0000000000xx>.cfg
<b>Description</b>	It configures the directed call pickup code on a phone basis. <b>Note:</b> The code configured by "account.X.direct_pickup_code" takes precedence over that configured by this parameter.	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Pick up & Park > Directed Call Pickup Code	
<b>Parameter</b>	account.X.direct_pickup_code <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the directed call pickup code. <b>Note:</b> The code configured by this parameter takes precedence over that configured by "features.pickup.direct_pickup_code".	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Account > Advanced > Directed Call Pickup Code	

<sup>[1]</sup>X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## Group Call Pickup

Group call pickup is used for picking up incoming calls within a predefined group. When any phone within a predefined group of phones receives an incoming call, you can pick up that call easily on the phone.

If you enable group call pickup, the phone screen will display a **GPickup** soft key when picking up the handset, pressing the Speakerphone key or pressing the line key. As shown below:

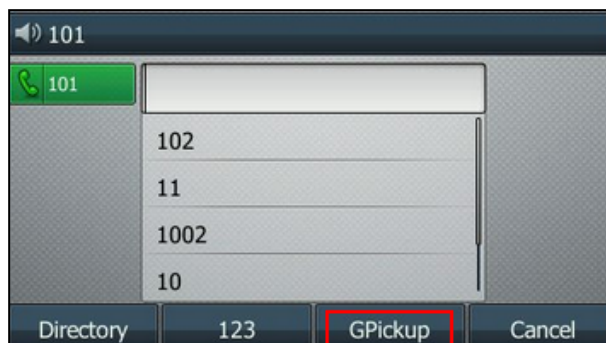

You can pick up the group incoming call using the **GPickup** soft key.

**Tip:** You can set a DSS key as a Group Pickup key to pick up a group call. For more information, refer to [DSS Keys](#).

### Topic

[Group Call Pickup Configuration](#)

## Group Call Pickup Configuration

The following table lists the parameters you can use to configure the group call pickup.

<b>Parameter</b>	features.pickup.group_pickup_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the user to use <b>GPickup</b> soft key when performing group call pickup feature.	
<b>Permitted Values</b>	0-Disabled 1-Enabled, the phone will display the <b>GPickup</b> soft key on the Dialing screen.	
<b>Default</b>	0	
<b>Web UI</b>	Features > Pick up & Park > Group Call Pickup	
<b>Parameter</b>	features.pickup.group_pickup_code	<y0000000000xx>.cfg
<b>Description</b>	It configures the group call pickup code on a phone basis. <b>Note:</b> The code configured by “account.X.group_pickup_code” takes precedence over that configured by this parameter.	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Pick up & Park > Group Call Pickup Code	
<b>Parameter</b>	account.X.group_pickup_code <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the group pickup code. <b>Note:</b> The code configured by this parameter takes precedence over that configured by “features.pickup.group_pickup_code”.	

<b>Permitted Values</b>	String within 32 characters
<b>Default</b>	Blank
<b>Web UI</b>	Account > Advanced > Group Call Pickup Code

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## Dialog Info Call Pickup

While some SIP servers implement directed call pickup using a directed call pickup code, others also support implement this feature through SIP signals.

**Note:** In this way, you do not need to configure the directed call pickup code.

If you enable the phone to implement directed call pickup through SIP signals, the phone picks up an incoming call via a SIP INVITE message with a Replaces header. The value of Replaces is derived from a NOTIFY message with the dialog-info event. This feature applies only to directed call pick-up attempts initiated against monitored BLF resources. It means you can pick up an incoming call by pressing a BLF/BLF List key. It is not applicable to T30P/T30/T19(P) E2 phones.

Example of the dialog-info carried in NOTIFY message:

```
<?xml version="1.0"? >
<dialog-info xmlns="urn:ietf:params:xml:ns:dialog-info" version="6" state="partial" entity-
y="sip:1011@10.2.1.48:5060" >
<dialog id="65603" call-id="0_1756536024@10.10.20.34" local-tag="3408640225" remote-tag-
g="3779921438" direction="recipient">
<state > early</state>
<local >
<identity > sip:1011@10.2.1.48:5060</identity>
<target uri="sip:1011@10.2.1.48:5060"/>
</local >
<remote >
<identity > sip:1058@10.2.1.48:5060</identity >
<target uri="sip:1058@10.2.1.48:5060"/ >
</remote>
</dialog>
</dialog-info>
```

Example of the Replaces carried in INVITE message:

```
Via: SIP/2.0/UDP 10.10.20.18:5060;branch=z9hG4bK2026058891
From: "1010" <sip:1010@10.2.1.48:5060>;tag=826048502
To: <sip:1058@10.2.1.48:5060>
Call-ID: 0_572446084@10.10.20.18
```

```

CSeq: 1 INVITE
Contact: <sip:1010@10.10.20.18:5060>
Content-Type: application/sdp
Allow: INVITE, INFO, PRACK, ACK, BYE, CANCEL, OPTIONS, NOTIFY, REGISTER, SUBSCRIBE, REFER,
PUBLISH, UPDATE, MESSAGE
Max-Forwards: 70
User-Agent: Yealink SIP-T46G 28.82.0.20

Replaces: 0_1756536024@10.10.20.34;to-tag=3779921438;from-tag=3408640225

Allow-Events: talk,hold,conference,refer,check-sync
Supported: replaces
Content-Length: 304

```

### Related Topics

[Dialog Info Call Pickup Configuration](#)  
[Busy Lamp Field](#)

## Dialog Info Call Pickup Configuration

The following table lists the parameter you can use to configure dialog info call pickup.

Parameter	account.X.dialoginfo_callpickup <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the phone implements directed call pickup through SIP signals for a specific account. <b>Note:</b> In this way, you do not need to configure the directed call pickup code.	
<b>Permitted Values</b>	0-Disabled 1-Enabled, the phone picks up a call according to the Replaces header in the INVITE message.	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T30P/T30/T19(P) E2	
<b>Web UI</b>	Account > Advanced > Dialog Info Call Pickup	

<sup>[1]</sup>X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42U/T42G/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for CP925/CP935W, X=1.

## Call Completion

When you place a call and the callee is temporarily unavailable to answer the call, call completion allows your phone to monitor the busy party and establish a call after the busy party becomes available to receive a call.

Two factors commonly prevent a call from connecting successfully:

- Callee does not answer
- Callee actively rejects the incoming call before answering

Yealink phones support call completion using the SUBSCRIBE/NOTIFY method, which is specified in draft-poetzi-sipping-call-completion-00, to subscribe to the busy party and receive notifications of their status changes.

The caller subscribes for update notifications of the dialog event from the busy party. Example of a SUBSCRIBE message:

```
SUBSCRIBE sip:1000@10.10.20.34:5060 SIP/2.0
Via: SIP/2.0/UDP 10.10.20.32:5060;branch=z9hG4bK2880274891
From: "10111" <sip:10111@10.2.1.48:5060>;tag=8643512
To: <sip:1000@10.2.1.48:5060>;tag=4025601441
Call-ID: 4_2103527761@10.10.20.32
CSeq: 2 SUBSCRIBE
Contact: <sip:10111@10.10.20.32:5060>
Accept: application/dialog-info+xml
Max-Forwards: 70
User-Agent: Yealink SIP-T46G 28.82.0.20
Expires: 60

Event: dialog
Content-Length: 0
```

Example of a NOTIFY message (The subscription (SUBSCRIBE message) of the dialog event "Call Completion" is confirmed by the busy party):

```
NOTIFY sip:10111@10.10.20.32:5060 SIP/2.0
Via: SIP/2.0/UDP 10.10.20.31:5060;branch=z9hG4bK1830418099
From: <sip:1000@10.2.1.48:5060>;tag=1032948194
To: "10111" <sip:10111@10.2.1.48:5060>;tag=722495580
Call-ID: 0_160090766@10.10.20.32
CSeq: 2 NOTIFY
Contact: <sip:1000@10.10.20.31:5060>
Content-Type: application/dialog-info+xml
Max-Forwards: 70
User-Agent: Yealink SIP-T46G 28.82.0.20
Subscription-State: active;expires=60
Event: dialog
Content-Length: 584

<?xml version="1.0"?>
<dialog-info xmlns="urn:ietf:params:xml:ns:dialog-info" version="1" state="full" entity="sip:1000@10.2.1.48:5060">
<dialog id="65626" call-id="0_3138198645@10.10.20.31" local-tag="2331766736" remote-tag="1786911541" direction="initiator">
<state>confirmed</state>
```

```

<local>
<identity>sip:1000@10.2.1.48:5060</identity>
<target uri="sip:1000@10.2.1.48:5060"/>
</local>
<remote>
<identity>sip:1@10.2.1.48:5060</identity>
<target uri="sip:1@10.2.1.48:5060"/>
</remote>
</dialog>
<dialog id="65622">
<state>terminated</state>
</dialog>
</dialog-info>

```

Example of a NOTIFY message (The busy party has finished the call and is available again. A new notification update from the busy party is received by the caller):

```

NOTIFY sip:10111@10.10.20.32:5060 SIP/2.0
Via: SIP/2.0/UDP 10.10.20.31:5060;branch=z9hG4bK3431394016
From: <sip:1000@10.2.1.48:5060>;tag=1558968605
To: "10111" <sip:10111@10.2.1.48:5060>;tag=140677866
Call-ID: 0_2584152566@10.10.20.32
CSeq: 5 NOTIFY
Contact: <sip:1000@10.10.20.31:5060>
Content-Type: application/dialog-info+xml
Max-Forwards: 70
User-Agent: Yealink SIP-T46G 28.82.0.20
Subscription-State: active;expires=48
Event: dialog
Content-Length: 217

<?xml version="1.0"?>
<dialog-info xmlns="urn:ietf:params:xml:ns:dialog-info" version="4" state="partial" entity-
y="sip:1000@10.2.1.48:5060">
<dialog id="65644">

<state>terminated</state>
</dialog>
</dialog-info>

```



**Topics**[Call Completion Configuration](#)[Example: Using Call Completion](#)

## Call Completion Configuration

The following table lists the parameters you can use to configure the call completion feature.

<b>Parameter</b>	features.call_completion_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the call completion feature.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Features > General Information > Call Completion	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Features > Others > Call Completion > Call Completion <u>CP925/CP935W:</u> More > Features > Call Completion > Call Completion <u>Black-and-white Screen Phones:</u> Menu > Features > Call Completion > Call Completion	

## Example: Using Call Completion

The following example shows the configuration for call completion.

**Example**

```
features.call_completion_enable = 1
```

After provisioning, when you place a call and the callee is temporarily unavailable to answer the call, the phone screen will prompt whether to wait for the callee party. You can activate the call completion feature. After the called party becomes idle, the phone screen will prompt whether to dial the number.

## Call Park and Retrieve

Call park allows users to park a call on a special extension and then retrieve it from another phone (for example, a phone in another office or conference room).

The phones support call park feature under the following modes:

- **FAC mode:** parks the call to the local extension or the desired extension through dialing the park code.
- **Transfer mode:** parks the call to the shared parking lot through performing a blind transfer. For some servers, the system will return a specific call park retrieve number (park retrieve code) from which the call can be retrieved after parking successfully.

**Topics**[Call Park and Retrieve Configuration](#)[Example: Setting Call Park and Retrieve in FAC Mode](#)[Example: Setting Call Park and Retrieve in Transfer Mode](#)

## Call Park and Retrieve Configuration

The following table lists the parameters you can use to configure the call park and retrieve.

<b>Parameter</b>	features.call_park.park_mode	<y0000000000xx>.cfg
<b>Description</b>	It configures the call park mode.	
<b>Permitted Values</b>	1-FAC, park a call through dialing the call park code. 2-Transfer, blind transfer the call to a shared parking lot.	
<b>Default</b>	2	
<b>Web UI</b>	Features > Pick up & Park > Call Park Mode	
<b>Parameter</b>	features.call_park.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the call park feature.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Features > Pick up & Park > Call Park	
<b>Parameter</b>	features.call_park.park_code	<y0000000000xx>.cfg
<b>Description</b>	It configures the call park code for FAC call park mode or configures shared parking lot for Transfer call park mode.	
<b>Permitted Values</b>	String within 256 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Pick up & Park > Call Park Code	
<b>Parameter</b>	features.call_park.park_retrieve_code	<y0000000000xx>.cfg
<b>Description</b>	It configures the park retrieve code for FAC call park mode or configures retrieve parking lot for Transfer call park mode.	
<b>Permitted Values</b>	String within 256 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Pick up & Park > Park Retrieve Code	
<b>Parameter</b>	features.call_park.direct_send.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to dial out the call park code/park retrieve code directly when pressing the <b>Park/Retrieve</b> soft key. <b>Note:</b> It works only if “features.call_park.park_mode” is set to 1 (FAC) and you have configured the call park code/park retrieve code.	
<b>Permitted Values</b>	0-Disabled, the phone will enter the dialing screen when pressing the <b>Park/Retrieve</b> soft key. The user can dial the specific extension manually or press the BLF/BLF List or Speed Dial key to park the call to the specific extension or retrieve the call parked from the specific extension. 1-Enabled	
<b>Default</b>	1	
<b>Supported Devices</b>	All phones except CP920/CP925/CP935W	
<b>Parameter</b>	features.call_park.line_restriction.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to park a call using the specific line of the Call Park key.	

	<b>Note:</b> It works only if "features.call_park.park_mode" is set to 2 (Transfer).	
<b>Permitted Values</b>	0-Disabled, the call is parked by the current line, which is in call state. 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T30P/T30/T19(P) E2	
<b>Parameter</b>	features.call_park.performby_holdhardkey.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to park a call using the HOLD hard key.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P, T30P, T30, T29G, T19(P) E2, CP920, CP925 and CP935W	
<b>Parameter</b>	sip.call_park_without_blf	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to close the BLF monitoring feature for call park DSS key.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	

## Example: Setting Call Park and Retrieve in FAC Mode

The following example shows the configuration for the FAC call park mode.

### Example

```
features.call_park.park_mode = 1
```

```
features.call_park.enable = 1
```

```
features.call_park.park_code = *68
```

```
features.call_park.park_retrieve_code = *88
```

After provisioning, the call park mode is set to FAC. A **Park** soft key will display on the phone during an active call, and a **Retrieve** soft key will display on the Dialing screen. You can press the **Park** soft key to park a call or press the **Retrieve** soft key to retrieve a parked call.

**Tip:** You can set a line key as a Park key or a Retrieve key, specify an extension you want to park a call to for Park key and specify a parked extension you want to retrieve a parked call from for Retrieve key. For more information, refer to [Line Keys](#).

## Example: Setting Call Park and Retrieve in Transfer Mode

The following example shows the configuration for Transfer call park mode.

### Example

```
features.call_park.park_mode = 2
```

```
features.call_park.enable = 1
```

```
features.call_park.park_code = *01
```

```
features.call_park.park_retrieve_code = *11
```

After provisioning, the call park mode is set to Transfer. A **Park** soft key will display on the phone during an active call and a **Retrieve** soft key will display on the Dialing screen. You can press the **Park** soft key to park a call to the shared parking lot “\*01”, or press the **Retrieve** soft key to retrieve the parked call from the shared parking lot “\*01” using the retrieve code “\*11”.

**Tip:** You can set a line key as a Park key or a Retrieve key, specify a shared parking lot you want to park a call to for Park key and specify a retrieve lot you want to retrieve a parked call from for Retrieve key. For more information, refer to [Line Keys](#).

## Automatic Call Distribution (ACD)

ACD enables the use of phones in a call-center role by automatically distributing incoming calls to available users or agents. You can enable users to use their phone in a call center agent/a supervisor role on a supported call server.

The users can sign in and sign out of the ACD state as call center agent using soft keys. The server distributes calls to the agent when the agent state is available, and stops distributing calls when the agent changes state to unavailable. The IP phone remains in the unavailable status until the agent manually changes the IP phone status. You can configure how long the IP phone remains unavailable state and changes to available automatically on a supported call server.

It is not applicable to CP920/CP925/CP935W phones.

### Topics

[ACD Key Configuration](#)

[ACD Configuration](#)

[Example: Setting ACD](#)

## ACD Key Configuration

You can configure a dsskey as ACD key to log into the ACD system. The ACD key on the IP phone indicates the ACD state.

The following shows configuration for an ACD key.

```
linekey.X.type = 42
```

```
linekey.X.label = ACD
```

After provisioning, an ACD key is available on the phone, and you can press the ACD key to log into the ACD system.

## ACD Configuration

The following table lists the parameters you can use to configure ACD.

<b>Parameter</b>	account.X.acd.enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the ACD feature.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	account.X.acd.available <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the phone to display the <b>Available/Avail</b> or <b>Unavailable/Unavail</b> soft key after the phone logs into the ACD system. <b>Note:</b> It works only if “account.X.acd.enable” is set to 1 (Enabled).	

<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	account.X.subscribe_acd_expires <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the period (in seconds) of ACD subscription. <b>Note:</b> It works only if "account.X.acd.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	Integer from 120 to 3600	
<b>Default</b>	3600	
<b>Web UI</b>	Account > Advanced > ACD Subscribe Period(120~3600s)	
<b>Parameter</b>	features.homescreen_softkey.acd.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to display the ACD softkeys such as <b>Login</b> or <b>Logout</b> on the idle screen. <b>Note:</b> It works only if "account.X.acd.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Parameter</b>	account.X.acd.unavailable_reason_enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the unavailable/away reason code feature. <b>Note:</b> It works only if "account.X.acd.available" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled, the unavailable/away reason of agent state will be displayed on the phone screen (for example, on lunch, in the bathroom, taking a coffee break or a personal break).	
<b>Default</b>	0	
<b>Parameter</b>	acd.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to automatically change the status of the ACD agent to available after the designated time. <b>Note:</b> It works only if "account.X.acd.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Features > ACD > ACD > ACD Available Auto	
<b>Parameter</b>	acd.auto_available_timer	<y0000000000xx>.cfg
<b>Description</b>	It configures the interval (in seconds) for the status of the ACD agent to be automatically changed to available. <b>Note:</b> It works only if "account.X.acd.enable" and "acd.enable" are set to 1 (Enabled).	
<b>Permitted Values</b>	Integer from 0 to 120	
<b>Default</b>	60	
<b>Web UI</b>	Features > ACD > ACD > ACD Auto Available Timer (0~120s)	

<b>Parameter</b>	phone_setting.idle_text.color	<y0000000000xx>.cfg
<b>Description</b>	It configures the font color of the ACD status on the idle screen.	
<b>Permitted Values</b>	<b>0</b> -White <b>1</b> -Black <b>2</b> -Factory default color (the color defined in the XML file of each model)	
<b>Default</b>	2	
<b>Supported Devices</b>	T57W, T54W, T53C, T48U, T46U	

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## Example: Setting ACD

The following example shows the configuration for ACD.

### Example

```
#####Set an ACD for account 1#####
account.1.acd.enable = 1
account.1.acd.available = 1
account.1.subscribe_acd_expires = 3000
acd.enable = 1
acd.auto_available_timer = 60
features.homescreen_softkey.acd.enable = 1
#####Set an ACD key#####
linekey.1.type=42
linekey.1.label=ACD
```

After provisioning, you can press the **Login** soft key or ACD key to log into the ACD system. After logging into the ACD system, **Available (Avail)/Unavailable (Unavail)** soft key appears on the phone screen. You can press **Available (Avail)/Unavailable (Unavail)** soft key to change ACD state. The ACD key on the IP phone indicates the ACD state.

## Busy Lamp Field

The Busy Lamp Field (BLF) feature enables the IP phone to monitor specific remote lines for state changes on the phone. It is not available on the T30P/T30/T19(P) E2/CP920 IP phone.

Yealink phones support two methods of BLF configuration:

- Configure a line key as BLF key to monitor a specific remote line
- Configure BLF List to monitor a list of specific remote lines

The BLF feature enables the following functions to the users:

- Monitor the status of line on their phone
- Display caller ID information
- Answer incoming calls to the monitored line (called directed call pickup)

- Park and retrieve calls to the monitored line
- Initiate an outgoing intercom call to the monitored line
- Barging In an Active Call by BLF List Key
- Park the active call to the monitored users who are in the BLF list

**Topics**

- [BLF Key Configuration](#)
- [BLF List Configuration](#)
- [State Indicator of Remote Line](#)
- [BLF/BLF List Subscription](#)
- [Visual and Audio Alert for Monitor Lines](#)
- [LED Mode for BLF/BLF List Key](#)
- [BLF/BLF List Key LED Status and Behavior Configuration](#)
- [BLF Key for Intercom Configuration](#)
- [Call Information Display Configuration](#)
- [BLF Key for Intercom Configuration](#)

## BLF Key Configuration

You can configure a BLF key for a specific line.

The following shows the configuration of a BLF key for Bill.

```
linekey.X.type=16
linekey.X.line=1
linekey.X.value=1001
linekey.X.label=Bill
```

**Related Topic**

[Line Keys Configuration](#)

## BLF List Configuration

You can configure a BLF List for monitor phone. It enables the monitor phone to subscribe to a list of lines, and receive status notifications of the monitored lines.

**Note:** The IP phone subscribes to a BLF list that is set up on the server. You must access the server and set up a list of monitored lines.

The following table lists the parameters you can use to configure BLF List.

<b>Parameter</b>	account.X.blf.blf_list_uri <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the BLF List URI to monitor a list of users for account X.	
<b>Example:</b>	account.1.blf.blf_list_uri = 4609@pbx.test.com	
<b>Permitted Values</b>	SIP URI within 256 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	
<b>Web UI</b>	Account > Advanced > BLF List URI	
<b>Parameter</b>	account.X.blf_list_code <sup>[1]</sup>	<MAC>.cfg

<b>Description</b>	It configures the feature access code that initiates a directed call pickup for account X.	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	
<b>Web UI</b>	Account > Advanced > BLF List Pickup Code	
<b>Parameter</b>	account.X.blf_list_barge_in_code <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the feature access code of directed call pickup with barge-in for account X.	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	
<b>Web UI</b>	Account > Advanced > BLF List Barge in Code	
<b>Parameter</b>	account.X.blf_list_call_parked_code <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the feature access code of call park for account X.	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P, T30P, T30, T29G, T19(P) E2 and CP920	
<b>Web UI</b>	Account > Advanced > BLF List Call Parked Code	
<b>Parameter</b>	account.X.blf_list_call_parked_list <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	<p>It configures the serial numbers of the monitored users in the BLF list where you can park the active call for account X.</p> <p>Multiple serial numbers are separated by commas.</p> <p><b>Example:</b></p> <p>account.1.blf_list_call_parked_list =</p> <p>When you leave it blank, you cannot park the active call to any monitored user.</p> <p>account.1.blf_list_call_parked_list = all</p> <p>You can park the active call to any monitored user.</p> <p>account.1.blf_list_call_parked_list = 1,3,4</p> <p>You can park the active call to the first, third or fourth monitored user in the BLF list.</p> <p><b>Note:</b> This parameter has a higher priority than “transfer.dsskey_deal_type”, so that when you press the BLF list key during a call, the phone parks a call other than transferring the call. It works only if “account.X.blf_list_call_parked_code” is configured.</p>	
<b>Permitted Values</b>	Blank all	



	serial numbers of monitored users in the BLF list	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P, T30P, T30, T29G, T19(P) E2 and CP920	
<b>Parameter</b>	account.X.blf_list_retrieve_call_parked_code <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the feature access code that initiates retrieval of a parked call on the monitored user.	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	
<b>Web UI</b>	Account > Advanced > BLF List Retrieve Call Parked Code	
<b>Parameter</b>	phone_setting.auto_blf_list_enable	<y000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to automatically configure the BLF list DSS keys in order.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	
<b>Parameter</b>	phone_setting.blf_list_sequence_type	<y000000000xx>.cfg
<b>Description</b>	It configures the order of BLF list DSS keys assigned automatically. <b>Note:</b> It works only if "phone_setting.auto_blf_list_enable" is set to 1 (Enabled). To assign Ext Key, make sure the expansion module has been connected to the phone in advance.	
<b>Permitted Values</b>	0-linekey > exp1 key > expN key 1-exp1 key > expN key > linekey 2-linekey page1 > page1 from exp1 key to expN key > page2 from exp1 key to expN key > ... > linekey from page2 to page3 3-page1 from exp1 key to expN key > page2 from exp1 key to expN key > ... > linekey <b>Note:</b> N is the number of your connected expansion modules.	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T48S, T48G, T46U, T46S, T46G, T43U, T29G, T27G	
<b>Parameter</b>	features.blf_list_version <sup>[2]</sup>	<y000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to include the Version header in the BLF list NOTIFY message sent by the server.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	






















[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42U/T42G/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for CP925/CP935W, X=1.








[2]If you change this parameter, the phone will reboot to make the change take effect.

## State Indicator of Remote Line

The state indicator of the monitored line on BLF/BLF List key varies by phone models.

The following table shows the LED/icons indicator associated with the line you are monitoring.

LED Status	Icons			Description
	T48U/T48S/T48G	T46U/T46S/T46G/T29G	T57W/T54W/T53C/T33P/T33G	
Solid green				The monitored line is idle.
Fast-flashing red	 (Flashing)		 (Flashing on T57W)	The monitored line is ringing.
	 (Flashing)		 (Flashing on T57W)	The monitored line is dialing.
Solid red				The monitored line is busy or in a call.
Slowly-flashing red				The monitored line places a call on hold.
				A call is parked to the monitored line.
Off				The monitored line fails to register or does not exist.

CP925/CP935W Icons	Description
	The monitored line is idle.
 (Flashing)	The monitored line is ringing.
 (Flashing)	The monitored line is dialing.
	The monitored line is busy or in a call.
	The monitored line places a call on hold.
	A call is parked to the monitored line.
	The monitored line fails to register or does not exist.

## BLF/BLF List Subscription

Yealink phones support BLF using a SUBSCRIBE/NOTIFY mechanism as specified in [RFC 3265](#).

### BLF Subscription

When you configure the IP phone to monitor a specific line, the phone sends a SUBSCRIBE request with Request-URI containing the monitor line URI to the server, and then receives a NOTIFY request. The NOTIFY message contains an XML body with the status of the specific monitored line.

The following example shows a NOTIFY message for a BLF line "012":

```
<?xml version="1.0"?>
<dialog-info xmlns="urn:ietf:params:xml:ns:dialog-info" version="1" state="full" entity-
y="sip:012@10.20.10.42:5060">
<dialog id="0000" > <state > terminated</state > </dialog >
</dialog-info>
```

### BLF List Subscription

When you configure the IP phone to monitor a list of specific remote lines, the phone sends a SUBSCRIBE request with Request-URI containing the BLF List URI, and then receives a NOTIFY request. The NOTIFY message contains an XML body with the status of each monitor line.

The following example shows a NOTIFY message for a BLF List, the BLF List contains 4605 and 4607:

```
<?xml version="1.0" <?xml version="1.0"?>
<list xmlns="urn:ietf:params:xml:ns:rlmi" xmlns="urn:ietf:params:xml:ns:rlmi" version="0" fullState="true">
<resource uri="sip:4605@pbx.yealink.com">
<name > 4605 Yealink</name>
<instance id="JQZxud2qeo" state="active" cid="8y35ri@broadworks"/>
</resource>
<resource uri="sip:4605@pbx.yealink.com">
<name > 4607 Yealink</name>
<instance id="pXHQ97tPyQ" state="active" cid="tYzwJM@broadworks"/>
</resource>
</list>
```

### Topic

[BLF/BLF List Subscription Configuration](#)

## BLF/BLF List Subscription Configuration

The following table lists the parameters you can use to configure BLF/BLF List subscription.

<b>Parameter</b>	account.X.blf.subscribe_period <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the period (in seconds) of the BLF subscription.	
<b>Permitted Values</b>	Integer from 30 to 2147483647	
<b>Default</b>	1800	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	
<b>Web UI</b>	Account > Advanced > Subscription Period (Seconds)	
<b>Parameter</b>	account.X.blf.subscribe_event <sup>[1]</sup>	<MAC>.cfg

<b>Description</b>	It configures the event of the BLF subscription.	
<b>Permitted Values</b>	0-dialog 1-presence	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	
<b>Parameter</b>	account.X.out_dialog_blf_enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the phone to handle NOTIFY messages out of the BLF dialog.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	
<b>Web UI</b>	Account > Advanced > Out Dialog BLF	
<b>Parameter</b>	account.X.blf.match_host.enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables host match feature for BLF/BLF list feature.	
<b>Permitted Values</b>	0-Disabled 1-Enabled, the phone can only recognize the NOTIFY message whose host field is the same as the one in the SUBSCRIBE message.	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	
<b>Parameter</b>	sip.terminate_notify_sub_delay_time	<y0000000000xx>.cfg
<b>Description</b>	It configures the interval (in seconds) for the phone to re-subscribe when it receives the NOTIFY message with the subscription state of Terminated. If it is set to 0, the phone will re-subscribe immediately.	
<b>Permitted Values</b>	Integer greater than 0	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	
<b>Parameter</b>	sip.sub_refresh_random	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to use the random renewal mechanism. <b>Note:</b> It works only if "account.X.subscribe_expires_overlap" is set to 0 (Disabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled, the phone will generate a random value. The final renewal time is equal to the original renewal time plus the random value.	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42U/T42G/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for CP925/CP935W, X=1.

## Visual and Audio Alert for Monitor Lines

Visual and Audio Alert feature allows the phone to display the caller ID and play an audio alert when a BLF line receives an incoming call.

You can configure how the phone displays the caller ID and set a distinctive alert tone for multiple BLF lines.

### Topics

[Visual and Audio Alert for BLF Lines Configuration](#)

[Example: Configuring Visual and Audio Alert for Monitor Lines](#)

## Visual and Audio Alert for BLF Lines Configuration

The following table lists the parameters you can use to configure a visual and audio alert for BLF lines.

<b>Parameter</b>	features.pickup.blf_visual_enable	<y0000000000xx > .cfg
<b>Description</b>	It enables or disables the phone to display a visual alert when the monitored user receives an incoming call.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	
<b>Web UI</b>	Features > Pickup & Park > Visual Alert for BLF Pickup	
<b>Parameter</b>	features.pickup.blf_visual.list	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the monitored users who want to enable the visual alert for BLF pickup feature.</p> <p>Multiple monitored users are separated by commas.</p> <p><b>Example:</b></p> <p>features.pickup.blf_visual.list = any or leave it blank</p> <p>The phone displays a visual alert when any monitored user receives an incoming call.</p> <p>features.pickup.blf_visual.list = 4604,4605</p> <p>The phone displays a visual alert when monitored user 4604 or 4605 receives an incoming call.</p> <p>features.pickup.blf_visual.list = List1</p> <p>The phone displays a visual alert when any user in the List 1 receives an incoming call. ListX stands for the BLF list of account X configured by the parameter "account.X.blf.blf_list_uri".</p> <p><b>Note:</b> It works only if "features.pickup.blf_visual_enable" is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	any Monitored phone number ListX <sup>[1]</sup>	
<b>Default</b>	any	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P, T30P, T30, T29G, T19(P) E2 and CP920	

<b>Parameter</b>	features.pickup.blf_audio_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to play an audio alert when the monitored user receives an incoming call.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	
<b>Web UI</b>	Features > Pickup & Park > Audio Alert for BLF Pickup	
<b>Parameter</b>	features.pickup.blf_audio.list	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the monitored users who want to enable the audio alert for BLF pickup feature. Multiple monitored users are separated by commas.</p> <p><b>Example:</b></p> <p>features.pickup.blf_audio.list = any or leave it blank</p> <p>The IP phone plays an audio alert when any monitored user receives an incoming call.</p> <p>features.pickup.blf_audio.list = 4604,4605</p> <p>The IP phone plays an audio alert when monitored user 4604 or 4605 receives an incoming call.</p> <p>features.pickup.blf_audio.list = List1</p> <p>The IP phone plays an audio alert when any user in the List 1 receives an incoming call. ListX stands for the BLF list of account X configured by the parameter "account.X.blf.blf_list_uri".</p> <p><b>Note:</b> It works only if "features.pickup.blf_audio_enable" is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	any Monitored phone number ListX <sup>[1]</sup>	
<b>Default</b>	any	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P, T30P, T30, T29G, T19(P) E2 and CP920	
<b>Parameter</b>	features.blf.ring_type	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures an alert tone to play when a monitored line rings.</p> <p><b>Note:</b> It works only if "features.pickup.blf_audio_enable" is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	<p>Ring1.wav, Ring2.wav, Ring3.wav, Ring4.wav, Ring5.wav, Ring6.wav, Ring7.wav, Ring8.wav, Ring9.wav, Ring10.wav, Ring11.wav, Ring12.wav, Ring13.wav, Silent.wav, Splash.wav or custom ring tone name (for example, Config:Customring.wav).</p> <p><u>For T3 phones:</u></p> <p>Ring1.wav, Ring2.wav, Ring3.wav, Ring4.wav, Silent.wav, Splash.wav or custom ring tone name (for example, Customring.wav)</p>	
<b>Default</b>	Splash.wav	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2, CP920, CP925 and CP935W	

<b>Web UI</b>	Features > Pickup & Park > Ring Type for BLF Pickup	
<b>Phone UI</b>	Color Screen Phones: Menu > Basic > Sound > BLF Ring Type	
	Black-and-white Screen Phones: Menu > Settings > Basic Settings > Sound > BLF Ring Type	
<b>Parameter</b>	features.pickup_display.method	<y0000000000xx>.cfg
<b>Description</b>	It configures the display method of the call party information on the visual prompt. <b>Note:</b> It works only if "features.pickup.blf_visual_enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Name 1-Number 2-Name Number 3-Number Name	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	
<b>Parameter</b>	features.blf_pickup_only_send_code	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to only dial out feature access code of directed pick up when performing BLF/BLF list pickup.	
<b>Permitted Values</b>	0-Disabled, the phone dials out feature access code of directed pick up plus monitored number when performing BLF/BLF list pickup. 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42U/T42G/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for CP925/CP935W, X=1.

### Example: Configuring Visual and Audio Alert for Monitor Lines

The following example shows the configuration for visual and audio for a monitor line.


Scenario Conditions	Related Topic
linekey.1.extension = *97 = *97 or account.1.direct_pickup_code = *97 or features.pickup.direct_pickup_code = *97	<a href="#">Line Keys Configuration</a> <a href="#">Directed Call Pickup</a>
linekey.1.type = 16 linekey.1.line = 1 linekey.1.value = 1001 linekey.1.label = Bill	<a href="#">BLF Key Configuration</a>

**Example**

```
features.pickup.blf_visual_enable = 1
```

```
features.pickup.blf_audio_enable = 1
```

When the monitored line receives an incoming call, the phone screen shows an incoming call to the monitored line (for example, “6001<-6002”, 6001 is the monitored extension which receives an incoming call from 6002) (from 1008 to 1001), the following occurs on the phone:

- The phone plays a specific alert tone.
- The BLF key LED flashes red. On the T57W/T48U/T48S/T48G IP phone, the icon  flashes.
- The caller ID appears on the phone screen.

The following shows a visual alert for monitor line on T46S/G phones:



You can pick up the call to the monitored line, place a call to the monitored line, place a new call or back to the idle screen.

**LED Mode for BLF/BLF List Key**

BLF LED Mode provides five kinds of definition for the BLF/BLF List key LED status. As there is no hard line key on T57W/T48U/T48S/T48G phones, BLF LED mode configuration is applicable to any phones and expansion module, except T57W/T48U/T48S/T48G/T30P/T30/T19(P) E2/CP920/CP925/CP935W phones.

**Topics**

[Supported BLF LED Modes](#)

[BLF LED Mode Configuration](#)

**Supported BLF LED Modes**

The following table lists the LED statuses of the BLF/BLF list key when BLF LED Mode is set to 0, 1, 2, 3 or 4 respectively. The default value of BLF LED mode is 0.

**Line key/Expansion Module Key LED** (configured as a BLF key or a BLF List key and BLF LED Mode is set to 0)

LED Status	Description
Solid green	The monitored user is idle.
Fast-flashing red (200ms)	The monitored user receives an incoming call.
Solid red	The monitored user is dialing.
	The monitored user is talking.
	The monitored user's conversation is placed on hold (This LED status requires server support).
Slowly-flashing red (1s)	The call is parked against the monitored user's phone number.



LED Status	Description
Off	The monitored user does not exist.

**Line Key/Expansion Module Key LED** (configured as a BLF key or a BLF List key and BLF LED Mode is set to 1)

LED Status	Description
Fast-flashing red (200ms)	The monitored user receives an incoming call.
Solid red	The monitored user is dialing.
	The monitored user is talking.
	The monitored user's conversation is placed on hold (This LED status requires server support).
Slowly-flashing red (1s)	The call is parked against the monitored user's phone number.
Off	The monitored user is idle.
	The monitored user does not exist.

**Line Key/Expansion Module Key LED** (configured as a BLF key or a BLF List key and BLF LED Mode is set to 2)

LED Status	Description
Fast-flashing red (200ms)	The monitored user receives an incoming call.
Solid red	The monitored user is dialing.
	The monitored user is talking.
	The monitored user's conversation is placed on hold (This LED status requires server support).
Slowly-flashing red (1s)	The call is parked against the monitored user's phone number.
Off	The monitored user is idle.
	The monitored user does not exist.

**Line Key/Expansion Module Key LED** (configured as a BLF key or a BLF List key and BLF LED Mode is set to 3)

LED Status	Description
Fast-flashing green (200ms)	The monitored user receives an incoming calls
Solid red	The monitored user is dialing.
	The monitored user is talking.
	The monitored user's conversation is placed on hold (This LED status requires server support).
Slowly-flashing red (1s)	The call is parked against the monitored user's phone number.
Off	The monitored user is idle.
	The monitored user does not exist.

**Line Key/Expansion Module Key LED** (configured as a BLF key or a BLF List key and BLF LED Mode is set to 4. This mode is specifically designed for the Ribbon server.)

LED Status	Description
Solid green	The monitored user is talking.
Slowly-flashing green (1s)	The monitored user does not exist.
Off	The monitored user is idle.

## BLF LED Mode Configuration

The following table lists the parameters you can use to configure BLF LED Mode.

<b>Parameter</b>	features.blf_led_mode	<y0000000000xx>.cfg
<b>Description</b>	It configures the BLF LED mode.	
<b>Permitted Values</b>	0,1,2,3,4 (4 is specifically designed for the Ribbon server)	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2, CP920, CP925 and CP935W	
<b>Web UI</b>	Features > General Information > BLF LED Mode	

## BLF/BLF List Key LED Status and Behavior Configuration

You can customize the BLF LED status (or the color of BLF icon for T57W/T48U/T48S/T48G phones) and BLF/BLF List key behavior using the EDK macros if required.

This feature depends on support from a SIP server.

**Note:** For more information on EDK macros, refer to [Macro Action Strings](#).

### Topics

[Supported BLF/BLF List Key Behaviors](#)

[BLF Key LED/Icon and Behavior for Idle State Configuration](#)

[BLF Key LED/Icon and Behavior for Call-in State Configuration](#)

[BLF Key LED/Icon and Behavior for Call-out State Configuration](#)

[BLF Key LED/Icon and Behavior for Talking State Configuration](#)

[BLF Key LED/Icon and Behavior for Parked-Against State Configuration](#)

[BLF Key LED/Icon and Behavior for Hold State Configuration](#)

[BLF Key LED/Icon and Behavior for DND State Configuration](#)

### Supported BLF/BLF List Key Behaviors

The following behaviors are supported when pressing the BLF/BLF List keys:

- **newcall** - dial out the phone number
- **btransfer** - transfer the active call to the monitored user without consulting
- **ctransfer** - transfer the active call to the monitored user with prior consulting
- **pickup** - pick up the call directly
- **bargein** - barge in and set up a conference call
- **custom EDK macros** (for example, 1234\$Tinvite\$) - execute a series of macro action strings
- **intercom** - place an intercom call to the monitored number
- **park** - park the call to the monitored user, it works only when configuring "blf.enhanced.idle.talking.action"
- **retrieve** - retrieve a call from the monitored user, it works only when configuring "blf.enhanced.parked.callin.action", "blf.enhanced.parked.talking.action" and "blf.enhanced.parked.idle.action"

**Related Topic**[Macro Action Strings](#)**BLF Key LED/Icon and Behavior for Idle State Configuration**

The following table lists the parameters you can use to configure BLF key LED/icon and Behavior for the idle state (the monitored user is idle).

<b>Parameter</b>	blf.enhanced.idle.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the custom configuration when the monitored user is idle.	
<b>Permitted Values</b>	<b>0</b> -Disabled <b>1</b> -Enabled, the phone will display the custom BLF/BLF List DSS key LED status/icon colors and perform the custom behavior when pressing the BLF/BLF List DSS key.	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	
<b>Parameter</b>	blf.enhanced.idle.led	<y0000000000xx>.cfg
<b>Description</b>	It configures the custom BLF/BLF List DSS key LED status/icon colors when the monitored user is idle. This value uses the same macro action string syntax as an Enhanced DSS key. <b>Example:</b> blf.enhanced.idle.led = \$LEDg1000o\$ For T57W/T48U/T48S/T48G phones, the BLF/BLF List DSS key field displays a green icon for 1000ms and then turns to white. For other phones, the BLF/BLF list DSS key LED glows green for 1000ms and then goes out. <b>Note:</b> It works only if "blf.enhanced.idle.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	
<b>Parameter</b>	blf.enhanced.idle.callin.action	<y0000000000xx>.cfg
<b>Description</b>	It configures the behavior when pressing the BLF/BLF list DSS key if the monitor is ringing and monitored user is idle. <b>Note:</b> It works only if "blf.enhanced.idle.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	
<b>Parameter</b>	blf.enhanced.idle.talking.action	<y0000000000xx>.cfg
<b>Description</b>	It configures the behavior when pressing the BLF/BLF list DSS key if the monitor is talking and monitored user is idle. <b>Note:</b> It works only if "blf.enhanced.idle.enable" is set to 1 (Enabled).	
<b>Permitted</b>	String	

<b>Values</b>	
<b>Default</b>	Blank
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920
<b>Parameter</b>	blf.enhanced.idle.idle.action <y0000000000xx>.cfg
<b>Description</b>	It configures the behavior when pressing the BLF/BLF list DSS key if the monitor and monitored user are idle. <b>Note:</b> It works only if “blf.enhanced.idle.enable” is set to 1 (Enabled).
<b>Permitted Values</b>	String
<b>Default</b>	Blank
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920

### BLF Key LED/Icon and Behavior for Call-in State Configuration

The following table lists the parameters you can use to configure BLF key LED/icon and Behavior for the call-in state (the monitored user is ringing).

<b>Parameter</b>	blf.enhanced.callin.enable <y0000000000xx>.cfg
<b>Description</b>	It enables or disables the custom configuration when the monitored user is ringing.
<b>Permitted Values</b>	0-Disabled 1-Enabled, the phone will display the custom BLF/BLF List DSS key LED status/icon colors and perform the custom behavior when pressing the BLF/BLF List DSS key.
<b>Default</b>	0
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920
<b>Parameter</b>	blf.enhanced.callin.led <y0000000000xx>.cfg
<b>Description</b>	It configures the custom BLF/BLF List DSS key LED status/icon colors when the monitored user is ringing. This value uses the same macro action string syntax as an Enhanced DSS key. <b>Example:</b> blf.enhanced.callin.led = \$LEDg1000o\$ For T57W/T48U/T48S/T48G phones, the BLF/BLF List DSS key field displays a green icon for 1000ms and then turns to white. For other phones, the BLF/BLF list DSS key LED glows green for 1000ms and then goes out. <b>Note:</b> It works only if “blf.enhanced.callin.enable” is set to 1 (Enabled).
<b>Permitted Values</b>	String
<b>Default</b>	Blank
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920
<b>Parameter</b>	blf.enhanced.callin.callin.action <y0000000000xx>.cfg
<b>Description</b>	It configures the behavior when pressing the BLF/BLF list DSS key if the monitor and monitored user

	are ringing. <b>Note:</b> It works only if "blf.enhanced.callin.enable" is set to 1 (Enabled).
<b>Permitted Values</b>	String
<b>Default</b>	Blank
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920
<b>Parameter</b>	blf.enhanced.callin.talking.action <y0000000000xx>.cfg
<b>Description</b>	It configures the behavior when pressing the BLF/BLF list DSS key if the monitor is talking and monitored user is ringing. <b>Note:</b> It works only if "blf.enhanced.callin.enable" is set to 1 (Enabled).
<b>Permitted Values</b>	String
<b>Default</b>	Blank
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920
<b>Parameter</b>	blf.enhanced.callin.idle.action <y0000000000xx>.cfg
<b>Description</b>	It configures the behavior when pressing the BLF/BLF list DSS key if the monitor is idle and monitored user is ringing. <b>Note:</b> It works only if "blf.enhanced.callin.enable" is set to 1 (Enabled).
<b>Permitted Values</b>	String
<b>Default</b>	Blank
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920

### BLF Key LED/Icon and Behavior for Call-out State Configuration

The following table lists the parameters you can use to configure BLF key LED/icon and Behavior for the call-out state (the monitored user is calling out).

<b>Parameter</b>	blf.enhanced.callout.enable <y0000000000xx>.cfg
<b>Description</b>	It enables or disables the custom configuration when the monitored user is calling out.
<b>Permitted Values</b>	0-Disabled 1-Enabled, the phone will display the custom BLF/BLF List DSS key LED status/icon colors and perform the custom behavior when pressing the BLF/BLF List DSS key.
<b>Default</b>	0
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920
<b>Parameter</b>	blf.enhanced.callout.led <y0000000000xx>.cfg
<b>Description</b>	It configures the custom BLF/BLF List DSS key LED status/icon colors when the monitored user is calling out. This value uses the same macro action string syntax as an Enhanced DSS key. <b>Example:</b> blf.enhanced.callout.led = \$LEDg1000o\$

	<p>For T57W/T48U/T48S/T48G phones, the BLF/BLF List DSS key field displays a green icon for 1000ms and then turns to white.</p> <p>For other phones, the BLF/BLF list DSS key LED glows green for 1000ms and then goes out.</p> <p><b>Note:</b> It works only if “blf.enhanced.callout.enable” is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	
<b>Parameter</b>	blf.enhanced.callout.callin.action	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the behavior when pressing the BLF/BLF list DSS key if the monitor is ringing and monitored user is calling out.</p> <p><b>Note:</b> It works only if “blf.enhanced.callout.enable” is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	
<b>Parameter</b>	blf.enhanced.callout.talking.action	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the behavior when pressing the BLF/BLF list DSS key if the monitor is talking and monitored user is calling out.</p> <p><b>Note:</b> It works only if “blf.enhanced.callout.enable” is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	
<b>Parameter</b>	blf.enhanced.callout.idle.action	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the behavior when pressing the BLF/BLF list DSS key if the monitor is idle and monitored user is calling out.</p> <p><b>Note:</b> It works only if “blf.enhanced.callout.enable” is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	

### BLF Key LED/Icon and Behavior for Talking State Configuration

The following table lists the parameters you can use to configure BLF key LED/icon and Behavior for talking state (the monitored user is talking).

<b>Parameter</b>	blf.enhanced.talking.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the custom configuration when the monitored user is talking.	
<b>Permitted Values</b>	0-Disabled	

	1-Enabled, the phone will display the custom BLF/BLF List DSS key LED status/icon colors and perform the custom behavior when pressing the BLF/BLF List DSS key.	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	
<b>Parameter</b>	blf.enhanced.talking.led	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the custom BLF/BLF List DSS key LED status/icon colors when the monitored user is talking.</p> <p>This value uses the same macro action string syntax as an Enhanced DSS key.</p> <p><b>Example:</b></p> <p>blf.enhanced.talking.led = \$LEDg1000o\$</p> <p>For T57W/T48U/T48S/T48G phones, the BLF/BLF List DSS key field displays a green icon for 1000ms and then turns to white.</p> <p>For other phones, the BLF/BLF list DSS key LED glows green for 1000ms and then goes out.</p> <p><b>Note:</b> It works only if "blf.enhanced.talking.enable" is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	
<b>Parameter</b>	blf.enhanced.talking.callin.action	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the behavior when pressing the BLF/BLF list DSS key if the monitor is ringing and monitored user is talking.</p> <p><b>Note:</b> It works only if "blf.enhanced.talking.enable" is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	
<b>Parameter</b>	blf.enhanced.talking.talking.action	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the behavior when pressing the BLF/BLF list DSS key if the monitor and monitored user are talking.</p> <p><b>Note:</b> It works only if "blf.enhanced.talking.enable" is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	
<b>Parameter</b>	blf.enhanced.talking.idle.action	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the behavior when pressing the BLF/BLF list DSS key if the monitor is idle and monitored user is talking.</p> <p><b>Note:</b> It works only if "blf.enhanced.talking.enable" is set to 1 (Enabled).</p>	
<b>Permitted</b>	String	

<b>Values</b>	
<b>Default</b>	Blank
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920

## BLF Key LED/Icon and Behavior for Parked-Against State Configuration

The following table lists the parameters you can use to configure BLF key LED/icon and Behavior for the parked-against state (a call is being parked against the monitored phone).

<b>Parameter</b>	blf.enhanced.parked.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the custom configuration when a call is parked against the monitored phone.	
<b>Permitted Values</b>	<b>0</b> -Disabled <b>1</b> -Enabled, the phone will display the custom BLF/BLF List DSS key LED status/icon colors and perform the custom behavior when pressing the BLF/BLF List DSS key.	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	
<b>Parameter</b>	blf.enhanced.parked.led	<y0000000000xx>.cfg
<b>Description</b>	It configures the custom BLF/BLF List DSS key LED status/icon colors when a call is parked against the monitored phone. This value uses the same macro action string syntax as an Enhanced DSS key. <b>Example:</b> blf.enhanced.parked.led = \$LEDg1000o\$ For T57W/T48U/T48S/T48G phones, the BLF/BLF List DSS key field displays a green icon for 1000ms and then turns to white. For other phones, the BLF/BLF list DSS key LED glows green for 1000ms and then goes out. <b>Note:</b> It works only if “blf.enhanced.parked.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	
<b>Parameter</b>	blf.enhanced.parked.callin.action	<y0000000000xx>.cfg
<b>Description</b>	It configures the behavior when pressing the BLF/BLF list DSS key if the monitor is ringing and a call is parked against the monitored phone. <b>Note:</b> It works only if “blf.enhanced.parked.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	
<b>Parameter</b>	blf.enhanced.parked.talking.action	<y0000000000xx>.cfg
<b>Description</b>	It configures the behavior when pressing the BLF/BLF list DSS key if the monitor is talking and a call is	



	<p>parked against the monitored phone.</p> <p>This value uses the same macro action string syntax as an Enhanced DSS key.</p> <p><b>Example:</b></p> <p>blf.enhanced.parked.talking.action = newcall</p> <p><b>Note:</b> It works only if "blf.enhanced.parked.enable" is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	
<b>Parameter</b>	blf.enhanced.parked.idle.action	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the behavior when pressing the BLF/BLF list DSS key if the monitor is idle and a call is parked against the monitored phone.</p> <p>This value uses the same macro action string syntax as an Enhanced DSS key.</p> <p><b>Example:</b></p> <p>blf.enhanced.parked.idle.action = newcall</p> <p><b>Note:</b> It works only if "blf.enhanced.parked.enable" is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	

### BLF Key LED/Icon and Behavior for Hold State Configuration

The following table lists the parameters you can use to configure BLF key LED/icon and Behavior for hold state (the call on the monitored phone is placed on hold).

<b>Parameter</b>	blf.enhanced.hold.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the custom configuration when the call on the monitored phone is placed on hold.	
<b>Permitted Values</b>	<p>0-Disabled</p> <p>1-Enabled, the phone will display the custom BLF/BLF List DSS key LED status/icon colors.</p>	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P, T30P, T30, T29G, T19(P) E2 and CP920	
<b>Parameter</b>	blf.enhanced.hold.led	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the custom BLF/BLF List DSS key LED status/icon colors when the call on the monitored phone is placed on hold.</p> <p>This value uses the same macro action string syntax as an Enhanced DSS key.</p> <p><b>Example:</b></p> <p>blf.enhanced.hold.led = \$LEDg1000o\$</p> <p>For T57W/T48U/T48S phones, the BLF/BLF List DSS key field displays a green icon for 1000ms and then turns to white.</p>	

	For other phones, the BLF/BLF list DSS key LED glows green for 1000ms and then goes out. <b>Note:</b> It works only if “blf.enhanced.hold.enable” is set to 1 (Enabled).
<b>Permitted Values</b>	String
<b>Default</b>	Blank
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P, T30P, T30, T29G, T19(P) E2 and CP920

## BLF Key LED/Icon and Behavior for DND State Configuration

The following table lists the parameters you can use to configure BLF key LED/icon and Behavior for DND state (DND is activated on the monitored phone).

<b>Parameter</b>	blf.enhanced.dnd.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the custom configuration when DND is activated on the monitored phone.	
<b>Permitted Values</b>	0-Disabled 1-Enabled, the phone will display the custom BLF/BLF List DSS key LED status/icon colors.	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P, T30P, T30, T29G, T19(P) E2 and CP920	
<b>Parameter</b>	blf.enhanced.dnd.led	<y0000000000xx>.cfg
<b>Description</b>	It configures the custom BLF/BLF List DSS key LED status/icon colors when DND is activated on the monitored phone. This value uses the same macro action string syntax as an Enhanced DSS key. <b>Example:</b> blf.enhanced.dnd.led = \$LEDrd1000o100yd300\$ For T57W/T48U/T48S phones, an infinite loop for the BLF/BLF List DSS key field: displays a red icon for 1000ms, turns to white for 100ms and then displays a yellow icon for 300ms. For other phones, an infinite loop for the BLF/BLF list DSS key LED status: glows red for 1000ms, be in the off state for 100ms and then glows yellow for 300ms. <b>Note:</b> It works only if “blf.enhanced.dnd.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P, T30P, T30, T29G, T19(P) E2 and CP920	

## BLF Key for Intercom Configuration

The BLF key (not include BLF List key) can also be used to initiate an intercom call.

The following table lists the parameter you can use to configure BLF key for Intercom.

<b>Parameter</b>	features.blf.intercom_mode.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to initiate an outgoing intercom call with a monitored user when pressing the BLF key. <b>Note:</b> To use this feature, you also need to configure the intercom mode (configured by the parameter	

	"features.intercom.mode").
<b>Permitted Values</b>	0-Disabled 1-Enabled
<b>Default</b>	0
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920

## Call Information Display Configuration

The following table lists the parameter you can use to configure call information display.

<b>Parameter</b>	features.blf.show_callinfo.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to display the call information by long pressing the BLF/BLF List/Call Park key.	
<b>Permitted Values</b>	0-Disabled 1-Enabled, when the monitored line is ringing, during a call, or has a parked call, users can long press the BLF/BLF List/Call Park key to view the call information, and then select to pick up the incoming call (only for BLF/BLF List key), barge in a conference (only for BLF/BLF List key), or retrieve the parked call.	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P, T30P, T30, T29G, T19(P) E2 and CP920	

## BLF Send DTMF Configuration

The following table lists the parameter you can use to configure BLF send DTMF.

<b>Parameter</b>	account.X.blf_send_dtmf.enable <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to send DTMF to achieve BLF transfer feature.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Account > Advanced > BLF Send DTMF	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Parameter</b>	account.X.blf_dtmf_code <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the transfer prefix code for sending DTMF to achieve BLF transfer. <b>Note:</b> It works only if "account.X.blf_send_dtmf.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Account > Advanced > BLF DTMF Codec	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Case Scen-</b>	1. Configure the following parameters:	

<b>ario</b>	<p>account.1.blf_send_dtmf.enable = 1</p> <p>account.1.blf_dtmf_code = *55</p> <p>transfer.dsskey_deal_type = 2</p> <p>2. Set line key 5 as a BLF key, and the monitored number is A (3333).</p> <p><b>Result:</b> When the phone establish a call with B and then you press the BLF key, it will send the DTMF sequence *553333.</p>
-------------	---

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## Shared Line

Yealink phones support Shared Call Appearance (SCA) and Bridged Line Appearance (BLA) to share a line. Shared call appearances and bridged line appearances are similar signaling methods that enable more than one phone to share the same line or registration. The methods you use vary with the SIP server you are using.

The shared line users have the ability to do the following:

- Place and answer calls
- Place a call on hold
- Retrieve a held call remotely
- Barge in an active call (only SCA)
- Pull a shared call (only SCA)

### Topics

[State Indicator of Shared Line](#)








[Shared Call Appearance \(SCA\) Configuration](#)

[Bridge Lines Appearance \(BLA\)](#)

## State Indicator of Shared Line

The shared line is indicated by different line key icon. Line key icon is not available on the T30P/T30/T19(P) E2 phones.

The following table shows the LED/icons indicator associated with the shared line:

CP925/CP935W Icon	Description
	The shared line is idle.
 (Monitoring SCA Phone)	The shared line is seized.
 (Flashing)	The shared line receives an incoming call.
 (Flashing)	The shared line is dialing.
	The shared line is busy or is in a call.
	The call on the shared line is placed on public hold.
 (Local SCA Phone)	The call on the shared line is placed on private hold.

	(Othe Phone)
	The call on the shared line is barged in by the other shared line user.
	In a multi-party call, place the call on hold at local.

Line Key LED	Icon			Description
	T48U/T48S/T48G	T46U/T46S/T46G/T29G	T57W/T54W/T53C/T33P/T33G	
Off				The shared line is idle.
Solid green	 (Monitoring SCA Phone)	 (Monitoring SCA Phone)	 (Monitoring SCA Phone)	The shared line is seized.
Fast-flashing green	 (Flashing)	 (Flashing)	 (Flashing on T57W)	The shared line receives an incoming call.
Solid green	 (Flashing)	 (Flashing)	 (Flashing on T57W)	The shared line is dialing.
Solid green				The shared line is busy or is in a call.
Slowly-flashing green (Local Phone)				The call on the shared line is placed on public hold.
Slowly-flashing red (other Phones)				
Slowly-flashing green (local Phone)	 (Local SCA Phone)	 (Local SCA Phone)	 (Local SCA Phone)	The call on the shared line is placed on private hold.
Solid red (other Phone)	 (Othe Phone)	 (Othe Phone)	 (Othe Phone)	
Solid green				The call on the shared line is barged in by the other shared line user.
Slowly-flashing green				In a multi-party call, place the call on hold at local.

## Shared Call Appearance (SCA) Configuration

In SCA scenario, an incoming call can be presented to multiple phones simultaneously. Any IP phone can be used to originate or receive calls on the shared line.

Yealink phones support SCA using a SUBSCRIBE/NOTIFY mechanism as specified in [RFC 3265](#). The events used are:

- “call-info” for call appearance state notification.
- “line-seize” for the phone to ask to seize the line.

You have the option to provide users the ability to do the following:

- Configure a private hold soft key or Private Hold key and provide users the ability to hold a call privately.
- Configure a call pull code, which allows users to retrieve an existing call from another shared phone that is in an active or public hold status.

### Topic

#### SCA Configuration

## SCA Configuration

The following table lists the parameters you can use to configure SCA.

<b>Parameter</b>	account.X.shared_line <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the registration line type.	
<b>Permitted Values</b>	0-Disabled 1-Shared Call Appearance	
<b>Default</b>	0	
<b>Web UI</b>	Account > Advanced > Shared Line	
<b>Parameter</b>	account.X.line_seize.expires <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the line-seize subscription expiration time (in seconds). <b>Note:</b> It works only if “account.X.shared_line” is set to 1 (Shared Call Appearance).	
<b>Permitted Values</b>	Integer from 0 to 65535	
<b>Default</b>	15	
<b>Parameter</b>	account.X.shared_line_callpull_code <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the call pull feature access code to retrieve an existing call from another shared phone that is in an active or public hold status. <b>Note:</b> It works only if “account.X.shared_line” is set to 1 (Shared Call Appearance).	
<b>Permitted Values</b>	String within 99 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T30P/T30/T19(P) E2	
<b>Web UI</b>	Account > Advanced > Call Pull Feature Access Code	
<b>Parameter</b>	features.barge_in_via_username.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to use the user name of the account to barge in an active call.	
<b>Permitted Values</b>	0-Disabled, user register name to barge in, the phone sends INVITE request with the register name when barging in a call 1-Enabled, the phone sends INVITE request with the user name when barging in a call	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2, CP920, CP925 and CP935W	
<b>Parameter</b>	phone_setting.call_remote_end_when_hold.busy_tone.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to play a busy tone when a public hold call on the shared line is	

	retrieved by the remote party. <b>Note:</b> It works only if "features.busy_tone_delay" is not set to 0.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T48S, T46S, T42S, T41S, T33P, T33G, T31P, T31G, T31, T30P, T30, T27G, CP920, CP925, CP935W	
<b>Parameter</b>	account.X.shared_line.idle_details <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to display the basic SCA call information on the idle screen. <b>Note:</b> It works only if "account.X.shared_line" is set to 1 (Shared Call Appearance).	
<b>Permitted Values</b>	0-Disabled 1-Enabled, users can also view the call details by long pressing the SCA line key.	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T48S, T46S, T42S, T41S, T33P, T33G, T31P, T31G, T31, T30P, T30, T27G	

<sup>[1]</sup>X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## Bridge Lines Appearance (BLA)

BLA allows users to share a SIP line on two or more phones. Users can monitor the specific extension (BLA number) for status changes on each IP phone. To use this feature, a BLA group should be pre-configured on the server and one of them is specified as a BLA number.

Yealink phones support BLA using a SUBSCRIBE/NOTIFY mechanism as specified in [RFC 3265](#). The event used is: "dialog" for bridged line appearance subscribe and notify.

### Topic

[BLA Configuration](#)

## BLA Configuration

The following table lists the parameters you can use to configure BLA.

<b>Parameter</b>	account.X.shared_line <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the registration line type.	
<b>Permitted Values</b>	0-Disabled 3-Draft BLA	
<b>Default</b>	0	
<b>Web UI</b>	Account > Advanced > Shared Line	
<b>Parameter</b>	account.X.bla_number <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the BLA number. <b>Note:</b> It works only if "account.X.shared_line" is set to 3 (Draft BLA).	
<b>Permitted Values</b>	String within 99 characters	

<b>Default</b>	Blank	
<b>Web UI</b>	Account > Advanced > BLA Number	
<b>Parameter</b>	account.X.bla.notify_with_expire.enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the phone to add the Expires attribute to the Subscription-State header of the BLA NOTIFY message. <b>Note:</b> It works only if "account.X.shared_line" is set to 3 (Draft BLA). For teltronic BLA, you need to set the value of this parameter to 0 (Disabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Supported Devices</b>	All phones except T30P/T30/T19(P) E2	
<b>Parameter</b>	account.X.bla.subscribe_uri_build_type <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the constitution of the URI for BLA subscription. <b>Note:</b> It works only if "account.X.shared_line" is set to 3 (Draft BLA). For teltronic BLA, you need to set the value of this parameter to 1 (Enabled).	
<b>Permitted Values</b>	0-From Contact header in the SUBSCRIBE message sent by the server 1-According to the BLA number (configured by the parameter "account.X.bla_number")	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T30P/T30/T19(P) E2	
<b>Parameter</b>	account.X.bla_subscribe_period <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the period (in seconds) of the BLA subscription. <b>Note:</b> It works only if "account.X.shared_line" is set to 3 (Draft BLA).	
<b>Permitted Values</b>	Integer from 60 to 7200	
<b>Default</b>	300	
<b>Supported Devices</b>	All phones except T30P/T30/T19(P) E2	
<b>Web UI</b>	Account > Advanced > BLA Subscription Period	
<b>Parameter</b>	phone_setting.call_remote_end_when_hold.busy_tone.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to play a busy tone when a public hold call on the shared line is retrieved by the remote party. <b>Note:</b> It works only if "features.busy_tone_delay" is not set to 0.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T48S, T46S, T42S, T41S, T33P, T33G, T31P, T31G, T31, T30P, T30, T27G, CP920, CP925, CP935W	

<sup>[1]</sup>X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for



T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## Intercom

Intercom is a useful feature in an office environment to quickly connect with the operator or the secretary. You can press the intercom key to place a call to a contact that is answered automatically on the contact's phone as long as the contact is not in an active call. In addition, the intercom key can be used for monitoring the status changes of a specific line on the phone.

### Topics

[Intercom Key Configuration](#)  
[State Monitor for Intercom Contact](#)  
[Outgoing Intercom Configuration](#)  
[Incoming Intercom Configuration](#)

## Intercom Key Configuration

You can configure an Intercom key to provide users the ability to initiate intercom calls directly to the specified contact.

The following shows configuration for an Intercom key.

Line Key Configuration	Programmable Key Configuration
linekey.X.type = 14	programmablekey.X.type = 14
linekey.X.line = 1	programmablekey.X.line = 1
linekey.X.value = 4603	programmablekey.X.value = 4603
linekey.X.label = Bill	

After provisioning, an Intercom key for Bill (4603) is available on the phone. You can press the Intercom key to place an intercom call to Bill (4603).

If you want to use the Intercom key to pick up a call, you need to enable the Intercom key to monitor state changes, and configure the pickup code for the Intercom key, for example, set "linekey.X.extension = \*97" or "programmablekey.X.extension = \*97". When the monitored user Bill (4603) receives an incoming call, you can press the Intercom key to pick up the call to Bill (4603) directly.

**Note:** You cannot use a programmable key to monitor an intercom contact for state changes, but press it to pick up a call.

### Related Topics

[Line Keys Configuration](#)  
[Programmable Keys Configuration](#)  
[State Monitor for Intercom Contact](#)

## State Monitor for Intercom Contact

You can make the phone to monitor a specific intercom user for state changes (busy or idle). When the monitored user receives an incoming call, the supervisor can press the intercom key to pick up the call directly. The phones support this feature using a SUBSCRIBE/NOTIFY mechanism as specified in [RFC 3265](#).

**Note:** If you want to use the Intercom key to pick up a call, you need to configure the pickup code for the Intercom key, for example, "linekey.X.extension = \*97".

### Topics

[State Indicator of Intercom Contact](#)  
[State Monitor for Intercom Contact Configuration](#)

## State Indicator of Intercom Contact

The following table shows the LED indicator associated with the Intercom key:

LED Status	Description
Solid green	The monitored user is idle.
Fast-flashing red (200ms)	The monitored user receives an incoming call.
Solid red	The monitored user is dialing. The monitored user is talking.
Off	The monitored user does not exist.

## State Monitor for Intercom Contact Configuration

The following table lists the parameters you can use to configure state monitor for intercom contact.

<b>Parameter</b>	features.intercom.led.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to display different intercom DSS key LED status/icons when the status of monitored user changes. <b>Note:</b> It works only if “features.intercom.subscribe.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	
<b>Default</b>	0	
<b>Parameter</b>	features.intercom.subscribe.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables intercom subscription for the phones.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	

## Outgoing Intercom Configuration

Yealink phones support two methods for initialing intercom calls.

The following table lists the parameters you can use to configure outgoing intercom.

<b>Parameter</b>	features.intercom.mode	<y0000000000xx>.cfg
<b>Description</b>	It configures the intercom mode.	
<b>Permitted Values</b>	0-SIP 1-FAC, the feature access code is configured by “features.intercom.feature_access_code”.	
<b>Default</b>	0	
<b>Parameter</b>	features.intercom.feature_access_code	<y0000000000xx>.cfg
<b>Description</b>	It configures the intercom feature access code. <b>Note:</b> It works only if “features.intercom.mode” is set to 1 (FAC).	

<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Parameter</b>	account.X.call_info <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	<p>It configures the value of the Call-Info header for intercom feature.</p> <p>The value format likes: &lt;sip:XXX (X can be any value)&gt;; answer-after=0.</p> <p><b>Note:</b> If both Call-Info header and Alert-Info header (defined by the parameter "account.X.alert_info") are configured, the Call-Info header has a higher priority than the Alert-Info header.</p>	
<b>Permitted Values</b>	String within 256 characters	
<b>Default</b>	Blank	

<sup>[1]</sup>X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## Incoming Intercom Configuration

The IP phone can process incoming calls differently depending on settings.

The following table lists the parameters you can use to configure incoming intercom.

<b>Parameter</b>	features.intercom.allow	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to answer an incoming intercom call.	
<b>Permitted Values</b>	<p>0-Disabled, the phone will handle an incoming intercom call like a normal incoming call.</p> <p>1-Enabled, the phone will automatically answer an incoming intercom call.</p>	
<b>Default</b>	1	
<b>Web UI</b>	Features > Intercom > Intercom Allow	
<b>Phone UI</b>	<p>Menu &gt; Features &gt; Intercom &gt; Intercom Allow</p> <p><u>CP925/CP935W:</u></p> <p>More &gt; Features &gt; Intercom &gt; Intercom Allow</p>	
<b>Parameter</b>	features.intercom.mute	<y0000000000xx>.cfg
<b>Description</b>	<p>It enables or disables the phone to mute the microphone when answering an intercom call.</p> <p><b>Note:</b> It works only if "features.intercom.allow" and "features.allow_mute" are set to 1 (Enabled).</p>	
<b>Permitted Values</b>	<p>0-Disabled</p> <p>1-Enabled, the microphone is muted for intercom calls, and then the other party cannot hear you.</p>	
<b>Default</b>	0	
<b>Web UI</b>	Features > Intercom > Intercom Mute	
<b>Phone UI</b>	<p>Menu &gt; Features &gt; Intercom &gt; Intercom Mute</p> <p><u>CP925/CP935W:</u></p> <p>More &gt; Features &gt; Intercom &gt; Intercom Mute</p>	
<b>Parameter</b>	features.intercom.tone	<y0000000000xx>.cfg

<b>Description</b>	It enables or disables the phone to play a warning tone when answering an intercom call. <b>Note:</b> It works only if "features.intercom.allow" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Web UI</b>	Features > Intercom > Intercom Tone	
<b>Phone UI</b>	Menu > Features > Intercom > Intercom Tone <u>CP925/CP935W:</u> More > Features > Intercom > Intercom Tone	
<b>Parameter</b>	features.intercom.barge	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to answer an incoming intercom call while there is already an active call on the IP phone. <b>Note:</b> It works only if "features.intercom.allow" and "call_waiting.enable" are set to 1 (Enabled) and "phone_setting.call_appearance.calls_per_linekey" is greater than 1.	
<b>Permitted Values</b>	0-Disabled 1-Enabled, the phone will automatically answer the intercom call and place the active call on hold.	
<b>Default</b>	0	
<b>Web UI</b>	Features > Intercom > Intercom Barge	
<b>Phone UI</b>	Menu > Features > Intercom > Intercom Barge <u>CP925/CP935W:</u> More > Features > Intercom > Intercom Barge	
<b>Parameter</b>	features.intercom.barge_in_dialing.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the intercom call to answer an incoming intercom call while dialing. <b>Note:</b> It works only if "features.intercom.barge" is set to 0 (Disabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	features.intercom.headset_prior.enable	<y0000000000xx>.cfg
<b>Description</b>	It configures the channel mode to use when receiving an incoming intercom call.	
<b>Permitted Values</b>	0-Speaker Mode 1-Headset Mode, it works only if you connect the headset to the IP phone and the headset mode is activated for use.	
<b>Default</b>	1	
<b>Supported Devices</b>	All phones except CP920/CP925/CP935W	
<b>Parameter</b>	account.X.alert_info <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the value of the Alert-Info header for intercom feature. The value format likes: <sip:XXX (X can be any value)>; answer-after=0. <b>Note:</b> If both Call-Info header (defined by the parameter "account.X.call_info") and Alert-Info header are configured, the Call-Info header has a higher priority than the Alert-Info header.	

<b>Permitted Values</b>	String within 256 characters	
<b>Default</b>	Blank	
<b>Parameter</b>	voice.intercom.tone_vol	<y000000000xx>.cfg
<b>Description</b>	It configures the intercom tone as a fixed volume. <b>Note:</b> It works only if "features.intercom.tone" is set to 1 (Enabled). During a call, the phone plays the call waiting tone instead of the intercom tone when the phone receives an intercom call.	
<b>Permitted Values</b>	<b>Blank</b> -the user can adjust the intercom tone volume on the phone, the intercom tone is the same volume as the ring tone of the phone. <b>1 to 15</b> -the user cannot adjust the intercom tone volume on the phone, the intercom tone is the configured volume.	
<b>Default</b>	Blank	
<b>Parameter</b>	features.intercom.allow_string	<y000000000xx>.cfg
<b>Description</b>	It configures the incoming call from the specified number to be automatically answered as an intercom incoming call. Multiple numbers are separated by commas. <b>Example:</b> features.intercom.allow_string = 8604, 8605	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Parameter</b>	account.X.external_intercom.ignore_dnd.mode <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables and disables the phone to answer the intercom call when the DND is activated.	
<b>Permitted Values</b>	<b>0</b> -Disabled <b>1</b> -Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	

<sup>[1]</sup>X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## CSTA Control

User Agent Computer Supported Telecommunications Applications (uaCSTA) is explained in detail in [Using CSTA for SIP Phone User Agents \(uaCSTA\)](#) and [Services for Computer Supported Telecommunications Applications Phase III](#).

The uaCSTA feature on the phone may be used for remote control of the phone from computer applications such as PC softphone. You can use the application to control the phone to perform basic call operations. For example, place a call, answer a call, end a call and transfer a call to another party.

It is not applicable to T30P/T30/T19(P) E2/CP920 phones.

**Topic**[CSTA Control Configuration](#)

## CSTA Control Configuration

The following table lists the parameter you can use to configure CSTA control.

<b>Parameter</b>	features.csta_control.enable <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the CSTA feature.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2 and CP920	
<b>Web UI</b>	Features > Remote Control > CSTA Control	

<sup>[1]</sup>If you change this parameter, the phone will reboot to make the change take effect.

## Action URL

Action URL allows the phones to interact with web server applications by sending an HTTP or HTTPS GET request.

You can specify a URL that triggers a GET request when a specified event occurs. Action URL can only be triggered by the predefined events (for example, Open DND). The valid URL format is: *http(s)://<server-IPAddress>/help.xml?*

An HTTP or HTTPS GET request may contain a variable name and a variable value, separated by “=”. Each variable value starts with \$ in the query part of the URL. The valid URL format is: *http(s)://<server-IPAddress>/help.xml?variable name=\$variable value*. The variable name can be customized by users, while the variable value is predefined. For example, a URL “http://192.168.1.10/help.xml?mac=\$mac” is specified for the event Mute, the \$mac will be dynamically replaced with the MAC address of the IP phone when the IP phone mutes a call.

**Topics**[Predefined Events List](#)[Variable Values List](#)[Action URL Configuration](#)

## Predefined Events List

The following table lists the predefined events for action URL.

Event	Description
Setup Completed	When the IP phone completes startup.
Registered	When the IP phone successfully registers an account.
Unregistered	When the IP phone logs out of the registered account.
Register Failed	When the IP phone fails to register an account.
Off Hook	When the IP phone is off hook.
On Hook	When the IP phone is on hook.

Event	Description
Incoming Call	When the IP phone receives an incoming call.
Outgoing Call	When the IP phone places a call.
Established	When the IP phone establishes a call.
Terminated	When the IP phone terminates a call.
Open DND	When the IP phone enables the DND mode. <b>Note:</b> When the DND mode is Phone, the phone sends the action URL for all accounts; when the DND mode is Custom, the phone only sends the action URL for the corresponding account.
Close DND	When the IP phone disables the DND mode. <b>Note:</b> When the DND mode is Phone, the phone sends the action URL for all accounts; when the DND mode is Custom, the phone only sends the action URL for the corresponding account.
Always Forward On	When the IP phone enables the always forward. <b>Note:</b> When the forward mode is Phone, the phone sends the action URL for all accounts; when the forward mode is Custom, the phone only sends the action URL for the corresponding account.
Always Forward Off	When the IP phone disables the always forward. <b>Note:</b> When the forward mode is Phone, the phone sends the action URL for all accounts; when the forward mode is Custom, the phone only sends the action URL for the corresponding account.
Busy Forward On	When the IP phone enables the busy forward. <b>Note:</b> When the forward mode is Phone, the phone sends the action URL for all accounts; when the forward mode is Custom, the phone only sends the action URL for the corresponding account.
Busy Forward Off	When the IP phone disables the busy forward. <b>Note:</b> When the forward mode is Phone, the phone sends the action URL for all accounts; when the forward mode is Custom, the phone only sends the action URL for the corresponding account.
No Answer Forward On	When the IP phone enables the no answer forward. <b>Note:</b> When the forward mode is Phone, the phone sends the action URL for all accounts; when the forward mode is Custom, the phone only sends the action URL for the corresponding account.
No Answer Forward Off	When the IP phone disables the no answer forward. <b>Note:</b> When the forward mode is Phone, the phone sends the action URL for all accounts; when the forward mode is Custom, the phone only sends the action URL for the corresponding account.
Transfer Call	When the IP phone transfers a call.
Blind Transfer	When the IP phone performs the blind transfer.
Attended Transfer	When the IP phone performs the semi-attended/attended transfer.
Hold	When the IP phone places a call on hold.

Event	Description
UnHold	When the IP phone resumes a held call.
Held	When a call of the IP phone is held.
UnHeld	When a held call is resumed.
Mute	When the IP phone mutes a call.
UnMute	When the IP phone un-mutes a call.
Missed Call	When the IP phone misses a call.
IP Changed	When the IP address of the IP phone changes.
Idle To Busy	When the state of the IP phone changes from idle to busy.
Busy To Idle	When the state of phone changes from busy to idle.
Reject Incoming Call	When the IP phone rejects an incoming call.
Answer New Incoming Call	When the IP phone answers a new call.
Transfer Failed	When the IP phone fails to transfer a call.
Transfer Finished	When the IP phone completes transferring a call.
Forward Incoming Call	When the IP phone forwards an incoming call.
Autop Finish	When the IP phone completes auto provisioning via power on.
Call Waiting On	When the IP phone enables the call waiting.
Call Waiting Off	When the IP phone disables the call waiting.
Headset	When the IP phone presses the HEADSET key (not applicable to CP920/CP925 /CP935W phones).
Handfree	When the IP phone presses the Speakerphone key (not applicable to CP920/CP925 /CP935W phones).
Cancel Call Out	When the phone cancels an outgoing call in the ring-back state.
Remote Busy	When an outgoing call is rejected.
Call Remote Canceled	When the remote party cancels the outgoing call in the ringing state.
Peripheral Information	When the accessory is unplugged or plugged.
VPN IP	When the phone IP address assigned by the VPN server changes.

## Variable Values List

The following table lists predefined variable values.

Variable Value	Description
\$mac	The MAC address of the IP phone.
\$ip	The IP address of the IP phone.



Variable Value	Description
\$model	The IP phone model.
\$firmware	The firmware version of the IP phone.
\$active_url	The SIP URI of the current account when the IP phone places a call, receives an incoming call or establishes a call.
\$active_user	The user part of the SIP URI for the current account when the IP phone places a call, receives an incoming call or establishes a call.
\$active_host	The host part of the SIP URI for the current account when the IP phone places a call, receives an incoming call or establishes a call.
\$local	The SIP URI of the caller when the IP phone places a call. The SIP URI of the callee when the IP phone receives an incoming call.
\$remote	The SIP URI of the callee when the IP phone places a call. The SIP URI of the caller when the IP phone receives an incoming call.
\$display_local	The display name of the caller when the IP phone places a call. The display name of the callee when the IP phone receives an incoming call.
\$display_remote	The display name of the callee when the IP phone places a call. The display name of the caller when the IP phone receives an incoming call.
\$call_id	The call-id of the active call.
\$callerID	The display name of the caller when the IP phone receives an incoming call.
\$calledNumber	The phone number of the callee when the IP phone places a call.
\$exp_number	The number of connected expansion modules.
\$ehs_number	The number of connected EHS.
\$udisk_number	The number of connected USB flash drives.
\$usbheadset_number	The number of connected USB headset devices.
\$wifi_number	The number of connected Wi-Fi dongles.
\$bluetooth_number	The number of connected Bluetooth dongles.
\$vpn_ip	The phone IP address assigned by the VPN server.
\$cfg_all	The CFG configuration file contains all current configurations of the IP phone. <b>Note:</b> The valid URI is: <code>http://&lt;serverIPAddress&gt;/&lt;filename&gt;/?variable name=\$variable value</code> . <b>Example:</b> <code>http://10.82.21.10/Upload/?Cfg=\$cfg_all</code>
\$cfg_local	The CFG configuration file contains all non-static parameters made via the phone user interface and web user interface. <b>Note:</b> It works only if "static.auto_provision.custom.protect" is set to 1 (Enabled). The valid URI is: <code>http://&lt;serverIPAddress&gt;/&lt;filename&gt;/?variable name=\$variable value</code> . <b>Example:</b> <code>http://10.82.21.10/Upload/?Cfg=\$cfg_local</code>

## Action URL Configuration

The following table lists the parameters you can use to configure the action URL.

<b>Parameter</b>	action_url.setup_completed	<y0000000000xx>.cfg
<b>Description</b>	It configures the action URL the phone sends after startup. <b>Example:</b> action_url.setup_completed = http://192.168.0.20/help.xml?IP=\$ip	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Action URL > Setup Completed	
<b>Parameter</b>	action_url.registered	<y0000000000xx>.cfg
<b>Description</b>	It configures the action URL the phone sends after an account is registered. <b>Example:</b> action_url.registered = http://192.168.0.20/help.xml?IP=\$ip	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Action URL > Registered	
<b>Parameter</b>	action_url.unregistered	<y0000000000xx>.cfg
<b>Description</b>	It configures the action URL the phone sends after an account is unregistered. <b>Example:</b> action_url.unregistered = http://192.168.0.20/help.xml?IP=\$ip	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Action URL > Unregistered	
<b>Parameter</b>	action_url.register_failed	<y0000000000xx>.cfg
<b>Description</b>	It configures the action URL the phone sends after a register failed. <b>Example:</b> action_url.register_failed = http://192.168.0.20/help.xml?IP=\$ip	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Action URL > Register Failed	
<b>Parameter</b>	action_url.off_hook	<y0000000000xx>.cfg
<b>Description</b>	It configures the action URL the phone sends when off hook. <b>Example:</b> action_url.off_hook = http://192.168.0.20/help.xml?IP=\$ip	

<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Action URL > Off Hook	
<b>Parameter</b>	action_url.on_hook	<y0000000000xx>.cfg
<b>Description</b>	It configures the action URL the phone sends when on hook. <b>Example:</b> action_url.on_hook = http://192.168.0.20/help.xml?IP=\$ip	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Action URL > On Hook	
<b>Parameter</b>	action_url.incoming_call	<y0000000000xx>.cfg
<b>Description</b>	It configures the action URL the phone sends when receiving an incoming call. <b>Example:</b> action_url.incoming_call = http://192.168.0.20/help.xml?IP=\$ip	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Action URL > Incoming Call	
<b>Parameter</b>	action_url.outgoing_call	<y0000000000xx>.cfg
<b>Description</b>	It configures the action URL the phone sends when placing a call. <b>Example:</b> action_url.outgoing_call = http://192.168.0.20/help.xml?IP=\$ip	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Action URL > Outgoing Call	
<b>Parameter</b>	action_url.call_established	<y0000000000xx>.cfg
<b>Description</b>	It configures the action URL the phone sends when establishing a call. <b>Example:</b> action_url.call_established = http://192.168.0.20/help.xml?IP=\$ip	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Action URL > Established	
<b>Parameter</b>	action_url.call_terminated	<y0000000000xx>.cfg
<b>Description</b>	It configures the action URL the phone sends when terminating a call.	

	<b>Example:</b> action_url.call_terminated = http://192.168.0.20/help.xml?IP=\$ip	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Action URL > Terminated	
<b>Parameter</b>	action_url.dnd_on	<y0000000000xx>.cfg
<b>Description</b>	It configures the action URL the phone sends when DND feature is activated. <b>Example:</b> action_url.dnd_on = http://192.168.0.20/help.xml?IP=\$ip	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Action URL > Open DND	
<b>Parameter</b>	action_url.dnd_off	<y0000000000xx>.cfg
<b>Description</b>	It configures the action URL the phone sends when DND feature is deactivated. <b>Example:</b> action_url.dnd_off = http://192.168.0.20/help.xml?IP=\$ip	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Action URL > Close DND	
<b>Parameter</b>	action_url.always_fwd_on	<y0000000000xx>.cfg
<b>Description</b>	It configures the action URL the phone sends when the always forward feature is activated. <b>Example:</b> action_url.always_fwd_on = http://192.168.0.20/help.xml?IP=\$ip	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Action URL > Always Forward On	
<b>Parameter</b>	action_url.always_fwd_off	<y0000000000xx>.cfg
<b>Description</b>	It configures the action URL the phone sends when the always forward feature is deactivated. <b>Example:</b> action_url.always_fwd_off = http://192.168.0.20/help.xml?IP=\$ip	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Action URL > Always Forward Off	

<b>Parameter</b>	action_url.busy_fwd_on	<y0000000000xx>.cfg
<b>Description</b>	It configures the action URL the phone sends when the busy forward feature is activated.	
<b>Example:</b>	action_url.busy_fwd_on = http://192.168.0.20/help.xml?IP=\$ip	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Action URL > Busy Forward On	
<b>Parameter</b>	action_url.busy_fwd_off	<y0000000000xx>.cfg
<b>Description</b>	It configures the action URL the phone sends when the busy forward feature is deactivated.	
<b>Example:</b>	action_url.busy_fwd_off = http://192.168.0.20/help.xml?IP=\$ip	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Action URL > Busy Forward Off	
<b>Parameter</b>	action_url.no_answer_fwd_on	<y0000000000xx>.cfg
<b>Description</b>	It configures the action URL the phone sends when the no answer forward feature is activated.	
<b>Example:</b>	action_url.no_answer_fwd_on = http://192.168.0.20/help.xml?IP=\$ip	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Action URL > No Answer Forward On	
<b>Parameter</b>	action_url.no_answer_fwd_off	<y0000000000xx>.cfg
<b>Description</b>	It configures the action URL the phone sends when the no answer forward feature is deactivated.	
<b>Example:</b>	action_url.no_answer_fwd_off = http://192.168.0.20/help.xml?IP=\$ip	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Action URL > No Answer Forward Off	
<b>Parameter</b>	action_url.transfer_call	<y0000000000xx>.cfg
<b>Description</b>	It configures the action URL the phone sends when performing a transfer.	
<b>Example:</b>	action_url.transfer_call = http://192.168.0.20/help.xml?IP=\$ip	
<b>Permitted Values</b>	URL within 511 characters	

<b>Default</b>	Blank	
<b>Web UI</b>	Features > Action URL > Transfer Call	
<b>Parameter</b>	action_url.blind_transfer_call	<y0000000000xx>.cfg
<b>Description</b>	It configures the action URL the phone sends when performing a blind transfer.	
<b>Example:</b>	action_url.blind_transfer_call = http://192.168.0.20/help.xml?IP=\$ip	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Action URL > Blind Transfer	
<b>Parameter</b>	action_url.attended_transfer_call	<y0000000000xx>.cfg
<b>Description</b>	It configures the action URL the phone sends when performing an attended/semi-attended transfer.	
<b>Example:</b>	action_url.attended_transfer_call = http://192.168.0.20/help.xml?IP=\$ip	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Action URL > Attended Transfer	
<b>Parameter</b>	action_url.hold	<y0000000000xx>.cfg
<b>Description</b>	It configures the action URL the phone sends when placing a call on hold.	
<b>Example:</b>	action_url.hold = http://192.168.0.20/help.xml?IP=\$ip	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Action URL > Hold	
<b>Parameter</b>	action_url.unhold	<y0000000000xx>.cfg
<b>Description</b>	It configures the action URL the phone sends when resuming a hold call.	
<b>Example:</b>	action_url.unhold = http://192.168.0.20/help.xml?IP=\$ip	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Action URL > UnHold	
<b>Parameter</b>	action_url.held	<y0000000000xx>.cfg
<b>Description</b>	It configures the action URL the phone sends when a call is held.	
<b>Example:</b>	action_url.held = http://192.168.0.20/help.xml?IP=\$ip	

<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Parameter</b>	action_url.unheld	<y0000000000xx>.cfg
<b>Description</b>	It configures the action URL the phone sends when a held call is resumed. <b>Example:</b> action_url.unheld = http://192.168.0.20/help.xml?IP=\$ip	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Parameter</b>	action_url.mute	<y0000000000xx>.cfg
<b>Description</b>	It configures the action URL the phone sends when muting a call. <b>Example:</b> action_url.mute = http://192.168.0.20/help.xml?IP=\$ip	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Action URL > Mute	
<b>Parameter</b>	action_url.unmute	<y0000000000xx>.cfg
<b>Description</b>	It configures the action URL the phone sends when un-muting a call. <b>Example:</b> action_url.unmute = http://192.168.0.20/help.xml?IP=\$ip	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Action URL > UnMute	
<b>Parameter</b>	action_url.missed_call	<y0000000000xx>.cfg
<b>Description</b>	It configures the action URL the phone sends when missing a call. <b>Example:</b> action_url.missed_call = http://192.168.0.20/help.xml?IP=\$ip	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Action URL > Missed Call	
<b>Parameter</b>	action_url.busy_to_idle	<y0000000000xx>.cfg
<b>Description</b>	It configures the action URL the phone sends when changing the state of the IP phone from busy to idle. <b>Example:</b> action_url.busy_to_idle = http://192.168.0.20/help.xml?IP=\$ip	

<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Action URL > Busy to Idle	
<b>Parameter</b>	action_url.idle_to_busy	<y0000000000xx>.cfg
<b>Description</b>	It configures the action URL the phone sends when changing the state of the phone from idle to busy. <b>Example:</b> action_url.idle_to_busy = http://192.168.0.20/help.xml?IP=\$ip	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Action URL > Idle to Busy	
<b>Parameter</b>	action_url.ip_change	<y0000000000xx>.cfg
<b>Description</b>	It configures the action URL the phone sends when changing the IP address of the phone. <b>Example:</b> action_url.ip_change = http://192.168.0.20/help.xml?IP=\$ip	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Action URL > IP Changed	
<b>Parameter</b>	action_url.reject_incoming_call	<y0000000000xx>.cfg
<b>Description</b>	It configures the action URL the phone sends when rejecting an incoming call. <b>Example:</b> action_url.reject_incoming_call = http://192.168.0.20/help.xml?IP=\$ip	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Action URL > Reject Incoming Call	
<b>Parameter</b>	action_url.answer_new_incoming_call	<y0000000000xx>.cfg
<b>Description</b>	It configures the action URL the phone sends when answering a new incoming call. <b>Example:</b> action_url.answer_new_incoming_call = http://192.168.0.20/help.xml?IP=\$ip	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Action URL > Answer New Incoming Call	
<b>Parameter</b>	action_url.forward_incoming_call	<y0000000000xx>.cfg
<b>Description</b>	It configures the action URL the phone sends when forwarding an incoming call.	



	<b>Example:</b> action_url.forward_incoming_call = http://192.168.0.20/help.xml?IP=\$ip	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Action URL > Forward Incoming Call	
<b>Parameter</b>	action_url.transfer_finished	<y0000000000xx>.cfg
<b>Description</b>	It configures the action URL the phone sends when completing a call transfer. <b>Example:</b> action_url.transfer_finished = http://192.168.0.20/help.xml?IP=\$ip	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Action URL > Transfer Finished	
<b>Parameter</b>	action_url.transfer_failed	<y0000000000xx>.cfg
<b>Description</b>	It configures the action URL the phone sends when failing to transfer a call. <b>Example:</b> action_url.transfer_failed = http://192.168.0.20/help.xml?IP=\$ip	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Action URL > Transfer Failed	
<b>Parameter</b>	action_url.setup_autop_finish	<y0000000000xx>.cfg
<b>Description</b>	It configures the action URL the phone sends when completing auto provisioning via power on. <b>Example:</b> action_url.setup_autop_finish = http://192.168.0.20/help.xml?IP=\$ip	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Action URL > Autop Finish	
<b>Parameter</b>	action_url.call_waiting_on	<y0000000000xx>.cfg
<b>Description</b>	It configures the action URL the phone sends when the call waiting feature is enabled. <b>Example:</b> action_url.call_waiting_on = http://192.168.0.20/help.xml?IP=\$ip	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Action URL > Call Waiting On	

<b>Parameter</b>	action_url.call_waiting_off	<y0000000000xx>.cfg
<b>Description</b>	It configures the action URL the phone sends when the call waiting feature is disabled.	
<b>Example:</b>	action_url.call_waiting_off = http://192.168.0.20/help.xml?IP=\$ip	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Action URL > Call Waiting Off	
<b>Parameter</b>	action_url.headset	<y0000000000xx>.cfg
<b>Description</b>	It configures the action URL the phone sends when pressing the HEADSET key.	
<b>Example:</b>	action_url.headset = http://192.168.0.20/help.xml?IP=\$ip	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except CP920/CP925/CP935W	
<b>Web UI</b>	Features > Action URL > Headset	
<b>Parameter</b>	action_url.handfree	<y0000000000xx>.cfg
<b>Description</b>	It configures the action URL the phone sends when pressing the Speakerphone key.	
<b>Example:</b>	action_url.handfree = http://192.168.0.20/help.xml?IP=\$ip	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except CP920/CP925/CP935W	
<b>Web UI</b>	Features > Action URL > Handsfree	
<b>Parameter</b>	action_url.cancel_callout	<y0000000000xx>.cfg
<b>Description</b>	It configures the action URL the phone sends when canceling the outgoing call in the ring-back state.	
<b>Example:</b>	action_url.cancel_callout= http://192.168.0.20/help.xml?IP=\$ip	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Action URL > Cancel Call Out	
<b>Parameter</b>	action_url.remote_busy	<y0000000000xx>.cfg
<b>Description</b>	It configures the action URL the phone sends when the outgoing call is rejected.	
<b>Example:</b>		

	action_url.remote_busy = http://192.168.0.20/help.xml?IP=\$ip	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Action URL > Remote Busy	
<b>Parameter</b>	action_url.call_remote_canceled	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the action URL the phone sends when the remote party cancels the outgoing call in the ringing state.</p> <p><b>Example:</b></p> <p>action_url.call_remote_canceled= http://192.168.0.20/help.xml?IP=\$ip</p>	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Action URL > Call Remote Canceled	
<b>Parameter</b>	custom.action_url.view_misscall	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the action URL the phone sends when you view the missed calls.</p> <p><b>Example:</b></p> <p>custom.action_url.view_misscall = http://192.168.0.20/help.xml?IP=\$ip</p>	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Web UI</b>	Features > Action URL > View Missed Call	
<b>Parameter</b>	custom.action_url.view_forward	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the action URL the phone sends when you view the forwarded calls.</p> <p><b>Example:</b></p> <p>custom.action_url.view_forward = http://192.168.0.20/help.xml?IP=\$ip</p>	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Web UI</b>	Features > Action URL > View Forwarded Call	
<b>Parameter</b>	action_url.peripheral_information	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the action URL the phone sends when you unplug or plug the accessory.</p> <p><b>Example:</b></p> <p>action_url.peripheral_information = http://192.168.0.20/help.xml?IP=\$ip&amp;WIFI=\$wifi_number</p>	
<b>Permitted Values</b>	URL within 512 characters	

<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P and T29G	
<b>Web UI</b>	Features > Action URL > Peripheral Information	
<b>Parameter</b>	action_url.vpn_ip	<y0000000000xx>.cfg
<b>Description</b>	It configures the action URL the phone sends when the IP address assigned by the VPN server changes. <b>Example:</b> action_url.vpn_ip= http://192.168.0.20/help.xml?IP=\$ip	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P and T29G	
<b>Web UI</b>	Features > Action URL > VPN IP	
<b>Parameter</b>	action_url.sip_info_display_update	<y0000000000xx>.cfg
<b>Description</b>	It configures the action URL the phone sends when the server sends a SIP INFO message to update the name and number information of the calling party/called party during the call. <b>Example:</b> action_url.sip_info_display_update = http://192.168.0.20/help.xml?IP=\$ip	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Web UI</b>	Features > Action URL > SIP INFO Display Update	

## Action URI

Yealink phones can perform the specified action by receiving and handling an HTTP or HTTPS GET request or accept a SIP NOTIFY message with the “Event: ACTION-URI” header from a SIP proxy server.

### Topics

[Supported HTTP/HTTPS GET Request](#)

[Supported SIP Notify Message](#)

[Variable Values List](#)

[Action URI Configuration](#)

[Example: Capturing the Current Screen of the Phone](#)

[Example: Placing a Call via Web User Interface](#)

## Supported HTTP/HTTPS GET Request

Opposite to action URL, action URI allows the phones to interact with a web server application by receiving and handling an HTTP or HTTPS GET request. When receiving a GET request, the phone will perform the specified action and respond with a 200 OK message.

A GET request may contain a variable named as "key" and a variable value, which are separated by "=". The valid URI format is: `http(s)://<phoneIPAddress>/servlet?key=variable value`.

**Note:** Yealink phones are compatible with other two old valid URI formats: `http(s)://<phoneIPAddress>/cgi-bin/ConfigManApp.com?key=variable value` and `http(s)://<phoneIPAddress>/cgi-bin/cgiServer.exe?key=variable value`.

For security reasons, the phones do not handle HTTP/HTTPS GET requests by default. You need to specify the trusted IP address for action URI. You can specify one or more trusted IP addresses on the IP phone, or configure the IP phone to receive and handle the URI from any IP address.

## Supported SIP Notify Message

In addition, Yealink phones can perform the specified action immediately by accepting a SIP NOTIFY message with the "Event: ACTION-URI" header from a SIP proxy server. The message body of the SIP NOTIFY message may contain a variable named as "key" and a variable value, which are separated by "=".

This method is especially useful for users who always work in the small office/home office where a secure firewall may prevent the HTTP or HTTPS GET request from the external network.

**Note:** If you want to only accept the SIP NOTIFY message from your SIP server and outbound proxy server, you have to enable the Accept SIP Trust Server Only feature. For more information, refer to [Accept SIP Trust Server Only](#).

If you use SIP NOTIFY message method, you do not need to specify the trusted IP address for action URI. However, you should enable the IP phone to receive the action URI requests.

Example of a SIP Notify with the variable value (OK):

```

Message Header
NOTIFY sip:3583@10.2.40.10:5062 SIP/2.0
Via: SIP/2.0/UDP 10.2.40.27:5063;branch=z9hG4bK4163876675
From: <sip:3586@10.2.1.48 > ;tag=2900480538
To: "3583" <sip:3583@10.2.1.48 > ;tag=490600926
Call-ID: 2923387519@10.2.40.10
CSeq: 4 NOTIFY
Contact: <sip:3586@10.2.40.27:5063 >
Max-Forwards: 70

User-Agent: Yealink SIP-T46G
Event: ACTION-URI
Content-Type: message/sipfrag
Content-Length: 6
Message Body
key=OK

```

## Variable Values List

Yealink phones also support a combination of the variable values in the URI, but the order of the variable value is determined by the operation of the phone. The valid URI format is: `http(s)://<phoneIPAddress>/servlet?key=variable value[;variable value]`. Variable values are separated by a semicolon from each other. This method is not applicable to T57W/T48U/T48S/T48G phones.

The following shows an example for deleting all entries from the call history list when the phone is idle:

For CP920 phones:

<http://10.3.20.10/servlet?key=F1;OK;F3;DOWN;DOWN;DOWN;OK;OK>.

For other phones:

<http://10.3.20.10/servlet?key=F1;F3;DOWN;DOWN;DOWN;OK;OK>.

**Note:** The variable value is not applicable to all events. For example, the variable value “MUTE” is only applicable when the IP phone is during a call.

When authentication is required, you can use the following URI format: [http\(s\)://user-name:password@<phoneIPAddress>/servlet?key=variable value](http(s)://user-name:password@<phoneIPAddress>/servlet?key=variable value). If you are using a browser, we recommend that you use Firefox.

The following table lists predefined variable values:

Variable Value	Phone Action
OK	Press the OK/ $\bigcirc$ key. (not applicable to T57W/CP925/CP935W phones)
ENTER	Press the <b>Enter</b> soft key. (not applicable to T57W/T48U/T48S/T48G phones)
SPEAKER	Press the Speakerphone key. (not applicable to CP920/CP925/CP935W phones)
F_TRANSFER	Transfer a call to another party.
VOLUME_UP	Increase the volume.
VOLUME_DOWN	Decrease volume.
MUTE	Mute a call.
F_HOLD/HOLD	Place an active call on hold.
F_CONFERENCE	Press the <b>Conf/Conference</b> soft key.
Cancel/CANCEL	Cancel actions, reject incoming calls or end a call.
X	Cancel actions, reject incoming calls or mute or un-mute calls. (not applicable to T57W phones)
0-9*/POUND	Press the keypad (0-9, * or #)(not applicable to CP925/CP935W phones).
L1-LX	Press the line keys (for T57W/T48U/T48S/T48G, X=29; for T54W/T46U/T46S/T46G/T29G, X=27; for T42U/T42G/T42S/T41P/T41S, X=15; for T53W/T53/T53C/T43U/T27G, X=21; for T33P/T33G, X=12; for T40P/T40G/T23P/T23G, X=3; for T31P/T31G/T31/T21(P) E2, X=2; for CP925/CP935W, X=30).
LX_LONGPRESS <sup>[1]</sup>	Perform a corresponding action when long pressing line key X.
BACK_IDLE	Return idle screen directly.
F1-F4	Press the soft keys.
MSG	Press the MESSAGE key. (not applicable to CP920/CP925/CP935W phones)
HEADSET	Press the HEADSET key. (not applicable to CP920/CP925/CP935W phones)
RD	Press the RD/Redial key (not applicable to CP920/CP925/CP935W

Variable Value	Phone Action
	phones).
UP/DOWN/LEFT/RIGHT	Press the navigation keys. (not applicable to T57W phones)
Reboot	Reboot the phone.
AutoP	Perform auto provisioning.
DNDOn	Activate the DND feature. <b>Note:</b> It works only if "features.dnd.allow" is set to 1 (Enabled).
DNDOff	Deactivate the DND feature. <b>Note:</b> It works only if "features.dnd.allow" is set to 1 (Enabled).
number=xxx&outgoing_uri=y	Place a call to xxx from SIP URI y. <b>Example:</b> http://10.3.20.10/servlet?key=number=1234&outgoing_uri=1006@10.2.1.48 (1234 means the number you dial out; 1006@10.2.1.48 means the SIP URL you dial from.)
OFFHOOK	Pick up the handset. (not applicable to CP920/CP925/CP935W phones) Press the off-hook key. (only applicable to CP920 phones)
ONHOOK	Hang up the handset (not applicable to CP920/CP925/CP935W phones). Press the on-hook key. (only applicable to CP920 phones)
ANSWER/ASW/Asw	Answer a call.
Reset	Reset a phone.
ATrans=xxx	Perform a semi-attended/attended transfer to xxx.
ATrans=callid_A@callid_B	Join any two call parties together on the phone using the call-id. After the call is set up, the two parties disconnect with the phone. <b>Scene:</b> A and D are in a call, the call is active; B and D are in a call, the call is placed on hold; C and D are in a call, the call is placed on hold; callid_A: 32775 callid_B: 32776 <b>Example:</b> http://10.10.20.10/servlet?key=ATrans=32775@32776 It means A and B join together and then disconnect with D. But the call between C and D is still in a hold state. <b>Note:</b> To get the call-id of the active call, configure the action URL: http(s)://<serverIPAddress>/help.xml?CallId=\$call_id. For more information, refer to <a href="#">Action URL</a> .
BTrans=xxx	Perform a blind transfer to xxx.
phonecfg=get[&accounts=x][&dnd=x][&fw=x]	Get firmware version, registration, DND or forward configuration

Variable Value	Phone Action
	<p>information.</p> <p>The valid value of “x” is 0 or 1, 0 means you do not need to get configuration information. 1 means you want to get configuration information.</p> <p><b>Note:</b> The valid URI is: <code>http(s)://&lt;phoneIPAddress&gt;/servlet?phonecfg=get[&amp;accounts=x][&amp;dnd=x][&amp;fw=x]</code>.</p> <p><b>Example:</b></p> <p><code>http://10.3.20.10/servlet?phonecfg=get[&amp;accounts=1][&amp;dnd=0][&amp;fw=1]</code></p>
<p><code>phonecfg=set[&amp;configuration parameter=value]</code></p>	<p>Set the valid value for the specified configuration parameter.</p> <p><b>Note:</b> The valid URI is: <code>http(s)://&lt;phoneIPAddress&gt;/servlet?phonecfg=set[&amp;configuration parameter=value]...[&amp;configuration parameter=value]</code>. It can contain up to 10 configuration parameters.</p> <p><b>Example:</b></p> <p><code>http://10.3.20.10/servlet?phonecfg=set[&amp;account.1.enable=1][&amp;features.dnd.enable=1]</code></p>
<p><code>phonecfg=get[&amp;configuration parameter]</code></p>	<p>Get the specified configuration information.</p> <p><b>Note:</b> The valid URI is: <code>http(s)://&lt;phoneIPAddress&gt;/servlet?phonecfg=get[&amp;configuration parameter]...[&amp;configuration parameter]</code>. It can contain up to 10 configuration parameters.</p> <p><b>Example:</b></p> <p><code>http://10.3.20.10/servlet?phonecfg=get[&amp;account.1.enable][&amp;features.dnd.enable]</code></p>
<p>CallWaitingOn</p>	<p>Activate the call waiting feature.</p>
<p>CallWaitingOff</p>	<p>Deactivate the call waiting feature.</p>
<p>AlwaysFwdOn/BusyFwdOn/NoAnswFwdOn=xxx=n</p>	<p>Activate an always/busy/no answer forward feature to xxx for the IP phone (“xxx” means the destination number)</p> <p>The valid value of “n” means the duration time (seconds) before forwarding incoming calls (n is the times of 6, for example, 24). It is only applicable to no answer forward feature.</p> <p><b>Note:</b> For Yealink phones, it works only if “features.fwd.allow” is set to 1 (Enabled) and call forward mode is Phone, the always/busy/no answer forward feature will apply to all the accounts on the phone.</p> <p><b>Example:</b></p> <p><code>http://10.10.20.10/servlet?key=NoAnswFwdOn=1001=24</code></p>
<p>AlwaysFwdOff/BusyFwdOff/NoAnswFwdOff</p>	<p>Deactivate the always/busy/no answer forward feature for the IP phone.</p> <p><b>Note:</b> For Yealink phones, it works only if “features.fwd.allow” is set to 1 (Enabled) and call forward mode is Phone, the always/busy/no answer forward feature will apply to all the accounts on the phone.</p> <p><b>Example:</b></p>



Variable Value	Phone Action
	http://10.10.20.10/servlet?key=NoAnswFwdOff
CALLEND/CallEnd	End a call.
ASW/CANCEL/HOLD/UNHOLD:xxx	<p>Answer/end/hold/unhold a call (xxx refers to the call-id of the active call).</p> <p><b>Example:</b></p> <p>http://10.10.20.10/servlet?key=ASW:33093</p> <p><b>Note:</b> To get the call-id of the active call, configure the action URL: http(s)://&lt;serverIPAddress&gt;/help.xml?CallId=\$call_id. For more information, refer to <a href="#">Action URL</a>.</p>
ACDlogin	<p>Log into the ACD system.</p> <p><b>Note:</b> When ACD authentication information is required, the valid URI is: http(s)://&lt;phoneIPAd- dress&gt;/servlet?key=ACDlogin&amp;agentID=xxx&amp;password=xxx. When ACD authentication information is not required, the valid URI is: http(s)://&lt;phoneIPAddress&gt;/servlet?key=ACDlogin.</p>
ACDlogout	Log out of the ACD system.
SWAP	Swap to the held call when there is an active call and a held call on the phone.
SPLIT	<p>Split the local conference call into individual calls. After the split, the conference call ends, and other parties are held.</p> <p><b>Note:</b> It is not available for network conference.</p>
xxx&Duration=yyy&Hide=n	<p>The server sends a specific DTMF command to the phone during the call.</p> <p><b>Example:</b></p> <p>1. https://10.10.20.10/servlet?Key=1234&amp;Duration=600&amp;Hide=1 It means that DTMF digits 1234 are transmitted in 600ms and displayed as * on the phone.</p> <p>2. https://10.10.20.10/servlet?Key=1234&amp;Hide=0 It means that DTMF digits 1234 are transmitted with the current duration (configured by "features.dtmf.duration") and displayed on the phone.</p> <p>3. https://10.10.20.10/servlet?Key=1234&amp;Duration=800 It means that DTMF digits 1234 are transmitted in 800ms, and whether they are displayed on the phone is determined by "features.dtmf.hide".</p> <p>4. https://10.10.20.10/servlet?Key=1234 It means that DTMF digits 1234 are transmitted with the current duration (configured by "features.dtmf.duration"), and whether they are displayed on the phone is determined by "features.dtmf.hide".</p>

[1]X is the line key ID. For T57W/T48U/T48S/T48G, X=1-29; for T54W/T46U/T46S/T46G/T29G, X=1-27; for T53W/T53/T53C/T43U/T27G, X=1-21; for T42U/T42G/T42S/T41P/T41S, X=1-15; for T33P/T33G, X=1-12; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for CP925/CP935W, X=1-30.

## Action URI Configuration

The following table lists the parameters you can use to configure action URI.

<b>Parameter</b>	features.action_uri.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to receive the action URI requests.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Parameter</b>	features.show_action_uri_option	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to pop up the Allow Remote Control prompt when receiving action URI requests. <b>Note:</b> It works only if “features.action_uri.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Parameter</b>	features.action_uri_limit_ip	<y0000000000xx>.cfg
<b>Description</b>	It configures server address from which the phone receives the action URI requests. Multiple addresses are separated by commas. (for example, 10.1.4.3,10.1.4.23); Support asterisk wildcard, each asterisk represents a field of the IP address (10.10.*.* represents 10.10.0.0 to 10.10.255.255). <b>Note:</b> It works only if “features.action_uri.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	IP address <b>Blank</b> -the phone will reject any HTTP GET request. <b>any</b> -the phone will accept and handle HTTP GET requests from any IP address.	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Remote Control > Action URI Allow IP List	

## Example: Capturing the Current Screen of the Phone

You can capture the screen display of the IP phone using the action URI. The phones can handle an HTTP or HTTPS GET request. The URI format is http(s)://<phoneIPAddress>/screencapture. The captured picture is saved as a BMP or JPEG file.


You can also use the URI “http(s)://<phoneIPAddress>/screencapture/download” to capture the screen display first, and then download the image (which is saved as a JPG file and named with the phone model and the capture time) to the local system.

**Note:** Yealink phones also support capturing the screen display using the old URI “http://<phoneIPAddress>/servlet?command=screenshot”.

Before capturing the phone’s current screen, ensure that the IP address of the computer is included in the trusted IP address for Action URI on the phone. When you capture the screen display, the phone may prompt you to enter the user name and password of the administrator if the web browser does not remember the user name and password for web user interface login.

**Procedure**

1. Enter request URI (for example, <http://10.2.20.252/screenshot>) in the browser's address bar and press the Enter key on the keyboard.
2. Do one of the following:
  - If it is the first time you capture the phone's current screen using the computer, the browser will display "Remote control forbidden", and the phone screen will prompt the message "Allow remote control?". Press **OK** on the phone to allow remote control. The phone will return to the previous screen. Refresh the web page.  
The browser will display an image of the phone's current screen. You can save the image to your local system.

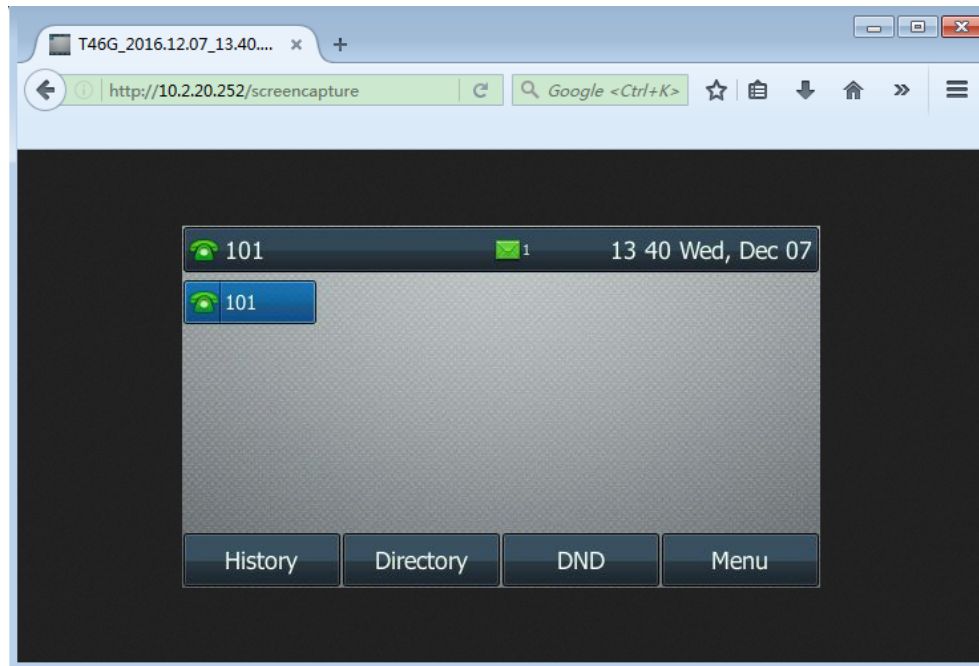


- Else, the browser will display an image of the phone's current screen directly. You can save the image to your local system.

**Note:** Frequent capture may affect phone performance. Yealink recommends you to capture the phone screen display within a minimum interval of 4 seconds.

## Example: Placing a Call via Web User Interface

**Procedure**

1. Go to **Directory > Phone Call Info**.
2. Select the desired account from the **Outgoing Identity** drop-down menu.
3. Enter the callee's number in the **Dial Number** field.

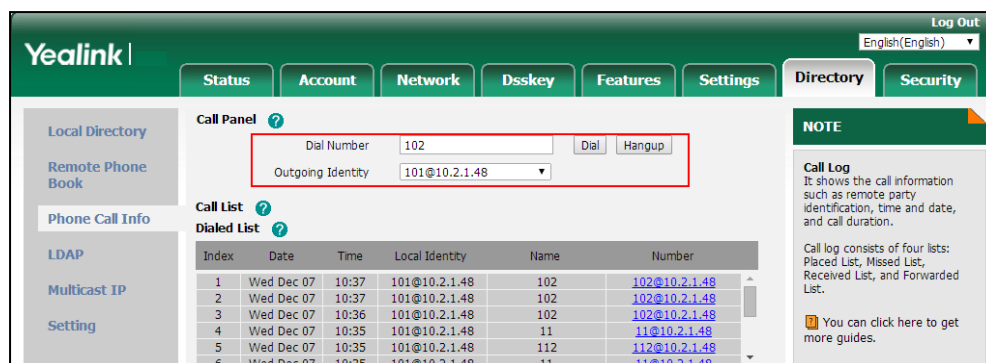

4. Click **Dial** to dial out the number.

The web user interface prompts “Call Success” and the phone will automatically dial out the number.

You can click **Hang Up** to end the call.

If it is the first time you place a call via the web user interface, the LCD screen will prompt the message “Allow remote control?”. Press **OK** on the phone to allow remote control and then the phone will automatically dial out the number.

**Note:** You can also place an IP direct call via the web user interface. The IP phone supports either IPv4 or IPv6 address.

## Voice Mail

Yealink phones support voice mail.

You can configure a message waiting indicator (MWI) to inform users how many messages are waiting in their mailbox without calling the mailbox. Yealink phones support both audio and visual MWI alert when receiving new voice messages.

### Topic

[MWI for Voice Mail Configuration](#)

## MWI for Voice Mail Configuration

Yealink phones support both solicited and unsolicited MWI.

**Unsolicited MWI:** The IP phone sends a SUBSCRIBE message to the server for message-summary updates. The server sends a message-summary NOTIFY within the subscription dialog each time the MWI status changes. Unsolicited MWI is a server related feature.

**Solicited MWI:** The IP phone can subscribe to the MWI messages to the account or the voice mail number. For solicited MWI, you must enable MWI subscription feature on the phones.

The following table lists the parameters you can use to configure MWI for voice mail.

<b>Parameter</b>	account.X.subscribe_mwi <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the phone to subscribe to the message waiting indicator.	
<b>Permitted Values</b>	<p>0-Disabled, the server automatically sends a message-summary NOTIFY in a new dialog each time the MWI status changes (This requires server support).</p> <p>1-Enabled, the phone will send a SUBSCRIBE message to the server for message-summary updates.</p>	
<b>Default</b>	0	
<b>Web UI</b>	Account > Advanced > Subscribe for MWI	
<b>Parameter</b>	account.X.subscribe_mwi_expires <sup>[1]</sup>	<MAC>.cfg

<b>Description</b>	It configures MWI subscribe expiry time (in seconds). <b>Note:</b> It works only if “account.X.subscribe_mwi” is set to 1 (Enabled).	
<b>Permitted Values</b>	Integer from 0 to 84600	
<b>Default</b>	3600	
<b>Web UI</b>	Account > Advanced > MWI Subscription Period (Seconds)	
<b>Parameter</b>	account.X.mwi_parse_terminated <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the phone to parse the Terminated attribute in the received MWI NOTIFY message.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	account.X.sub_fail_retry_interval <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the interval (in seconds) for the phone to re-subscribe when subscription fails.	
<b>Permitted Values</b>	Integer from 0 to 3600	
<b>Default</b>	30	
<b>Parameter</b>	account.X.subscribe_mwi_to_vm <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the phone to subscribe to the message waiting indicator for the voice mail number. <b>Note:</b> It works only if “account.X.subscribe_mwi” is set to 1 (Enabled) and “voice_mail.number.X” is configured.	
<b>Permitted Values</b>	0-Disabled, the phone will subscribe to the message waiting indicator to a specific account. 1-Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Account > Advanced > Subscribe MWI to Voice Mail	
<b>Parameter</b>	voice_mail.number.X <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the voice mail number.	
<b>Permitted Values</b>	String within 99 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Account > Advanced > Voice Mail	
<b>Phone UI</b>	Menu > Message > Voice Mail > Set Voice Mail Code <u>CP925/CP935W:</u> More > Message > Set Voice Mail Code	
<b>Parameter</b>	account.X.display_mwi.enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the MWI alert to indicate that you have an unread voice mail message.	
<b>Permitted</b>	0-Disabled	

<b>Values</b>	1-Enabled	
<b>Default</b>	1	
<b>Web UI</b>	Account > Advanced > Voice Mail Display	
<b>Parameter</b>	features.voice_mail_alert.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to pop up the message when receiving the same amount of new voicemails.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	features.voice_mail_key_lamp_field.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to subscribe to the message waiting indicator for the voice mail number when configuring a Voice Mail dsskey.	
<b>Permitted Values</b>	0-Disabled 1-Enabled, the phone will subscribe to the value of the Voice Mail dsskey from the server. When there are unread voice messages, the dsskey LED indicator flashes or the dsskey icon indicates the number of unread messages.	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T48S, T46S, T42S, T41S, T33P, T33G, T31P, T31G, T31, T30P, T30, T27G	
<b>Related Parameters</b>	phone_setting.mail_power_led_flash_enable features.voice_mail_popup.enable	
<b>Parameter</b>	features.hide_unread_vm_number.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to hide the number of unread voice mails in the pop-up message box.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Parameter</b>	phone_setting.old_mail_display.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to display the number of old voice mails on the View Voice Mail screen.	
<b>Permitted Values</b>	0-Disabled, the View Voice Mail screen displays "xx new mail". 1-Enabled, the View Voice Mail screen displays "xx new xx old mail".	
<b>Default</b>	1	
<b>Parameter</b>	mobile_voice_mail.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the mobile voice mail.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	

<b>Devices</b>		
<b>Parameter</b>	features.mobile_vm_number	<y0000000000xx>.cfg
<b>Description</b>	It configures the mobile voice mail number. <b>Note:</b> It works only if "mobile_voice_mail.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Phone UI</b>	Menu > Message > Voice Mail > Mobile Voice Mail Number	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## Short Message Service (SMS)

Yealink phones (except CP920/CP925/CP935W phones) support short message service (SMS). It allows users to send and receive a text message on the support server.

By default, SMS is enabled. You can use SMS at the path: **Menu > Message > Text Message**. You can also disable SMS.

### Topic

[SMS Configuration](#)

## SMS Configuration

The following table lists the parameter you can use to configure SMS.

<b>Parameter</b>	features.text_message.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to send and receive a text message.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Supported Devices</b>	All phones except CP920/CP925/CP935W	
<b>Parameter</b>	phone_setting.message_call.rule	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the regular expression for extracting the text message number.</p> <p><b>Example:</b></p> <p>phone_setting.message_call.rule = ([w-]+(\.[w-]+)*@[w-]+(\.[w-]+)+)([d]+s*[d]+s*[d]+)</p> <p>It means that you can press the <b>Call</b> soft key to dial the extracted number after reading the SMS.</p> <p>The rules for extracting numbers are:</p> <ol style="list-style-type: none"> <li>1. Extract a string in letters/numbers@domain format.</li> <li>2. Extract a string of at least 3 numbers, spaces are allowed between numbers, but they must start with numbers.</li> </ol>	

<b>Permitted Values</b>	Regular expression
<b>Default</b>	%NULL% (SMS call back feature is disabled)
<b>Supported Devices</b>	All phones except CP920/CP925/CP935W

## XML Browser

XML browser simply means that the phone screen display can be managed by external applications. The XML browser feature allows users to develop and deploy custom services which meet user's functional requirements on the server. Users can customize practical applications, such as weather report, stock information, Google search, news service, and so on.

To use the XML browser feature, you must configure an XML browser key in advance.

For more information on XML browser, refer to [Yealink IP Phones XML Browser Developer's Guide](#).

### Topic

[XML Browser Configuration](#)

## XML Browser Configuration

The following table lists the parameters you can use to configure XML browser.

<b>Parameter</b>	push_xml.server	<y0000000000xx>.cfg
<b>Description</b>	It configures the address of the push XML server.	
<b>Permitted Values</b>	<b>Blank</b> -The phone will reject HTTP POST messages from any server. <b>any</b> -The phone will accept HTTP POST messages from any server. <b>IP address or domain name</b> -Multiple addresses are separated by commas. (for example, 10.1.4.3,10.1.4.23); Support asterisk wildcard, each asterisk represents a field of the IP address (10.10.*.* represents 10.10.0.0 to 10.10.255.255).	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Remote Control > Push XML Server IP Address	
<b>Parameter</b>	push_xml.block_in_calling	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to block XML applications during a call.	
<b>Permitted Values</b>	<b>0</b> -Disabled <b>1</b> -Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Features > Remote Control > Block XML in Calling	
<b>Parameter</b>	push_xml.sip_notify	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to process the push XML via SIP NOTIFY message.	
<b>Permitted Values</b>	<b>0</b> -Disabled <b>1</b> -Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Features > Remote Control > SIP Notify	



<b>Parameter</b>	push_xml.phonebook.search.delay	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the time (in milliseconds) to wait for the phone to send the entered keywords to XML phonebook server if the user does not press OK to confirm.</p> <p>If it is set to 0, the phone immediately sends the entered keywords to the server.</p> <p><b>Note:</b> For T23P/T23G/T40P/T40G phones, we recommend that you not download a large number of contacts from the server.</p>	
<b>Permitted Values</b>	Integer from 0 to 10000	
<b>Default</b>	1000	
<b>Parameter</b>	features.xml_browser.loading_tip.delay	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the time (in milliseconds) to wait for the phone to display the loading tip.</p> <p>If the phone doesn't finish loading an XML page within the specified time, the tip, "Loading, please wait" appears on the LCD screen.</p> <p>If it is set to 0, the loading tip feature is disabled.</p> <p><b>Note:</b> It is not applicable to ImageScreen Object and ImageMenu Object.</p>	
<b>Permitted Values</b>	Integer from 0 to 50000	
<b>Default</b>	100	
<b>Parameter</b>	features.xml_browser.user_name	<y0000000000xx>.cfg
<b>Description</b>	It configures the authentication user name for the XML request.	
<b>Permitted Values</b>	String within 15 characters	
<b>Default</b>	Blank	
<b>Parameter</b>	features.xml_browser.pwd	<y0000000000xx>.cfg
<b>Description</b>	It configures the authentication password for the XML request.	
<b>Permitted Values</b>	String within 15 characters	
<b>Default</b>	Blank	
<b>Parameter</b>	push_xml.username	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the user name for the phone to authenticate with the push XML server.</p> <p>Leave it blank if no authentication is required.</p>	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Remote Control > User Name	
<b>Parameter</b>	push_xml.password	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the password for the phone to authenticate with the push XML server.</p> <p>Leave it blank if no authentication is required.</p>	
<b>Permitted Values</b>	String within 15 characters	

<b>Default</b>	Blank	
<b>Web UI</b>	Features > Remote Control > Password	
<b>Parameter</b>	features.upload_server	<y0000000000xx>.cfg
<b>Description</b>	It configures the server address which the DssKey.cfg file is uploaded to when the phone receives an XML command (Command:UploadSystemInfo).	
<b>Permitted Values</b>	URL within 1024 characters	
<b>Default</b>	Blank	
<b>Parameter</b>	xmlbrowser_icon_upload.url	<y0000000000xx>.cfg
<b>Description</b>	It configures the access URL of the *.tar file for custom icons displayed by XML browser. <b>Note:</b> The black-and-white screen phones support icons in DOB format while the color-screen phones support icons in *.jpg/*.png/*.bmp/*.jpeg format.	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Parameter</b>	xmlbrowser_icon.delete	<y0000000000xx>.cfg
<b>Description</b>	It deletes the specified or all custom icons for XML browser. <b>Example:</b> Delete all custom icons for XML browser: xmlbrowser_icon.delete = http://localhost/all Delete a custom icon for XML browser (for example, customicon.jpg): xmlbrowser_icon.delete = http://localhost/customicon.jpg	
<b>Permitted Values</b>	http://localhost/all or http://localhost/name.(jpg/png/bmp/jpeg/dob)	
<b>Default</b>	Blank	

## Hot Desking

A primary motivation for hot desking is cost reduction. Hot desking is regularly used in places where not all employees are in the office at the same time, or not in the office for a long time, which means actual personal offices would often be vacant, consuming valuable space and resources.

Hot desking allows the user to clear pre-registration configurations of all accounts on the phone.

To use this feature, you need to assign a Hot Desking key. You can also specify which registration configurations are available for the users. It is not applicable to CP920 phones.

### Topics

[Hot Desking Key Configuration](#)

[Hot Desking Configuration](#)

## Hot Desking Key Configuration

The following shows configuration for a Hot Desking key.

Line Key Configuration	Programmable Key Configuration
<i>linekey.X.type = 34</i>	<i>programmablekey.X.type = 34</i>

<code>linekey.X.label = Hot Desking</code>	
--	--

After provisioning, a Hot Desking key is available on the phone. You can press the Hot Desking key to clear pre-registration configurations of all accounts and register their own account on line 1.

**Related Topic**

[Line Keys Configuration](#)

[Programmable Keys Configuration](#)

## Hot Desking Configuration

You can specify available configurations for registration when using hot desking.

The following table lists the parameters you can use to configure hot desking.

<b>Parameter</b>	hotdesking.dsskey_register_name_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to provide an input field of register name on the hot desking login wizard when pressing the Hot Desking DSS key.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except CP920	
<b>Parameter</b>	hotdesking.dsskey_username_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to provide an input field of user name on the hot desking login wizard when pressing the Hot Desking DSS key.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Supported Devices</b>	All phones except CP920	
<b>Parameter</b>	hotdesking.dsskey_password_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to provide an input field of password on the hot desking login wizard when pressing the Hot Desking DSS key.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Supported Devices</b>	All phones except CP920	
<b>Parameter</b>	hotdesking.dsskey_sip_server_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to provide an input field of SIP server on the hot desking login wizard when pressing the Hot Desking DSS key.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except CP920	

<b>Parameter</b>	hotdesking.dsskey_outbound_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to provide an input field of the outbound server on the hot desking login wizard when pressing the Hot Desking DSS key.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except CP920	
<b>Parameter</b>	features.hotdesking_clear_calllog.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to clear call records of the last guest after using hot desking to log into a new account.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Parameter</b>	hotdesking.log_out_prompt.time	<y0000000000xx>.cfg
<b>Description</b>	It configures the time (minutes) of the pop-up prompt for logging out of the account to appear on the LCD screen when there is no operation on the registered phone. <b>Note:</b> When the parameter is set to 0, it means the pop-up prompt for logging out of the account does not appear on the LCD screen.	
<b>Permitted Values</b>	Integer from 0 to 1440	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Parameter</b>	hotdesking.log_out_prompt.duration	<y0000000000xx>.cfg
<b>Description</b>	It configures the countdown pop-up prompt (seconds) displayed on the LCD screen to log out of the account. <b>Note:</b> It works only if "hotdesking.log_out_prompt.time" is not set to 0.	
<b>Permitted Values</b>	Integer from -1 to 86400 -1-Log out of the account without countdown pop-up prompt. 0-Do not log out of the account.	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Parameter</b>	hotdesking.clear_specified_account	<y0000000000xx>.cfg
<b>Description</b>	It configures to clear the specified account information when pressing the Hot Desking DSS key. Multiple accounts are separated by commas. <b>Example:</b> hotdesking.clear_specified_account=1,2,3	
<b>Permitted</b>	0-All accounts will be cleared.	

<b>Values</b>	<b>Account ID</b> -The specified accounts will be cleared.
<b>Default</b>	0
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30

## Device Management

You can enable the device management feature to connect device and report device information to the Yealink Device Management Platform (YDMP)/Yealink Management Cloud Service (YMCS), where you can view device information, manage devices, and diagnose devices.

### Note

For T4XU series, make sure that you have enabled the feature of Connect DM Service (on the phone screen, go to **Menu > Security > Connect DM Service**). Otherwise, you cannot connect phones to the YDMP/YMCS. After you enable this feature, you also need the following parameters to connect phones to the YDMP/YMCS.

### Topic

[Device Management Configuration](#)

## Device Management Configuration

The following table lists the parameters you can use to configure the device management feature.

<b>Parameter</b>	static.dm.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the device management feature. <b>Note:</b> For T4XU, you do not need to set this parameter. On the contrary, you need to enable this feature on the phone (see phone UI below).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Phone UI</b>	T42U/T43U/T46U/T48U: Menu > Security > Connect DM Service	
<b>Parameter</b>	static.dm.server.address	<y0000000000xx>.cfg
<b>Description</b>	It configures the server address of the YDMP/YMCS.	
<b>Permitted Values</b>	String within 512 characters	
<b>Default</b>	Blank	
<b>Parameter</b>	static.dm.server.port	<y0000000000xx>.cfg
<b>Description</b>	It configures the server port of the YDMP/YMCS.	
<b>Permitted Values</b>	Integer from 0 to 65535	
<b>Default</b>	443	
<b>Parameter</b>	phone_setting.qoe.enable	<y0000000000xx>.cfg
<b>Description</b>	It configures whether to report the call statistics to YDMP/YMCS.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Phone UI</b>	T42U/T43U/T46U/T48U:	

	Menu > Security > Call Quality Statistics	
<b>Parameter</b>	static.remote_control.X.allow <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures whether to allow the YDMP/YMCS to take phone's screenshots or capture packets.	
<b>Permitted Values</b>	<p><b>0</b>-Unauthorized, when the YDMP/YMCS wants to take phone's screenshots or capture packets, the phone will pop up a dialog, prompting users to allow or reject the request. When users allow the request, the value will change to <b>Allowed</b>, and the window will not pop up again. If users reject the request, the value will not change, and the window will pop up again when YDMP/YMCS makes a request next time.</p> <p><b>1</b>-Allowed, you allow the YDMP/YMCS to take phone's screenshots or capture packets.</p> <p><b>2</b>-Blocked, you reject the YDMP/YMCS to take phone's screenshots or capture packets.</p>	
<b>Default</b>	0	
<b>Phone UI</b>	T42U/T43U/T46U/T48U: Menu > Security > Screenshot/Package Capture	

[1]X is feature ID. X=1, 3. 1 stands for the screenshot taking feature. 3 stands for the packet capturing feature.

## General Features

This section shows you how to configure general features on Yealink phones.

### Topics

[Line Identification Presentation](#)  
[Return Code for Refused Call](#)  
[Return Code for Unanswered Call](#)  
[Hide Feature Access Codes](#)  
[Accept SIP Trust Server Only](#)  
[100 Reliable Retransmission](#)  
[SIP Session Timer](#)  
[Session Timer](#)  
[Reboot in Talking](#)  
[Reserve # in User Name](#)  
[Busy Tone Delay](#)  
[CFG File Version Information](#)  
[Media Loopback](#)  
[Cloud](#)

## Line Identification Presentation

Yealink phones can derive calling and connected line identification from SIP headers and display the name associated with the telephone number on the LCD screen.

**Calling Line Identification Presentation (CLIP):** It allows the phones to display the caller identity, derived from a SIP header contained in the INVITE message when receiving an incoming call. Yealink phones can derive caller identity from three types of SIP header: From, P-Asserted-Identity (PAI) and Remote-Party-ID (RPID). Identity presentation is based on the identity in the relevant SIP header.

**Connected Line Identification Presentation (COLP):** It allows the phones to display the identity of the connected party specified for outgoing calls. The phones can display the Dialed Digits, or the identity in a SIP header (Remote-Party-ID, P-Asserted-Identity or contact) received, or the identity in the From header carried in the UPDATE message sent by the callee as described in [RFC 4916](#). Connected line identification presentation is also known as Called line identification presentation. In some cases, the remote party will be different from the called line identification presentation due to call diversion.

**Note:** If the caller/callee already exists in the local directory, the local contact name assigned to the caller will be preferentially displayed and stored in the call log.

For more information on calling line identification presentation, refer to [Calling and Connected Line Identification Presentation on Yealink IP Phones](#).

### Topic

[CLIP and COLP Configuration](#)

## CLIP and COLP Configuration

The following table lists the parameters you can use to configure the CLIP and COLP.

<b>Parameter</b>	account.X.cid_source <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the identity of the caller.	
<b>Permitted Values</b>	0-FROM 1-PAI 2-PAI-FROM	



	<b>3-PRID-PAI-FROM</b> <b>4-PAI-RPID-FROM</b> <b>5-RPID-FROM</b> <b>6-PREFERENCE</b> , the phone uses the custom priority order for the sources of caller identity (configured by the parameter "sip.cid_source.preference").	
<b>Default</b>	0	
<b>Web UI</b>	Account > Advanced > Caller ID Source	
<b>Parameter</b>	account.X.cid_source_privacy <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the phone to process the Privacy header field in the SIP message. <b>Note:</b> The priority order: PPI > Privacy > PRID/PAI/From.	
<b>Permitted Values</b>	0-Disabled, the phone does not process the Privacy header. 1-Enabled, the phone screen presents anonymity instead if there is a Privacy: id in the INVITE request.	
<b>Default</b>	1	
<b>Parameter</b>	account.X.cid_source_ppi <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the phone to process the P-Preferred-Identity (PPI) header in the request message for caller identity presentation.	
<b>Permitted Values</b>	0-Disabled, the phone does not process the PPI header. 1-Enabled, the phone presents the caller identity from the PPI header.	
<b>Default</b>	0	
<b>Parameter</b>	sip.cid_source.preference	<y0000000000xx>.cfg
<b>Description</b>	It configures the priority order for the sources of caller identity information. <b>Note:</b> Yealink phones can derive caller identity from the following SIP headers: From, P-Asserted-Identity (PAI), P-Preferred-Identity and Remote-Party-ID (RPID). It works only if "account.X.cid_source" is set to 6 (PREFERENCE).	
<b>Permitted Values</b>	String	
<b>Default</b>	P-Preferred-Identity, P-Asserted-Identity, Remote-Party-ID, From	
<b>Parameter</b>	account.X.cp_source <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the identity of the callee according to the response message.	
<b>Permitted Values</b>	0-PAI-RPID 1-Dialed Digits 2-RFC4916, the caller sends the SIP request message which contains the from-change tag in the Supported header. The caller then receives an UPDATE message from the server and displays the identity in the "From" header. 3-PAI-RPID-Contact 4-The phone displays the identity using the custom priority order configured by "sip.cid_source.preference".	
<b>Default</b>	0	

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## Return Code for Refused Call

You can define the return code and reason of the SIP response message for the refused call. The caller's phone LCD screen displays the reason according to the received return code. Available return codes and reasons are:

- 404 (Not Found)
- 480 (Temporarily Unavailable)
- 486 (Busy Here)
- 600 (Busy Everywhere)
- 603 (Decline)

### Topic

[Return Code for Refused Call and not answer Configuration](#)

## Return Code for Refused Call and not answer Configuration

The following table lists the parameters you can use to configure the return code for the refused/ not answer call.

<b>Parameter</b>	features.normal_refuse_code	<y000000000xx>.cfg
<b>Description</b>	It configures a return code and reason for SIP response messages when the phone rejects an incoming call. A specific reason is displayed on the caller's phone screen.	
<b>Permitted Values</b>	<b>404</b> -Not Found <b>480</b> -Temporarily Unavailable <b>486</b> -Busy Here <b>600</b> -Busy Everywhere <b>603</b> -Decline	
<b>Default</b>	486	
<b>Web UI</b>	Features > General Information > Return Code When Refuse	

## Return Code for Unanswered Call

You can define the return code and reason of the SIP response message for the unanswered call. The caller's phone LCD screen displays the reason according to the received return code. Available return codes and reasons are:

- 404 (Not Found)
- 480 (Temporarily Unavailable)
- 486 (Busy Here)
- 600 (Busy Everywhere)
- 603 (Decline)

This feature is not applicable to T48G/T46G/T42G/T41P/T29G phones.

### Topic

[Return Code for Unanswered Call Configuration](#)

## Return Code for Unanswered Call Configuration

The following table lists the parameters you can use to configure the return code for the unanswered call.

<b>Parameter</b>	features.no_answer_code	<y0000000000xx>.cfg
<b>Description</b>	It configures a return code and reason of SIP response messages when the phone does not answer an incoming call. A specific reason is displayed on the caller's phone screen.	
<b>Permitted Values</b>	<b>404</b> -Not Found <b>480</b> -Temporarily Unavailable (Temporarily not available) <b>486</b> -Busy Here <b>600</b> -Busy Everywhere <b>603</b> -Decline	
<b>Default</b>	486	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P and T29G	
<b>Web UI</b>	Features > General Information > Return Code When No Answer	

## Hide Feature Access Codes

Hide Feature Access Codes feature enables the IP phone to display the feature name instead of the dialed feature access code automatically. For example, the dialed call park code will be replaced by the identifier "Call Park" when you park an active call.

The hide feature access codes feature is applicable to the following features:

- Voice Mail
- Pick up
- Group Pick up
- Barge In (not applicable to T30P/T30/T19(P) E2/CP920/CP925/CP935W phones)
- Retrieve
- Call Park
- Call Pull (not applicable to T30P/T30/T19(P) E2/CP920/CP925/CP935W phones)

### Topic

[Hide Feature Access Codes Configuration](#)

## Hide Feature Access Codes Configuration

The following table lists the parameters you can use to configure the hide feature access codes.

<b>Parameter</b>	features.hide_feature_access_codes.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to display the feature name instead of the feature access code when dialing and talking.  The following feature access codes will be replaced when this feature is enabled: <ul style="list-style-type: none"> <li>• Voice Mail</li> <li>• Pick up</li> <li>• Group Pick up</li> <li>• Barge In</li> <li>• Retrieve</li> <li>• Call Park</li> </ul>	

	<ul style="list-style-type: none"> <li>Group Park</li> <li>Call Pull</li> </ul>
<b>Permitted Values</b>	0-Disabled 1-Enabled
<b>Default</b>	0
<b>Web UI</b>	Features > General Information > Hide Feature Access Codes
<b>Parameter</b>	features.hide_feature_access_codes.dsskey_type <y000000000xx>.cfg
<b>Description</b>	It configures the phone to display the label instead of the feature access code when pressing the specified Dsskey to dial out. Multiple types are separated by commas.
<b>Permitted Values</b>	<b>Blank</b> -No Dsskey Type is available for this function.  <b>9</b> -Pickup <b>10</b> -Call Park <b>12</b> -Voice Mail <b>13</b> -SpeedDial <b>14</b> -Intercom <b>16</b> -BLF <b>23</b> -Group Pickup <b>56</b> -Retrieve Park
<b>Default</b>	Blank
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31

## Accept SIP Trust Server Only

Accept SIP trust server only enables the phones to only accept the SIP message from your SIP server and outbound proxy server. It can prevent the phone from receiving the ghost calls whose phone number maybe 100, 1000 and so on. If you enable this feature, the phone cannot accept an IP address call.

### Topic

[Accept SIP Trust Server Only Configuration](#)

## Accept SIP Trust Server Only Configuration

The following table lists the parameters you can use to configure accept SIP trust server only.

<b>Parameter</b>	sip.trust_ctrl	<y000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to only accept the SIP message from the SIP and outbound proxy server.	
<b>Permitted Values</b>	0-Disabled 1-Enabled, users cannot accept the IP call	
<b>Default</b>	0	
<b>Web UI</b>	Features > General Information > Accept SIP Trust Server Only	

## 100 Reliable Retransmission

As described in [RFC 3262](#), the 100rel tag is for the reliability of provisional responses. When presented in a Supported header, it indicates that the phone can send or receive reliable provisional responses. When presented in a Require header in a reliable provisional response, it indicates that the response is to be sent reliably.

Example of a SIP INVITE message:

```
INVITE sip:1024@pbx.test.com:5060 SIP/2.0
Via: SIP/2.0/UDP 10.3.6.197:5060;branch=z9hG4bK1708689023
From: "1025" <sip:1025@pbx.test.com:5060 > ;tag=1622206783
To: <sip:1024@pbx.test.com:5060 >
Call-ID: 0_537569052@10.3.6.197
CSeq: 2 INVITE
Contact: <sip:1025@10.3.6.197:5060 >
Authorization: Digest username="1025", realm="pbx.test.com", nonce="BroadWorksXi5stub71Ts2nb05BW", uri="sip:1024@pbx.test.com:5060", response="f7e9d35c55af45b3f89beae95e913171", algorithm=MD5, cnonce="0a4f113b", qop=auth, nc=00000001
Content-Type: application/sdp
Allow: INVITE, INFO, PRACK, ACK, BYE, CANCEL, OPTIONS, NOTIFY, REGISTER, SUBSCRIBE, REFER, PUBLISH, UPDATE, MESSAGE
Max-Forwards: 70
User-Agent: Yealink SIP-T46G 28.82.0.20
Supported: 100rel
Allow-Events: talk,hold,conference,refer,check-sync
Content-Length: 302
```

### Topic

[100 Reliable Retransmission Configuration](#)

## 100 Reliable Retransmission Configuration

The following table lists the parameter you can use to configure the 100 reliable retransmission.

Parameter	account.X.100rel_enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the 100 reliable retransmission feature.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Account > Advanced > Retransmission	

<sup>[1]</sup>X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## SIP Session Timer

SIP session timers T1, T2 and T4 are SIP transaction layer timers defined in [RFC 3261](#). These session timers are configurable on the phones.

### Timer T1

Timer T1 is an estimate of the Round Trip Time (RTT) of transactions between a SIP client and SIP server.

### Timer T2

Timer T2 represents the maximum retransmitting time of any SIP request message. The re-transmitting and doubling of T1 will continue until the retransmitting time reaches the T2 value.

### Example:

The user registers a SIP account for the IP phone and then set the value of Timer T1, Timer T2 respectively (Timer T1: 0.5, Timer T2: 4). The SIP registration request message will be re-transmitted between the IP phone and SIP server. The re-transmitting and doubling of Timer T1 (0.5) will continue until the retransmitting time reaches the Timer T2 (4). The total registration request retry time will be less than 64 times of T1 ( $64 * 0.5 = 32$ ). The re-transmitting interval in sequence is 0.5s, 1s, 2s, 4s, 4s, 4s, 4s, 4s, 4s and 4s.

### Timer T4

Timer T4 represents that the network will take to clear messages between the SIP client and server.

### Topic

[SIP Session Timer Configuration](#)

## SIP Session Timer Configuration

The following table lists the parameters you can use to configure the SIP session timer.

<b>Parameter</b>	sip.timer_t1	<y0000000000xx>.cfg
<b>Description</b>	It configures the SIP session timer T1 (in seconds).	
<b>Permitted Values</b>	Float from 0.5 to 10	
<b>Default</b>	0.5	
<b>Web UI</b>	Settings > SIP > SIP Session Timer T1 (0.5~10s)	
<b>Parameter</b>	sip.timer_t2	<y0000000000xx>.cfg
<b>Description</b>	It configures the SIP session timer T2 (in seconds).	
<b>Permitted Values</b>	Float from 2 to 40	
<b>Default</b>	4	
<b>Web UI</b>	Settings > SIP > SIP Session Timer T2 (2~40s)	
<b>Parameter</b>	sip.timer_t4	<y0000000000xx>.cfg
<b>Description</b>	It configures the SIP session timer T4 (in seconds).	
<b>Permitted Values</b>	Float from 2.5 to 60	
<b>Default</b>	5	

<b>Web UI</b>	Settings > SIP > SIP Session Timer T4 (2.5-60s)
---------------	---

## Session Timer

Session timer allows a periodic refresh of SIP sessions through an UPDATE request, to determine whether a SIP session is still active. Session timer is specified in [RFC 4028](#). The phones support two refresher modes: UAC and UAS. Whether the endpoint functions as a UAC or a UAS depends on the UA that initiates the SIP request. If the initiator is configured as UAC, the other client or the SIP server will function as a UAS. If the initiator is configured as UAS, the other client or the SIP server will function as a UAC. The session expiration is negotiated via the Session-Expires header in the INVITE message. The negotiated refresher is always the UAC and it will send an UPDATE request at the negotiated session expiration. The value "refresher=uac" included in the UPDATE message means that the UAC performs the refresh.

Example of UPDATE message (UAC mode):

```
UPDATE sip:1058@10.10.20.34:5060 SIP/2.0
Via: SIP/2.0/UDP 10.10.20.32:5060;branch=z9hG4bK2104991394
From: "10111" <sip:10111@10.2.1.48:5060 > ;tag=2170397024
To: <sip:1058@10.2.1.48:5060 > ;tag=200382096
Call-ID: 4_1556494084@10.10.20.32
CSeq: 2 UPDATE
Contact: <sip:10111@10.10.20.32:5060 >
Max-Forwards: 70
User-Agent: Yealink SIP-T46G 28.82.0.20
Session-Expires: 90;refresher=uac
Supported: timer
Content-Length: 0
```

### Topic

[Session Timer Configuration](#)

## Session Timer Configuration

The following table lists the parameters you can use to configure the session timer.

<b>Parameter</b>	account.X.session_timer.enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the session timer.	
<b>Permitted Values</b>	0-Disabled 1-Enabled, the phone will send periodic UPDATE requests to refresh the session during a call.	
<b>Default</b>	0	
<b>Web UI</b>	Account > Advanced > Session Timer	
<b>Parameter</b>	account.X.session_timer.expires <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the interval (in seconds) for refreshing the SIP session during a call. An UPDATE will be sent after 50% of its value has elapsed. For example, if it is set to 1800 (1800s), the phone will refresh the session during a call every 900 seconds.	

	<b>Note:</b> It works only if “account.X.session_timer.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	Integer from 90 to 7200	
<b>Default</b>	1800	
<b>Web UI</b>	Account > Advanced > Session Expires (90~7200s)	
<b>Parameter</b>	account.X.session_timer.refresher <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures who refreshes the SIP session during a call. <b>Note:</b> It works only if “account.X.session_timer.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	0-UAC 1-UAS	
<b>Default</b>	0	
<b>Web UI</b>	Account > Advanced > Session Refresher	

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## Reboot in Talking

Reboot in talking feature allows the phones to reboot during an active call when it receives a reboot Notify message.

### Topic

[Reboot in Talking Configuration](#)

## Reboot in Talking Configuration

The following table lists the parameter you can use to configure the reboot in talking.

<b>Parameter</b>	features.reboot_in_talk_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to reboot during a call when it receives a reboot Notify message.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Features > General Information > Reboot in Talking	

## Reserve # in User Name

Reserve # in User Name feature allows the phones to reserve “#” in user name. When Reserve # in User Name feature is disabled, “#” will be converted into “%23”. For example, the user registers an account (user name: 1010#) on the phone, the phone will send 1010%23 instead of 1010# in the REGISTER message or INVITE message to the SIP server.

Example of a SIP REGISTER message:

```
INVITE sip:2@10.2.1.48:5060 SIP/2.0
Via: SIP/2.0/UDP 10.3.20.6:5060;branch=z9hG4bK1867789050
```



```

From: "1010" <sip:1010%23@10.2.1.48:5060>;tag=1945988802
To: <sip:2@10.2.1.48:5060>
Call-ID: 0_2336101648@10.3.20.6
CSeq: 1 INVITE

Contact: <sip:1010%23@10.3.20.6:5060>
Content-Type: application/sdp
Allow: INVITE, INFO, PRACK, ACK, BYE, CANCEL, OPTIONS, NOTIFY, REGISTER, SUBSCRIBE, REFER,
PUBLISH, UPDATE, MESSAGE
Max-Forwards: 70
User-Agent: Yealink SIP-T46G 28.82.0.20
Allow-Events: talk,hold,conference,refer,check-sync
Content-Length: 300

```

**Topic**

[Reserve # in User Name Configuration](#)

## Reserve # in User Name Configuration

The following table lists the parameter you can use to configure the reserve # in user name.

<b>Parameter</b>	sip.use_23_as_pound	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to reserve the pound sign (#) in the user name.	
<b>Permitted Values</b>	0-Disabled (convert the pound sign into "%23") 1-Enabled	
<b>Default</b>	1	
<b>Web UI</b>	Features > General Information > Reserve # in User Name	

## Busy Tone Delay

The busy tone is an audible signal to indicate that the call is released by the other party. You can define the amount of time that the busy tone lasts.

**Topic**

[Busy Tone Delay Configuration](#)

## Busy Tone Delay Configuration

The following table lists the parameter you can use to configure busy tone delay.

<b>Parameter</b>	features.busy_tone_delay	<y0000000000xx>.cfg
<b>Description</b>	It configures the duration (in seconds) that the busy tone lasts when the call is released by the remote party.	
<b>Permitted Values</b>	0-the phone will not play a busy tone. 1-1s, a busy tone lasts for 1 second on the phone. 3-3s, a busy tone lasts for 3 seconds on the phone.	

	5-5s, a busy tone lasts for 5 seconds on the phone
<b>Default</b>	0
<b>Web UI</b>	Features > General Information > Busy Tone Delay (Seconds)

## CFG File Version Information

You can customize the version information for the CFG configuration file and then check the version information via phone/web user interface. With this feature, you can easily know which version of the CFG configuration file the IP phone is configured.

### Topic

[CFG File Version Information Configuration](#)

## CFG File Version Information Configuration

The following table lists the parameters you can use to configure CFG file version information.

<b>Parameter</b>	phone_setting.config_version.com	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the version information of the Common CFG configuration file.</p> <p>After configuration, you can check the configuration file version information at the path: <b>Menu &gt; Status &gt; Phone &gt; COM Version</b> (phone user interface).</p> <p><b>Note:</b> The value configured by this parameter takes precedence over that configured by the parameter "static.auto_provision.config_version.com".</p>	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Parameter</b>	phone_setting.config_version.mac	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the version information of the MAC CFG configuration file.</p> <p>After configuration, you can check the configuration file version information at the path: <b>Menu &gt; Status &gt; Phone &gt; MAC Version</b> (phone user interface).</p> <p><b>Note:</b> The value configured by this parameter takes precedence over that configured by the parameter "static.auto_provision.config_version.mac".</p>	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Parameter</b>	static.auto_provision.config_version.com	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the version information of the Common CFG configuration file.</p> <p>After configuration, you can check the configuration file version information at the path: <b>Menu &gt; Status &gt; Phone &gt; COM Version</b> (phone user interface) or <b>Status &gt; Status &gt; Version &gt; COM Version</b> (web user interface).</p>	
<b>Permitted Values</b>	String	

<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P and T29G	
<b>Parameter</b>	static.auto_provision.config_version.mac	<y0000000000xx>.cfg
<b>Description</b>	It configures the version information of the MAC CFG configuration file. After configuration, you can check the configuration file version information at the path: <b>Menu &gt; Status &gt; Phone &gt; MAC Version</b> (phone user interface) or <b>Status &gt; Status &gt; Version &gt; MAC Version</b> (web user interface).	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P and T29G	
<b>Parameter</b>	features.custom_version_info	<y0000000000xx>.cfg
<b>Description</b>	It configures the version information of the CFG configuration file. After configuration, you can check the configuration file version information at the path: <b>Menu &gt; Status &gt; CFG Version</b> (phone user interface) or <b>Status &gt; Status &gt; Version &gt; Configuration Version</b> (web user interface).	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T48G, T46G, T42G, T41P, T29G	

## Media Loopback

The SIP RTP media loopback can be used to make test calls to verify the media path between the phone and server.

RTP packets are looped back toward the source device. In a voice loopback call, an echo is heard at the device originating the call.

For more information on media loopback, refer to [RFC 6849](#).

### Topic

[Media Loopback Configuration](#)

## Media Loopback Configuration

The following table lists the parameters you can use to configure media loopback.

<b>Parameter</b>	sip.loopback.enable	<y0000000000xx>.cfg
<b>Description</b>	It configures the loopback role for the phone. <b>Note:</b> After the phone accepts the loopback call, the mute feature will be automatically activated on the phone.	
<b>Permitted Values</b>	0-Loopback-Mirror, the server initiates a loopback call, and the phone accepts the call and mirrors (echoes) all received media back to the server. 1-Loopback-Source, the phone can initiate a loopback call as a media source or receive a loopback call as a loopback mirror.	

<b>Default</b>	0	
<b>Parameter</b>	sip.loopback_type	<y0000000000xx>.cfg
<b>Description</b>	It configures the media loopback type.	
<b>Permitted Values</b>	<p><b>1</b>-rtp-media-loopback, the packet received by loopback mirror is re-encoded based on the SDP negotiation. The re-encoded content is returned to the loopback source as an RTP packet with payload type corresponding to the re-encoding format.</p> <p><b>2</b>-rtp-pkt-loopback, the RTP payload is re-encapsulated and the RTP packets are looped back with a new payload type and format. This type of loopback applies to the encapsulated and direct packet loopback. Any type of encoding-related functions must not be part of this type of loopback path.</p> <p><b>3</b>-rtp-media-loopback &amp; rtp-pkt-loopback, the answer must include only one of these two loopback types and should give preference to the first loopback-type in the SDP offer.</p>	
<b>Default</b>	3	
<b>Parameter</b>	sip.pkt_loopback_mode	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the encapsulation mode of incoming RTP packet.</p> <p><b>Note:</b> It works only if "sip.loopback_type" is set to 2 (rtp-pkt-loopback).</p>	
<b>Permitted Values</b>	<p><b>1</b>-encapsulated packet loopback, the entire incoming RTP packet is encapsulated as payload within an outer RTP packet. The loopback source can generate statistics for one-way path performance up to the RTP level for each direction of travel.</p> <p><b>2</b>-directed packet loopback, the loopback mirror copies the payload of the incoming RTP packet into a new RTP packet. The packet source can compute only two-way path statistics from the direct loopback packet header.</p> <p><b>3</b>-encapsulated &amp; directed, the loopback mirror loops back the incoming RTP packets using either the encapsulated RTP payload format or the direct loopback RTP payload format.</p>	
<b>Default</b>	3	
<b>Parameter</b>	sip.pkt_loopback_encapsulated_payload	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the value of dynamic payload for encapsulated RTP.</p> <p><b>Note:</b> It works only if "sip.pkt_loopback_mode" is set to 1 (encapsulated packet loopback).</p>	
<b>Permitted Values</b>	Integer greater than 98	
<b>Default</b>	112	
<b>Parameter</b>	sip.pkt_loopback_directed_payload	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the value of dynamic payload for the direct loopback RTP.</p> <p><b>Note:</b> It works only if "sip.pkt_loopback_mode" is set to 2 (directed packet loopback).</p>	
<b>Permitted Values</b>	Integer greater than 98	
<b>Default</b>	113	
<b>Parameter</b>	sip.loopback.auto_answer.mode	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to automatically answer the incoming loopback call.	
<b>Permitted Values</b>	<p><b>0</b>-Disabled</p> <p><b>1</b>-Enabled</p>	
<b>Default</b>	1	

## Cloud

Yealink CP920 phones support cloud feature. The Cloud enterprise administrator uses the Yealink VC Cloud management service to assign each user an individual Cloud account. For more information, refer to [Yealink VC Cloud Management Service Administrator Guide](#).

After registered with a Yealink Cloud account successfully, the phone will download the Cloud accounts information from the server automatically.

### Topic

[Cloud Configuration](#)

## Cloud Configuration

The following table lists the parameters you can use to configure the Cloud.

<b>Parameter</b>	vcaccount.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the Cloud feature.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	CP920	
<b>Web UI</b>	Features > General Information > Cloud Enable	

# Configuration Parameters

This section provides a description and permitted values of some settings.

## Topics

- [BroadSoft Parameters](#)
- [Alcatel-Lucent Barge in Parameters](#)
- [Start2Start ACD Parameters](#)
- [Ethernet Interface MTU Parameters](#)
- [SIP Settings Parameters](#)
- [Call Settings Parameters](#)

## BroadSoft Parameters

This section shows the parameters you can use to configure the phone with BroadSoft server.

For more information on BSFT, refer to [Yealink IP Phone Features Integrated with BroadSoft UC-One User Guide](#) or [Yealink IP Phones Deployment Guide for BroadSoft UC-One Environment](#).

## BroadSoft Settings

<b>Parameter</b>	bw.enable <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the BroadSoft features.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	bw.features_status.display_mode	<y0000000000xx>.cfg
<b>Description</b>	It configures the icon display mode when the corresponding BSFT feature is enabled on the phone. <b>Note:</b> It works only if "bw.enable" and "bw.xsi.enable" are set to 1 (Enabled).	
<b>Permitted Values</b>	0-The phone does not display the corresponding icon. (This is the old user experience) 1-Enabled, the phone displays the corresponding icon when it requests the server to enable the corresponding feature.	
<b>Default</b>	0	
<b>Supported Devices</b>	All color screen phones	
<b>Case Scenario</b>	<p><b>Check which BSFT features are currently enabled through the icons displayed on the phone.</b></p> <p>It is available to the following scenarios:</p> <ul style="list-style-type: none"> <li>• Always Forward, Busy Forward, No Answer Forward</li> <li>• Anonymous Call Rejection</li> <li>• Anonymous Call</li> <li>• Simultaneous Ring Personal</li> <li>• Remote Office</li> </ul>	
<b>Parameter</b>	bw.features.flash_time	<y0000000000xx>.cfg
<b>Description</b>	It configures the time (in seconds) when the phone actively requests the BSFT server to enable the feature . <b>Note:</b> It works only if "bw.enable" and "bw.xsi.enable" are set to 1 (Enabled).	
<b>Permitted</b>	Integer from 0 to 86400	

<b>Values</b>	
<b>Default</b>	0
<b>Supported Devices</b>	All color screen phones

[1]If you change this parameter, the phone will reboot to make the change take effect.

## Broadsoft UC

<b>Parameter</b>	bw.xmpp.enable <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the UC feature. <b>Note:</b> It works only if "bw.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	All color screen phones	
<b>Parameter</b>	features.uc_username	<y0000000000xx>.cfg
<b>Description</b>	It configures the user name for UC authentication. <b>Note:</b> It works only if "bw.xmpp.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	String within 99 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All color screen phones	
<b>Web UI</b>	Applications > Broadsoft XMPP > XMPP Account > XMPP UserName	
<b>Parameter</b>	features.uc_password	<y0000000000xx > .cfg
<b>Description</b>	It configures the password for UC authentication. <b>Note:</b> It works only if "bw.xmpp.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All color screen phones	
<b>Web UI</b>	Applications > Broadsoft XMPP > XMPP Account > XMPP Password	
<b>Parameter</b>	bw.xmpp.presence_icon.mode	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables to display presence icon in a new style.	
<b>Permitted Values</b>	0-Disabled, the phone displays the presence icon in old style before V81 1-Enabled, the phone displays the presence icon in the current new style	
<b>Default</b>	0	
<b>Supported Devices</b>	All color screen phones	

<b>Parameter</b>	bw.xmpp.change_presence.force_manual.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables to synchronize the presence status to the BroadWorks server when you change your presence status manually on the IP phone.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Supported Devices</b>	All color screen phones	
<b>Parameter</b>	bw.xmpp.change_presence.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to change the user's current presence state locally. <b>Note:</b> It works only if "bw.xmpp.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	All color screen phones	
<b>Parameter</b>	phone_setting.dsskey_directory_auto.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the Auto Favorite feature. <b>Note:</b> It works only if "bw.xmpp.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled, the phone will download information of favorites from the cloud server and automatically configure UC Favorite keys from the first unused line key (the line key type is configured as N/A or Line). If a line key is used, the phone will skip to the next unused line key.	
<b>Default</b>	1	
<b>Supported Devices</b>	All color screen phones	
<b>Web UI</b>	Features > General Information > Enable Auto Favorite	
<b>Parameter</b>	phone_setting.uc_favorite_sequence_type	<y0000000000xx>.cfg
<b>Description</b>	It configures the order of UC Favorite keys to be assigned automatically. <b>Note:</b> It works only if "phone_setting.dsskey_directory_auto.enable" is set to 1 (Enabled). To assign Ext Key, make sure the expansion module has been connected to the phone in advance.	
<b>Permitted Values</b>	0-linekey > exp1 key > expN key 1-exp1 key > expN key > linekey 2-linekey page1 > page1 from ex1 key to expN key > page2 from exp1 key to expN key > ... > linekey from page2 to page3 3-page1 from exp1 key to expN key > page2 from exp1 key to expN key > ... > linekey <b>Note:</b> N is the number of your connected expansion modules.	
<b>Default</b>	0	
<b>Supported Devices</b>	All color screen phones	
<b>Parameter</b>	phone_setting.keytype_sequence <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the display order of BLF List, UC Favorite, Favorite keys when two or three types appear	



	<p>simultaneously.</p> <p>The phone displays the keys with left-to-right order. For example, "favorite,uc_favorite,blf_list" means the display order is Favorite keys &gt; UC Favorite keys &gt; BLF List keys.</p> <p>If only one type is configured, the configured type will have the highest priority. For example, "blf_list" means the IP phone preferentially display the BLF List keys, and remaining keys' display order is: UC Favorite keys &gt; Favorite keys (the default order).</p> <p><b>Note:</b> If Auto Linekeys feature is enabled (features.auto_linekeys.enable = 1), the Line keys (the line key type is configured as Line) will be shown first.</p>	
<b>Permitted Values</b>	Blank (the display order: BLF List keys > UC Favorite keys > Favorite keys) blf_list, uc_favorite, favorite or a combination of them	
<b>Default</b>	Blank	
<b>Parameter</b>	features.uc_dir.match_tail_number	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the minimum matched digits of the tail numbers of BroadCloud Buddy. When the entered number matches the tail numbers of a buddy in the buddy directory, the phone will automatically display the matched results on the phone screen when placing a call.</p> <p>If it is set to 0, the entered number must exactly match the number of BroadCloud Buddy.</p> <p>If it is set to other values (for example, 4), the entered number less than 4 digits would not match with the BroadCloud contact.</p> <p><b>Example:</b></p> <p>If there is a BroadCloud Buddy name "Sunny" with the phone number "785656" and the parameter "features.uc_dir.match_tail_number" is set to "4", "5656", "85656" or "785656" would match "Sunny (785656)". "656", "56" or "6" would not match "Sunny (785656)".</p>	
<b>Permitted Values</b>	Integer greater than or equal to 0	
<b>Default</b>	0	
<b>Supported Devices</b>	All color screen phones	
<b>Parameter</b>	search_in_dialing.bw_uc_buddies.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to automatically search entries from the BroadSoft Buddies directory, and display results on the pre-dialing/dialing screen.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	All color screen phones	
<b>Parameter</b>	search_in_dialing.bw_uc_buddies.priority	<y0000000000xx>.cfg
<b>Description</b>	It configures the search priority of the BroadSoft Buddies directory.	
<b>Permitted Values</b>	Integer greater than or equal to 0	
<b>Default</b>	6	
<b>Supported Devices</b>	All color screen phones	
<b>Parameter</b>	directory_setting.bw_uc_buddies.enable	<y0000000000xx>.cfg

<b>Description</b>	It enables or disables the users to access the BroadSoft Buddies directory by pressing the <b>Directory/Dir</b> soft key.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	All color screen phones	
<b>Parameter</b>	directory_setting.bw_uc_buddies.priority	<y0000000000xx>.cfg
<b>Description</b>	It configures the display priority of the BroadSoft Buddies directory.	
<b>Permitted Values</b>	Integer greater than or equal to 0	
<b>Default</b>	12	
<b>Supported Devices</b>	All color screen phones	

[1]If you change this parameter, the phone will reboot to make the change take effect.

### Broadsoft XSI

<b>Parameter</b>	account.X.xsi.user <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the user name for XSI authentication. <b>Note:</b> It works only if "bw.xsi.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	String within 99 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Applications > Broadsoft XSI > XSI Account > User ID	
<b>Parameter</b>	account.X.xsi.password <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the password for XSI authentication. <b>Note:</b> It works only if "sip.authentication_for_xsi" is set to 0 (User Login Credentials for XSI Authentication) and "bw.xsi.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	String within 99 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Applications > Broadsoft XSI > XSI Account > Password	
<b>Parameter</b>	account.X.xsi.host <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the IP address or domain name of the Xtended Services Platform server. <b>Note:</b> It works only if "bw.xsi.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	IP address or domain name	
<b>Default</b>	Blank	
<b>Web UI</b>	Applications > Broadsoft XSI > XSI Account > Host Server	
<b>Parameter</b>	account.X.xsi.server_type <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the access protocol of the Xtended Services Platform server.	

	<b>Note:</b> It works only if "bw.xsi.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	http-HTTP https-HTTPS	
<b>Default</b>	http	
<b>Web UI</b>	Applications > Broadsoft XSI > XSI Account > XSI Server Type	
<b>Parameter</b>	account.X.xsi.port <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the port of the Xtended Services Platform server. <b>Note:</b> It works only if "bw.xsi.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	Integer from 1 to 65535	
<b>Default</b>	80	
<b>Web UI</b>	Applications > Broadsoft XSI > XSI Account > Port	
<b>Permitted Values</b>	Integer from 1 to 65535	
<b>Default</b>	443	
<b>Parameter</b>	bw.xsi.enable <sup>[2]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the XSI authentication feature for the phone.	
<b>Permitted Values</b>	<p><b>0</b>-Disabled  <b>1</b>-Enabled</p> <p>If it is set to 0 (Disabled), the following features are unavailable on the phone:</p> <ul style="list-style-type: none"> <li>BroadWorks Anywhere</li> <li>Remote Office</li> <li>Line ID Blocking</li> <li>Anonymous Call Rejection</li> <li>Simultaneous Ring Personal</li> <li>BroadSoft Directory</li> <li>BroadSoft Call Log</li> <li>Call Park Feature via XSI Mode</li> <li>Call Waiting Feature via XSI Mode</li> <li>Voice Messaging</li> <li>Centralized Call Recording</li> <li>Executive and Assistant</li> <li>BroadWorks Mobility</li> <li>Group Night Forwarding</li> <li>Silent Alerting</li> </ul>	
<b>Default</b>	0	
<b>Parameter</b>	account.X.xsi.xsi_event_port <sup>[1]</sup>	<MAC>.cfg

<b>Description</b>	It configures the port of TCP connection when XSI events are delivered by using an event channel. <b>Note:</b> It works only if "bw.xsi.xsi_event_mode" is set to 1.	
<b>Default</b>	Integer from 1 to 65535	
<b>Default</b>	443	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Parameter</b>	bw.xsi.xsi_event_mode	<y0000000000xx>.cfg
<b>Description</b>	It configures the event delivery mode for the Xsi-Events.	
<b>Permitted Values</b>	<b>0</b> -Events are delivered by using an HTTP contact. <b>1</b> -Events are delivered by using an event channel when at least one Dsskey is set as BLF XSI on the phone.	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Parameter</b>	sip.authentication_for_xsi	<y0000000000xx>.cfg
<b>Description</b>	It configures the authentication mechanism for XSI access. <b>Note:</b> It works only if "bw.xsi.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	<b>0</b> -User Login Credentials for XSI Authentication, the phone uses the XSI user ID and password for XSI authentication. <b>1</b> -SIP Credentials for XSI Authentication, the phone uses the XSI user ID, the register name and password of the SIP account for XSI authentication.	
<b>Default</b>	0	
<b>Web UI</b>	Applications > Broadsoft XSI > XSI Account > Allow SIP Authentication for XSI	
<b>Parameter</b>	default_input_method.xsi_password	<y0000000000xx>.cfg
<b>Description</b>	It configures the default input method when the XSI authentication is failed and the user re-enters the password.	
<b>Permitted Values</b>	123, abc, ABC or 2aB	
<b>Default</b>	2aB	

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

[2]If you change this parameter, the phone will reboot to make the change take effect.

### Broadsoft ACD

<b>Parameter</b>	account.X.acd.initial_state <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the initial status after logging in to ACD.	
<b>Permitted Values</b>	<b>1</b> -Available <b>2</b> -Unavailable	

<b>Default</b>	1	
<b>Parameter</b>	account.X.reason_code.Y <sup>[1][2]</sup>	<MAC>.cfg
<b>Description</b>	It configures the unavailable code which must match one of the codes configured on the BroadWorks platform.	
<b>Permitted Values</b>	Integer from 1 to 2147483647	
<b>Default</b>	Blank	
<b>Parameter</b>	account.X.reason_code_name.Y <sup>[1][2]</sup>	<MAC>.cfg
<b>Description</b>	It configures the unavailable reason which must match one of the reasons configured on the BroadWorks platform.	
<b>Permitted Values</b>	String within 99 characters	
<b>Default</b>	Blank	
<b>Parameter</b>	account.X.supervisor_info_code.Y <sup>[1][2]</sup>	<MAC>.cfg
<b>Description</b>	It configures the supervisor number.	
<b>Permitted Values</b>	Integer from 1 to 2147483647	
<b>Default</b>	Blank	
<b>Parameter</b>	account.X.supervisor_info_code_name.Y <sup>[1][2]</sup>	<MAC>.cfg
<b>Description</b>	It configures the supervisor name.	
<b>Permitted Values</b>	String within 99 characters	
<b>Default</b>	Blank	
<b>Parameter</b>	account.X.call_center.call_info_enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the call center call information feature.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	account.X.call_center.show_call_info_time <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the interval (in seconds) to specify how long the call center call information displays. <b>Note:</b> It works only if "account.X.call_center.call_info_enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	Integer from 1 to 86400	
<b>Default</b>	30	
<b>Parameter</b>	account.X.call_center.disp_code_enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the disposition code feature.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	

<b>Parameter</b>	account.X.call_center.trace_enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the customer originated trace feature.	
<b>Permitted Values</b>	0-Disabled 1-Enabled, it is used to trace the origin of an obscene, harassing, or threatening call.	
<b>Default</b>	0	
<b>Parameter</b>	account.X.call_center.emergency_enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the emergency escalation feature.	
<b>Permitted Values</b>	0-Disabled 1-Enabled, it provides the capability for the call center agent to immediately escalate a call to a supervisor by pressing a key on the phone. The supervisor is immediately joined into the call.	
<b>Default</b>	0	
<b>Parameter</b>	account.X.call_center.queue_status_enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the queue status notification feature.	
<b>Permitted Values</b>	0-Disabled 1-Enabled, it enables the agent to view the status of the call center queue on the phone. The queue can be in one of three states: empty, Q'ing and ALERT.	
<b>Default</b>	0	
<b>Parameter</b>	account.X.call_center.queue_status_light_enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the power LED indicator to flash when the ACD calls in the queue have reached the maximum number of calls or have waited too long.	
<b>Permitted Values</b>	0-Disabled (power LED indicator does not flash) 1-Enabled (power LED indicator fast flashes (300ms) red)	
<b>Default</b>	0	
<b>Parameter</b>	features.homescreen_softkey.acd.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to display the ACD soft keys such as <b>Login</b> or <b>Logout</b> on the idle screen. <b>Note:</b> It works only if "account.X.acd.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Parameter</b>	bw.virtual_user.1.enable	<MAC>.cfg
<b>Description</b>	It enables or disables the virtual account for the call center. <b>Note:</b> It works only if "bw.xsi.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported</b>	All phones except T48G, T46G, T42G, T41P and T29G	

<b>Devices</b>		
<b>Parameter</b>	bw.virtual_user.1.label	<MAC>.cfg
<b>Description</b>	It configures the virtual account label displayed on the phone. <b>Note:</b> If you leave it blank, the virtual user name uses VirtualUser1 by default.	
<b>Permitted Values</b>	String within 99 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P and T29G	
<b>Parameter</b>	bw.virtual_user.1.xsi.dnd.enable	<MAC>.cfg
<b>Description</b>	It enables or disables the user to control the DND status for the virtual account. <b>Note:</b> It works only if "bw.virtual_user.1.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P and T29G	
<b>Parameter</b>	bw.virtual_user.1.xsi.user	<MAC>.cfg
<b>Description</b>	It configures the user ID of virtual account for XSI access authentication. <b>Note:</b> It works only if "bw.xsi.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	String within 99 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P and T29G	
<b>Parameter</b>	bw.virtual_user.1.xsi.password	<MAC>.cfg
<b>Description</b>	It configures the password of virtual account for XSI access authentication. <b>Note:</b> It works only if "bw.xsi.enable" is set to 1 (Enabled) and it is required only when "sip.authentication_for_xsi" is set to 0 (User Login Credentials for XSI Authentication).	
<b>Permitted Values</b>	String within 99 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P and T29G	
<b>Parameter</b>	bw.virtual_user.1.xsi.host	<MAC>.cfg
<b>Description</b>	It configures the IP address of the Xtended Services Platform server for the virtual account. <b>Note:</b> It works only if "bw.xsi.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	IP address or domain name	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P and T29G	

<b>Parameter</b>	bw.virtual_user.1.xsi.server_type	<MAC>.cfg
<b>Description</b>	It configures the access protocol of the Xtended Services Platform server for the virtual account. <b>Note:</b> It works only if “bw.xsi.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	HTTP or HTTPS	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P and T29G	
<b>Parameter</b>	bw.virtual_user.1.xsi.port	<MAC>.cfg
<b>Description</b>	It configures the port of the Xtended Services Platform server for the virtual account. <b>Note:</b> It works only if “bw.xsi.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	Integer from 1 to 65535	
<b>Default</b>	80	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P and T29G	
<b>Parameter</b>	account.X.bw_disp_code.Y <sup>[1]</sup> [ <sup>2</sup> ]	<MAC>.cfg
<b>Description</b>	It configures the disposition code which must match one of the codes configured on BroadWorks.	
<b>Permitted Values</b>	Integer from 1 to 2147483647	
<b>Default</b>	Blank	
<b>Parameter</b>	account.X.bw_disp_code_name.Y <sup>[1]</sup> [ <sup>2</sup> ]	<MAC>.cfg
<b>Description</b>	It configures the disposition code name which must match one of the names configured on BroadWorks.	
<b>Permitted Values</b>	String within 99 characters	
<b>Default</b>	Blank	

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

[2]Y is the code ID. Y=1-100.

### Broadsoft Centralized Call Recording

<b>Parameter</b>	account.X.call_recording.enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the centralized call recording feature.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	bw.call_recording.mode	<y0000000000xx>.cfg



<b>Description</b>	It configures the centralized call recording mode.
<b>Permitted Values</b>	0-XSI 1-SIP
<b>Default</b>	1

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## Broadsoft Security Classification

<b>Parameter</b>	account.X.security_classification.enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables security classification feature.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## Broadsoft Hoteling

<b>Parameter</b>	account.X.hoteling.enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the hoteling feature.	
<b>Permitted Values</b>	0-Disabled 1-Enabled, users can use any available host (shared) phone by logging in with user credentials. After logging in, users have access to their own guest profile on the host phone.	
<b>Default</b>	0	
<b>Parameter</b>	account.X.hoteling.user_id <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the user ID used to log into the guest profile.	
<b>Permitted Values</b>	String within 99 characters	
<b>Default</b>	Blank	
<b>Parameter</b>	account.X.hoteling.password <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the password used to log into the guest profile.	
<b>Permitted Values</b>	String within 99 characters	
<b>Default</b>	Blank	
<b>Parameter</b>	features.homescreen_softkey.hoteling.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to display the Hoteling soft keys such as <b>GuestIn</b> or <b>GuestOut</b> on the idle screen.	

	<b>Note:</b> It works only if “account.X.hoteling.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Parameter</b>	hoteling.authentication_mode	<y0000000000xx>.cfg
<b>Description</b>	It configures the XML browser hoteling authentication mode. <b>Note:</b> It works only if “account.X.hoteling.enable” is set to 1 (Enabled).	
<b>Permitted Values</b>	0-The phone uses the hoteling user ID and password as authentication credentials. 1-The phone uses the provisioning user name and password as authentication credentials, and at the same time provides the hoteling user ID and password in the payload of the message for authentication credentials.	
<b>Default</b>	0	
<b>Parameter</b>	account.X.hoteling.expires <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the hoteling subscription expiration time (in seconds).	
<b>Permitted Values</b>	Integer from 30 to 2147483647	
<b>Default</b>	3600	
<b>Parameter</b>	account.X.hoteling.auto_login_enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the phone to save login credentials automatically when logging into the guest profile.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

### Broadsoft Flexible Seating

<b>Parameter</b>	account.X.flexible_seating.enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the flexible seating feature. <b>Note:</b> For the host, it works only if “account.X.hoteling.enable” and “account.X.acd.enable” are set to 0 (Disabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	account.X.hoteling.mode <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the hoteling mode.	
<b>Permitted Values</b>	0-Disabled 1-Hoteling 2-Flexible Seating Host	

	<b>3-Flexible Seating Guest</b>	
<b>Default</b>	0	
<b>Parameter</b>	account.X.hoteling.pin <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the flexible seating PIN.	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Parameter</b>	features.homescreen_softkey.hoteling.enable	<y000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to display the Flexible Seating soft keys such as <b>GuestIn</b> or <b>GuestOut</b> on the idle screen. <b>Note:</b> It works only if "account.X.flexible_seating.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Parameter</b>	bw.flexible_seating.remember_password ldap.enable	<y000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to encrypt and store the LDAP user credentials when using flexible seating feature. <b>Note:</b> It works only if "bw.enable" and "account.X.flexible_seating.enable" are set to 1 (Enabled). If you disable this feature after enabling it, all the saved user credentials are cleared.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P and T29G	

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

**Related Topic**

[Securely Storing the LDAP Credentials](#)

## Broadsoft Call Decline

<b>Parameter</b>	account.X.features.call_decline.enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables call decline feature.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	Blank	
<b>Parameter</b>	features.call_decline.enable	<y000000000xx>.cfg
<b>Description</b>	It enables or disables call decline feature for the IP phone.	
<b>Permitted</b>	0-Disabled	

<b>Values</b>	1-Enabled
<b>Default</b>	0

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## Broadsoft Network Directory

<b>Parameter</b>	bw.xsi.directory.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the network directory feature. <b>Note:</b> It works only if "bw.xsi.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	bw_phonebook.group_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to display the group directory. <b>Note:</b> It works only if "bw.xsi.directory.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Web UI</b>	Applications > Broadsoft XSI > Network Directory > Group	
<b>Parameter</b>	bw_phonebook.personal_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to display the personal directory. <b>Note:</b> It works only if "bw.xsi.directory.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Web UI</b>	Applications > Broadsoft XSI > Network Directory > Personal	
<b>Parameter</b>	bw_phonebook.group_common_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to display the group common directory. <b>Note:</b> It works only if "bw.xsi.directory.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Web UI</b>	Applications > Broadsoft XSI > Network Directory > Group Common	
<b>Parameter</b>	bw_phonebook.enterprise_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to display the enterprise directory. <b>Note:</b> It works only if "bw.xsi.directory.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	

<b>Default</b>	1	
<b>Web UI</b>	Applications > Broadsoft XSI > Network Directory > Enterprise	
<b>Parameter</b>	bw_phonebook.enterprise_common_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to display the enterprise common directory. <b>Note:</b> It works only if "bw.xsi.directory.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Web UI</b>	Applications > Broadsoft XSI > Network Directory > Enterprise Common	
<b>Parameter</b>	bw_phonebook.enterprise_common_displayname	<y0000000000xx>.cfg
<b>Description</b>	It configures the display name on the phone screen for the enterprise common directory. <b>Note:</b> It works only if "bw.xsi.directory.enable" and "bw_phonebook.enterprise_common_enable" are set to 1 (Enabled).	
<b>Permitted Values</b>	String within 99 characters	
<b>Default</b>	EnterpriseCommon	
<b>Web UI</b>	Applications > Broadsoft XSI > Network Directory > Enterprise Common	
<b>Parameter</b>	bw_phonebook.custom	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the custom directory feature. <b>Note:</b> It works only if "bw.xsi.directory.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Applications > Broadsoft XSI > Network Directory > Enable Custom Directory	
<b>Parameter</b>	bw_phonebook.group_displayname	<y0000000000xx>.cfg
<b>Description</b>	It configures the display name on the phone screen for the group directory. <b>Note:</b> It works only if "bw.xsi.directory.enable" and "bw_phonebook.group_enable" are set to 1 (Enabled).	
<b>Permitted Values</b>	String within 99 characters	
<b>Default</b>	Group	
<b>Web UI</b>	Applications > Broadsoft XSI > Network Directory > Group	
<b>Parameter</b>	bw_phonebook.enterprise_displayname	<y0000000000xx>.cfg
<b>Description</b>	It configures the display name on the phone screen for the enterprise directory. <b>Note:</b> It works only if "bw.xsi.directory.enable" and "bw_phonebook.enterprise_enable" are set to 1 (Enabled).	
<b>Permitted Values</b>	String within 99 characters	
<b>Default</b>	Enterprise	

<b>Web UI</b>	Applications > Broadsoft XSI > Network Directory > Enterprise	
<b>Parameter</b>	bw_phonebook.personal_displayname	<y0000000000xx>.cfg
<b>Description</b>	It configures the display name on the phone screen for the personal directory. <b>Note:</b> It works only if "bw.xsi.directory.enable" and "bw_phonebook.personal_enable" are set to 1 (Enabled).	
<b>Permitted Values</b>	String within 99 characters	
<b>Default</b>	Personal	
<b>Web UI</b>	Applications > Broadsoft XSI > Network Directory > Personal	
<b>Parameter</b>	bw.xsi.call_log.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the BroadSoft call log feature. <b>Note:</b> It works only if "bw.xsi.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Applications > Broadsoft XSI > Network Directory > Call Log > Network Call Log	
<b>Parameter</b>	bw.xsi.call_log.delete.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the user to delete the call log entry from BroadSoft Call Log list on the phone. <b>Note:</b> It works only if "bw.xsi.call_log.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled, if you delete the BroadSoft call log entry on the phone, the call log entry will be also deleted on the BroadWorks server	
<b>Default</b>	0	
<b>Parameter</b>	bw.xsi.call_log.multiple_accounts.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the user to view BroadSoft Call Log for multiple accounts. <b>Note:</b> It works only if "bw.xsi.call_log.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled, you will directly access the BroadSoft Call Log for the first account by default, and you can only view the BroadSoft call log entry for the first account 1-Enabled, you are allowed to select a specific account to access the BroadSoft Call Log and view the call log entry	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2, CP920, CP925 and CP935W	
<b>Parameter</b>	directory.update_time_interval	<y0000000000xx>.cfg
<b>Description</b>	It configures the interval (in minutes) for the phone to update the data of the BroadSoft directory from the BroadSoft server. <b>Note:</b> It works only if "bw.xsi.directory.enable" and "bw.xsi.directory.update.enable" are set to 1 (Enabled).	
<b>Permitted Values</b>	Integer from 60 to 34560	

<b>Default</b>	60	
<b>Parameter</b>	bw.xsi.directory.update.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to automatically download all contacts in the BroadSoft Directory from the server. <b>Note:</b> It works only if "bw.xsi.directory.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled, the phone downloads partial contacts from the server (the maximum of contacts available for viewing at one time is determined by the server), and you can manually download the remaining contacts as needed. 1-Enabled	
<b>Default</b>	1	
<b>Parameter</b>	bw.xsi.directory.server_search_type	<y0000000000xx>.cfg
<b>Description</b>	It configures the search type used by the server search mechanism for the BroadSoft Directory. <b>Note:</b> It works only if "bw.xsi.directory.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Include search with *search content* field 1-Forward search with search content* field	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T48S, T46S, T42S, T41S, T33P, T33G, T31P, T31G, T31, T30P, T30, T27G, CP920, CP925, CP935W	
<b>Parameter</b>	bw_phonebook.group_common_displayname	<y0000000000xx>.cfg
<b>Description</b>	It configures the display name on the phone screen for the group common directory. <b>Note:</b> It works only if "bw.xsi.directory.enable" and "bw_phonebook.group_common_enable" are set to 1 (Enabled).	
<b>Permitted Values</b>	String within 99 characters	
<b>Default</b>	GroupCommon	
<b>Web UI</b>	Applications > Broadsoft XSI > Network Directory > Group Common	
<b>Parameter</b>	bw.xsi.directory.alphabetized_by_lastname.enable	<y0000000000xx>.cfg
<b>Description</b>	It configures the call ID (first name and last name) display method when the phone receives an incoming call, places an outgoing call or is during an active call.	
<b>Permitted Values</b>	0-First name Last name 1-Last name, First name	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except CP920/CP925/CP935W	
<b>Parameter</b>	bw.calllog_and_dir	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to directly enter the Network Calls screen when pressing the <b>History</b> soft key on the idle screen. <b>Note:</b> It works only if "bw.xsi.call_log.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled, the phone will enter Local Calls screen when pressing the <b>History</b> soft key. 1-Enabled	
<b>Default</b>	0	

<b>Parameter</b>	search_in_dialing.bw_directory.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to automatically search entries from the BroadSoft directory, and display the results on the pre-dialing/dialing screen.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	search_in_dialing.bw_directory.priority	<y0000000000xx>.cfg
<b>Description</b>	It configures the search priority of the BroadSoft directory.	
<b>Permitted Values</b>	Integer greater than or equal to 0	
<b>Default</b>	5	
<b>Parameter</b>	directory_setting.bw_directory.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the users to access the BroadSoft directory by pressing the <b>Directory/Dir</b> soft key.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	directory_setting.bw_directory.priority	<y0000000000xx>.cfg
<b>Description</b>	It configures the display priority of the BroadSoft directory.	
<b>Permitted Values</b>	Integer greater than or equal to 0	
<b>Default</b>	6	

## Broadsoft Visual Voice Mail

<b>Parameter</b>	bw.voice_mail.visual.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the visual voice mail feature for the phone. <b>Note:</b> It works only if "bw.xsi.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	bw.voice_mail.visual.display_videomail.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to display the video mails in the voice mail list. <b>Note:</b> It works only if "bw.xsi.enable" and "bw.voice_mail.visual.enable" are set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	voice_mail.message_key.mode	<y0000000000xx>.cfg
<b>Description</b>	It configures the phone behavior when pressing the MESSAGE key when the phone is idle.	
<b>Permitted Values</b>	0-enter the Set Voice Mail Code screen if the voice mail access code has not been configured; dial out the voice mail access code if the voice mail access code has been configured.	



	1-enter the View Voice Mail screen
<b>Default</b>	0

## Broadsoft SCA

<b>Parameter</b>	account.X.share_line.barge_in.enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the users to interrupt/barge into an active call on the shared line.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2, CP920, CP925 and CP935W	
<b>Parameter</b>	account.X.shared_line_one_touch_bargein.enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the phone to barge in the call between remote shared line party and the third party by pressing the line key.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2, CP920, CP925 and CP935W	
<b>Parameter</b>	account.X.shared_line_one_touch_retrieve.enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the phone to retrieve the public held call on remote shared line party phone by pressing the line key.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2, CP920, CP925 and CP935W	
<b>Parameter</b>	features.auto_release_bla_line	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the server to release the connection by sending a notify message to phone when the SCA call is ended.	
<b>Permitted Values</b>	0-Disabled, the phone will send a notify message to the server to release the connection. 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T30P, T30, T19(P) E2, CP920, CP925 and CP935W	
<b>Parameter</b>	account.X.sca_manage_interface_display_time <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures how long (in seconds) the phone goes back to the idle screen when entering the Shared Calls screen by long pressing the shared line key.	
<b>Permitted Values</b>	Integer from 0 to 2147483647	
<b>Default</b>	10	
<b>Supported</b>	All phones except T30P, T30, T19(P) E2, CP920, CP925 and CP935W	

<b>Devices</b>	
----------------	--

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42U/T42G/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2.

## Broadsoft Call Park

<b>Parameter</b>	features.call_park.park_mode	<y0000000000xx>.cfg
<b>Description</b>	It configures the call park mode.	
<b>Permitted Values</b>	<b>0</b> -XSI <b>1</b> -FAC, park a call through dialing the call park code.	
<b>Default</b>	0	
<b>Web UI</b>	Features > Pick up & Park > Call Park Mode	
<b>Parameter</b>	features.call_park.group_enable	<y0000000000xx >.cfg
<b>Description</b>	It enables or disables the group call park feature.	
<b>Permitted Values</b>	<b>0</b> -Disabled <b>1</b> -Enabled, users can select <b>GPark</b> during a call to park a call to the first available user in the call park group, and select <b>Retrieve</b> in the dialing screen to retrieve the parked call.	
<b>Default</b>	0	
<b>Web UI</b>	Features > Pickup & Park > Group Call Park	
<b>Parameter</b>	features.call_park.park_ring	<y0000000000xx >.cfg
<b>Description</b>	It enables or disables the phone to play a warning tone when a call is parked against its line. <b>Note:</b> It works only if "features.call_park.park_visual_notify_enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	<b>0</b> -Disabled <b>1</b> -Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Features > Pickup & Park > Audio Alert for Parked Call	
<b>Parameter</b>	features.call_park.park_visual_notify_enable	<y0000000000xx >.cfg
<b>Description</b>	It enables or disables the phone to display a parked indicator when a call is parked against its line.	
<b>Permitted Values</b>	<b>0</b> -Disabled <b>1</b> -Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Features > Pickup & Park > Visual Alert for Parked Call	
<b>Parameter</b>	features.parked_call_monitor.blf_audio_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to play an audio alert when a call is parked against the monitored line.	
<b>Permitted Values</b>	<b>0</b> -Disabled <b>1</b> -Enabled	

<b>Default</b>	1	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P, T30P, T30, T29G, T19(P) E2, CP920, CP925 and CP935W	
<b>Web UI</b>	Features > Pickup & Park > Audio Alert for BLF Parked Call Monitor	
<b>Parameter</b>	features.parked_call_monitor.blf_visual_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to display a visual alert when a call is parked against the monitored line.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P, T30P, T30, T29G, T19(P) E2, CP920, CP925 and CP935W	
<b>Web UI</b>	Features > Pickup & Park > Visual Alert for BLF Parked Call Monitor	
<b>Parameter</b>	features.parked_call_monitor.blf_ring_type	<y0000000000xx>.cfg
<b>Description</b>	It configures an alert tone to play when a call is parked against the monitored line. <b>Note:</b> It works only if "features.parked_call_monitor.blf_audio_enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	Ring1.wav, Ring2.wav, Ring3.wav, Ring4.wav, Ring5.wav, Ring6.wav, Ring7.wav, Ring8.wav, Ring9.wav, Ring10.wav, Ring11.wav, Ring12.wav, Ring13.wav, Silent.wav, Splash.wav or custom ring tone name (for example, Config:Customring.wav). <u>For T3 phones:</u> Ring1.wav, Ring2.wav, Ring3.wav, Ring4.wav, Silent.wav, Splash.wav or custom ring tone name (for example, Customring.wav)	
<b>Default</b>	Splash.wav	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P, T30P, T30, T29G, T19(P) E2, CP920, CP925 and CP935W	
<b>Web UI</b>	Features > Pickup & Park > Ring Type for BLF Parked Call Monitor	
<b>Phone UI</b>	<u>Color Screen Phones:</u> Menu > Basic > Sound > Ring Type for BLF Parked Call Monitor <u>Black-and-white Screen Phones:</u> Menu > Settings > Basic Settings > Sound > Ring Type for BLF Parked Call Monitor	
<b>Parameter</b>	features.call_park.group_park_code	<y0000000000xx>.cfg
<b>Description</b>	It configures the group call park code. <b>Note:</b> It works only if "features.call_park.park_mode" is set to 1 (FAC).	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Features > Pickup & Park > Group Call Park Code	
<b>Parameter</b>	account.X.callpark_enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables Broadsoft call park feature.	
<b>Permitted Values</b>	0-Disabled 1-Enabled, the phone sends the subscription package to the server with the header "Event:x-broad-	

	works-callpark"
<b>Default</b>	1

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## Broadsoft Emergency Call

<b>Parameter</b>	bw.emergency_calling.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the BroadWorks Emergency Calling feature.	
<b>Permitted Values</b>	0-Disabled 1-Enabled, the phone supports network hold and operator ring-back for emergency calls.	
<b>Default</b>	0	

## BroadSoft Call Waiting Sync

<b>Parameter</b>	call_waiting.mode	<y0000000000xx>.cfg
<b>Description</b>	It configures the call waiting mode. <b>Note:</b> If it is set to 1 (XSI), it works only if "bw.xsi.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Local 1-XSI, the status of the call waiting feature between the IP phone and the BroadWorks server can be synchronized.	
<b>Default</b>	0	

## Zoom Parameters

This section shows the parameters you can use to configure the phone with Zoom server.

### Zoom Settings

<b>Parameter</b>	zm.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the Zoom features.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Parameter</b>	zm.escalate_meeting.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables an active call to escalate into a meeting. <b>Note:</b> It works only if "zm.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-The phone does not display the Zoom softkey. 1-Enabled, the phone displays the Zoom softkey when the call is active, you can create a conference via pressing the Zoom softkey.	

<b>Default</b>	1	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Parameter</b>	account.X.personal_meeting_id <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the personal meeting ID for the every Zoom user when they have a meeting. <b>Note:</b> It works only if "zm.enable" and "zm.escalate_meeting.enable" are set to 1 (Enabled).	
<b>Permitted Values</b>	<b>Blank</b> -The personal meeting ID of Zoom user is blank. <b>string</b> -The personal meeting ID of Zoom user is what you configured.	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Parameter</b>	zm.display_call_type	<y0000000000xx>.cfg
<b>Description</b>	It configures the call type icon displayed on the LCD screen when in a call. <b>Note:</b> It works only if "zm.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-The LCD screen does not display the call type icon. 1-The LCD screen displays the call type icon, DM means the call type is P2P, Onnet means the call is on the Zoom server, Offnet means the call is not on the Zoom server.	
<b>Default</b>	1	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Parameter</b>	account.X.transfer_voice_mail.mode <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to transfer to voice mail when the phone has an incoming call or is in a call. <b>Note:</b> It works only if "zm.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled. 1-The call interface has a "Trans to VM" softkey. 2-When you press the transfer softkey, you can select transfer to VM ("features.transfer.mode" is set to 0).	
<b>Default</b>	1	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## Zoom Barge in Parameters

If you want to use Barge In feature, you should configure a feature access code on the phone. If no feature access code is configured, the Barge In feature is disabled.

<b>Parameter</b>	blf.normal_barge_in_code	<y0000000000xx>.cfg
<b>Description</b>	It configures the feature access code for normally barging in the active call of the monitored line. If configured, you can press the <b>Barge In</b> soft key to barge in the call. Barge-in plays an audio alert to	

	<p>indicate the arrival of a new participant to the call and all call participants can interact.</p> <p><b>Note:</b> It applies to the Zoom server only.</p>	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Case Scenario</b>	<p>The feature access code is *32. A (your phone) monitors party B (number: 8866), party B and party C is during the call.</p> <p>Set the following:</p> <pre>blf.normal_barge_in_code = *32 features.blf.show_callinfo.enable = 1</pre> <p>During the call of the monitored line, long press the BLF key and press the <b>Barge In</b> soft key, then the phone calls <b>*328866</b> to barge in the call. All call participants can interact during the call.</p>	
<b>Related Parameters</b>	features.blf.show_callinfo.enable	
<b>Parameter</b>	blf.whisper_barge_in_code	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the feature access code for barging in the active call of the monitored line in whisper.</p> <p>If configured, you can press the <b>Whisper BargeIn</b> soft key to barge in the call. You can hear call participants but your audio can only be transmitted to the user you are monitoring.</p> <p><b>Note:</b> It applies to the Zoom server only.</p>	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Case Scenario</b>	<p>The feature access code is *32. A (your phone) monitors party B (number: 8866), party B and party C is during the call.</p> <p>Set the following:</p> <pre>blf.whisper_barge_in_code = *32 features.blf.show_callinfo.enable = 1</pre> <p>During the call of the monitored line, long press the BLF key and press the <b>Whisper BargeIn</b> soft key, then the phone calls <b>*328866</b> to barge in the call. You can hear all call participants, but only party B can hear you.</p>	
<b>Related Parameters</b>	features.blf.show_callinfo.enable	
<b>Parameter</b>	blf.listen_barge_in_code	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the feature access code for barging in the active call of the monitored line in listening mode.</p> <p>If configured, you can press the <b>Monitor</b> soft key to barge in the call. You can hear call participants but your outbound audio can not be transmitted to other parties.</p> <p><b>Note:</b> It applies to the Zoom server only.</p>	
<b>Permitted Values</b>	String within 32 characters	

<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Case Scenario</b>	<p>The feature access code is *32. A (your phone) monitors party B (number: 8866), party B and party C is during the call.</p> <p>Set the following:</p> <p>blf.listen_barge_in_code = *32</p> <p>features.blf.show_callinfo.enable = 1</p> <p>During the call of the monitored line, long press the BLF key and you press the <b>Listen BargeIn</b> soft key, then the phone calls *328866 to barge in the call. You are automatically muted, so you can hear all participants, but no one can hear you.</p>	
<b>Related Parameters</b>	features.blf.show_callinfo.enable	
<b>Parameter</b>	blf.takeover_barge_in_code	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the feature access code for taking over the active call of the monitored line.</p> <p><b>Note:</b> It applies to the Zoom server only.</p>	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Case Scenario</b>	<p>The feature access code is *32. A (your phone) monitors party B (number: 8866), party B and party C is during the call.</p> <p>Set the following:</p> <p>blf.takeover_barge_in_code = *32</p> <p>features.blf.show_callinfo.enable = 1</p> <p>During the call of the monitored line, long press the BLF key and you press the <b>Take Over</b> soft key, then the phone calls *328866 to take over the call. B automatically exits the call and you are talking with C.</p>	
<b>Related Parameters</b>	features.blf.show_callinfo.enable	
<b>Parameter</b>	sip.blf.invite_subject_header.mode	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to carry the subject in the header field in the SIP message when the phone using BLF call.	
<b>Permitted Values</b>	<p>0-Disabled</p> <p>1-Enabled</p>	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Parameter</b>	sip.blf_post_body.enable	<y0000000000xx>.cfg
<b>Description</b>	It configures the LCD screen to display the identity contained in the Remote field of the NOTIFY message when the phone monitored the call queue.	
<b>Permitted Values</b>	0-The phone displays the identity contained in the entity field of dialog-info xmlns in the NOTIFY message when the phone monitored the call queue.	

	1-The phone displays the identity contained in the Remote field of the NOTIFY message when the phone monitored the call queue.
<b>Default</b>	Blank
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30
<b>Case Scenario</b>	<p>The feature access code is *32. A (your phone) monitors queue B (number: 8866), B and party C is during the call.</p> <p>Set the following:</p> <pre> sip.blf_post_body.enable = 1 blf.takeover_barge_in_code = *32 features.blf.show_callinfo.enable = 1 </pre> <p>During the call of the monitored line, long press the BLF key and you press the <b>Barge In</b> soft key of active call one, then the phone calls *32886600 to barge in the call. If you press the <b>Barge In</b> soft key of active call two, then the phone calls *32886601 to barge in the call.</p>
<b>Related Parameters</b>	features.blf.show_callinfo.enable

## Zoom Call Settings

<b>Parameter</b>	account.X.external_intercom.whisper_barge_in <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	<p>It enables or disables the phone to answer an intercom call in the way of whisper barge in, which means you can hear call participants but your audio can only be transmitted to the user you are monitoring.</p> <p><b>Note:</b> It works only if "features.intercom.allow" and "call_waiting.enable" are set to 1 (Enabled).</p>	
<b>Permitted Values</b>	<p>0-Disabled 1-Enabled</p>	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Parameter</b>	account.X.external_intercom.ignore_dnd.mode <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to answer the intercom call when the DND is activated.	
<b>Permitted Values</b>	<p>0-Disabled 1-Enabled</p>	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Parameter</b>	account.X.ice.ring_mode <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the phone to reply 183 (SDP with candidate) during ICE negotiation when there is an incoming call.	
<b>Permitted Values</b>	<p>0-The phone does not reply 183 when there is an incoming call. 1-The phone replies 183 when there is an incoming call.</p>	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	



<b>Parameter</b>	account.X.ice.hold_mode <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the ICE to use ICE restart when the phone on hold or resume.	
<b>Permitted Values</b>	0-Enabled 1-Disabled	
<b>Default</b>	1	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Parameter</b>	features.blind_transfer.call_display_method	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to display transferring after performing the blind transfer. <b>Note:</b> It works only if "features.transfer.allow" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-After performing the blind transfer, the phone displays nothing. If the blind transfer fails, the phone receives a recall. 1- After performing the blind transfer, the phone displays transferring. If the blind transfer fails, the phone display Transfer Failed.	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Parameter</b>	features.action_uri.mode	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the zoom APP to bind and control the phone through SIP NOTIFY message with the "Event: ACTION-URI" header from Zoom server. <b>Note:</b> It works only if "features.action_uri.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	

<sup>[1]</sup>X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## Zoom SCA

<b>Parameter</b>	account.X.shared_line.auto_change_status.mode <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the phone to automatically changes the SCA status according to the call status.	
<b>Permitted Values</b>	0-Disabled, when the phone change call status, the SCA status change if the Zoom server sends notification. 1-Enabled, SCA status automatically changes when the call status changed.	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42U/T42G/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2.

## Zoom Emergency Call

<b>Parameter</b>	account.X.take_switch_info.signals <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the phone to obtain and the MAC and Port ID information of the switch or the BSSID information of the WIFI when the LLDP changed.	
<b>Permitted Values</b>	<b>Blank</b> -The phone will register again when the LLDP changed. <b>REGISTER</b> -When making an emergency call, the phone will send switch information (MAC and Port ID) in the Call-Info header of the INVITE packet to the server when the LLDP changed.	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## Zoom Security

<b>Parameter</b>	account.X.verstat.enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the security level feature when the phone has an incoming call. If the number is safe, the icon displayed on the screen is tick, if it is unsafe, the icon is exclamation mark, if the number is unknown, the icon is question mark.	
<b>Permitted Values</b>	<b>0</b> -Disabled <b>1</b> -Enabled, the phone will judge the incoming number security level via verstat field.	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Parameter</b>	verstat.parameter.name	<y0000000000xx>.cfg
<b>Description</b>	It configures the name of verstat field in the INVITE message. Multiple fields are separated by commas. <b>Note:</b> It works only if "account.X.verstat.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	<b>verstat</b> -The verstat field is verstat. <b>String</b> -The verstat field is what you configured.	
<b>Default</b>	verstat	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Parameter</b>	verstat.passed.criteria	<y0000000000xx>.cfg
<b>Description</b>	It configures the value of the verstat field to identify that incoming call number is safe. <b>Note:</b> It works only if "account.X.verstat.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	<b>Blank</b> -When the value is blank, the incoming call number is safe. <b>String</b> -When the value corresponds to the field of verstat in the INVITE message, the incoming call number is safe. Multiple fields can be separated by commas. <b>Example:</b>	

	verstat.passed.criteria=TN-VALIDATION-PASSED,TN-VALIDATION-NOT-PRESENT  The INVITE message with the "P-Asserted-Identity: "Zoom calling for Main Auto Receptionist" <sip:16692521823@nil;verstat=TN-VALIDATION-PASSED>" and "P-Asserted-Identity: "Zoom calling for Main Auto Receptionist" <sip:16692521823@nil;verstat=TN-VALIDATION-NOT-PRESENT> header fields will be safe.	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Parameter</b>	verstat.failed.criteria	<y0000000000xx>.cfg
<b>Description</b>	It configures the value of the verstat field to identify that incoming call number is unsafe. <b>Note:</b> It works only if "account.X.verstat.enable" is set to 1 (Enabled). The icon displayed on the screen is exclamation mark.	
<b>Permitted Values</b>	<b>Blank</b> -When the verstat field is blank, the incoming number is unsafe. <b>String</b> -When the configured value is the configured field, the incoming number is unsafe. <b>Note:</b> When the "verstat.passed.criteria" and "verstat.failed.criteria" are blank or both values are the same, it means the number is unknown.	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## Start2Start ACD Parameters

For more information on ACD, refer to [Using\\_Star2Star\\_ACD\\_on\\_Yealink\\_IP\\_Phones](#).

<b>Parameter</b>	account.X.acd.call_information <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the string the phone dials out when the ACD agent logs into/logs out of the ACD system (you press the <b>In/Out (LogIn/Out)</b> soft key on the phone).  The value format: Call Center Number<time interval > User ID<time interval > Password.  Time interval ranges from 1 to 20 (in seconds).  For example : account.1.acd.call_information = 806<1 > 1005<2 > 1234  The phone will dial out the call center number 806, wait for 1s, automatically enter the user ID 1005, wait for 2s, automatically enter the password 1234 when you press the In/Out (LogIn/Out) soft key on the phone.  <b>Note:</b> It works only if "account.X.sip_server_type" is set to 12 (Star2Star).	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Parameter</b>	account.X.acd.refresh_url <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the URL the phone sends when the ACD agent logs into/logs out of the ACD system, or refreshes the status (you press the <b>In/Out (LogIn/Out)</b> or <b>Refresh</b> soft key on the phone).	

	<b>Note:</b> It works only if “account.X.sip_server_type” is set to 12 (Star2Star).	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Parameter</b>	account.X.acd.away_url <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	<p>It configures the URL the phone sends when the ACD agent changes the status to away (you press the <b>Away</b> soft key on the phone).</p> <p>For example :</p> <p>account.1.acd.away_url= http://portal-dev.star2star.com:8181/yealink/reason_code_response?reason_code=#REASONCODE&amp;agent_extension=ext_843_85&amp;agent_location= starbox_628&amp;agent_phone=94&amp;customer_id=435s</p> <p>#REASONCODE will be automatically replaced with the away code you entered when the URL is sent to the server.</p> <p><b>Note:</b> It works only if “account.X.sip_server_type” is set to 12 (Star2Star) and “account.X.acd.unavailable_reason_enable” is set to 1 (Enabled).</p>	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Parameter</b>	account.X.acd.available_url <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	<p>It configures the URL the phone sends when the ACD agent changes the status to available (you press the <b>Avail</b> soft key on the phone).</p> <p><b>Note:</b> It works only if “account.X.sip_server_type” is set to 12 (Star2Star).</p>	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	

<sup>[1]</sup>X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## Alcatel-Lucent Barge in Parameters

If you want to use Barge In feature, you should configure a feature access code on the phone. If no feature access code is configured, the Barge In feature is disabled.

<b>Parameter</b>	blf.normal_barge_in_code	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the feature access code for normally barging in the active call of the monitored line.</p> <p>If configured, you can press the <b>Barge In</b> soft key to barge in the call. Barge-in plays an audio alert to indicate the arrival of a new participant to the call and all call participants can interact.</p> <p><b>Note:</b> It applies to the Alcatel-Lucent CTS only.</p>	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P, T30P, T30, T29G, T19(P) E2, CP920, CP925 and CP935W	

<b>Case Scenario</b>	The feature access code is *32. A (your phone) monitors party B (number: 8866), party B and party C is during the call. Set the following: blf.normal_barge_in_code = *32 features.blf.show_callinfo.enable = 1 During the call of the monitored line, long press the BLF key and press the <b>Barge In</b> soft key, then the phone calls <b>*328866</b> to barge in the call. All call participants can interact during the call.	
<b>Related Parameters</b>	features.blf.show_callinfo.enable	
<b>Parameter</b>	blf.whisper_barge_in_code	<y0000000000xx>.cfg
<b>Description</b>	It configures the feature access code for barging in the active call of the monitored line in whisper. If configured, you can press the <b>Whisper Bargeln</b> soft key to barge in the call. You can hear all call participants but your audio can only be transmitted to the user you are monitoring. <b>Note:</b> It applies to the Alcatel-Lucent CTS only.	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P, T30P, T30, T29G, T19(P) E2, CP920, CP925 and CP935W	
<b>Case Scenario</b>	The feature access code is *32. A (your phone) monitors party B (number: 8866), party B and party C is during the call. Set the following: blf.whisper_barge_in_code = *32 features.blf.show_callinfo.enable = 1 During the call of the monitored line, long press the BLF key and press the <b>Whisper Bargeln</b> soft key, then the phone calls <b>*328866</b> to barge in the call. You can hear all call participants, but only party B can hear you.	
<b>Related Parameters</b>	features.blf.show_callinfo.enable	
<b>Parameter</b>	blf.listen_barge_in_code	<y0000000000xx>.cfg
<b>Description</b>	It configures the feature access code for barging in the active call of the monitored line in listening mode. If configured, you can press the <b>Listen Bargeln</b> soft key to barge in the call. You are automatically muted so you can listen on the call only. Your outbound audio can not be transmitted to either party. <b>Note:</b> It applies to the Alcatel-Lucent CTS only.	
<b>Permitted Values</b>	String within 32 characters	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P, T30P, T30, T29G, T19(P) E2, CP920, CP925 and CP935W	
<b>Case Scenario</b>	The feature access code is *32. A (your phone) monitors party B (number: 8866), party B and party C is during the call. Set the following:	

	blf.listen_barge_in_code = *32 features.blf.show_callinfo.enable = 1 During the call of the monitored line, long press the BLF key and you press the <b>Listen Bargain</b> soft key, then the phone calls <b>*328866</b> to barge in the call. You are automatically muted, so you can hear all call participants, but no one can hear you.	
<b>Related Parameters</b>	features.blf.show_callinfo.enable	
<b>Parameter</b>	blf.listen_barge_in_code	<y0000000000xx>.cfg

## Ethernet Interface MTU Parameters

<b>Parameter</b>	static.network.mtu_value <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the Ethernet interface Maximum Transmission Unit (MTU) on the phones.	
<b>Permitted Values</b>	Integer from 1280 to 1500	
<b>Default</b>	1500	
<b>Parameter</b>	static.network.set_fragment.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the fragmented packet sending.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T48S, T46S, T42S, T41S, T33P, T33G, T31P, T31G, T31, T30P, T30, T27G, CP920, CP925, CP935W	

<sup>[1]</sup>If you change this parameter, the phone will reboot to make the change take effect.

## SIP Settings Parameters

<b>Parameter</b>	account.X.compact_header_enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the phone to support compact SIP header.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	account.X.custom_ua <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the suffix of User-Agent in SIP request messages from the phone.	
<b>Permitted Values</b>	String within 256 characters	
<b>Default</b>	Blank	
<b>Parameter</b>	account.X.call_id_mode <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It configures the constitution of caller ID.	
<b>Permitted Values</b>	0-Use random digits 1-Use the combination of the digits and letters	

	2–Use random digits plus MAC address	
<b>Default</b>	0	
<b>Parameter</b>	account.X.path.enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the phone to carry the Supported:path header in the REGISTER request message.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	account.X.insert_outbound_in_route.enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the phone to add outbound server address as the topmost Route header in the request message. <b>Note:</b> It works only if the received 200 OK response for the REGISTER request contains the Service route header.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	account.X.invite_with_rpid_header.enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the phone to add the Remote-Party-ID (RPID) header in the initial INVITE message.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P and T29G	
<b>Parameter</b>	account.X.third_part_request_with_route.enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the phone to carry the Route header in the request message which is sent to the third-party server (for example, a Music On Hold server). <b>Note:</b> It works only if the received 200 OK response for the REGISTER request contains the Service route header.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	sip.unreg_with_socket_close	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to close the socket immediately when the user deregisters the corresponding account(s).	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	account.X.check_cseq.enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the phone to check if the CSeq sequence number in the request is lower than that in the previous request on the same dialog.	
<b>Permitted Values</b>	0-Disabled	

	1-Enabled. If the CSeq sequence number in the request is lower than that in the previous request, the phone will reject the request.	
<b>Default</b>	1	
<b>Parameter</b>	account.X.check_to_tag.enable <sup>[1]</sup>	<MAC>.cfg
<b>Description</b>	It enables or disables the phone to check if the To-tag is carried in the To header in renewal request.	
<b>Permitted Values</b>	0-Disabled 1-Enabled. If the To-tag does not exist, the phone will reject the request.	
<b>Default</b>	0	
<b>Parameter</b>	features.call_invite_format	<y0000000000xx>.cfg
<b>Description</b>	It configures the format of callee field in the INVITE message.	
<b>Permitted Values</b>	0-sip:XXX 1-tel:Number, you need to set "account.X.outbound_proxy_enable" to 1.	
<b>Default</b>	0	
<b>Parameter</b>	sip.escape_characters.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to convert ASCII code into corresponding symbol.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Case Scenario</b>	<p>Target characters: %5F (escape character % plus the ASCII characters 5F)</p> <p>1. If you want to convert the ASCII code, set the following:</p> <pre>sip.escape_characters.enable = 1 sip.reserve_characters = %NULL%</pre> <p>Result: The target characters %5F are converted to _.</p> <p>2. If you do not want to convert the ASCII code, set the following:</p> <pre>sip.escape_characters.enable = 0 sip.reserve_characters = %</pre> <p>Result: The target characters %5F remain the same.</p>	
<b>Parameter</b>	sip.reserve_characters	<y0000000000xx>.cfg
<b>Description</b>	It specifies the characters that the phone does not recognize as the escape one. Multiple characters are not separated.	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P and T29G	
<b>Related Parameters</b>	sip.escape_characters.enable	
<b>Parameter</b>	sip.tcp_port_random_mode	<y0000000000xx>.cfg



<b>Description</b>	It configures the listening port mode.	
<b>Permitted Values</b>	<b>0</b> -random source port (non 506x), fixed ports (506x) carried in the Contact, Via header. <b>1</b> -random source port (non 506x) and other ports (non 506x) carried in the Contact, Via header.	
<b>Default</b>	1	
<b>Parameter</b>	sip.listen_mode	<y0000000000xx>.cfg
<b>Description</b>	It configures the listening mode.	
<b>Permitted Values</b>	<b>0</b> -according to the transport protocol <b>1</b> -listening TCP and UDP <b>2</b> -listening TCP and UDP, and subscribe for BLF List containing transport=TCP in the Contact header.	
<b>Default</b>	0	
<b>Parameter</b>	sip.send_response_by_request	<y0000000000xx>.cfg
<b>Description</b>	It configures where the IP phone retrieves the destination address for response. The phone will then send all SIP response messages to the destination address.	
<b>Permitted Values</b>	<b>0</b> -from VIA header in the request message <b>1</b> -from source address of the request message	
<b>Default</b>	1	
<b>Parameter</b>	sip.requesturi.e164.addglobalprefix	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to add a global prefix "+" to the E.164 user parts in SIP: URI.	
<b>Permitted Values</b>	<b>0</b> -Disabled <b>1</b> -Enabled, the phone will automatically add a prefix "+" to the number in the E.164 format when you dial using the SIP URI (for example 862512345000@sip.com).	
<b>Default</b>	0	
<b>Parameter</b>	sip.send_keepalive_by_socket	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to send the keep-alive packets based on the transport protocol. <b>Note:</b> It works only if "account.X.nat.udp_update_enable" is set to 1 (Default).	
<b>Permitted Values</b>	<b>0</b> -Disabled, the phone sends the keep-alive packets based on the account <b>1</b> -Enabled	
<b>Default</b>	1	
<b>Parameter</b>	sip.sdp_early_answer_or_offer	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to generate an SDP Offer or Answer message when receiving a reliable provisional response or PRACK request and response.	
<b>Permitted Values</b>	<b>0</b> -Disabled <b>1</b> -Enabled	
<b>Default</b>	0	
<b>Parameter</b>	sip.reliable_protocol.timerae.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the timer for ict and nict when TCP protocol is used. <b>Note:</b> This parameter can be used for fast failover purpose when TCP connection fails.	
<b>Permitted Values</b>	<b>0</b> -Disabled <b>1</b> -Enabled	

<b>Default</b>	0	
<b>Parameter</b>	sip.mac_in_ua	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to carry the MAC address information in the User-Agent header.	
<b>Permitted Values</b>	<b>0</b> -Disabled <b>1</b> -Enabled, the phone will carry the MAC address with colons (for example 00:15:65:7f:fb:7e) in the User-Agent header. <b>2</b> -Enabled, the phone will carry the MAC address without colons (for example 0015657ffb7e) in the User-Agent header.	
<b>Default</b>	0	

[1]X is the account ID. For T57W/T54W/T48U/T48S/T48G/T46U/T46S/T46G/T29G, X=1-16; for T53W/T53/T53C/T43U/T42G/T42U/T42S, X=1-12; for T41P/T41S/T27G, X=1-6; for T33P/T33G, X=1-4; for T40P/T40G/T23P/T23G, X=1-3; for T31P/T31G/T31/T21(P) E2, X=1-2; for T30P/T30/T19(P) E2/CP920/CP925/CP935W, X=1.

## Call Settings Parameters

<b>Parameter</b>	phone_setting.show_code403	<y0000000000xx>.cfg
<b>Description</b>	It configures the display message on the phone screen when receiving a 403 message. If it is left blank, the phone will display the value sent from the server when receiving the 403 message.	
<b>Permitted Values</b>	String within 99 characters	
<b>Default</b>	Blank	
<b>Parameter</b>	phone_setting.incoming_call_when_dialing.priority	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to interrupt the user's operations in the contact, history, and dialing screen when there is an incoming call.	
<b>Permitted Values</b>	<b>0</b> -Disabled, the phone will not switch to the incoming call screen if there is an incoming call arrives when the phone is in the dialing/transfer/conference/new call screen. <b>1</b> -Enabled, if there is an incoming call arrives when the phone is in the directory/history screen, the phone will the incoming call screen so that you can directly pick up the call. <b>2</b> -Enabled, if there is an incoming call arrives when the phone is in the dialing/transfer/conference/new call screen, the phone will switch to the incoming call screen so that you can directly pick up the call.	
<b>Default</b>	1	
<b>Parameter</b>	phone_setting.end_call_net_disconnect.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to end the call if the network is unavailable during the call.	
<b>Permitted Values</b>	<b>0</b> -Disabled <b>1</b> -Enabled, the phone will end the call and go to the Idle screen after 5 seconds.	
<b>Default</b>	0	
<b>Parameter</b>	features.station_name.value	<y0000000000xx>.cfg
<b>Description</b>	It configures station name to be displayed on the top-left corner of the LCD screen. <b>Note:</b> The text displayed might be truncated if "features.station_name.scrolling_display" is set to 0 (Dis-	

	abled). For T43U/T42G/T42S/T42U/T41P/T41S/T27G phones, the station name is displayed in the middle bottom of the idle screen.	
<b>Permitted Values</b>	Blank (the label of the default account will be displayed) String	
<b>Default</b>	Blank	
<b>Parameter</b>	features.station_name.scrolling_display	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to scroll the string display on the top-left corner of the LCD screen.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Parameter</b>	phone_setting.incoming_call.reject.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the user to manually reject an incoming call on the phone.	
<b>Permitted Values</b>	0-Disabled, the <b>Reject</b> soft key disappears from the incoming call screen; pressing X/Mute key, tap the on-hook key or using action URI to reject the call is not permitted. 1-Enabled	
<b>Default</b>	1	
<b>Parameter</b>	features.call_out_directory_by_off_hook.enable	<y0000000000xx>.cf
<b>Description</b>	It enables or disables the phone to automatically dial out the focus contact from Directory once you press the off-hook key, lift the handset, or press the Speakerphone key.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Parameter</b>	features.ok_key.talking.mode	<y0000000000xx>.cfg
<b>Description</b>	It configures how the phone behaves when pressing the OK key during the call.	
<b>Permitted Values</b>	0-Do not response 1-The phone sends a SIP INFO request that contains the <b>event flashhook</b> message body to the remote party. 2-Enter the <b>Status</b> screen, you can check the firmware version, phone's IP address and so on for troubleshooting. 3-Unhold the call 4-Enter the <b>Menu</b> screen, you are allowed to configure Call Forward, Call Waiting, Auto Answer, Key As Send, Hotline, Auto Redial, DND, Intercom, Call Completion, History Setting, Paging List features.	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T57W, T48G, T46G, T42G, T41P and T29G	
<b>Parameter</b>	features.missed_call_icon_event	<y0000000000xx>.cfg
<b>Description</b>	It configures the effect of tapping the missed call icon.	
<b>Permitted Values</b>	0-Tap the missed call icon to pop up the message "X New Missed Call(s)". 1-Tap the missed call icon to directly enter the call history screen.	

	2-There is no response when tapping the missed call icon.
<b>Default</b>	0
<b>Case Scenario</b>	When you disable the phone to pop up the message if it misses a call (features.missed_call_popup.enable=0), you can also disable the phone to pop up the message when tapping the missed call icon in the status bar.
<b>Supported Devices</b>	T57W, T48U, T48S

## Unify Parameters

<b>Parameter</b>	unify.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the Unify features.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T48S, T46S, T42S, T41S, T33P, T33G, T31P, T31G, T31, T30P, T30, T27G, CP920, CP925, CP935W	
<b>Case Scenario</b>	Identify the Notify messages sent by the Unify server and synchronize the FWD / DND feature with server.	

## Provisioning Parameters

<b>Parameter</b>	static.auto_provision.allsettings.sync.path	<y0000000000xx>.cfg
<b>Description</b>	It configures the URL for uploading the <MAC>-all.cfg file when the phone receives a SIP NOTIFY message which contains the header "Event: put-config".	
<b>Permitted Values</b>	String	
<b>Default</b>	Blank	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	
<b>Parameter</b>	static.auto_provision.allsettings.sync	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to upload the <MAC>-all.cfg file to the server.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Supported Devices</b>	T57W, T54W, T53W, T53, T53C, T48U, T46U, T43U, T42U, T33P, T33G, T31P, T31G, T31, T30P, T30	

## Troubleshooting Methods

Yealink phones provide feedback in a variety of forms such as log files, packets, status indicators and so on, which can help you more easily find the system problem and fix it.

### Topics

[Exporting All the Diagnostic Files](#)  
[Log Files](#)  
[Resetting Phone and Configuration](#)  
[Packets Capture](#)  
[Watch Dog](#)  
[Network Diagnostics](#)  
[Analyzing Configuration Files](#)  
[Device Status](#)  
[Phone Reboot](#)

## Exporting All the Diagnostic Files

Yealink phones support three types of diagnostic files (including Pcap trace, log files, and BIN configuration files) to help analyze your problem. You can export these files at a time and troubleshoot if necessary. The file format of the exported diagnostic file is \*.tar.

When exporting all diagnostic files, you can additionally choose to export audio diagnostic files for problem analysis. The file format of the exported diagnostic file is \*.dat.

### Procedure

1. From the web user interface, go to **Settings > Configuration**.
2. (Optional.) Check **Audio Diagnostic File** in the **Export Addition Options** field to choose to export audio diagnostic files.
3. Click **Start** in the **Export All Diagnostic Files** field to begin capturing signal traffic.  
The system log level will be automatically set to 6.  
An audio diagnostic file named <firmware version>\_<time>.dat is successfully saved to your local system.
4. Reproduce the issue.
5. Click **Stop** in the **Export All Diagnostic Files** field to stop the capture.
6. Click **Export** to open the file download window, and then save the diagnostic file to your local system.  
A diagnostic file named <MAC>-DiagnoseInfo.tar is successfully exported to your local system.

**Note:** After exporting the diagnostic files, you can create a ticket to describe your problem at [ticket.yealink.com](https://ticket.yealink.com), and Yealink support team will help you locate the root cause.

## Exporting Headset Audio Diagnostic File

When the Yealink USB headset is connected to your T4XU/T5XW phone, you can export the related diagnostic files of the headset to help analyze your problem.

### Procedure

1. From the web user interface, go to **Settings > Configuration**.
2. Click **Start** in the **Headset Audio Diagnostic** field to begin capturing signal traffic.
3. Reproduce the issue.
4. Click **Stop** in the **Headset Audio Diagnostic** field to stop the capture.  
An audio diagnostic file named <firmware version>\_<time>.dat is successfully saved to your local system.

**Note:** After exporting the diagnostic files, you can create a ticket to describe your problem at [ticket.yealink.com](https://ticket.yealink.com), and Yealink support team will help you locate the root cause.

## Exporting Headset Log

When the Yealink USB headset is connected to your T4XU/T5XW phone, you can export the headset log to help analyze your problem.

### Procedure

1. From the web user interface, go to **Settings > Configuration**.
2. Click **Export** in the **Headset Log** field to open the file download window, and then save the log file to your local system.

A log file is successfully exported to your local system.

## Log Files

You can configure your device to generate the log files locally, upload the log to the USB flash drive connected to the phone or sent the log to a syslog server in real time, and use these log files to generate informational, analytic and troubleshoot phones.

### Topics

[Local Logging](#)

[Syslog Logging](#)

## Local Logging

You can enable local logging, specify the severity level, and choose to keep the log locally, upload the log to the USB flash drive connected to the phone or upload the local log files to the provisioning server.

### Topics

[Local Logging Configuration](#)

[Exporting the Log Files to a Local PC](#)

[Uploading Log to the USB Flash Drive](#)

[Viewing the Log Files](#)

## Local Logging Configuration

The following table lists the parameters you can use to configure local logging.

<b>Parameter</b>	static.local_log.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to record log locally. <b>Note:</b> We recommend that you do not disable this feature.	
<b>Permitted Values</b>	<b>0</b> -Disabled, the phone will stop recording log to the log files locally. The log files recorded before are still kept on the phone. <b>1</b> -Enabled, the phone will continue to record log to the log files locally. You can upload the local log files to the provisioning server or a specific server or export them to the local system.	
<b>Default</b>	1	
<b>Web UI</b>	Settings > Configuration > Local Log > Enable Local Log	
<b>Parameter</b>	syslog.usb.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to collect log using a USB flash drive. <b>Note:</b> It works only if "static.local_log.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	<b>0</b> -Disabled <b>1</b> -Enabled	

<b>Default</b>	0
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P, T40P, T40G, T33P, T33G, T31P, T31G, T31, T30P, T30, T29G, T23P, T23G, T21(P) E2 and T19(P) E2
<b>Web UI</b>	Settings > Configuration > Local Log > USB Auto Exporting Syslog
<b>Parameter</b>	static.local_log.level <y0000000000xx>.cfg
<b>Description</b>	It configures the lowest level of local log information to be rendered to the <MAC>.log file. When you choose a log level, it includes all events of an equal or higher severity level and excludes events of a lower severity level. The logging level you choose determines the lowest severity of events to log.
<b>Permitted Values</b>	<p><b>0</b>-the system is unusable</p> <p><b>1</b>-action must be taken immediately</p> <p><b>2</b>-critical condition</p> <p><b>3</b>-error conditions</p> <p><b>4</b>-warning conditions</p> <p><b>5</b>-normal but significant condition</p> <p><b>6</b>-informational</p>
<b>Default</b>	3
<b>Web UI</b>	Settings > Configuration > Local Log > Local Log Level
<b>Parameter</b>	static.local_log.max_file_size <y0000000000xx>.cfg
<b>Description</b>	<p>It configures the maximum size (in KB) of the log files can be stored on the IP phone.</p> <p>When this size is about to be exceeded,</p> <p>(1) If the local log files are configured to be uploaded to the server by the parameter “static.auto_provision.local_log.backup.enable”, the phone will clear all the local log files on the phone once successfully backing up.</p> <p>(2) If “static.auto_provision.local_log.backup.enable” is set to 0 (Disabled), the phone will erase half of the logs from the oldest log information on the phone.</p> <p><b>Example:</b></p> <p>static.local_log.max_file_size = 1024</p>
<b>Permitted Values</b>	<p>T40P/T40G/T23P/T23G/T21(P) E2/T19(P) E2:</p> <p>Integer from 256 to 1024</p> <p>Other phones:</p> <p>Integer from 256 to 2048</p>
<b>Default</b>	<p>T40P/T40G/T23P/T23G/T21(P) E2/T19(P) E2:</p> <p>256</p> <p>Other phones:</p> <p>1024</p>
<b>Web UI</b>	<p>T40P/T40G/T23P/T23G/T21(P) E2/T19(P) E2:</p> <p>Settings &gt; Configuration &gt; Local Log &gt; Max Log File Size (256-1024KB)</p> <p>Other phones:</p>

	Settings > Configuration > Local Log > Max Log File Size (256-2048KB)	
<b>Parameter</b>	static.auto_provision.local_log.backup.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to upload the local log files to the provisioning server or a specific server. <b>Note:</b> The upload path is configured by the parameter "static.auto_provision.local_log.backup.path".	
<b>Permitted Values</b>	<b>0</b> -Disabled <b>1</b> -Enabled, the phone will upload the local log files to the provisioning server or the specific server to back up these files when one of the following happens: - Auto provisioning is triggered; - The size of the local log files reaches the maximum configured by the parameter "static.local_log.max_file_size"; - It's time to upload local log files according to the upload period configured by the parameter "static.auto_provision.local_log.backup.upload_period".	
<b>Default</b>	0	
<b>Parameter</b>	static.auto_provision.local_log.backup.upload_period	<y0000000000xx>.cfg
<b>Description</b>	It configures the period (in seconds) of the local log files uploads to the provisioning server or a specific server. <b>Note:</b> It works only if "static.auto_provision.local_log.backup.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	Integer from 30 to 86400	
<b>Default</b>	30	
<b>Parameter</b>	static.auto_provision.local_log.backup.path	<y0000000000xx>.cfg
<b>Description</b>	It configures the upload path of the local log files. If you leave it blank, the phone will upload the local log files to the provisioning server. If you configure a relative URL (for example, /upload), the phone will upload the local log files by extracting the root directory from the access URL of the provisioning server. If you configure an absolute URL with the protocol (for example, tftp), the phone will upload the local log files using the desired protocol. If no protocol, the phone will use the same protocol with auto provisioning for uploading files. <b>Example:</b> static.auto_provision.local_log.backup.path = tftp://10.3.6.133/upload/ <b>Note:</b> It works only if "static.auto_provision.local_log.backup.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	URL within 1024 characters	
<b>Default</b>	Blank	
<b>Parameter</b>	static.auto_provision.local_log.backup.append	<y0000000000xx>.cfg
<b>Description</b>	It configures whether the uploaded local log files overwrite the existing files or are appended to the existing files.	
<b>Permitted Values</b>	<b>0</b> -Overwrite <b>1</b> -Append (not applicable to TFTP Server)	



<b>Default</b>	0	
<b>Parameter</b>	static.auto_provision.local_log.backup.append.limit_mode	<y0000000000xx>.cfg
<b>Description</b>	It configures the behavior when local log files on the provisioning server or a specific server reach the maximum file size.	
<b>Permitted Values</b>	0-Append Delete, the server will delete the old log and the phone will continue uploading log. 1-Append Stop, the phone will stop uploading log.	
<b>Default</b>	0	
<b>Parameter</b>	static.auto_provision.local_log.backup.append.max_file_size	<y0000000000xx>.cfg
<b>Description</b>	It configures the maximum size (in KB) of the local log files can be stored on the provisioning server or a specific server.	
<b>Permitted Values</b>	Integer from 200 to 65535	
<b>Default</b>	1024	
<b>Parameter</b>	static.auto_provision.local_log.backup.bootlog.upload_wait_time	<y0000000000xx>.cfg
<b>Description</b>	It configures the waiting time (in seconds) before the phone uploads the boot log file to the provisioning server or a specific server after startup.	
<b>Permitted Values</b>	Integer from 1 to 86400	
<b>Default</b>	120	

## Exporting the Log Files to a Local PC

### Procedure

1. From the web user interface, go to **Settings > Configuration**.
2. In the **Enable Local Log** field, select **Enabled** or **ON**.
3. Select **6** from the **Local Log Level** drop-down menu.  
The default local log level is “3”.
4. Enter the limit size of the log files in the **Max Log File Size** field.
5. Click **Confirm** to accept the change.
6. Reproduce the issue.
7. Click **Export** to open the file download window, and then save the file to your local system.  
A diagnostic file named <MAC>-syslog.zip is successfully exported to your local system.

## Uploading Log to the USB Flash Drive

The phone log can be uploaded to the connected USB flash drive.

It is not applicable to

T48G/T46G/T42G/T41P/T40P/T40G/T33P/T33G/T31P/T31G/T31/T30P/T30/T29G/T23P/T23G/T21(P) E2/T19(P) E2 phones.

### Procedure

1. From the web user interface, go to **Settings > Configuration**.
2. In the **Enable Local Log** field, select **Enabled** or **ON**.
3. In the **USB Auto Exporting Syslog** field, select **Enabled** or **ON**.
4. Select the desired value from the **Local Log Level** drop-down menu.  
The default local log level is “3”.

4. Enter the limit size of the log files in the **Max Log File Size** field.
5. Click **Confirm** to accept the change.
6. Reproduce the issue.

The log files are uploaded to your USB flash drive.

## Viewing the Log Files

You can verify whether you got the correct log through the following key fields:

- <0+emerg >
- <1+alert >
- <2+crit >
- <3+error >
- <4+warning >
- <5+notice >
- <6+info >

The default local log level is 3.

The following figure shows a portion of a boot log file (for example, boot.log):

```

1 Jan 1 00:00:24 syslogd started: BusyBox v1.10.3
2 Jan 1 00:00:25 sys [655]: ANY <0+emerg > sys log :type=1,time=0,E=3,W=4,N=5,I=6,D=7
3 Jan 1 00:00:25 sys [655]: ANY <0+emerg > ANY =3
4 Jan 1 00:00:25 sys [655]: ANY <0+emerg > Version :7.2.0.10 for release
5 Jan 1 00:00:25 sys [655]: ANY <0+emerg > Built-at :Apr 20 2016,11:32:02
6 May 26 00:00:02 Log [706]: ANY <0+emerg > Log log :sys=1,cons=1,time=0,E=3,W=4,N=5,I=6,D=7
7 May 26 00:00:02 Log [706]: ANY <0+emerg > ETLL=3
8 May 26 00:00:02 auto[706]: ANY <0+emerg > autoServer log :type=1,time=0,E=3,W=4,N=5,I=6,D=7
9 May 26 00:00:02 auto[706]: ANY <0+emerg > ANY =3
0 May 26 00:00:02 auto[706]: ANY <0+emerg > Version :6.1.0.8 for release
1 May 26 00:00:02 auto[706]: ANY <0+emerg > Built-at :May 25 2016,10:26:42
2 May 26 00:00:02 sys [706]: ANY <0+emerg > sys log :type=1,time=0,E=3,W=4,N=5,I=6,D=7
3 May 26 00:00:02 sys [706]: ANY <0+emerg > LSYS=3
4 May 26 00:00:02 ATP [706]: ANY <0+emerg > ATP log :type=1,time=0,E=3,W=4,N=5,I=6,D=7
5 May 26 00:00:02 ATP [706]: ANY <0+emerg > ANY =3
6 May 26 00:00:05 sys [835]: ANY <0+emerg > sys log :type=1,time=0,E=3,W=4,N=5,I=6,D=7
7 May 26 00:00:05 sys [835]: ANY <0+emerg > LSYS=3
8 May 26 00:00:05 sua [835]: ANY <0+emerg > sua log :type=1,time=0,E=3,W=4,N=5,I=6,D=7
9 May 26 00:00:05 sua [835]: ANY <0+emerg > ANY =5
0 May 26 00:00:05 sua [835]: ANY <0+emerg > ANY =3
1 May 26 00:00:06 Log [884]: ANY <0+emerg > Log log :sys=1,cons=0,time=0,E=3,W=4,N=5,I=6,D=7
2 May 26 00:00:06 Log [884]: ANY <0+emerg > ANY =5
3 May 26 00:00:07 ipv[887]: ANY <0+emerg > 807.194.980:ipv[887] log :type=1,time=1,E=3,W=4,N=5,I=6,D=7
4 May 26 00:00:07 ipv[887]: ANY <0+emerg > 807.196.179:Version :1.0.0.8 for release
5 May 26 00:00:07 ipv[887]: ANY <0+emerg > 807.197.104:Built-at :Feb 29 2016,14:11:35
6 May 26 00:00:07 ipv[887]: ANY <0+emerg > 807.198.138:ANY =4
7 May 26 00:00:07 sys [887]: ANY <0+emerg > sys log :type=1,time=0,E=3,W=4,N=5,I=6,D=7
8 May 26 00:00:07 sys [887]: ANY <0+emerg > LSYS=3
9 May 26 00:00:08 TR9 [897]: ANY <0+emerg > TR9 log :sys=1,cons=0,time=0,E=3,W=4,N=5,I=6,D=7

```

The boot log file reports the logs with all severity levels.

The following figure shows a portion of a sys log file (for example, 00156574b150.log):

```

2 <134>Mar 29 13:01:30 ipv[1423.1423]: IPV[6+info > 690.919.830:dump len:0
3 <134>Mar 29 13:01:31 sua [1583]: DLG <6+info > [255] SIP: 206.165.51.38:5060 Keep Alive sent on UDP!
4 <134>Mar 29 13:01:31 WEB [2225:2248]: WEB <6+info > 691.692.659:CWebMsgThread::OnOutputDump, dump type 0
5 <133>Mar 29 13:01:31 dms [1347.1425]: DMS <5+notice> get mkit msg stats, dump type 0
6 <133>Mar 29 13:01:32 sua [1583]: NET <5+notice> [255] <<<<=== TLS socket 10.100.5.50:5061: read 2 bytes
7 <134>Mar 29 13:01:32 sys [1344.1380]: SYS <6+info > dump to file end
8 <133>Mar 29 13:01:32 sys [1344.1380]: SYS <5+notice> cd /tmp/;/bin/tar -chf log/crash.tar crash;/bin/tar -chf /tmp/syslog.zip log
9

```

The <MAC>.log file reports the logs with a configured severity level and the higher. For example, if you have configured the severity level of the log to be reported to the <MAC>.log file to 4, then the log with a severity level of 0 to 4 will all be reported.

## Syslog Logging

You can also configure the IP phone to send syslog messages to a syslog server in real time.

You can specify syslog details such as IP address or hostname, server type, facility, and the severity level of events you want to log. You can also choose to prepend the phone's MAC address to log messages.

**Topics**

- [Syslog Logging Configuration](#)
- [Viewing the Syslog Messages on Your Syslog Server](#)

**Syslog Logging Configuration**

The following table lists the parameters you can use to configure syslog logging.

<b>Parameter</b>	static.syslog.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to upload log messages to the syslog server in real time.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Settings > Configuration > Syslog > Enable Syslog	
<b>Parameter</b>	static.syslog.server	<y0000000000xx>.cfg
<b>Description</b>	It configures the IP address or domain name of the syslog server when exporting log to the syslog server.	
<b>Permitted Values</b>	String within 99 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	Settings > Configuration > Syslog > Syslog Server	
<b>Parameter</b>	static.syslog.server_port	<y0000000000xx>.cfg
<b>Description</b>	It configures the port of the syslog server.	
<b>Permitted Values</b>	Integer from 1 to 65535	
<b>Default</b>	514	
<b>Web UI</b>	Settings > Configuration > Syslog > Syslog Server > Port	
<b>Parameter</b>	static.syslog.transport_type	<y0000000000xx>.cfg
<b>Description</b>	It configures the transport protocol that the IP phone uses when uploading log messages to the syslog server.	
<b>Permitted Values</b>	0-UDP 1-TCP 2-TLS	
<b>Default</b>	0	
<b>Web UI</b>	Settings > Configuration > Syslog > Syslog Transport Type	
<b>Parameter</b>	static.syslog.level	<y0000000000xx>.cfg
<b>Description</b>	It configures the lowest level of syslog information that displays in the syslog. When you choose a log level, it includes all events of an equal or higher severity level and excludes events of a lower severity level. The logging level you choose determines the lowest severity of events to log.	

<b>Permitted Values</b>	<p>0-Emergency: system is unusable</p> <p>1-Alert: action must be taken immediately</p> <p>2-Critical: critical conditions</p> <p>3-Critical: error conditions</p> <p>4-Warning: warning conditions</p> <p>5-Warning: normal but significant condition</p> <p>6-Informational: informational messages</p>	
<b>Default</b>	3	
<b>Web UI</b>	Settings > Configuration > Syslog > Syslog Level	
<b>Parameter</b>	static.syslog.facility	<y0000000000xx>.cfg
<b>Description</b>	<p>It configures the facility that generates the log messages.</p> <p><b>Note:</b> For more information, refer to <a href="#">RFC 3164</a>.</p>	
<b>Permitted Values</b>	<p>0-Kernel Messages</p> <p>1-User-level Messages</p> <p>2-Mail System</p> <p>3-System Daemons</p> <p>4-Security/Authorization Messages (Note 1)</p> <p>5-Messages are generated internally by syslog</p> <p>6-Line Printer Subsystem</p> <p>7-Network News Subsystem</p> <p>8-UUCP Subsystem</p> <p>9-Clock Daemon (note 2)</p> <p>10-Security/Authorization Messages (Note 1)</p> <p>11-FTP Daemon</p> <p>12-NTP Subsystem</p> <p>13-Log Audit (note 1)</p> <p>14-Log Alert (note 1)</p> <p>15-Clock Daemon (Note 2)</p> <p>16-Local Use 0 (Local0)</p> <p>17-Local Use 1 (Local1)</p> <p>18-Local Use 2 (Local2)</p> <p>19-Local Use 3 (Local3)</p> <p>20-Local Use 4 (Local4)</p> <p>21-Local Use 5 (Local5)</p> <p>22-Local Use 6 (Local6)</p>	

	<b>23-Local Use 7 (Local7)</b>	
	<b>Note:</b> Note 1 - Various operating systems have been found to utilize Facilities 4, 10, 13 and 14 for security/authorization, audit, and alert messages which seem to be similar. Note 2 - Various operating systems have been found to utilize both Facilities 9 and 15 for clock (cron/at) messages.	
<b>Default</b>	16	
<b>Web UI</b>	Settings > Configuration > Syslog > Syslog Facility	
<b>Parameter</b>	static.syslog.prepend_mac_address.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to prepend the MAC address to the log messages exported to the syslog server.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Web UI</b>	Settings > Configuration > Syslog > Syslog Prepend MAC	

### Viewing the Syslog Messages on Your Syslog Server

You can view the syslog file in the desired folder on the syslog server. The location of the folder may differ from the syslog server. For more information, refer to the network resources.

The following figure shows a portion of the syslog:

```

Jun 02 08:42:17 10.2.20.160 local0.notice Jun 2 00:42:48 [00:15:65:74:b1:50] sua [845]: APP <5+notice> [SIP] dtmf_payload :101
Jun 02 08:42:17 10.2.20.160 local0.notice Jun 2 00:42:48 [00:15:65:74:b1:50] sua [845]: APP <5+notice> [SIP] version :0
Jun 02 08:42:17 10.2.20.160 local0.notice Jun 2 00:42:48 [00:15:65:74:b1:50] sua [845]: APP <5+notice> [SIP] call channels info
Jun 02 08:42:17 10.2.20.160 local0.info Jun 2 00:42:48 [00:15:65:74:b1:50] sua [845]: DLG <6+info > [000] cb_nict_kill_transaction (id=88)
Jun 02 08:42:17 10.2.20.160 local0.info Jun 2 00:42:48 [00:15:65:74:b1:50] sua [845]: DLG <6+info > [000] m=audio 7150 RTP/AVP 9 0 8 18 101
Jun 02 08:42:17 10.2.20.160 local0.info Jun 2 00:42:48 [00:15:65:74:b1:50] sua [845]: DLG <6+info > [000] Allow: INVITE, ACK, CANCEL, OPTIONS, BYE, REGISTER, SUBSCRIBE, NOTIFY,
Jun 02 08:42:17 10.2.20.160 local0.info Jun 2 00:42:48 [00:15:65:74:b1:50] sua [845]: DLG <6+info > [000] CSeq: 4 INVITE
Jun 02 08:42:17 10.2.20.160 local0.info Jun 2 00:42:48 [00:15:65:74:b1:50] sua [845]: DLG <6+info > [000] Call-ID: ZWQ3MWM5ZDgwZDMyMmZjY2JkN2YyMzQ1NTJhNW15Nzg.
Jun 02 08:42:17 10.2.20.160 local0.info Jun 2 00:42:48 [00:15:65:74:b1:50] sua [845]: DLG <6+info > [000] From: <sip:101@10.2.1.43:5060>;tag=4086683836
Jun 02 08:42:17 10.2.20.160 local0.info Jun 2 00:42:48 [00:15:65:74:b1:50] sua [845]: DLG <6+info > [000] To: "102" <sip:102@10.2.1.43:5060>;tag=8d378436
Jun 02 08:42:17 10.2.20.160 local0.info Jun 2 00:42:48 [00:15:65:74:b1:50] sua [845]: DLG <6+info > [000] Contact: <sip:102@10.2.1.43:5060>
Jun 02 08:42:17 10.2.20.160 local0.info Jun 2 00:42:48 [00:15:65:74:b1:50] sua [845]: DLG <6+info > [000] Via: SIP/2.0/UDP 10.2.20.160:5060;branch=z9hG4bK2209216298
Jun 02 08:42:17 10.2.20.160 local0.info Jun 2 00:42:48 [00:15:65:74:b1:50] sua [845]: DLG <6+info > [000] SIP/2.0 200 OK
Jun 02 08:42:17 10.2.20.160 local0.info Jun 2 00:42:48 [00:15:65:74:b1:50] sua [845]: DLG <6+info > [000]
Jun 02 08:42:17 10.2.20.160 local0.notice Jun 2 00:42:48 [00:15:65:74:b1:50] sua [845]: DLG <5+notice> [000] Message recv: (from src=10.2.1.43:5060 len=808)
Jun 02 08:42:17 10.2.20.160 local0.info Jun 2 00:42:48 [00:15:65:74:b1:50] sua [845]: SIP <6+info > [SIP] match linename:101 host:10.2.1.43
Jun 02 08:42:17 10.2.20.160 local0.notice Jun 2 00:42:48 [00:15:65:74:b1:50] sua [845]: NET <5+notice> [255] <<<<=== UDP socket 10.2.1.43:5060: read 808 bytes
Jun 02 08:42:17 10.2.20.160 local0.info Jun 2 00:42:48 [00:15:65:74:b1:50] sua [845]: SUA <6+info > [000] ***eCore event:(0x0010)ECORE_CALL_PROCEEDING ****
Jun 02 08:42:17 10.2.20.160 local0.info Jun 2 00:42:48 [00:15:65:74:b1:50] sua [845]: DLG <6+info > [000]
Jun 02 08:42:17 10.2.20.160 local0.info Jun 2 00:42:48 [00:15:65:74:b1:50] sua [845]: DLG <6+info > [000]

```

### Resetting Phone and Configuration

Generally, some common issues may occur while using the IP phone. You can reset your phone to factory configurations after you have tried all troubleshooting suggestions, but still do not solve the problem. Resetting the phone to factory configurations clears the flash parameters, removes log files, user data, and cached data, and resets the administrator password to admin. All custom settings will be overwritten after resetting.

Six ways to reset the phone:

- **Reset local settings:** All configurations saved in the <MAC>-local.cfg file on the phone will be reset. Changes associated with non-static settings made via the web user interface and phone user interface are saved in the <MAC>-local.cfg file.
- **Reset non-static settings:** All non-static parameters will be reset. After resetting the non-static settings, the phone will perform auto provisioning immediately.
- **Reset static settings:** All static parameters will be reset.
- **Reset userdata & local config:** All the local cache data (for example, user data, history or directory) will be cleared. And all configurations saved in the <MAC>-local.cfg configuration file on the phone will be reset.

- **Reset to Factory:** All configurations on the phone will be reset.
- Reset a configuration at a time

You can reset the IP phone to default factory configurations. The default factory configurations are the settings that reside on the IP phone after it has left the factory. You can also reset the IP phone to custom factory configurations if required. The custom factory configurations are the settings defined by the user to keep some custom settings after resetting. You have to import the custom factory configuration files in advance.

**Note:** The **Reset local settings/Reset non-static settings/Reset static settings/Reset userdata & local config** option on the web user interface appears only if “static.auto\_provision.custom.protect” is set to 1.

## Topics

- [Reset to Factory Configuration](#)
- [Resetting the IP phone to Default Factory Settings](#)
- [Resetting a Configuration to Default Factory Setting](#)
- [Resetting the IP phone to Custom Factory Settings](#)
- [Deleting the Custom Factory Settings Files](#)

## Reset to Factory Configuration

The following table lists the parameters you can use to configure reset to factory.

<b>Parameter</b>	features.reset_by_long_press_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to reset to factory by long pressing OK/ √key.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	1	
<b>Parameter</b>	features.factory_pwd_enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to prompt for the administrator password when you long press the OK/ √key to perform a factory reset on the idle screen.	
<b>Permitted Values</b>	0-Disabled 1-Enabled	
<b>Default</b>	0	
<b>Case Scenario</b>	<p><b>Reset the phone to factory in the User mode</b></p> <p>Set the following:</p> <p>features.factory_pwd_enable = 0</p> <p>static.security.var_enable = 1</p> <p>When the phone is in the User mode, users can reset the phone to factory settings by long pressing the OK/ √key.</p>	

## Resetting the IP phone to Default Factory Settings

### Procedure

1. Click **Settings > Upgrade**.
2. Click **Reset to Factory** in the **Reset to Factory** field.  
The web user interface prompts the message “Do you want to reset to factory?”.
3. Click **OK** to confirm the resetting.  
The phone will be reset to factory successfully after startup.

**Note:** Reset of your phone may take a few minutes. Do not power off until the phone starts up successfully.

## Resetting the IP phone to Custom Factory Settings

After you enable the custom factory feature, you can import the custom factory configuration file, and then reset the IP phone to custom factory settings.

### Procedure

1. From the web user interface, click **Settings > Configuration**.
2. In the **Import Factory Config** block, click **Browse** to locate the custom factory configuration file from your local system.
3. Click **Import**.
4. After the custom factory configuration file is imported successfully, you can reset the IP phone to custom factory settings.

### Topic

[Custom Factory Configuration](#)

## Custom Factory Configuration

The following table lists the parameters you can use to configure a custom factory.

<b>Parameter</b>	static.features.custom_factory_config.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the Custom Factory Configuration feature.	
<b>Permitted Values</b>	<b>0</b> -Disabled <b>1</b> -Enabled, Import Factory Configuration item will be displayed on the IP phone's web user interface at the path <b>Settings &gt; Configuration</b> . You can import a custom factory configuration file or delete the user-defined factory configuration via the web user interface.	
<b>Default</b>	0	
<b>Parameter</b>	static.custom_factory_configuration.url	<y0000000000xx>.cfg
<b>Description</b>	It configures the access URL of the custom factory configuration files. <b>Note:</b> It works only if "static.features.custom_factory_config.enable" is set to 1 (Enabled) and the file format of the custom factory configuration file must be *.bin.	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	<a href="#">T57W/T54W/T53W/T53/T53C/T48U/T46U/T43U/T42U/CP925/CP935W:</a> Settings > Configuration > Import Factory Configuration <u>Other Phones:</u> Settings > Configuration > Import Factory Config	

## Deleting the Custom Factory Settings Files

You can delete the user-defined factory configurations via the web user interface.

### Procedure

1. From the web user interface, click **Settings > Configuration**.
2. Click **Del/Delete** in the **Import Factory Config (Import Factory Configuration)** field.  
 The web user interface prompts you whether to delete the user-defined factory configuration.

3. Click **OK** to delete the custom factory configuration files.

The imported custom factory file will be deleted. The phone will be reset to default factory settings after resetting.

## Resetting a Configuration to Default Factory Setting

You can reset a configuration to default factory instead of resetting your phone.

**Note:** This feature works only when the parameter "static.auto\_provision.custom.protect" is set to 1.

### Procedure

1. On the web user interface, click the question mark "?" after each configuration.
2. Click **Reset** if any change is made before.

## Packets Capture

You can capture packet in two ways: capturing the packets via the web user interface or using the Ethernet software. You can analyze the packet captured for troubleshooting purpose.

### Topics

[Capturing the Packets via Web User Interface](#)  
[Ethernet Software Capturing Configuration](#)

## Capturing the Packets via Web User Interface

For Yealink phones, you can export the packets file to the local system and analyze it.

Yealink devices support the following two modes for capturing the packets:

- **Normal:** Export the packets file after stopping capturing.
- **Enhanced:** Export the packets file while capturing.

### Topics


[Capturing the Packets in Enhanced Way](#)  
[Capturing the Packets in Normal Way](#)

## Capturing the Packets in Enhanced Way

### Procedure

1. From the web user interface, go to **Settings > Configuration**.
2. Select **Enhanced** from the **Pcap Type** drop-down menu.
3. Click **Start** in the **Pcap Feature** field to start capturing signal traffic.
4. Reproduce the issue to get stack traces.
5. Click **Stop** in the **Pcap Feature** field to stop capturing.
6. Select a location for saving the packets file on your local system while capturing.



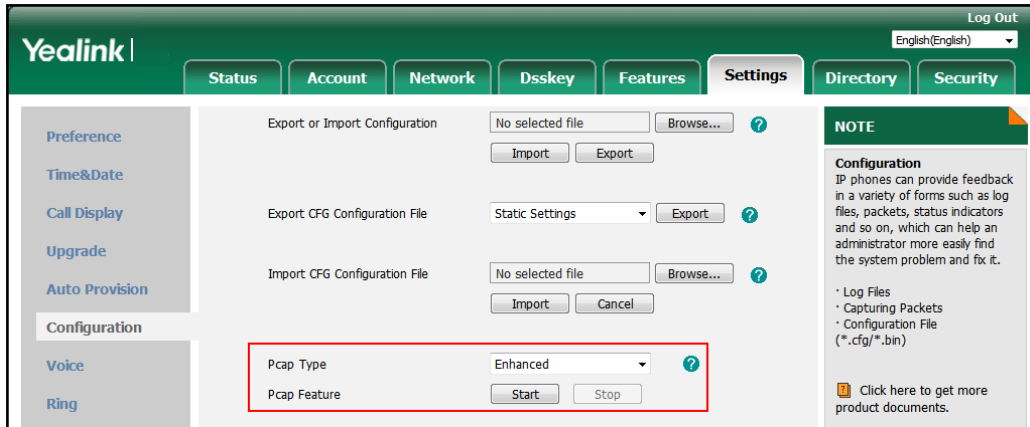


Note: The steps may differ for different web browsers.

## Capturing the Packets in Normal Way

### Procedure

1. From the web user interface, go to **Settings > Configuration**.
2. Select **Normal** from the **Pcap Type** drop-down menu.
3. Click **Start** in the **Pcap Feature** field to start capturing signal traffic.
4. Reproduce the issue to get stack traces.
5. Click **Stop** in the **Pcap Feature** field to stop capturing.
6. Click **Export** to open the file download window, and then save the file to your local system.

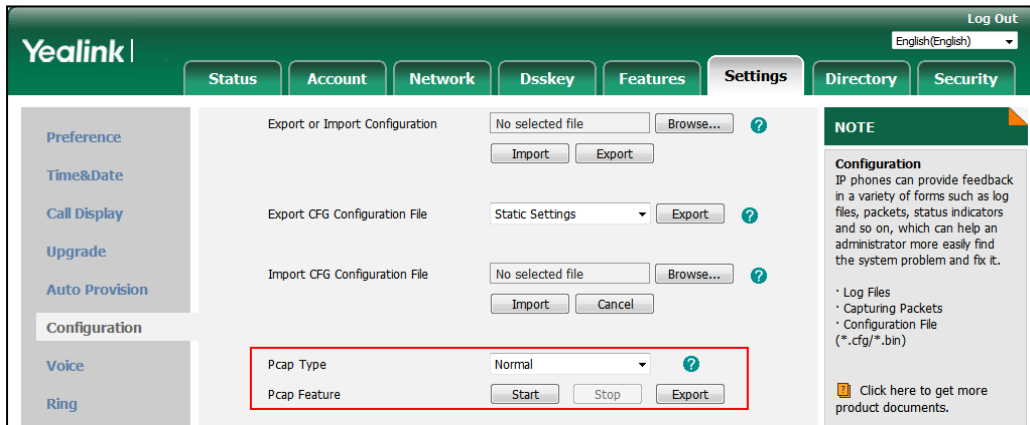

## Ethernet Software Capturing Configuration

You can choose to capture the packets using the Ethernet software in two ways:

- Receiving data packets from the hub: Connect the Internet port of the IP phone and the PC to the same hub, and then use Sniffer, Ethereal or Wireshark software to capture the signal traffic.
- Receiving data packets from PC port: Connect the Internet port of the IP phone to the Internet and the PC port of the IP phone to a PC. Before capturing the signal traffic, make sure the phone can span data packets received from the Internet port to the PC port. It is not applicable to CP920/CP925/CP935W phones.

### Topic

[Span to PC Port Configuration](#)

## Span to PC Port Configuration

The following table lists the parameter you can use to configure span to PC port.

<b>Parameter</b>	static.network.span_to_pc_port	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the phone to span data packets received from the WAN port to the PC port. <b>Note:</b> It works only if "static.network.pc_port.enable" is set to 1 (Auto Negotiation).	
<b>Permitted Values</b>	0-Disabled 1-Enabled, all data packets from the Internet port can be received by PC port.	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T30, T31, T33, T30P, T31P, T33P, and CP920	
<b>Web UI</b>	Network > Advanced > Span to PC > Span to PC Port	

## Watch Dog

The IP phone provides a troubleshooting feature called "Watch Dog", which helps you monitor the IP phone status and provides the ability to get stack traces from the last time the IP phone failed. If the Watch Dog feature is enabled, the phone will automatically reboot when it detects a fatal failure. This feature can be configured using the configuration files or via the web user interface.

### Topic

[Watch Dog Configuration](#)

## Watch Dog Configuration

The following table lists the parameter you can use to configure watch dog.

<b>Parameter</b>	static.watch_dog.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the Watch Dog feature.	
<b>Permitted Values</b>	0-Disabled 1-Enabled, the phone will reboot automatically when the system crashed.	
<b>Default</b>	1	
<b>Web UI</b>	Settings > Preference > Watch Dog	

## Network Diagnostics

You can use ping and traceroute diagnostics for troubleshooting network connectivity via the web user interface or phone user interface.

You can also enable the phone to detect the reachability of the connected wired or wireless network via auto provisioning. The phone can display an icon warning (for T42S/T42U/T41S IP phone, prompt a message) on the phone screen when the network is unreachable. You can set the time interval for network reachability detection.

### Topics


[Ping and Traceroute Diagnostics](#)

[Network Reachability Detection Configuration](#)

## Ping and Traceroute Diagnostics

### Procedure

1. From the web user interface, click **Network > Diagnostics**.
2. Select **Ping** or **Traceroute** from the **Command** drop-down menu.
3. Enter an IP address or a URL (for example, 10.200.108.48) in the **IP Address** field.
4. Click **Start** to start a ping.

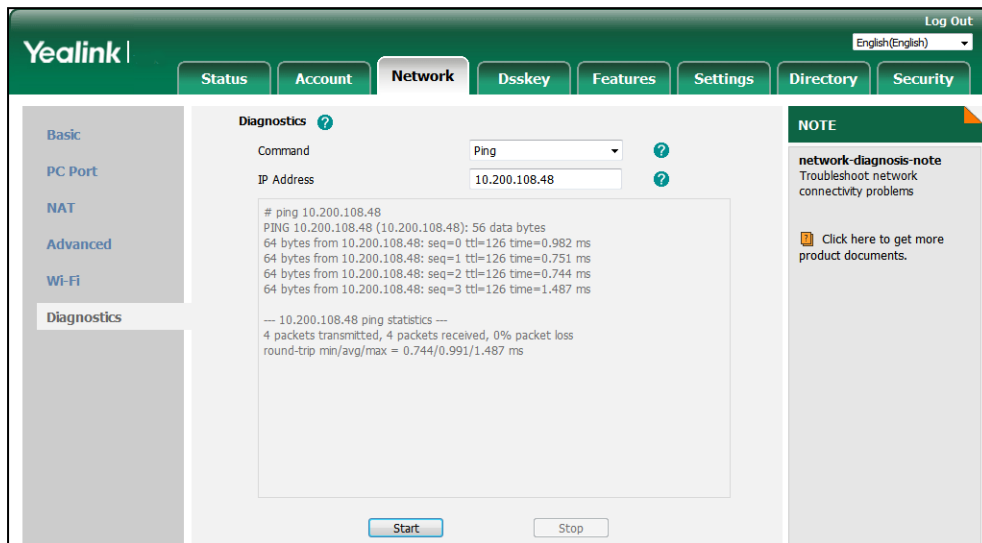

You can also diagnose network via the phone user interface at the path: **Menu > Features > Diagnostics > Network > Ping** or **Menu > Features > Diagnostics > Network > Trace Route**.

## Network Reachability Detection Configuration

The following table lists the parameters you can use to configure network reachability detection.

<b>Parameter</b>	static.features.network_test.enable	<y0000000000xx>.cfg
<b>Description</b>	It enables or disables the network reachability detection.	
<b>Permitted Values</b>	<b>0</b> -Disabled <b>1</b> -Enabled, if the network is unreachable, "Network unreachable" is displayed on the T42S/T42U/T41S phones, while a network unreachable icon is displayed in the status bar of other phones.	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P and T29G	
<b>Parameter</b>	static.features.network_test.host	<y0000000000xx>.cfg
<b>Description</b>	It configures the server address that the phone uses to detect the network reachability. The server address can be the IP address or domain name. Multiple server addresses are separated by semicolons. <b>Example:</b> static.features.network_test.host = 192.168.1.20;192.168.1.10 <b>Note:</b> It works only if "static.features.network_test.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	<b>Blank</b> -The phone does not detect network reachability. String within 1024 characters	

<b>Default</b>	Blank	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P and T29G	
<b>Parameter</b>	static.features.network_test.check_policy	<y0000000000xx>.cfg
<b>Description</b>	It configures the policy when detecting the network reachability of multiple servers. <b>Note:</b> It works only if "static.features.network_test.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	0-OR 1-AND	
<b>Default</b>	0	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P and T29G	
<b>Parameter</b>	static.features.network_test.period	<y0000000000xx>.cfg
<b>Description</b>	It specifies a period of time (in seconds) to detect the network status when the network is reachable. <b>Note:</b> It works only if "static.features.network_test.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	Integer from 2 to 86400	
<b>Default</b>	60	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P and T29G	
<b>Parameter</b>	static.features.network_unavailable_test.period	<y0000000000xx>.cfg
<b>Description</b>	It specifies a period of time (in seconds) to detect the network status when the network is unreachable. <b>Note:</b> It works only if "static.features.network_test.enable" is set to 1 (Enabled).	
<b>Permitted Values</b>	Integer from 2 to 86400	
<b>Default</b>	30	
<b>Supported Devices</b>	All phones except T48G, T46G, T42G, T41P and T29G	

## Analyzing Configuration Files

Wrong configurations may have an impact on phone use. You can export configuration file(s) to check the current configuration of the IP phone and troubleshoot if necessary. You can also import configuration files for a quick and easy configuration.

We recommend that you edit the exported CFG file instead of the BIN file to change the phone's current settings. The config.bin file is an encrypted file. For more information on config.bin file, contact your Yealink reseller.

### Topics

[Exporting CFG Configuration Files from Phone](#)

[Importing CFG Configuration Files to Phone](#)

[Exporting BIN Files from the Phone](#)

[Importing BIN Files from the Phone](#)

## Exporting CFG Configuration Files from Phone

You can export the phone’s configuration file to local and make changes to the phone’s current feature settings. You can apply these changes to any phone by importing the configuration files via the web user interface.

You can export five types of CFG configuration files to the local system:

- **<MAC>-local.cfg**: It contains changes associated with non-static parameters made via the phone user interface and web user interface. It can be exported only if “static.auto\_provision.custom.protect” is set to 1 (Enabled).
- **<MAC>-all.cfg**: It contains all changes made via the phone user interface, web user interface and using configuration files.
- **<MAC>-static.cfg**: It contains all changes associated with static parameters (for example, network settings) made via the phone user interface, web user interface and using configuration files.
- **<MAC>-non-static.cfg**: It contains all changes associated with non-static parameters made via the phone user interface, web user interface and using configuration files.
- **<MAC>-config.cfg**: It contains changes associated with non-static parameters made using configuration files. It can be exported only if “static.auto\_provision.custom.protect” is set to 1 (Enabled).

### Procedure

1. Go to **Settings > Configuration > CFG Configuration**.
2. In the **Export CFG Configuration File** block, click **Export** to open the file download window, and then save the file to your local system.

## Importing CFG Configuration Files to Phone

You can import the configuration files from local to the phones via the web user interface. The configuration files contain the changes for phone features and these changes will take effect after importing.

### Procedure

1. Go to **Settings > Configuration > CFG Configuration**.
2. In the **Import CFG Configuration File** block, click **Browse** to locate a CFG configuration file in your local system.
3. Click **Import** to import the configuration file.

### Topic

[Configuration Files Import URL Configuration](#)

## Configuration Files Import URL Configuration

The following table lists the parameters you can use to configure the configuration files import URL.

<b>Parameter</b>	static.custom_mac_cfg.url	<y0000000000xx>.cfg
<b>Description</b>	It configures the access URL of the custom MAC-Oriented CFG file. The URL supports wildcard \$pin. For example, http://<ServerIPAddress>/\$pin/.	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	

## Exporting BIN Files from the Phone

### Procedure

1. From the web user interface, click **Settings > Configuration > BIN Configuration**.
2. In the **Export Configuration** block, click **Export** to open the file download window, and then save the file to your local system.

## Importing BIN Files from the Phone

### Procedure

1. From the web user interface, click **Settings > Configuration > BIN Configuration**.
2. In the **Export or Import Configuration (Import Configuration)** block, click **Browse** to locate a BIN configuration file from your local system.
3. Click **Import** to import the configuration file.

### Topic

[BIN Files Import URL Configuration](#)

## BIN Files Import URL Configuration

The following table lists the parameter you can use to configure the BIN files import URL.

<b>Parameter</b>	static.configuration.url <sup>[1]</sup>	<y0000000000xx>.cfg
<b>Description</b>	It configures the access URL for the custom configuration files. <b>Note:</b> The file format of the custom configuration file must be *.bin.	
<b>Permitted Values</b>	URL within 511 characters	
<b>Default</b>	Blank	
<b>Web UI</b>	<a href="#">T57W/T54W/T53W/T53C/T48U/T46U/T43U/T42U/CP925/CP935W:</a> Settings > Configuration > BIN Configuration > Import Configuration <u>Other Phones:</u> Settings > Configuration > BIN Configuration > Import Configuration	

<sup>[1]</sup>If you change this parameter, the phone will reboot to make the change take effect.

## Device Status

Available information on device status includes:

- General information (IPv4 address or IPv6 address, phone MAC address, Machine ID, Wi-Fi dongle MAC address, firmware version, and warning).
- Network status (IPv4 status or IPv6 status, IP mode, phone MAC address, Wi-Fi dongle MAC address, and VLAN ID).
- Phone status (product name, hardware version, firmware version, product ID, phone MAC address, Wi-Fi dongle MAC address, Bluetooth dongle MAC address and device certificate status).
- Account status (registration status of SIP accounts).
- Wi-Fi status

### Topic

[Viewing Device Status](#)

## Viewing Device Status

You can view device status via the phone user interface by pressing the **OK** key or going to **Menu > Status**.

You can also view the device status via the web user interface.

### Procedure

1. Open a web browser on your computer.
2. Enter the IP address in the browser’s address bar, and then press the **Enter** key.  
For example, “http://192.168.0.10” for IPv4 or “http://[2005:1:1:1:215:65ff:fe64:6e0a]” for IPv6.
3. Enter the user name (admin) and password (admin) in the login page.
4. Click **Login** to log in.  
The device status is displayed on the first page of the web user interface.

## Phone Reboot

You can reboot the IP phone remotely or locally.

### Topics

- [Rebooting the IP Phone Remotely](#)
- [Rebooting the Device via the Phone User Interface](#)
- [Rebooting the Device via Web User Interface](#)

## Rebooting the IP Phone Remotely

You can reboot the phones remotely using a SIP NOTIFY message with “Event: check-sync” header. Whether the IP phone reboots or not depends on “sip.notify\_reboot\_enable”. If the value is set to 1, or the value is set to 0 and the header of the SIP NOTIFY message contains an additional string “reboot=true”, the phone will reboot immediately.

The NOTIFY message is formed as shown:

```
NOTIFY sip:<user>@<dsthost> SIP/2.0
To: sip:<user>@<dsthost>
From: sip:sipsak@<srchost>
CSeq: 10 NOTIFY
Call-ID: 1234@<srchost>
Event: check-sync;reboot=true
```

### Topic

[Notify Reboot Configuration](#)

## Notify Reboot Configuration

The following table lists the parameter you can use to configure notify reboot.

<b>Parameter</b>	sip.notify_reboot_enable	<y0000000000xx>.cfg
<b>Description</b>	It configures the IP phone behavior when receiving a SIP NOTIFY message which contains the header “Event: check-sync”.	
<b>Permitted Values</b>	<b>0</b> -The phone will reboot only if the SIP NOTIFY message contains an additional string “reboot=true”. <b>1</b> -The phone will reboot. <b>2</b> -The phone will ignore the SIP NOTIFY message.	
<b>Default</b>	1	

## Rebooting the Device via the Phone User Interface

You can reboot your device via the phone user interface.

### Procedure

1. Press **Menu > Basic > Reboot** (**Menu > Settings > Basic Settings > Reboot**).
2. Press **OK**.

The device begins rebooting. Any reboot of the device may take a few minutes.

## Rebooting the Device via Web User Interface

You can reboot your IP phone via the web user interface.

### Procedure

1. Click **Settings > Upgrade**.
2. Click **Reboot**.

The device begins rebooting. Any reboot of the device may take a few minutes.



# Troubleshooting Solutions

This section describes solutions to common issues that may occur while using the device. Upon encountering a case not listed in this section, contact your Yealink reseller for further support.

## Topics

[IP Address Issues](#)  
[Time and Date Issues](#)  
[Display Issues](#)  
[Phone Book Issues](#)  
[Audio Issues](#)  
[Wi-Fi and Bluetooth Issues](#)  
[Firmware and Upgrading Issues](#)  
[System Log Issues](#)  
[Password Issues](#)  
[Logo Issues](#)  
[Power and Startup Issues](#)  
[Other Issues](#)

## IP Address Issues

### The device does not get an IP address

Do one of the following:

If your device connects to the wired network:

- Ensure that the Ethernet cable is plugged into the Internet port on the IP phone and the Ethernet cable is not loose.
- Ensure that the Ethernet cable is not damaged.
- Ensure that the IP address and related network parameters are set correctly.
- Ensure that your network switch or hub is operational.
- Ensure that the Wi-Fi feature is disabled.

If your phone connects to the wireless network:

- If the network is secure, ensure the entered password is correct.
- Ensure your gateway/router enables the wireless network feature.

### Solving the IP conflict problem

Do one of the following:

- Reset another available IP address for the IP phone.
- Check network configuration via the phone user interface at the path **Menu > Advanced** (default password: admin) > **Network > WAN Port > IPv4 (or IPv6)**. For black-and-white phones, go to **Menu > Settings > Advanced Settings** (default password: admin) > **Network > WAN Port > IPv4 (or IPv6)**. If the Static IP is selected, select DHCP instead.

### The Specific format in configuring IPv6 on Yealink phones

#### Scenario 1:

If the IP phone obtains the IPv6 address, the format of the URL to access the web user interface is “[IPv6 address]” or “http(s)://[IPv6 address]”. For example, if the IPv6 address of your phone is “fe80::204:13ff:fe30:10e”, you can enter the URL (for example, “[fe80::204:13ff:fe30:10e]” or “http(s)://[fe80::204:13ff:fe30:10e]”) in the address bar of a web browser on your PC to access the web user interface.

## Scenario 2:

Yealink phones support using FTP, TFTP, HTTP, and HTTPS protocols to download configuration files or resource files. You can use one of these protocols for provisioning.

When provisioning your IP phone obtaining an IPv6 address, the provisioning server should support IPv6 and the format of the access URL of the provisioning server can be "ftp://[IPv6 address or domain name]". For example, if the provisioning server address is "2001:250:1801::1", the access URL of the provisioning server can be "ftp://[2001:250:1801::1]". For more information on provisioning, refer to [Yealink SIP IP Phones Auto Provisioning Guide](#).

## Time and Date Issues

### Display time and date incorrectly

Check if the IP phone is configured to obtain the time and date from the NTP server automatically. If your phone is unable to access the NTP server, configure the time and date manually.

## Display Issues

### The phone screen is blank

Do one of the following:

- Ensure that the IP phone is properly plugged into a functional AC outlet.
- Ensure that the IP phone is plugged into a socket controlled by a switch that is on.
- If the IP phone is plugged into a power strip, try plugging it directly into a wall outlet.
- If your phone is PoE powered, ensure that you are using a PoE-compliant switch or hub.

### The phone displays "No Service"

The LCD screen prompts "No Service" message when there is no available SIP account on the IP phone.

Do one of the following:

- Ensure that an account is actively registered on the phone at the path **Menu > Status > More > Accounts**.
- Ensure that the SIP account parameters have been configured correctly.

## Phone Book Issues

### Difference between a remote phone book and a local phone book

A remote phone book is placed on a server, while a local phone book is placed on the IP phone flash. A remote phone book can be used by everyone that can access the server, while a local phone book can only be used on a specific phone. A remote phone book is always used as a central phone book for a company; each employee can load it to obtain real-time data from the same server.

## Audio Issues

### Increasing or decreasing the volume

Press the volume key to increase or decrease the ringer volume when the IP phone is idle or ringing, or to adjust the volume of the engaged audio device (handset, speakerphone or headset) when there is an active call in progress.

### Get poor sound quality during a call

If you have poor sound quality/acoustics like intermittent voice, low volume, echo or other noises, the possible reasons could be:

- Users are seated too far out of recommended microphone range and sound faint, or are seated too close to sensitive microphones and cause echo.
- Intermittent voice is mainly caused by packet loss, due to network congestion, and jitter, due to message recombination of transmission or receiving equipment (for example, timeout handling, retransmission mechanism, buffer underrun).
- Noisy equipment, such as a computer or a fan, may cause voice interference. Turn off any noisy equipment.
- Line issues can also cause this problem; disconnect the old line and redial the call to ensure another line may provide a better connection.

## There is no sound when the other party picks up the call

If the caller and receiver cannot hear anything - there is no sound at all when the other party picks up the call, the possible reason could be: the phone cannot send the real-time transport protocol (RTP) streams, in which audio data is transmitted, to the connected call.

Try to disable the 180 ring workaround feature.

### Related Topic

[Early Media](#)

## Play the local ringback tone instead of media when placing a long-distance number without plus 0

Ensure that the 180 ring workaround feature is disabled.

### Related Topic

[Early Media](#)

## Wi-Fi and Bluetooth Issues

### The wireless signal strength is low

Ensure the IP phone and your gateway/ router are within the working range and there is no obvious interference (walls, doors, and so on.) between them.

### The phone cannot connect to Bluetooth devices all the time

Try to delete the registration information of the Bluetooth device on both IP phone and Bluetooth device, and then pair and connect it again. Contact Yealink field application engineer and your Bluetooth device manufacturer for more information.

### The Bluetooth headset affects IP phone's voice quality

You may not experience the best voice quality if you use a Bluetooth headset while the 2.4 GHz band is enabled or while you are in an environment with many other Bluetooth devices. This possible loss in voice quality is due to inherent limitations with Bluetooth technology.

## Firmware and Upgrading Issues


### Fail to upgrade the phone firmware

Do one of the following:

- Ensure that the target firmware is not the same as the current firmware.
- Ensure that the target firmware is applicable to the IP phone model.
- Ensure that the current or the target firmware is not protected.
- Ensure that the power is on and the network is available in the process of upgrading.
- Ensure that the web browser is not closed or refreshed when upgrading firmware via the web user interface.

## Verifying the firmware version

Press the OK/√ key or select **Menu > Status** when the phone is idle to check the firmware version. For example 28.82.0.20.

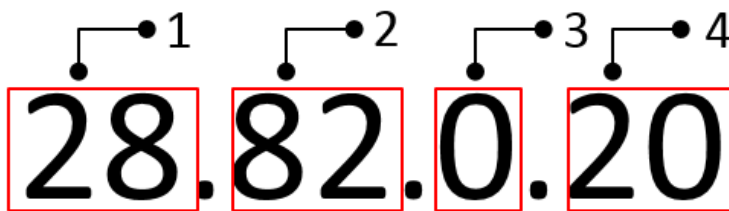

	Item	Description
1	28	Firmware ID. The firmware ID for each IP phone model is: <ul style="list-style-type: none"> <li>• 96: T57W/T54W/T53W/T53/T53C</li> <li>• 108: T48U/T46U/T43U/T42U</li> <li>• 35: T48G</li> <li>• 28: T46G</li> <li>• 66: T48S/T46S/T42S/T41S</li> <li>• 29: T42G</li> <li>• 36: T41P</li> <li>• 54: T40P</li> <li>• 76: T40G</li> <li>• 124: T33P/T33G/T31P/T31G/T31/T30P/T30</li> <li>• 46: T29G</li> <li>• 69: T27G</li> <li>• 44: T23P/G</li> <li>• 52: T21(P) E2</li> <li>• 53: T19(P) E2</li> <li>• 78: CP920</li> <li>• 148: CP925</li> <li>• 149: CP935W</li> </ul>
2	82	Major version. <b>Note:</b> The larger it is, the newer the major version is.
3	0	A fixed number.
4	20	Minor version. <b>Note:</b> With the same major version, the larger it is, the newer the minor version is.

## The IP phone does not update the configurations

Do one of the following:

- Ensure that the configuration is set correctly.
- Reboot the phone. Some configurations require a reboot to take effect.

- Ensure that the configuration is applicable to the IP phone model.
- The configuration may depend on support from a server.

## System Log Issues

### Fail to export the system log to a provisioning server (FTP/TFTP server)

Do one of the following:

- Ensure that the FTP/TFTP server is downloaded and installed on your local system.
- Ensure that you have configured the FTP/TFTP server address correctly via the web user interface on your IP phone.
- Reboot the phone. The configurations require a reboot to take effect.

### Fail to export the system log to a syslog server

Do one of the following:

- Ensure that the syslog server can save the syslog files exported from the IP phone.
- Ensure that you have configured the syslog server address correctly via the web user interface on your IP phone.
- Reboot the phone. The configurations require a reboot to take effect.

## Protocols and Ports Issues

### What communication protocols and ports do Yealink IP phones support?

Source Device	Source IP	Source Port	Destination Device	Destination IP	Destination Port (Listening port)	Protocol	Description of destination port
IP phones	IP address of IP phones	2~65535	IP phone or voice gateway	IP address of IP phone or voice gateway	Determined by destination device.	UDP	RTP protocol port, it is used to send or receive audio stream.
		1024~65535	SIP Server	IP address of SIP server	Determined by destination device.	UDP/TCP	SIP protocol port, it is used for signaling interaction with SIP server.
		1024~65535	TR-069 Server	IP address of TR-069 server	Determined by destination device.	TCP	TR-069 protocol port, it is used to communicate with TR-069server.
		1024~65535	File server	IP address of file server	Determined by destination device.	TCP	HTTP protocol port, it is used to download file.
		1024~65535	Remote phone book server	IP address of remote phone book server	Determined by destination device.	TCP	HTTP protocol port, it is used to access the remote phone book.
		1024~65535	AA	IP address of AA	Determined by destination device.	TCP	HTTP protocol port, it is used for AA communication.
		68	DHCP Server	IP address of DHCP	67	UDP	DHCP protocol port, it is used to obtain IP address

Source Device	Source IP	Source Port	Destination Device	Destination IP	Destination Port (Listening port)	Protocol	Description of destination port
				server			from DHCP server.
		1024~65535	LDAP Server	IP address of LDAP server	Determined by destination device.	TCP	LDAP protocol port, it is used to obtain the contact information from LDAP server.
		1024~65535	NTP Server	IP address of NTP server	123	UDP	NTP protocol port, it is used to synchronize time from NTP time server.
		1024~65535	Syslog Server	IP address of syslog server	514	UDP	Syslog protocol port, it is used for IP phones to upload syslog information to syslog server.
IP phones	IP address of IP phones	1024~65535	PNP Server	IP address of PNP server (Default value: 224.0.1.75)	5059	UDP/TCP	Protocol port, it is used to obtain the URL of updating file from PNP server.
			Multipaging	Multipaging	65000 65001		
PC	IP address of PC	Determined by the destination device.	IP phones	IP address of IP phones	1~65535	TCP	HTTP port (default value: 80)
					1~65535	TCP	HTTP port (default value: 443)
SIP Server	IP address of SIP Server				1024~65534	UDP/TCP	SIP protocol port, it is used for signaling interaction with SIP server.
IP phone of voice gateway	IP address of IP phone or voice gateway				2~65535	UDP	RTP protocol port, it is used by destination device to send or receive audio stream.
TR-069 Server	IP address of TR-069 Server				1024~65535	TCP	TR-069 protocol port, it is used to communicate with TR-069 server.

## Password Issues

### Restore the administrator password


Factory reset can restore the original password. All custom settings will be overwritten after reset.

#### Related Topic

[Resetting the IP phone to Default Factory Settings](#)

### The web screen displays "Default password is in use. Please change!"

The web screen prompts "Default password is in use. Please change!" message when the default password is in use. Click the warning message to change the password.

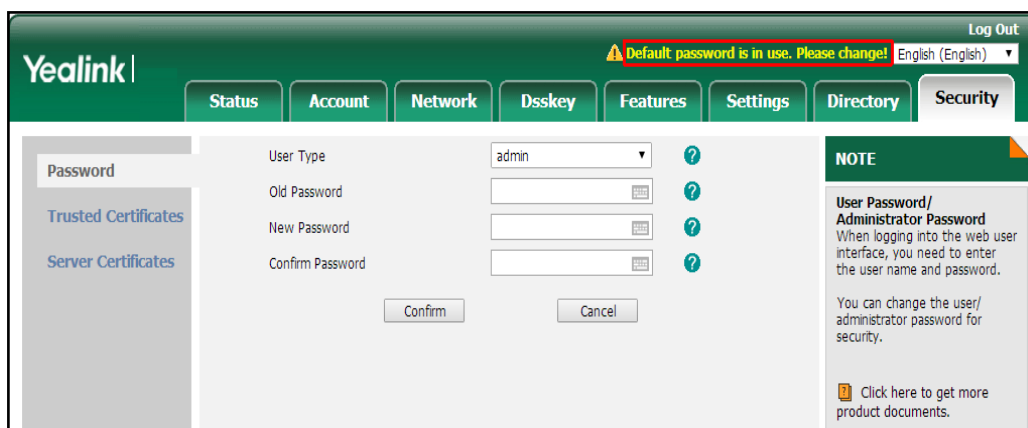

## Logo Issues

### Why does the IP phone use DOB format logo file instead of popular BMP, JPG and so on?

The IP phone only uses logo file in DOB format, as the DOB format file has a high compression ratio (the size of the uncompressed file compared to that of the compressed file) and can be stored in smaller space. Tools for converting BMP format to DOB format are available.

## Power and Startup Issues

### Both PoE cable and power adapter is connected to the phone

The phones use the PoE preferentially.

### The power LED indicator has no lights

If no lights appear on the IP phone when it is powered up, do one of the following:

- Reboot your device.
- Replace the power adapter.

### The Phone screen is black

If the power LED indicator is on, the keypad is usable but the phone screen is black, please reboot your IP phone.

### The IP phone always displays the Yealink logo

If your IP phone does not boot, check if the provisioning server is accessible on the network and a valid software firmware and valid configuration files are available. Try to use recovery mode to get your phone ready. For more information on recovery mode, refer to Recovery Mode on Yealink phones.

## Other Issues

### The difference among user name, register name, and display name

Both user name and register name are defined by the server. User name identifies the account, while register name matched with a password is for authentication purposes. The display name is the caller ID that will be displayed on the callee's phone LCD screen. Server configurations may override the local ones.

### On code and off code


They are codes that the IP phone sends to the server when a certain action takes place. On code is used to activate a feature on the server side, while off code is used to deactivate a feature on the server side.

For example, if you set the Always Forward on code to be \*78 (may vary on different servers), and the target number to be 201. When you enable Always Forward on the IP phone, the phone sends \*78201 to the server, and then the server will enable Always Forward feature on the server side, hence being able to get the right status of the extension.


For anonymous call/anonymous call rejection feature, the phone will send either the on code or off code to the server according to the value of Send Anonymous Code/Send Rejection Code.

## The difference between RFC 2543 Hold enabled and disabled

Capturing packets after you enable the RFC 2543 Hold feature. SDP media direction attributes (such as a=sendonly) per RFC 2543 is used in the INVITE message when placing a call on hold.

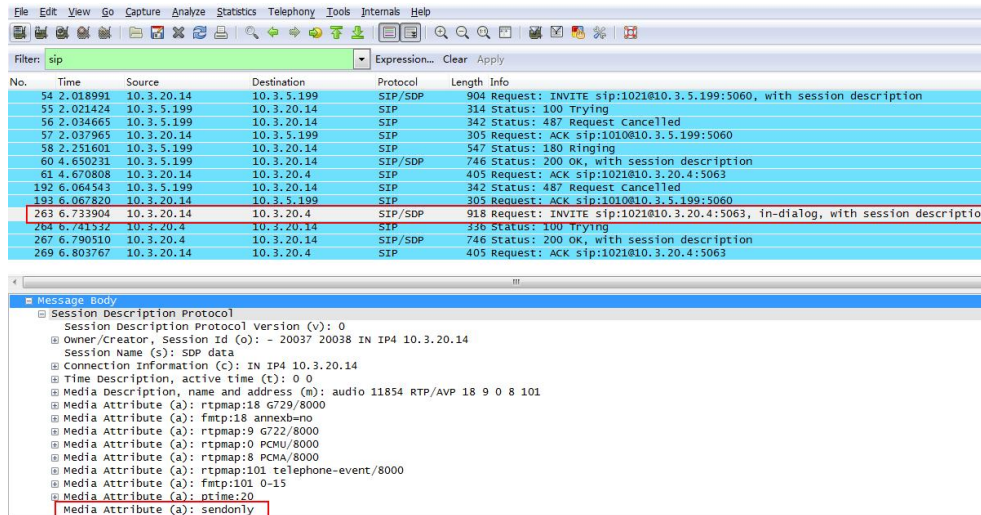

Capturing packets after you disable the RFC 2543 Hold feature. SDP media connection address c=0.0.0.0 per RFC 3264 is used in the INVITE message when placing a call on hold.

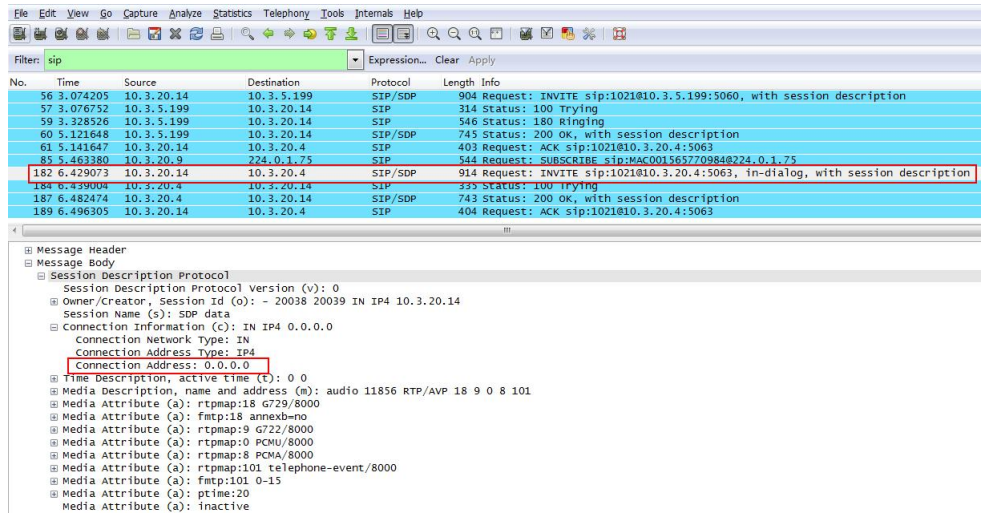

## The difference between Shared Call Appearance (SCA) and Bridge Lines Appearance (BLA)

SCA and BLA are similar signaling methods that enable more than one phone to share a SIP line. The method you use varies with the SIP server you are using. In the configuration files, the relevant configuration parameters of SCA and BLA are different. The barge-in and call pull feature are not available with BLA, but they are available with SCA.



## Appendix

### RFC and Internet Draft Support

The following RFC's and Internet drafts are supported:

- RFC 1321—The MD5 Message-Digest Algorithm
- RFC 1889—RTP Media control
- RFC 2112—Multipart MIME
- RFC 2327—SDP: Session Description Protocol
- RFC 2387—The MIME Multipart/Related Content-type
- RFC 2543—SIP: Session Initiation Protocol
- RFC 2617—Http Authentication: Basic and Digest access authentication
- RFC 2782—A DNS RR for specifying the location of services (DNS SRV)
- RFC 2806—URLs for Telephone Calls
- RFC 2833—RTP Payload for DTMF Digits, Telephony Tones and Telephony Signals
- RFC 2915—The Naming Authority Pointer (NAPTR) DNS Resource Record
- RFC 2976—The SIP INFO Method
- RFC 3087—Control of Service Context using SIP Request-URI
- RFC 3261—SIP: Session Initiation Protocol (replacement for RFC 2543)
- RFC 3262—Reliability of Provisional Responses in the Session Initiation Protocol (SIP)
- RFC 3263—Session Initiation Protocol (SIP): Locating SIP Servers
- RFC 3264—An Offer/Answer Model with the Session Description Protocol (SDP)
- RFC 3265—Session Initiation Protocol (SIP) - Specific Event Notification
- RFC 3266—Support for IPv6 in Session Description Protocol (SDP)
- RFC 3310—HTTP Digest Authentication Using Authentication and Key Agreement (AKA)
- RFC 3311—The Session Initiation Protocol (SIP) UPDATE Method
- RFC 3312—Integration of Resource Management and SIP
- RFC 3313—Private SIP Extensions for Media Authorization
- RFC 3323—A Privacy Mechanism for the Session Initiation Protocol (SIP)
- RFC 3324—Requirements for Network Asserted Identity
- RFC 3325—SIP Asserted Identity
- RFC 3326—The Reason Header Field for the Session Initiation Protocol (SIP)
- RFC 3361—DHCP-for-IPv4 Option for SIP Servers
- RFC 3372—SIP for Telephones (SIP-T): Context and Architectures
- RFC 3398—ISUP to SIP Mapping
- RFC 3420—Internet Media Type message/sipfrag
- RFC 3428—Session Initiation Protocol (SIP) Extension for Instant Messaging
- RFC 3455—Private Header (P-Header) Extensions to the SIP for the 3GPP
- RFC 3486—Compressing the Session Initiation Protocol (SIP)
- RFC 3489—STUN - Simple Traversal of User Datagram Protocol (UDP) Through Network Address Translators (NATs)
- RFC 3515—The Session Initiation Protocol (SIP) Refer Method
- RFC 3550—RTP: Transport Protocol for Real-Time Applications
- RFC 3555—MIME Type Registration of RTP Payload Formats
- RFC 3581—An Extension to the SIP for Symmetric Response Routing
- RFC 3608—SIP Extension Header Field for Service Route Discovery During Registration
- RFC 3611—RTP Control Protocol Extended Reports (RTCP XR)

- RFC 3665—Session Initiation Protocol (SIP) Basic Call Flow Examples
- RFC 3666—SIP Public Switched Telephone Network (PSTN) Call Flows.
- RFC 3680—SIP Event Package for Registrations
- RFC 3702—Authentication, Authorization, and Accounting Requirements for the SIP
- RFC 3711—The Secure Real-time Transport Protocol (SRTP)
- RFC 3725—Best Current Practices for Third Party Call Control (3pcc) in the Session Initiation Protocol (SIP)
- RFC 3842—A Message Summary and Message Waiting Indication Event Package for the Session Initiation Protocol (SIP)
- RFC 3856—A Presence Event Package for Session Initiation Protocol (SIP)
- RFC 3863—Presence Information Data Format
- RFC 3890—A Transport Independent Bandwidth Modifier for the SDP
- RFC 3891—The Session Initiation Protocol (SIP) “Replaces” Header
- RFC 3892—The Session Initiation Protocol (SIP) Referred-By Mechanism
- RFC 3959—The Early Session Disposition Type for SIP
- RFC 3960—Early Media and Ringing Tone Generation in SIP
- RFC 3966—The tel URI for telephone number
- RFC 3968—IANA Registry for SIP Header Field
- RFC 3969—IANA Registry for SIP URI
- RFC 4028—Session Timers in the Session Initiation Protocol (SIP)
- RFC 4083—3GPP Release 5 Requirements on SIP
- RFC 4235—An INVITE-Initiated Dialog Event Package for the Session Initiation Protocol (SIP)
- RFC 4244—An Extension to the SIP for Request History Information
- RFC 4317—Session Description Protocol (SDP) Offer/Answer Examples
- RFC 4353—A Framework for Conferencing with the SIP
- RFC 4458—SIP URIs for Applications such as Voicemail and Interactive Voice Response (IVR)
- RFC 4475—Session Initiation Protocol (SIP) Torture
- RFC 4485—Guidelines for Authors of Extensions to the SIP
- RFC 4504—SIP Telephony Device Requirements and Configuration
- RFC 4566—SDP: Session Description Protocol.
- RFC 4568—Session Description Protocol (SDP) Security Descriptions for Media Streams
- RFC 4575—A SIP Event Package for Conference State
- RFC 4579—SIP Call Control - Conferencing for User Agents
- RFC 4583—Session Description Protocol (SDP) Format for Binary Floor Control Protocol (BFCP) Streams
- RFC 4662—A SIP Event Notification Extension for Resource Lists
- RFC 4730—Event Package for KPML
- RFC 5009—P-Early-Media Header
- RFC 5079—Rejecting Anonymous Requests in SIP
- RFC 5359—Session Initiation Protocol Service Examples
- RFC 5589—Session Initiation Protocol (SIP) Call Control – Transfer
- RFC 5630—The Use of the SIPS URI Scheme in SIP
- RFC 5806—Diversion Indication in SIP
- RFC 5954—Essential Correction for IPv6 ABNF and URI Comparison in RFC 3261
- RFC 6026—Correct Transaction Handling for 2xx Responses to SIP INVITE Requests
- RFC 6141—Re-INVITE and Target-Refresh Request Handling in SIP
- draft-ietf-sip-cc-transfer-05.txt—SIP Call Control - Transfer
- draft-anil-sipping-bla-02.txt—Implementing Bridged Line Appearances (BLA) Using Session Initiation Protocol (SIP)

- draft-anil-sipping-bla-03.txt—Implementing Bridged Line Appearances (BLA) Using Session Initiation Protocol (SIP)
- draft-ietf-sip-privacy-00.txt—SIP Extensions for Caller Identity and Privacy, November
- draft-ietf-sip-privacy-04.txt—SIP Extensions for Network-Asserted Caller Identity and Privacy within Trusted Networks
- draft-levy-sip-diversion-08.txt—Diversion Indication in SIP
- draft-ietf-sipping-cc-conferencing-03.txt—SIP Call Control - Conferencing for User Agents
- draft-ietf-sipping-cc-conferencing-05.txt—Connection Reuse in the Session Initiation Protocol (SIP)
- draft-ietf-sipping-rtcp-summary-02.txt—Session Initiation Protocol Package for Voice Quality Reporting Event
- draft-ietf-sip-connect-reuse-06.txt—Connection Reuse in the Session Initiation Protocol (SIP)
- draft-ietf-bliss-shared-appearances-15.txt—Shared Appearances of a Session Initiation Protocol (SIP) Address of Record (AOR)

To find the applicable Request for Comments (RFC) document, go to <http://www.ietf.org/rfc.html> and enter the RFC number.

## Reading Icons

CP925/CP935W	T57W	T54W/T53C/T33P/T33G	T48U/S/G	T46U/S/G	T42U/T42S/T41S	T42G/T41P	T40P/G	T29G	T53W/T53/T43U/T27G	CP920	T31P/T31G/T31/T30P/T30/T23P/T23G/T21(P)E2	T19(P)E2	Description
													Wired network is unavailable (turn off wireless network for CP935W phones)
			 (T48U/S)	 (T46U/S)	/	/		/					Wired network is unreachable (it is not applicable to CP935W phones.)
													Private line registers successfully
													Registration failed
													Registering
/	/	/	/	/	/	/	/	/	/		/	/	Yealink Cloud account

CP925/CP-935W	T57W	T54W/T53C/T3-3P/T33G	T48U-/S/G	T46U-/S/G	T42-U/ T42-S/ T41-S	T42-G/ T41-P	T40-P/G	T29G	T53W-/T53 /T43U /T27G	CP9-20	T31P/T31-G/T31- /T30P/T30- /T23P/T23-G /T21(P) E2	T1-9 (P) E2	Description
													registers successfully
/													Hands-free (speakerphone) mode
/										/			Handset mode
/										/			Headset mode
													Voice Mail
					/	/							Text Message
													Auto Answer
													Do Not Disturb
					/	/		/					Phone Warning
													Call Forward
													Call Hold
													Call Mute
					/	/							Keep Mute
													Ringer volume is 0
													Phone Lock
													Received Calls
													Placed Calls
													Missed Calls
													Forwarded Calls
						/	/				/	/	Recording starts successfully (USB recording)

CP925/CP-935W	T57W	T54W/T53C/T3-3P/T33G	T48U-/S/G	T46U-/S/G	T42-U/ T42-S/ T41-S	T42-G/ T41-P	T40-P/G	T29G	T53W-/T53 /T43U /T27G	CP9-20	T31P/T31-G/T31-/T30P/T30-/T23P/T23-G /T21(P) E2	T1-9 (P) E2	Description
													Recording is paused (USB recording)
													Recording box is full (DSSKey recording)
													A call cannot be recorded (DSSKey recording)
													Recording starts successfully (DSSKey recording)
													Recording cannot be started (DSSKey recording)
													Recording cannot be stopped (DSSKey recording)
													VPN is enabled
													Bluetooth mode is on
													Bluetooth headset is both paired and connected
													Bluetooth-enabled mobile phone is both paired and connected
													Wi-Fi connection is successful
													Wi-Fi connection failed

CP925/CP-935W	T57W	T54W/T53C/T3-3P/T33G	T48U- S/G	T46U- S/G	T42- U/ T42- S/ T41- S	T42- G/ T41- P	T40- P/G	T29G	T53W- T53 /T43U /T27G	CP9- 20	T31P/T31- G/T31/ T30P/T30/ T23P/T23- G /T21(P) E2	T1- 9 (P) E2	Description
					/	/	/	/			/	/	Wi-Fi connection is unreachable
/	/		/		/	/	/		/	/	/	/	Conference
													The default contact icon
					/	/	/		/	/	/	/	The default caller photo
					/	/	/		/	/	/	/	Line key type is Line (the line is seized)
					/	/	/		/	/	/	/	Line key type is Speed Dial
					/	/	/		/	/	/	/	Line key type is BLF/BLF List (BLF/BLF list idle state)
					/	/	/		/	/	/	/	Line key type is BLF/BLF List (BLF/BLF list ringing state)
					/	/	/		/	/	/	/	Line key type is BLF/BLF List (BLF/BLF list talking state)
					/	/	/		/	/	/	/	Line key type is BLF (BLF hold state)
					/	/	/		/	/	/	/	Line key type is BLF/BLF List (BLF/BLF list callout state)
					/	/	/		/	/	/	/	Line key type is BLF/BLF List (BLF/BLF list failed state)
					/	/	/		/	/	/	/	Line key type is BLF List (BLF list call park state)

CP925/CP-935W	T57W	T54W/T53C/T3-3P/T33G	T48U/S/G	T46U/S/G	T42-U/ T42-S/ T41-S	T42-G/ T41-P	T40-P/G	T29G	T53W- T53 /T43U /T27G	CP9- 20	T31P/T31- G/T31/ T30P/T30/ T23P/T23- G /T21(P) E2	T1- 9 (P) E2	Description
					/	/	/		/	/	/	/	Line key type is Voice Mail
					/	/	/		/	/	/	/	Line key type is Direct Pickup
					/	/	/		/	/	/	/	Line key type is Group Pickup
					/	/	/		/	/	/	/	Line key type is Call Park/XML Park (park successfully/call park idle state)
					/	/	/		/	/	/	/	Line key type is Call Park/XML Park (call park ringing state)
					/	/	/		/	/	/	/	Park failed
					/	/	/		/	/	/	/	Line key type is Retrieve Park
					/	/	/		/	/	/	/	Line key type is Intercom (intercom idle state)
					/	/	/		/	/	/	/	Line key type is Intercom (intercom ringing state)
					/	/	/		/	/	/	/	Line key type is Intercom (intercom talking state)
					/	/	/		/	/	/	/	Line key type is Intercom (intercom callout state)
					/	/	/		/	/	/	/	Line key type is Intercom (intercom failed state)

CP925/CP-935W	T57W	T54W/T53C/T3-3P/T33G	T48U-/S/G	T46U-/S/G	T42-U/ T42-S/ T41-S	T42-G/ T41-P	T40-P/G	T29G	T53W-/T53 /T43U /T27G	CP9-20	T31P/T31-G/T31-/T30P/T30-/T23P/T23-G /T21(P) E2	T1-9 (P) E2	Description
					/	/	/		/	/	/	/	Line key type is DTMF/Prefix
					/	/	/		/	/	/	/	Line key type is Local Group/XML Group/LDAP/Google Contacts
					/	/	/		/	/	/	/	Line key type is XML Browser
					/	/	/		/	/	/	/	Line key type is Conference
					/	/	/		/	/	/	/	Line key type is Forward
					/	/	/		/	/	/	/	Line key type is Transfer
					/	/	/		/	/	/	/	Line key type is Hold/Private Hold
					/	/	/		/	/	/	/	Line key type is DND
					/	/	/		/	/	/	/	Line key type is Recall
/					/	/	/		/	/	/	/	Line key type is SMS
					/	/	/		/	/	/	/	Line key type is Record/URL Record
					/	/	/		/	/	/	/	Line key type is Record/URL Record (recording starts successfully)
					/	/	/		/	/	/	/	Line key type is Multicast Paging/Group Listening/Paging List



CP925/CP-935W	T57W	T54W/T53C/T3-3P/T33G	T48U/S/G	T46U/S/G	T42-U/T42-S/T41-S	T42-G/T41-P	T40-P/G	T29G	T53W-/T53/T43U/T27G	CP9-20	T31P/T31-G/T31-/T30P/T30-/T23P/T23-G/T21(P) E2	T1-9(P) E2	Description
					/	/	/		/	/	/	/	Line key type is Hot Desk-ing
					/	/	/		/	/	/	/	Line key type is ACD
					/	/	/		/	/	/	/	Line key type is Zero Touch
					/	/	/		/	/	/	/	Line key type is URL
					/	/	/		/	/	/	/	Line key type is Phone Lock
					/	/	/		/	/	/	/	Line key type is Directory
/					/	/	/		/	/	/	/	Line key type is Custom Key
/			/	/	/	/	/	/		/	/	/	Line key type is DECT Inter-com
/	/		/		/	/	/	/	/	/	/	/	Line key type is Extend
													The ACD state is available
					and x	and x	and x		and x	and x	and x	and x	The ACD state is unavailable
													The ACD state is Wrap up
													Log out of the ACD system
													The shared line/bridged line is idle
					/	/	/		/	/	/	/	The shared line receives a ring-back tone
					/	/	/		/	/	/	/	The shared line receives an incoming

CP925/CP-935W	T57W	T54W/T53C/T3-3P/T33G	T48U/-S/G	T46U/-S/G	T42-U/ T42-S/ T41-S	T42-G/ T41-P	T40-P/G	T29G	T53W/-T53 /T43U /T27G	CP9-20	T31P/T31-G/T31- T30P/T30- T23P/T23-G /T21(P) E2	T1-9 (P) E2	Description
	ing)		ing)										call
					/	/	/		/	/	/	/	The shared line is in conversation
					/	/	/		/	/	/	/	The shared line conversation is placed on public hold
(Flashing)	(Flashing)	(Flashing)	(Flashing)	(Flashing)	/	/	/	(Flashing)			/	/	USB flash drive/PSTN box is detecting (PSTN is not applicable to CP935W phones)
					/	/	/				/	/	USB flash drive is detected
													High Definition Voice