
 


## Portable WiFi Phone Quick Start Guide

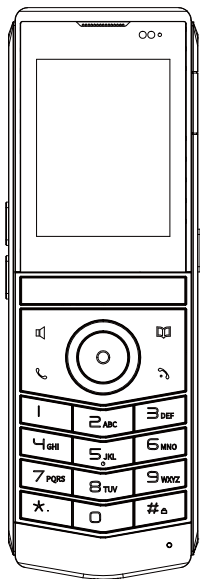

**W611W**

 
## Packing list




Portable  
WiFi Phone




Battery Cover



Charging Base

 


Quick Start Guide

 

Rechargeable Battery




 Belt Clip




Power Adapter

## Handset

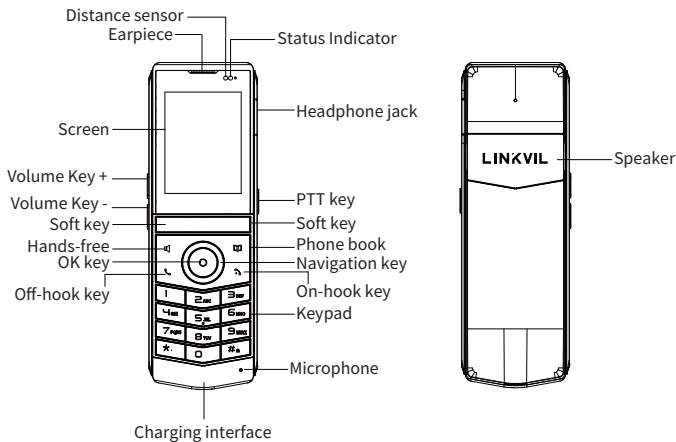


# Install the battery

 
- 1. Remove the rear case:** Remove the rear case of the whole machine with a little force from the handle position of the rear case of the main unit.
- 2. Install the battery:** Take out the battery from the packaging box, with the notch facing up, put the battery C at the battery compartment C, and pull the battery button until it completely fits the underside of the battery.
- 3. Install the battery cover:** Take out the battery cover from the packaging box, and press the battery cover firmly along the edge of the battery compartment to ensure that the outer surface of the battery cover is completely inserted into the battery compartment and flush with the edge of the battery compartment, reaching IP67 waterproof level.
- 4. Install the back cover:** Align the back cover with the buckle on the back of the main unit, press your hands along the edge of the main unit from top to bottom (there will be a "click" sound during the process), and ensure that there is no gap, it means that the back cover is fastened.




Remove the rear case

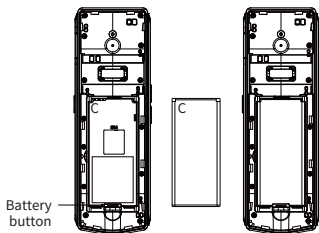

Install the battery

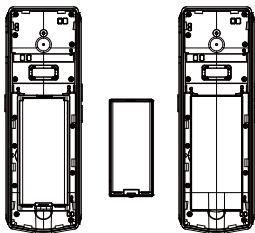

Install the battery cover

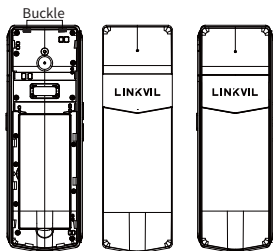

Install the back cover

# LINKVIL

Fanvil Technology Co., Ltd

Website: [www.fanvil.com](http://www.fanvil.com)

 
E-Mail: [sales@fanvil.com](mailto:sales@fanvil.com) [support@fanvil.com](mailto:support@fanvil.com)

Tel: +86-755-2640-2199 Fax: +86-755-2640-2618


Add: 10/F Block A, Dualshine Global Science Innovation Center,  
Honglang North 2nd Road, Bao'an District, Shenzhen, China

# Replacement battery


- 1. Remove the rear case:** Remove the rear case of the whole machine with a little force from the handle position A of the rear case of the main unit.
- 2. Remove the battery cover :** From the back of the main unit, buckle the hand position B, and pull it upwards in the direction indicated by the arrow at the same time (depending on the strength of different users, it may be removed after two or three times of pulling; in order to ensure the waterproof level of the machine , it is not easy to disassemble here).
- 3. Remove the battery:** Pull the battery button down to remove the old battery.
- 4. Install the battery:** Take out the battery from the packaging box, with the battery with the notch facing up, put the battery C at the battery compartment C, and pull the battery button until it completely fits the underside of the battery.
- 5. Install the battery cover:** Take out the battery cover from the packaging box, and press the battery cover firmly along the edge of the battery compartment to ensure that the outer surface of the battery cover is completely inserted into the battery compartment and flush with the edge of the battery compartment, reaching IP67 waterproof level.
- 6. Install the back cover:** Align the back cover with the buckle on the back of the main unit, press your hands along the edge of the main unit from top to bottom (there will be a "click" sound during the process), and ensure that there is no gap, it means that the back cover is fastened.




Remove the rear case

 


Remove the battery cover

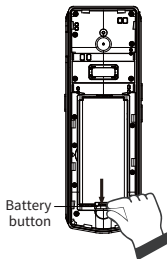


Remove the battery

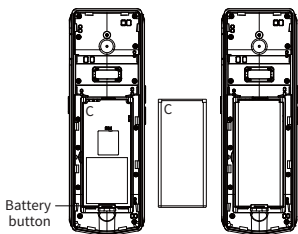

Install the battery

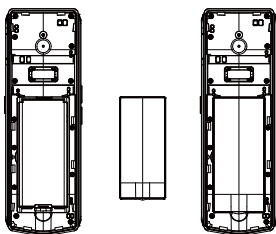


Install the battery cover

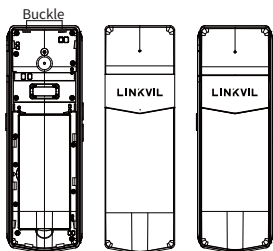

Install the back cover

**Special statement: This product belongs to the three-proof equipment of IP67. Under normal use, please do not disassemble the battery cover arbitrarily. After long-term disassembly, the protection level of IP67 will be affected. We are not responsible.**


## Connect the charging base

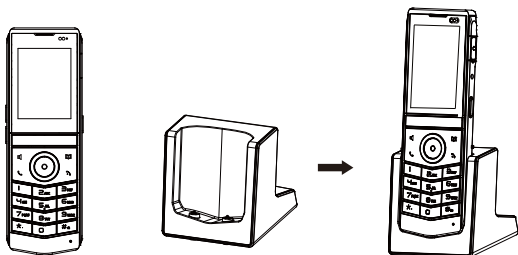

### Note:

1. Use Fanvil-supplied power adapter (5V/2A). A third-party power adapter may damage the handset.
2. Check the charging status on the top-right corner of the LCD screen.

## Install the belt clip

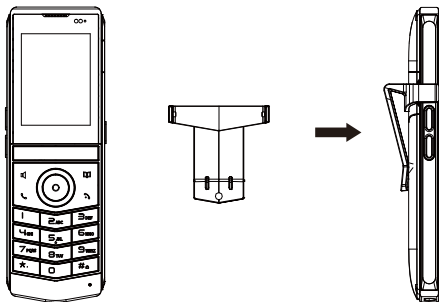

## Battery warning

To prevent the possibility of the pack from leaking, heating, fire. Please observe the following precautions:

The soft aluminum packing foil is very easily damaged by sharp edge parts such as Ni-tabs, pins and needles .

Do not strike at pack with any sharp edge parts.

Do not immerse the pack in water and seawater.

Do not use and leave the pack near a heat source as fire or heater.

Do not reverse the positive and negative terminals.

Do not connect the pack to an electrical outlet.

Do not discard the pack in fire or heat it.

Do not short-circuit the pack by directly connecting the positive and negative terminal with metal object such as wire.

Do not transport and store the battery together with metal objects such as necklaces, hairpins etc.

Do not strike or throw the pack.

Do not directly solder the pack or battery and pierce the battery with a nail or other sharp object.

When charging, please use the charger configured at the time of purchase.