



FiberLink® 5200 Series



**Two way audio, data, 10/100 Ethernet
and contact closure over one or two
fibers**

**Installation and Operations
Manual**

Contents

Model Part Number Specification	4
General Specifications	4
Data Specifications	4
Audio Specifications	5
Ethernet Specifications	5
Contact Closure Specifications	6
FiberLink 5200 Series Transmitter Specifications	6
FiberLink 5201 Series Receiver Specifications	7
Operating Loss Budget	8
Maximum Useable Distance	8
Installation Instructions	8
Installation Instructions (cont.)	9
Audio Wiring - Inputs	10
Audio Wiring - Outputs	10
Reference Photos - Box Front/Rear	10
Audio Input Switch Settings For Box Versions	11
Audio Output Switch Settings For Box Versions	11
Data Configuration For Box Versions	11
Ethernet Configurations For Box Versions	12
Baud Rate Configuration For Box Versions	12
Data Wiring For Box Versions	13
Contact Closure Wiring For Box Versions	13
Indicator LEDs	14
Operating Pointers	15
Troubleshooting	15
Maintenance and Repairs	16
Accessories and Related Products	18

Welcome

Thank you for purchasing Artel Video Systems' FiberLink 5200 Series. The 5200 Series is used to transmit two-way audio, 10/100 Ethernet, serial data, and contact closure over one or two fibers. The FiberLink 5200 series is compatible with single mode or multimode fiber. The system delivers noise-free transmission that retains all of the signals' initial parameters.

Features

- Transmit and Receive 4 channels of audio (two each way)
- Transmit and Receive 1 channel of RS-Type data
- Transmit and Receive 10/100 Base-T Ethernet
- Transmit and Receive 1 channel of contact closure
- All channels are independent and available simultaneously
- Supports single mode and multimode fiber
- One fiber
- Wide operating temperature range: -10° C to +50° C
- ST connectors
- Designed and Manufactured in the USA by Artel

Package Contents

- One FiberLink Unit (5200, 5201)
- This User's Manual
- One Ethernet Crossover Cable

Model Part Number Specification

Unit Type	Part Number
	Box
Transceiver (1 Fiber, MM)	5200-B3S
Transceiver (1 Fiber, SM)	5200-B7S
Transceiver (1 Fiber, MM)	5201-B3S
Transceiver (1 Fiber, SM)	5201-B7S

General Specifications

Indicators	Power, Audio Activity, RS-Data Activity Ethernet LEDs on RJ-45 Connector
Box Version Dimensions	6.5 W x 1.15 H x 8 L (inches) 165 W x 29 H x 203 L (mm)
Weight	approx. 1 lb.; 0.45 kg
Power	9-24 volts, AC or DC 5200: 7.5 watts, 25.6 BTU/Hr 5201: 7.5 watts, 25.6 BTU/Hr
Operating Temperature	-10°C to +50°C
MTBF	30,000 hours

Data Specifications

Data Channels	1 Channel, Bi-Directional
Data Bandwidth	DC to 115 Kb/sec, max.
Control Format	Switch selectable RS-232, RS-422 & RS-485 (4 wire or 2 wire)
Protocols	NRZ, NRZI, RZ, Manchester, Bi-phase
Signal Connector	Removable terminal block

Audio Specifications

Number of Audio Channels	2, balanced or unbalanced, bi-directional
Bits per sample/ Sampling Rate	24 bits, 78 kHz
Audio Connector	Removable terminal block
Switches	<ul style="list-style-type: none"> Select input termination Balanced or unbalanced input/output, selectable on a per-channel basis
Frequency Response	+0/-0.5 dB, 20 Hz - 20 kHz
Maximum Audio Level	+10 dBu
Signal-to-Noise Ratio (A-weighted)	95 dB referenced full scale (balanced)
THD	0.002%, 20Hz - 20 kHz, full scale
Channel Phase Differential	$\pm 0.1^\circ$
Crosstalk	-100 dB (1kHz)
Audio Noise Level	-85 dBm
System Gain	Unity Gain, $\pm 3\%$, input: balanced 600 Ohms, 50 Ohms source impedance ; output: balanced into 600 Ohms.
Input Impedance	600 Ohms terminated, >24K Ohms unterminated
Output Impedance	50 Ohms nominal
Audio to Video Diff. Delay (skew)	<300 usec

Ethernet Specifications

Port	10/100 Base-T, Configured as MDI
Speed	10 Mbps & 100 Mbps Ethernet, Switch Selectable
Ethernet Connector	RJ-45

Contact Closure Specifications

Contact Closure Input	Dry contact or TTL level referenced to GND
Contact Closure Output	Isolated reed relay contacts; 115 Volts AC; 50/60 Hz @ 0.2 A or 24 Volts DC @ 1 A
Contact Closure Connectors	Removeable terminal block

FiberLink 5200 Series Transmitter Specifications**Fiber Optic Output Specifications**

Connector	ST
Wavelengths Used 1-Fiber:	1510nm, 1530nm, 1550nm, 1570nm
Emmitter Type	Laser
Output Power (<i>nominal</i>)	-3.0 dBm

FiberLink 5201 Series Receiver Specifications**Fiber Optic Input Specifications**

Connector	ST
Wavelength	1100 - 1620 nm
Minimum Input Sensitivity	-19 dBm
Maximum Input Power	0 dBm

Operating Loss Budget

Single Mode Fiber	0-14 dB
Multimode Fiber (62.5u)	0-14 dB
Multimode Fiber (50u)	0-14 dB

Maximum Useable Distance

Single Mode Fiber	30 km
Multimode Fiber (62.5u)	2.5 km
Multimode Fiber (50u)	3 km

*Distance specifications are approximate, based upon connecting a 5200 Transmitter to a 5201 Receiver, and are not guaranteed. Artel cannot estimate or guarantee operating loss budgets when the 5200 Series is used with other, non-FiberLink devices. Operating loss budget must not be exceeded

Installation Instructions

The FiberLink 5200 Series of fiber optic transmission systems are ready for immediate use and do not require any special tools or equipment.


The following instructions describe the typical installation procedure:

- 1) Configure the audio and data preferences as described in the appropriate sections of this manual.
- 2) Connect the data connections as described in the Data Wiring section of this manual.
- 3) The Ethernet port is configured as an MDI port. If you are **not** connecting the 5200 Series to an auto-crossover Ethernet port, you may need to use the Ethernet crossover cable supplied with the unit to connect to another MDI port.
- 4) Connect the audio wiring as described in the Audio Wiring section of this manual.
- 5) Connect the contact closure wiring as described in the Contact Closure Wiring section of this manual.
- 6) Connect the fiber optic cable(s) to the transmitter and receiver units.

Installation Instructions (cont.)

- 7) Connect the Universal Power Supply to the transmitter and receiver units.
For box versions using DC power, please refer to figure 1.
- 8) When power is applied, the green POWER LED should illuminate, indicating the presence of operating power. The audio, and data LEDs will give an indication as described in the Indicator LED's section of this manual.
- 9) The system should now be operational.



Figure 1:
Power Connector
DC Input Polarity

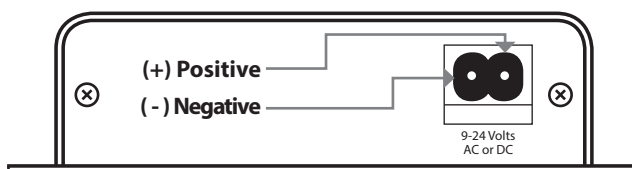



DANGER!

The transmitting element in the FiberLink 5200 transmitter unit contains a solid state Laser Diode located in the optical connector. This device emits invisible infrared electromagnetic radiation which can be harmful to human eyes. The radiation from this optical connector, if viewed at close range with no fiber optic cable connected to the optical connector, may be sufficient intensity to cause instantaneous damage to the retina of the eye. Direct viewing of this radiation should be avoided at all times!


Audio Wiring - Inputs

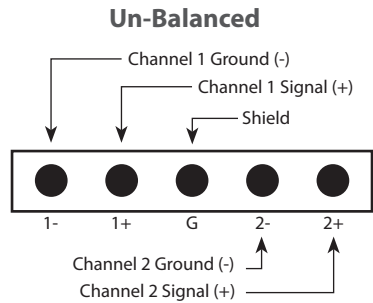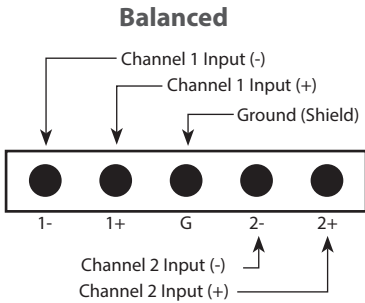



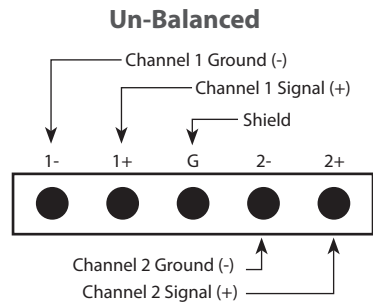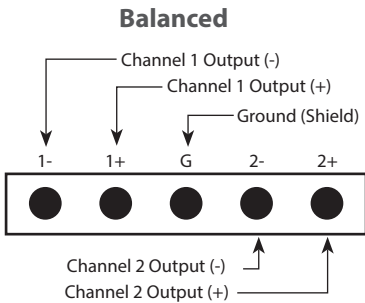



Audio Wiring - Outputs

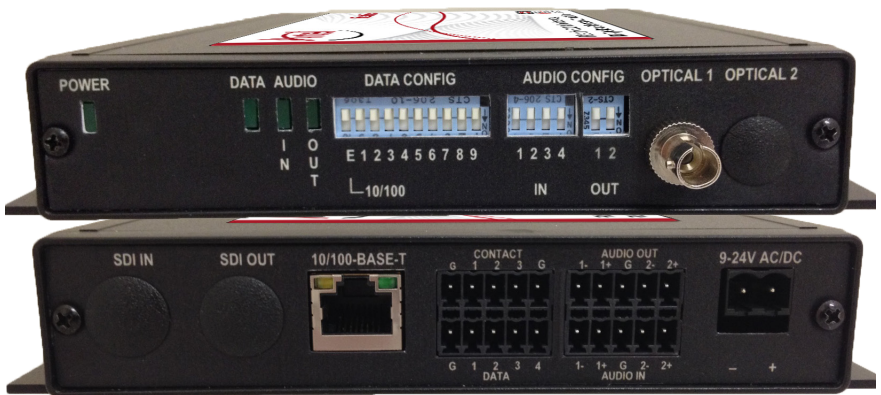





Reference Photos - Box Front/Rear



Audio Input Switch Settings For Box Versions


Channel #	Balanced (600 Ohms)	Balanced (24k Ohms)	Unbalanced (24k Ohms)
Channel 1 (controlled by Switches 3 & 4)			
Channel 2 (controlled by Switches 1 & 2)			

Audio Output Switch Settings For Box Versions

Channel #	Balanced	Unbalanced
Channel 1 (controlled by Switch 2)		
Channel 2 (controlled by Switch 1)		

Data Configuration For Box Versions

The FiberLink 5200 Series box units have three switch blocks; one 10 position, one 4 position, and one 2 position. The first block, “Data Config”, represents the Ethernet and RS Channel configurations.

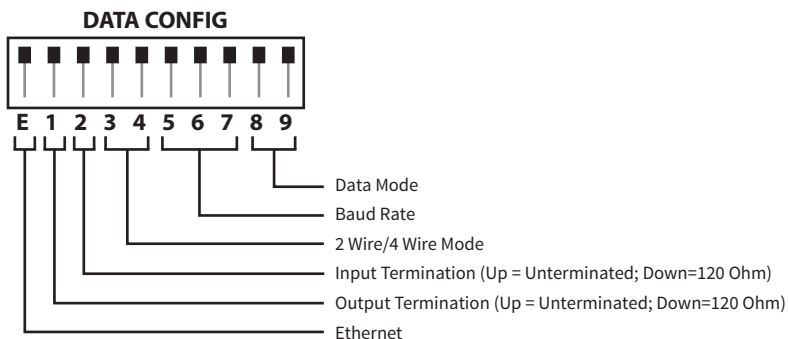

Ethernet Configurations For Box Versions

DATA CONFIG



E 1 2 3 4 5 6 7 8 9

100 Base-T Ethernet

DATA CONFIG



E 1 2 3 4 5 6 7 8 9

10 Base-T Ethernet

Baud Rate Configuration For Box Versions

DATA CONFIG



2400

E 1 2 3 4 5 6 7 8 9

DATA CONFIG



4800

E 1 2 3 4 5 6 7 8 9


DATA CONFIG



9600

E 1 2 3 4 5 6 7 8 9

DATA CONFIG



19.2k

E 1 2 3 4 5 6 7 8 9

DATA CONFIG



38.4k

E 1 2 3 4 5 6 7 8 9

DATA CONFIG



57.6k

E 1 2 3 4 5 6 7 8 9




DATA CONFIG



76.8k

E 1 2 3 4 5 6 7 8 9

RS-Data Configuration For Box Versions

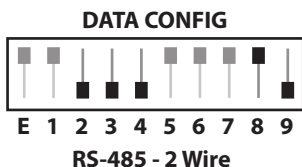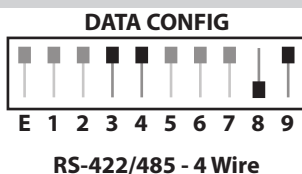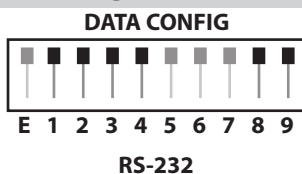


Data Wiring For Box Versions


RS-232




RS-422/485 - 4 Wire

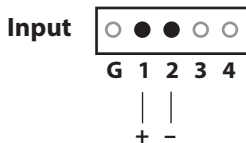

RS-485 - 2 Wire

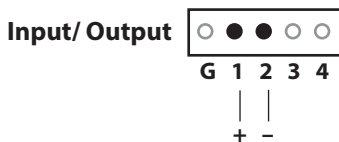

Contact Closure Wiring For Box Versions

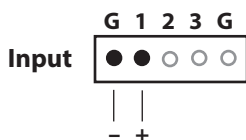

Indicator LEDs

The FiberLink 5200 Series has several indicator LEDs that are used to monitor the state of the unit.

LED Definitions

LED	Status	Definition
Power	On	Indicates that correct power has been applied.
Audio In	Off Blink	Indicates no audio detected (electrical) Indicates audio detected (electrical)
Audio Out	Off Blink	Indicates no audio detected (optical) Indicates audio detected (optical)
Data	Off Blink	Indicates no data detected (electrical or optical) Indicates data detected (electrical or optical)

Operating Pointers

Remember to check attenuation of the fiber optic cable. The system will only operate properly if these specifications fall within the range of the system's loss budget.

Note: If no electrical signals are applied to the Transceiver inputs, no optical power will be present on the Transceiver's optical output.

Troubleshooting

Multimode fiber optic cable contains an optical fiber with a light carrying "core" that is only .0025 inches (62.5 microns) in diameter. Single mode fiber optic cable has an even smaller "core," only .00032 to .0004 inches (8-10 microns). This is smaller than a human hair! Therefore, any minute particles of dirt or dust can easily block the fiber from accepting or radiating light. To prevent this from happening, always use the provided dust caps when ever optical connectors are exposed to air. It is also a good idea to gently clean the tip of an optical connector with a lint-free cloth moistened with alcohol whenever dust is suspected.

The status of the LEDs should provide the first clue as to the origin of any operational failure. If these are off, it usually means that the fiber is broken or has too much attenuation.

Next, be certain that the input and output signal connections are correct.

An optical power meter, such as the FiberLink 6650, a visible light source, such as the FiberLink 6656, and a Two Wavelength Light Source, such as the FiberLink 6652/6654, can greatly assist and expedite troubleshooting of fiber optic transmission systems and are recommended tools all installers should have available.

Finally, although multimode and single mode devices may look the same, they will not operate properly together. Using the wrong device or fiber can easily add more attenuation than specified, resulting in poor overall performance. It should be noted that some of our fiber optic products support both single mode and multimode fiber in the same unit.

If, after reviewing the above possibilities, the system is still not operating, please contact the Customer Service Department for further assistance. If you suspect your problem is caused by the optics or the fiber optic cable, and you have an optical power meter, please take the appropriate measurements prior to contacting support.

Maintenance and Repairs

The FiberLink 5200 Series has been manufactured using the latest semiconductor devices and techniques that electronic technology has to offer. They have been designed for long, reliable and trouble-free service and are not normally field repairable.

Should difficulty be encountered, Artel Video Systems maintains a complete service facility to render accurate, timely and reliable service of all products.

The only maintenance that can be provided by the user is to ascertain that optical connectors are free of dust or dirt that could interfere with light transmission and that electrical connections are secure and accurate. Please see the Troubleshooting section of this manual for additional information.

An optical power meter, such as the FiberLink 6650, a visible light source, such as the FiberLink 6656, and a Two Wavelength Light Source, such as the FiberLink 6652/6654, can greatly assist and expedite troubleshooting of fiber optic transmission systems and are recommended tools all installers should have available.

All other questions or comments should be directed to our Customer Service Department. It should be noted that many “problems” can easily be solved by a simple telephone call.

If you suspect your problem is caused by the optics or the fiber optic cable, and you have an optical power meter, please take the appropriate measurements prior to contacting support.

Certifications





FiberLink 6656 Visible Light Source

The FiberLink 6656 is a light-weight, hand-held tool used to quickly troubleshoot faults in the continuity of both single-mode and multimode fibers. High-intensity visible laser allows for visible fault location of breaks and microbends in both single-mode and multimode fibers



FiberLink 6650 Optical Power Meter

The FiberLink 6650 Optical Power Meter is a high accuracy, high resolution, microprocessor controlled optical power meter. 65 dB dynamic range; calibrated to measure 850, 1300, 1310 and 1550nm. Works with multimode and single mode fiber. Graphical LCD display with intuitive user interface with simple 2-key operation.



FiberLink 6652/6654 Light Sources

The FiberLink Light Source offers a laser output at selectable wavelengths, allowing for convenient, on-site testing of fiber networks during construction and maintenance procedures.



FiberLink 6658

The FiberLink Optical Length Meter measures the length of both single mode and multimode fiber with accuracy of ± 2.5 meters. Generates a pulsed signal for use with fiber identifiers. Easy-to-read bright red 7-segment LED display. Comes equipped with industry preferred ST connectors.

Proven Products, Unrivalled Service, and Great Support



- High performance plug and play products
- Stand alone
- Solutions for most video, audio, and data formats
- Multimode and single mode versions
- Designed and manufactured in the USA
- Training and installation support available
- 24x7x365 technical support available



Artel Video Systems Corp.
5B Lyberty Way,
Westford, MA 01886 USA
T: 978-263-5775
F: 978-263-9755
sales@artel.com
customercare@artel.com
www.artel.com

All specifications subject to
change without notice.
©2016
Updated 03/08/2021
CS200-130183-00_G